

A white VTech baby monitor system. On the left is a handheld unit with a 2.4-inch color LCD screen showing a baby's face. The screen also displays '2.4"', '60°F', and '95%'. Above the screen are several status icons. To the right of the screen are buttons for 'M', 'VOLUME', and 'CALL'. Below these is a circular navigation pad with 'OK', 'MENU', and 'EXIT' labels. On the far right is a white camera unit with a lens and the 'vtech' logo.

CONGRATULATIONS

This manual has all the feature operations and troubleshooting necessary to install and operate your new VTech product. Please review this manual thoroughly to ensure proper installation and operation of this innovative and feature-rich VTech product.

The diagram is divided into two sections by a vertical dashed line. On the left, a portable device is shown with a power adapter connected to its side. On the right, the power adapter is shown connected to a power source (represented by a wall outlet symbol).

The applied nameplate is located at the bottom of the baby unit's base.

When using your equipment, basic safety precautions should be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Follow all warnings and instructions marked on the product.
2. If repair is required:
CAUTION: Do not install the baby unit at a height above 2 metres.
3. This product is intended as an aid. It is not a substitute for professional advice and proper adult supervision and should not be used as such.
4. This product is not intended for use as a medical monitor.
5. Do not use this product near water. For example, do not use it near swimming pools, hot tubs, saunas, or other outdoor swimming pool, or in a wet or submerged or showered area.
6. If used only the battery provided. There may be a risk of explosion if a wrong type of battery is used for the parent unit. Do not use the battery in a hot or low extreme temperature and low air pressure at high altitude during use, storage or transportation. Disposal of battery into fire or a hot oven, or mechanically crushing or cutting or the battery can cause explosion. The battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid of gas. Battery should not be extended to be subjected to any result of explosion or the leakage of flammable liquid or gas. Disposal of used battery according to the instructions.
7. Use only the adapters included with this product.
8. Do not use an adapter with polarity or voltage can seriously damage the product.

19. To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the product is substituted.
20. You should test the sound reception every time you turn on the units or move one of the components.
21. Periodically examine all components for damage.
22. There is a very low risk of privacy loss when using cordless telephones. To protect your privacy, make sure the product has never been used before purchase as a baby monitor periodically by powering off the unit when operating on the units, and power off the baby monitor if you will not use it for some time.
23. Children should be supervised to ensure that they do not play with the product.
24. This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction before use of the appliance by a person responsible for their safety.

1. Use and store the product at a temperature between 0°C and 40°C.
2. Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source.
3. Batteries should not be exposed to excessive heat such as bright sunshine or fire.
4. **Warning—Strangulation Hazard—**Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3 ft (0.9m) away). Do not remove this tag.
5. Never place the baby unit(s) inside the baby's cot or playpen. Never cover the baby unit(s) or parent unit with anything such as a blanket or a blanket.
6. Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible: wireless routers, radios, cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and cordless telephones.

Precautions for users of implanted cardiac pacemakers
Cardiac pacemakers (applies only to digital cordless devices): Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

- Pacemaker patients**
- Should keep wireless devices at least six inches from the pacemaker.
 - Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON.
- WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices.
- Electromagnetic fields (EMF)**
- This Vtech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available today.

- The rechargeable battery is pre-installed in your parent unit.
- Use only the power adapters supplied with this product.
- Make sure the baby monitor is not connected to a switch controlled electric outlet.
- Connect the power adapters in a vertical or floor mount position only. The adapters' tips are not designed to hold the weight of baby monitor, so do not connect them to any ceiling, under-the-table or cabinet outlets. Otherwise, the adapters may not properly connect to the outlets.
- Make sure the parent unit, the baby unit and the power adapter cords are out of reach of children.

When you have connected and turned on the parent unit, the battery will be charged automatically. The battery icon indicates the battery status (see the following table).

- The parent unit battery is fully charged after 11 hours of continuous charging.
- It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging.
- The standby time varies depending on the volume level you set and your actual use.

- To maximize the life of the parent unit's battery, we recommend you fully charge the battery as instructed, before using the video monitor for the first time.

BATTERY INDICATORS	BATTERY STATUS	ACTION
The screen displays Battery low at Parent Unit . The  or  light flashes.	The battery has very little charge and may be used for only a short time.	Charge without interruption (about 30 minutes).
The battery icon becomes solid  .	The battery is fully charged.	To keep the battery charged, connect it to AC power when not in use.

- This baby monitor is intended as an aid. It is not a substitute for proper adult supervision, and should not be used as such.

You may test the baby monitor before initial use, and at regular times thereafter.

- For hearing protection, make sure the parent unit is more than 3 feet (1 metre) away from both baby units. If you hear any high-pitched noise, move the parent unit further until the noise stops. You can also press **VOL▼** on the parent unit to reduce the noise.

1. Make sure your baby unit and parent unit are on.
2. The parent unit displays images from the baby unit.
 - Speak towards the microphone of the baby unit. You will hear the sound at the parent unit.

- When the parent unit displays **No link to Camera**, and the **POWER** LED light flashes, move the parent unit closer to the baby units (observe the minimum distance of 3 feet / 1 metre).

- Increase the speaker volume of the parent unit if you cannot hear the sounds transmitted from the baby units

⚠ CAUTION

- Keep the baby unit out of reach of your baby. Never place or mount the baby unit inside the baby's cot or playpen.

- To avoid interference from other electronic devices, place your baby monitor at least 3 feet (1 metre) away from devices such as wireless routers, microwaves, cell phones and computers.

1. Place the baby units more than 3 feet (1 metre) away from your baby.
2. Adjust the angle of the baby unit camera to aim at your baby.
3. Place the parent unit more than 3 feet (1 metre) away from the baby units to avoid screeching noise.

• The default volume of your parent unit is level 3, and the maximum volume is level 5. If you experience high-pitched screeching noise from your baby monitor while positioning:

- Make sure your baby units and parent unit are more than 3 feet (1 metre) apart, OR
- Turn down the volume of your parent unit.

The diagram illustrates two scenarios for placing the baby unit and the parent unit. In the top scenario, the baby unit (a small device with a screen) and the parent unit (a larger device with a screen and buttons) are shown separated by a distance greater than 3 feet (1m), indicated by a double-headed arrow and a checkmark. In the bottom scenario, the units are shown too close together, less than 3 feet (1m) apart, indicated by a double-headed arrow and an 'X'.

The operating range of the baby monitor is up to 1000 feet (300 metres) outdoors. The actual operating range may vary depending on the environmental conditions and other interferences such as walls, doors and other obstructions.

- Slide the **ON/OFF** switch to **ON** to turn on the baby unit. The **POWER** LED light turns on.
- Slide the **ON/OFF** switch to **OFF** to turn off the baby unit. The **POWER** LED light turns off.

- Slide the **ON/OFF** switch to **ON** to turn on the parent unit. The screen and the **POWER** LED light turns on.
- Slide the **ON/OFF** switch to **OFF** to turn off the parent unit. The screen and the **POWER** LED light turns off.

For parent unit:

- Press **VOL▲/VOL▼** on the parent unit to adjust the speaker volume.

- The parent unit will be muted automatically when the parent unit is talking to the baby unit. When it is muted, appears on the screen.

The baby unit speaker volume determines the lullaby volume and talkback volume transmitted from parent unit. The volume can be adjusted in the parent unit.

1. Press **MENU** **SELECT** when the parent unit is inactive.
2. Press **◀** or **▶** to choose , then press **MENU** **SELECT** or **▲**.
3. Press **MENU** **SELECT** or **◀** to choose .
4. Press **▼** or **▲** to choose the volume level of the baby unit, then press **MENU** **SELECT** to confirm.

You can change the brightness of the parent unit screen from **Level 1** to **Level 5**. The LCD brightness is preset to **Level 3**.

1. Press **MENU** **SELECT** when the parent unit is inactive.
2. Press **◀** or **▶** to choose , then press **MENU** **SELECT** or **▲**.
3. Press **▼** or **▲** to choose the desired level of brightness, then press **MENU** **SELECT** to confirm your selection.

The baby monitor has two lullabies and two soothing sounds for you to comfort your baby. You can play the lullabies or soothing sounds on the baby unit using the parent unit.

1. Press **MENU** when the parent unit is inactive.
2. Press **◀** or **▶** to choose , then press **MENU** **SELECT** or **▲**.
3. Press **▲** to choose , then press **MENU** **SELECT** or **◀**.
4. Press **▼** or **▲** to choose a lullaby or a soothing sound, or choose  to stop playing.
5. Press **SELECT** to confirm your selection.

- The selected lullaby plays for 30 minutes and stops automatically.
- The lullaby playback on the baby unit will be paused when receiving talkback from the parent unit.

You can set the screen off time for the parent unit when there is no key press for a specific time interval.

When the screen is turned off, you can still hear sound from the baby unit.

1. Press **MENU SELECT** when the parent unit is inactive.
2. Press **▼** or **▶** to choose **D2**, then press **MENU SELECT** or **▲** to open the submenu.
3. Press **▼** or **▶** to choose the desired time period to automatically turn off screen
OFF / **5 min.** / **30 min.** / **60 min.**, then press **MENU SELECT** to confirm your selection

You can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the parent unit. The VOX sensitivity level is preset to the highest level (**Level 5**).


VOX SENSITIVITY LEVEL	 Level 5	 Level 4	 Level 3	 Level 2	 Level 1
SENSITIVITY	Highest VOX sensitivity level	High VOX sensitivity level	Medium VOX sensitivity level	Low VOX sensitivity level	Lowest VOX sensitivity level
DESCRIPTION	The parent unit speaker is constantly on, and you will hear all sounds (including background noises) from your baby's room.	The parent unit speaker turns on for soft babbling and louder sounds from your baby. It remains quiet when your baby sleeps soundly.	The parent unit speaker turns on for loud babbling and louder sounds from your baby. It remains quiet when your baby makes soft sounds.	The parent unit speaker turns on for crying and louder sounds from your baby. It remains quiet when your baby makes soft sounds.	The parent unit speaker turns on for loud crying or screaming sounds from your baby. It remains quiet when your baby makes soft sounds.

1. Press **MENU** **SELECT** when the parent unit is inactive.
2. Press **◀** or **▶** to choose **Wd**, then press **MENU** **SELECT** or **▲** to open the submenu.
3. Press **▼** or **▲** to choose the desired sensitivity level, then press **MENU** **SELECT** to confirm your selection.

- As long as the **Sound-activated screen** setting is **ON**, the screen will turn on automatically when VOX sensitivity is triggered, despite being off earlier.

- If you want to use a sound machine or white noise machine for natural white noise while using this baby monitor to check on your baby, you can:
 - Lower the volume of your sound machine or white noise machine; or
 - Lower the sensitivity level of your baby monitor to medium (level 3) or below. Default level is the highest level.

TECHNICAL SPECIFICATIONS

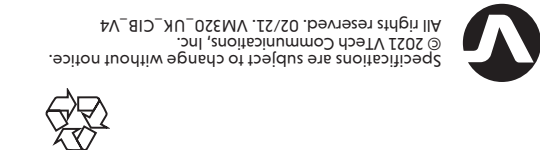

3 USING THE BABY MONITOR (CONT'D)

Temperature alert tone

You can turn on the temperature alert tone so that the parent unit will emit an alert tone if the detected temperature is out of range.


- Press **MENU SELECT** when the parent unit is inactive.
- Press ◀ or ▶ to choose , then press **MENU SELECT** or ◀.
- Press ▼ or ▲ to choose , then press **MENU SELECT** or ◀.
- Press ▼ or ▲ to choose **ON** or **OFF**, then press **MENU SELECT** to confirm your selection.

Temperature format

You can choose to display the temperature in Fahrenheit (°F) or Celsius (°C).


- Press **MENU SELECT** when the parent unit is inactive.
- Press ◀ or ▶ to choose , then press **MENU SELECT** or ◀.
- Press ▼ or ▲ to choose , then press **MENU SELECT** or ◀.
- Press ▼ or ▲ to choose **F** or **C**, then press **MENU SELECT** to confirm your selection.

BABY UNIT OVERVIEW

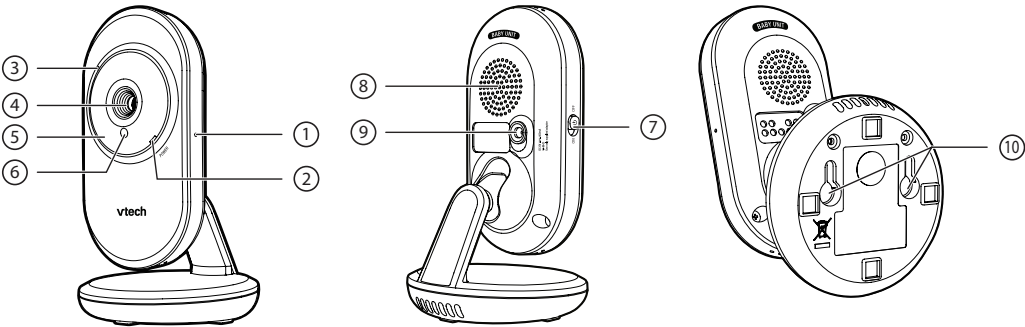


- Pair hole**
 - Your baby units and parent unit provided are already paired.
- POWER LED light**
 - On when the baby unit is turned on and is paired to the parent unit.
 - Flashes when the baby unit is not being viewed; or when the link to the parent unit is lost.
- Microphone**
- Camera**
- Infrared LEDs**
- Light sensor**
- ON/OFF switch**
 - Slide to turn on or off the baby unit.
- Speaker**
- Power jack**
- Wall mount holes**

PARENT UNIT OVERVIEW

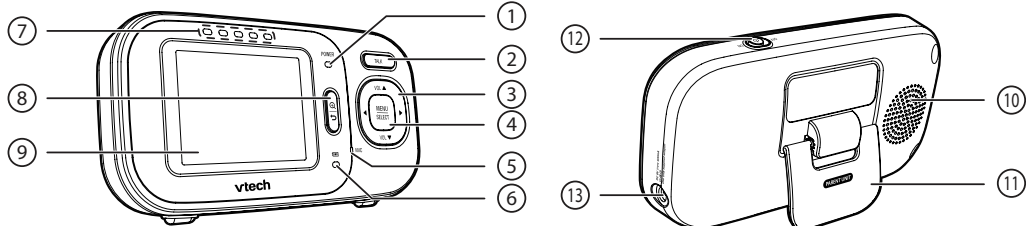

- POWER LED light**
 - On in green when the parent unit is powered on and linked to the baby unit.
 - Flashes when the link to the baby unit being viewed is lost.
 - TALK**
 - Press and hold** to talk to the selected baby unit.
 - Arrow keys and VOL▲ / VOL▼**
 - VOL▲ / ▲**
 - Press to increase the parent unit speaker volume.
 - While in a menu, press to scroll up, or to enter an item's sub-menu.
 - While zooming, **press and hold** to move the zoomed image upward.
 - VOL▼ / ▼**
 - Press to decrease the parent unit speaker volume.
 - While in a submenu, press to scroll down.
 - While zooming, **press and hold** to move the zoomed image downward.
 - While in a menu, press to choose the next item on the left.
 - While zooming, **press and hold** to move the zoomed image leftward.
 - While in a menu, press to choose the next item on the right.
 - While zooming, **press and hold** to move the zoomed image rightward.
- MENU/SELECT**
 - Press to enter or exit the menu.
 - While in a sub-menu, press to choose an item, or save a setting.
 - Microphone**
 - Battery indicator**
 - On in red when the battery is charging.
 - Flashes when the battery is low.
 - Visual sound indicators**
 - ○ ○ ○ ○
 - The visual sound indicators can show the sound level detected by the baby unit.
 - Sound level detected by the baby unit**
 - ● ● ● ○ ○
 - One to three green lights indicate a moderate sound level detected by the baby unit.
 - ● ● ● ● ●
 - Additional red lights indicate a higher sound level detected by the baby unit (e.g. baby crying loudly).
 - Zoom/↵ back**
 - Press to zoom in or out while viewing image.
 - Press to return to the previous screen.
 - LCD display**
 - Speaker**
 - Stand**
 - ON/OFF switch**
 - Slide to turn on or off the parent unit.
 - Power jack**

PARENT UNIT ICONS

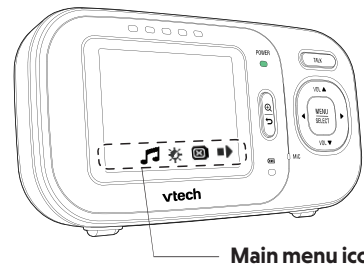

Status icons

- Connection status**
-  or  displays when strong signal strength is detected between the baby unit and the parent unit.
 -  or  displays when moderate or low signal strength is detected between the baby unit and the parent unit.
 -  displays when the link between the baby unit and the parent unit is lost.
- Current view status**
-  **Lullaby**
 - Displays when a lullaby is playing.
 -  **Zoom**
 - Displays when the current image on the parent unit has zoomed in.
 -  **Night vision**
 - Displays when the night vision feature is on.
 -  **Volume off**
 - Displays when the parent unit speaker is turned off.
 -  or  **Real-time temperature**
 - Displays the real-time temperature detected by the baby unit in Fahrenheit (°F) or Celsius (°C) (e.g. **57°F** or **14°C**).

Battery status

-  animates when the battery is charging.
-  displays solid when the battery is fully charged.
-  displays when the battery is low and needs charging.

Speaker volume

- Displays the parent unit speaker volume level while adjusting.

Main menu icons

-  **Lullaby**
 - You can select, play, or stop a lullaby.
-  **Brightness**
 - You can change the brightness of the parent unit screen.
-  **LCD screen off timer**
 - You can set a specific time to turn the screen off.
-  **VOX sensitivity**
 - With this feature, you can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the parent unit.
-  **Sound-activated screen**
 - When the baby unit detects no sound, the parent unit screen stays off to save power. Once a sound is detected, the parent unit screen turns on automatically. It will then turn off again after 50 seconds of no sound detection.

Temperature

- You can turn on the temperature alert tone so that the parent unit beeps whenever the room temperature detected by the baby unit falls outside of the desired temperature range. You can choose in Fahrenheit (°F) or Celsius (°C) as the temperature format displayed, or set the maximum/minimum temperature limit for alerts. The maximum limit is between 25°C and 39°C. The default maximum limit is 29°C. The minimum limit is between 10°C and 24 °C. The default minimum limit is 14°C.

Warning icons and messages

-  **/No Link to Camera**
 - The selected baby unit is out of range or is turned off.
-  **/Battery low at Parent Unit**
 - The battery is empty and needs to be recharged.
-  **/Temperature too high** or  **/Temperature too low**
 - The temperature detected by the baby unit is higher/lower than the desired temperature alert range.
- 
 - The parent unit is searching for baby units.
- 
 - The parent unit is connected to AC power.

DIM MODE

The dim mode is to help you save the parent unit power. Your parent unit display will dim automatically after 10 minutes of inactivity, in which there is neither key pressed nor alert received from the baby unit.

NOTE

- While the screen is dimmed, any keypress or alert message will trigger the screen to return to the preset brightness level. After 10 minutes of inactivity, it will dim again.

NIGHT VISION

The baby unit has infrared LEDs that allow you to see your baby clearly at night or in a dark room. When the baby unit being viewed detects low light levels, the infrared LEDs are switched on automatically. The images from the baby unit are in black and white, and  appears on the screen.

NOTES

- It is normal if you see a short white glare on your parent unit screen as the baby unit is adapting to the dark environment.
- When the infrared LEDs are on, the images are in black and white. This is normal.

TIP

- Depending on the surroundings and other interfering factors, like lightings, objects, colors and backgrounds, the display resolution may vary. Adjust the baby unit's angle or place the baby unit at a higher level to prevent glare and blurry display.

MOUNT THE BABY UNIT ON DRY WALL (OPTIONAL)

Items to purchase


You will need to purchase the following items separately to mount your baby unit:

-  2 screws
-  2 anchors

NOTE

- The types of screws and anchors you need depend on the composition of the wall.

2

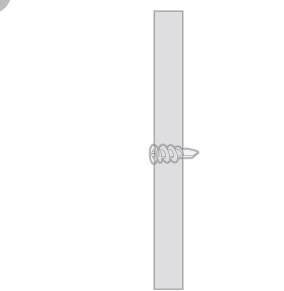


Drill two holes in the wall. If you drill the holes into a stud, go to step 3.

-OR-


If you drill the holes into an object other than a stud, insert the wall anchors into the holes. Tap gently on the ends with a hammer until the wall anchors are flush with the wall.

3

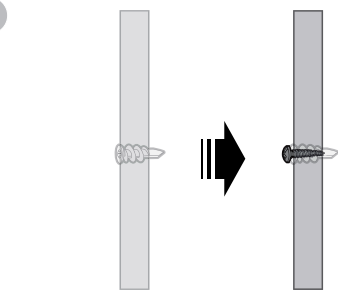

Insert the screws into the holes and tighten the screws until only 1/4 inch of the screws are exposed.

1

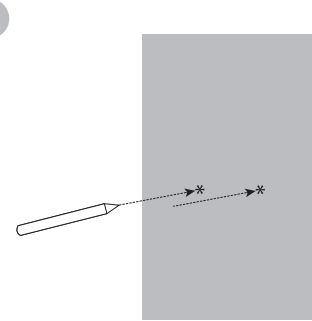


NOTE

- Check for reception strength and camera angle before drilling the holes.


Use a pencil to mark two holes in parallel. Make sure they are the same distance apart as the wall mount holes on the baby unit.

4

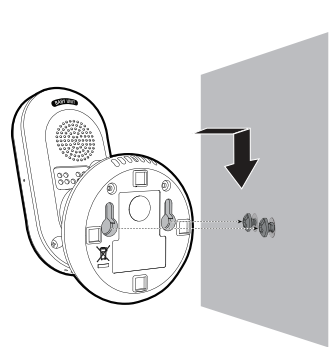

Align the wall mount holes on the baby unit with the screws on the wall. Slide the baby unit down until it locks into place.

5

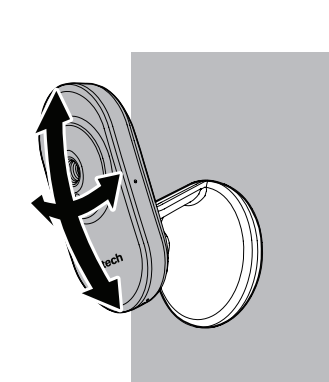

Adjust the camera angle.

GENERAL PRODUCT CARE

To keep this product working well and looking good, follow these guidelines:

- Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose it to direct sunlight or moisture.
- Avoid dropping the product or treating it roughly.
- Clean with a soft cloth.
- DO NOT immerse the parent unit and the baby unit in water and do not clean them under the tap.
- DO NOT use cleaning spray or liquid cleaners.
- Make sure the baby unit and parent unit are dry before you connect them to the mains again.

STORAGE

When you are not going to use the baby monitor for some time, store the parent unit, the baby unit and the adapters in a cool and dry place.

FREQUENTLY ASKED QUESTIONS

Below are the questions most frequently asked about the baby monitor.

Why does the baby monitor not respond normally?	Try the following (in the order listed) for common cure: 1. Disconnect the power to the baby units and the parent unit. 2. Wait a few seconds before connecting power back to the baby units and the parent unit. 3. Turn on the baby units and the parent unit. 4. Wait for the parent unit to synchronize with the baby units. Allow up to one minute for this to take place.
Why don't the power-on light of the baby unit and parent unit go on when I switch on the units?	Perhaps the parent unit is not connected to the power. Insert the appliance plug into the parent unit and put the adapter in a wall socket. Then, slide the ON/OFF to switch on the parent unit and to establish connection with the baby unit. Perhaps the baby unit is not connected to the power. Insert the appliance plug into the baby unit and put the adapter in a wall socket. Then, slide the ON/OFF switch to ON to switch on the baby unit and to establish connection with the parent unit.
Why doesn't my parent unit charge while connected to AC power?	Make sure the power is not controlled by a wall switch. If it does, make sure the controlled switch is on.
Why is my screen in black and white?	The screen is in black and white during night-time or in a dark room when the night vision feature is activated. This is normal.
Why do I get glare or blurry display on my screen when viewing my baby at night?	During night-time or in a dark room, the surroundings and other interfering factors, like lightings, objects, colors and backgrounds may affect the image quality on your parent unit screen. Adjust the baby unit's angle or place the baby unit at a higher level to prevent glare and blurry display.
Why does the baby monitor produce a high-pitched noise?	The parent unit and baby units may be too close to each other. - Move the parent unit away from the baby units until the noise stops; OR - Turn down the volume of your parent unit.
Why does the parent unit beep?	The baby units may be out of range. Move the parent unit closer to the baby units (but not less than 3 feet or 1 metre). The parent unit may not have enough charge for the parent unit to perform normally. Charge the battery in the parent unit for up to 11 hours. The temperature of your baby's room may be too high or too low.
Why don't I hear a sound/ Why can't I hear my baby cry?	The parent unit speaker volume may be too low. Press VOL▲ to increase the volume, or use the parent unit menu to change sound sensitivity level to the highest level (level 5).
Why can't I establish a connection? Why is the connection lost every now and then? Why are there sound interruptions?	The baby units may be out of range. Move the parent unit closer to the baby units (but not less than 3 feet or 1 metre). Other electronic and wireless products may cause interference with your baby monitor. Try installing your baby monitor as far away from these devices as possible. If you power on only one baby unit, your parent unit may display  and the POWER LED light flashes. Switch to the baby unit you have powered on via menu.

CUSTOMER SERVICE AND PRODUCT WARRANTY



PRODUCT WARRANTY

Thank you for choosing this quality product from Vtech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.

2. The product may be returned to the place of purchase. Alternatively the product can be returned to Vtech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.

3. Vtech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.

4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.

5. This warranty is personal to the original purchaser and is not transferable.

6. Breakages to the LCD screen are not covered by the warranty.

7. Returns to Vtech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.

8. Products returned to Vtech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor). Please include details of the fault together with your name and address.

9. To keep an online record of your warranty, please register your product online at www.vtech.co.uk/warranty

Vtech Electronics EU PLC, c/o XPO Logistics, Warehouse 350, Cat & Fiddle Lane, West Hales, DE7 9HE

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

IMPORTANT

Please retain this booklet with your sales receipt as proof of the date of purchase.

Customer Service

Please call our Consumer Services Department on 03306 780149 (from UK) or +44 3306 780149 (outside UK) and a service representative will be happy to help you.

DISPOSAL OF BATTERIES AND PRODUCT



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005. Help protect the environment by disposing of your product or batteries responsibly.

DECLARATION OF CONFORMITY

This product is intended for use within Europe and UK. This equipment complies with the essential requirements to EU's Radio Equipment Directive (2014/53/EU) and the UK's Radio Regulations 2017 on radio systems and telecommunication equipment. Vtech Telecommunications Ltd. hereby declares that this Video Monitor VM320 is in compliance with the essential requirements and other relevant provisions of EU's Radio Equipment Directive (2014/53/EU) and UK's Radio Equipment Regulations 2017. The Declaration of Conformity for the VM320 is available from www.vtechbabycare.com.

Manufacturer: VTech Telecommunications Ltd.
23/F., Tai Ping Industrial Centre, Block 1, 57 Ting kok Road, Tai Po, Hong Kong.
Importer: VTech Electronics Europe plc
Napier Court, Abingdon Science Park, Abingdon, Oxon, OX14 3YT, U.K.

