

TME116-66 Weekly Programmable Timer

Features

- LCD Display
- IP66 Protection Rating
- 28 ON/OFF Programs
- Minimum Time Setting: 1 Minute
- Manual Override Feature
- Weekly Auto Time Correction


Specifications

- 240V AC
- Maximum Switchable Current: 16(8)A
- Power Consumption: 0.1VA
- Minimum Interval: 1 Minute
- Changeover Switching Contacts
- Maximum Time Setting: 168 Hours
- Lithium Backup Battery
- Ambient Temp: -10~+40°C
- Ambient Humidity: 35~85%RH
- Service Life:
 - i. Mechanical 10⁷
 - ii. Electronic 10⁵
- Size: 101 x 101 x 101mm
- Conduit Entries:
2 x 25mm, 1 x 32mm, 25/32mm Threaded Adaptors


Legend

	Timer
D+	Day
H+	Hour
M+	Minute
	Clock
C	Reset
MANUAL	Manual C/R
C/R	Cancel / Recovery

Wiring Diagram

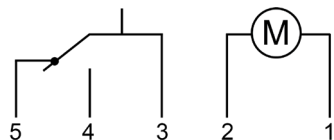

Diagram

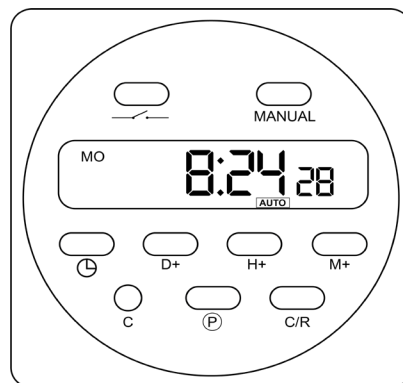

Programming Instructions

1. Setting Clock Time

- 1.1. Press and hold the clock button and use the 'D+/H+/M+' buttons to change the day and time accordingly.

2. Setting a Program

- 2.1. Press the 'P' button to enter the 'Program' mode. Each time the 'P' button is pressed, the display will cycle through individual ON/OFF programs.
- 2.2. Use the 'D+/H+/M+' button to set each required programs day, ON time and OFF time.
- 2.3. Press the 'Clock' button at any time to exit the program setting mode.

NOTE: Time Setting Errors

E1 - A program has not had a start time set

E2 - A program has not had an end time set

3. Display Lock

- 3.1. Press the 'Clock' button 4 times to lock the display. Press 4 times again to unlock the display.
- 3.2. Long press 'C/R' button at any time to exit the program setting mode.

4. Manual Override

- 4.1. To enter the manual override mode press and hold the 'Manual' button for 5 seconds. The screen will turn off indicating the electronic controller is shut down.
- 4.2. Press the 'Manual' button for 5 seconds to exit the manual override mode. The display will return to previous settings.

For more information, please scan the QR code below to visit our website

