


XBA-KHR8 Option Switch Settings

Supported bill KHR 100, 500, 1000, 2000, 5000, 10000, 20000, 50000 8bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject KHR 100 (Note.3)	ON							
	Accept KHR 100 (Note.2)	OFF							
	Reject KHR 500 & 1000 & 2000		ON						
★	Accept KHR 500 & 1000 & 2000		OFF						
	Reject KHR 5000 & 10000 & 20000			ON					
★	Accept KHR 5000 & 10000 & 20000			OFF					
	Reject KHR 50000				ON				
★	Accept KHR 50000				OFF				
	High Acceptance				ON				
★	High Security (Note.4)				OFF				
	Disable Bill Reject 4 Times BA Stop By 30 Sec					ON			
★	Enable Bill Reject 4 Times BA Stop By 30 Sec					OFF			
	Stack Banknote when Power-up						ON		
★	Reject Banknote when Power-up						OFF		
	Reserved							ON	
★	Reserved							OFF	

This dip switch is located at the side of XBA.

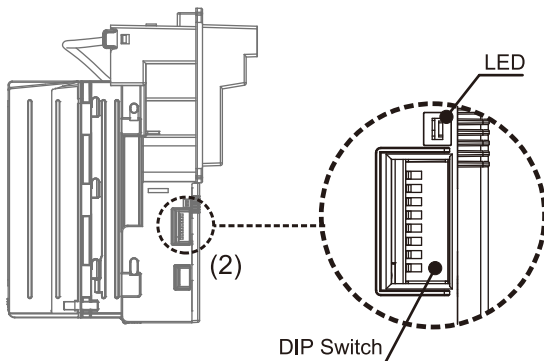


Currency Assign Data

Interface	Bill value	ICT002U	ICT104U	ICT104V	Pulse		MDB	
					When Dip 1 is ON	When Dip 1 is OFF	When Dip 1 is ON	When Dip 1 is OFF
	BV1	100	100	100		100	500	100
	BV2	500	500	500	500	500	1000	500
	BV3	1000	1000	1000	1000	1000	2000	1000
	BV4	2000	2000	2000	2000	2000	5000	2000
	BV5	5000	5000	5000	5000	5000	10000	5000
	BV6	10000	10000	10000	10000	10000	20000	10000
	BV7	20000	20000	20000	20000	20000	50000	20000
	BV8	50000	50000	50000	50000	50000		

XBA-KHR8 (Pulse/MDB/ICT002U/ICT104U/ICT104V)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	
★	Inhibit Active HIGH	ON								
	Inhibit Active LOW	OFF								
★	Reserved									ON
	Reserved									OFF
★	Reserved			ON						
	Reserved			OFF						
★	Reserved									ON
	Reserved									OFF
★	Pulse Mode	MDB Mode			ICT104V Mode					
	Credit-Pulse Normal HIGH	Scaling Factor (SF) = 100 Decimal Point Position (DPP) = 2			Connect with coin changer		ON			
	Credit-Pulse Normal LOW	Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0			Connect with ICT JPSTD converter board		OFF			
★	Pulse Mode						ON			
	Other Mode						OFF			
★	Pulse Mode			Other Mode						
	1 pulse / KHR 100 _(Note.2) / 500 _(Note.3)			MDB Mode						
	2 pulse / KHR 100 _(Note.2) / 500 _(Note.3)			ICT002U Mode						
	5 pulse / KHR 100 _(Note.2) / 500 _(Note.3)			ICT104U Mode						
	10 pulse / KHR 100 _(Note.2) / 500 _(Note.3)			ICT104V Mode						

This dip switch is located on the CPU board, remove the CPU board cover first.

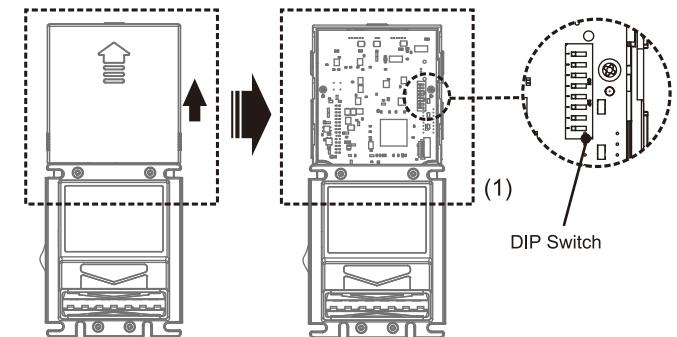

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note : 1. Calibration card is needed.

2. Dip 1 OFF: MDB reject KHR 50000, 1 Pulse/100 KHR.

3. Dip 1 ON : MDB accept KHR 50000, 1 Pulse/500 KHR.

4. High acceptance mode will increase accepting rate, however, it will reduce the security level of Bill Acceptor.