

# Barber Chair User Manual



Read Carefully Before Use  
Keep for Future Reference

# Safety Information

## Warning!

- **ALWAYS** ensure all fasteners and components are intact and securely tightened before each use.
- **DO NOT** use this chair if it is damaged or malfunctions. Repair or replace worn or broken parts before further use.
- **DO NOT** load this chair with more than 660 pounds (47 st. 2 lb.) or 300 kg.
- **DO NOT** leave children or persons with compromised physical or mental capabilities using this chair without close supervision.
- Store this product out of the reach of children after use.

# Product Diagram



# Package List

Seat with 2 M5×20 Bolts × 1  
Backrest with 4 M5×25 Bolts × 1  
Footrest × 1  
Hydraulic Pump × 1  
Pedal with 2 M4×8 Screws × 1


Base × 1  
M5×20 Bolts × 6  
Caps × 8  
M5 Hex Wrench × 1  
M4 Hex Wrench × 1

# Specifications


Material		Stainless Steel, Cast Iron, Chrome, HDF, Artificial Leather, Foam	
Dimensions	Height Range	32.7–36.6 in.	83–93 cm
	Backrest	18.9×15.4 in.	48×39 cm
	Seat	20.5×19.7 in.	52×50 cm
	Seat Elevation	16.1–20.1 in.	41–51 cm
	Armrest	20.9×13.4 in.	53×34 cm
Weight Capacity		440 lb.	200 kg
Net Weight		53 lb.	24 kg

# Assembly


1. Place the hydraulic pump onto the base, aligning its bottom holes with those of the base. Secure the pump using the M5×12 bolts and tighten them with the M5 hex wrench.

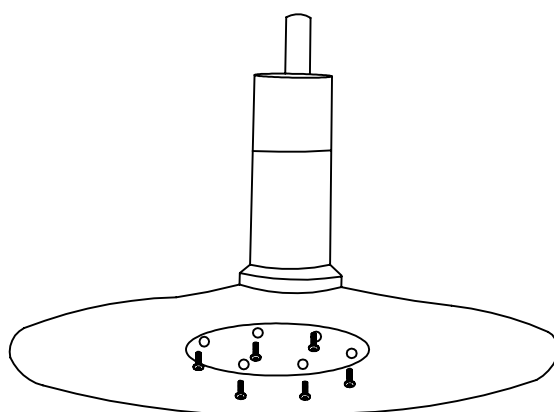


2. Loosen the preinstalled set screws on the pump using the M4 hex wrench. Fit the pedal onto the pump and secure it by retightening the screws.

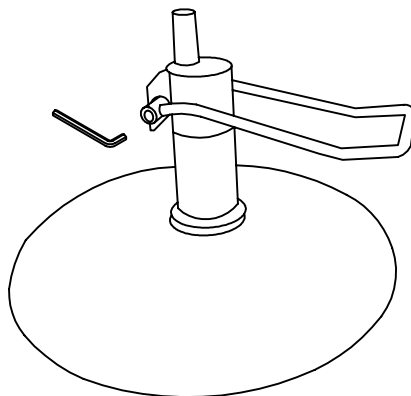


3. Remove the four preinstalled M5×25 bolts from the backrest. Place the backrest between the armrests, aligning its holes with those in the connecting plates of the armrests. Replace the four bolts to secure the backrest. Attach the provided caps to the bolts and press them into place.

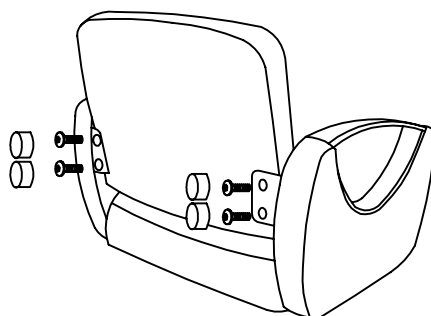

4. Remove the two preinstalled M5×20 bolts from the footrest. Fit the footrest onto the bottom of the seat and replace the two bolts to secure it. Tighten the bolts with the M5 hex wrench.

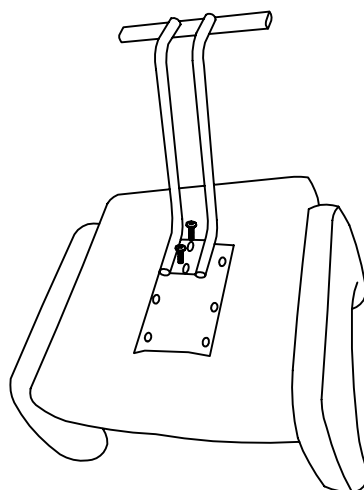

5. Insert the top of the hydraulic pump into the central hole underneath the seat. Place the chair on a level surface and press down on both armrests until the seat is secure.

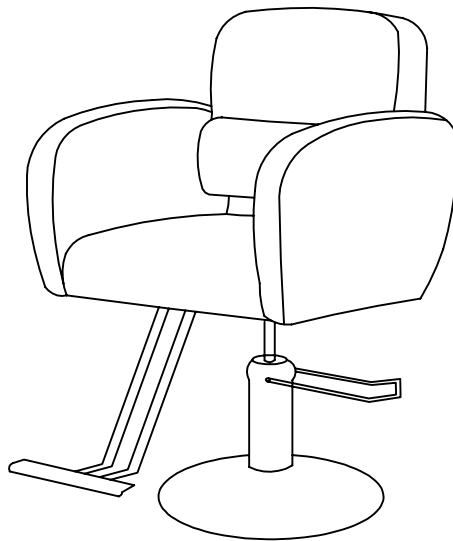

## Adjustment

To raise the chair, press the pedal lightly, quickly, and repeatedly until your desired height is reached.

To lower the chair, hold the pedal while someone is sitting in it or while pushing down on it.

## Maintenance

- The exterior of this chair should be cleaned periodically with a soft damp cloth. Do not use abrasive cleaners or caustic chemicals.
- Check the parts for any looseness, wear, or damage periodically. Tighten, repair, or replace any problematic parts before further use.
- If this chair will not be used for a long period of time, store it in a cool, dry, and safe place.

## Contact Us

Thank you for choosing our products! If you have any questions or comments, contact us at **[help@cs-supportpro.com](mailto:help@cs-supportpro.com)** and we'll resolve your issue ASAP!

For a .pdf copy of the latest version of these instructions, use the appropriate app on your smartphone to scan the QR code to the right.

