

NUARL®



## 完全ワイヤレスイヤホン N10 Pro ユーザーズガイド

Operation Manual/ 操作説明書




Copyright © MTI Corporation All rights reserved. July, 2020

HDS®  
High Definition Sound Standard



## Product Diagram

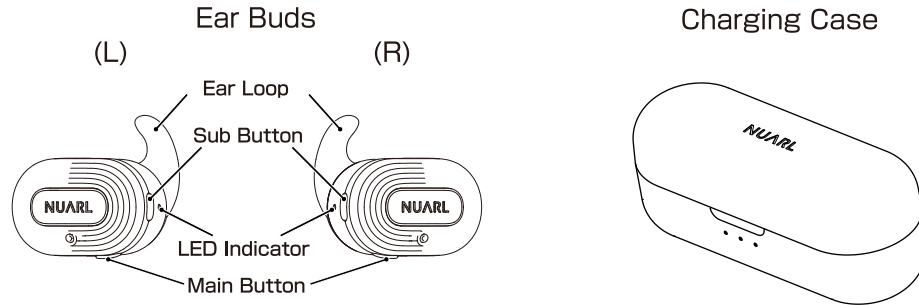

※Please choose and replace Ear Tip to suit your preference.



### Accessory


#### USB Charge Cable



## Before Use

### ■ Battery Charge

Insert USB type A connector of USB Charge Cable to USB AC charger or USB port of PC, and insert Type C USB connector to USB port of Charging Case.  
Put the Ear Buds into Charging case and close top cover.  
While charging, the LED light constantly.  
When charging is completed, the LED will turn off.

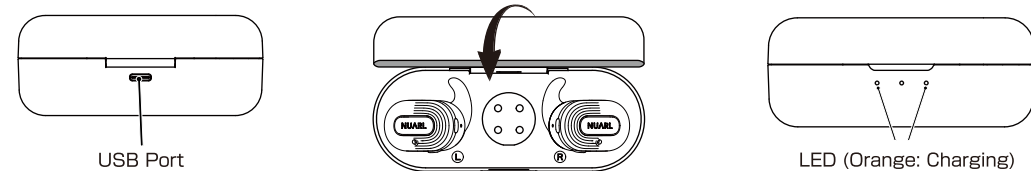

### ■ Power On/Power Off

Put the Ear Buds into Charging Case, Ear Buds power OFF automatically.  
When pick up the Ear buds, power ON automatically.  
※When Case battery is low, this function does not work.

## Pairing

### ■ Pairing


To use Ear Buds first time, you must pairing Ear Bud with mobile phone or player.  
Once your Ear Buds is paired with other devices, they will remain paired and automatically recognize each other.

#### 【First time to use】

1. Turn on Bluetooth function of your mobile phone.
2. Turn on the power of both earbuds.
3. Select "NUARL N10 PRO-L" in discovered device list of the phone.
4. Click "Pair" in the phone display.
5. Click "Pair" when "NUARL N10 PRO-R" appears on the phone display .

#### 【Re-pairing or Pairing with second mobile phone】


1. Turn on Bluetooth function of your mobile phone.
2. Double click Main Button of Left Earbud.(White and Orange LED will quickly flash)
3. Select "NUARL N10 PRO-L" in discovered device list of the phone.
4. Click "Pair" in the phone display.
5. Click "Pair" when "NUARL N10 PRO-R" appears on the phone display .

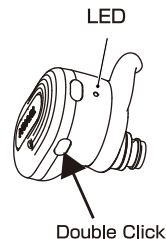

## Charging Case

### ■ Charge Case Battery

Insert USB type A connector of USB Charge Cable to USB AC charger or USB port of PC, and insert Type C USB connector to USB port of Charging Case.  
While charging, the Orange LED(Center) light constantly.  
When charging is completed, the LED will turn off.

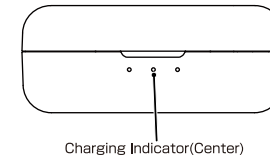

When the cover is opened or closed, the charging indicator flash for about 2 seconds depending on the remaining battery level in the charging case.

Charging Indicator	Remaining
○ ○ ○	Over 75%
○ ○ ●	50~75%
○ ● ●	25~50%
● ☀ ●	Under 25%

### ■ Auto Power ON/OFF

Put the Ear Buds into Charging Case, Ear Buds power OFF automatically.  
When pick up the Ear buds power ON automatically.  
※When Case battery is low, this function does not work.

# Switching Master and Slave

The role of the Master unit / Slave unit, when the earbuds taken out from the charging case, the earbud with the larger battery remaining becomes Master unit, the one with the low battery level becomes Slave unit.

For this reason, there is a possibility that Master unit and Slave unit may be switched each time the earbuds is taken out from the charging case.

Also, by periodically putting the earbuds in and out of the charging case, you can efficiently use the batteries of the left and right earphones. So it will be able to operate for a longer time.

Master earbud is displayed as "Connected" on the Bluetooth screen of the connected device.

# Meaning of LED

Power ON	White 1 Second
Disconnected	White 2 times each 3 Seconds
Connected	White 1 time each 7 Seconds
Music Play/Talking	No Flash
Delete Pairing	Flashing White continuously
Pairing	Flashing White and Orange

# Button Operation

Main Button			
		L	R
Power	ON	1Click	1Click
	OFF	Long press until beep 2 times	Long press until beep 2 times
Music ※1	Play/Pause	1Click	
	Next Track	-	2Click
	Previous Track	-	3Click
Volume	Volume Up	3Click	-
	Volume Down	2Click	-
Phone	Answer Call	1Click	
	Hang Up	1Click	
	Reject Call	Long press 2seconds	
Pairing	Pairing Mode	2Click with no connection	
	Clear	Long press Main button 8seconds until beep 3times, then 2Click	
Siri/Google	Start	Long press Main button until a beep without music play	
Sub Button	ANC Mode → Ambient Mode → OFF		1Click

※1: Button operation may not work depending on the app.

## Active Noise Canceling (ANC)

This product equipped with active noise cancellation (ANC) and Ambient sound functions. Each time you press the sub-button, the function switches from ANC to Ambient and then to Off.

This product's active noise canceling function uses two microphones, an outward-facing microphone and an inward-facing microphone, to capture external noise. It captures sound and digitally reduces unwanted noise. The effectiveness level of active noise cancellation can be changed in the N10 CONNECT app.



When the Ambient sound function is enabled, you can listen to the ambient sound through the earbuds. The operation settings for Ambient sound function can be changed with the N10 CONNECT app.

※ANC and Ambient sound cannot be used at the same time.

## N10 CONNECT APP

The N10 CONNECT app (free of charge) allows you to get the most out of this product. You can customize various features, update the firmware and more.

Download the app by searching for "N10 CONNECT" in the Apple App store or Google Play store.



### ■ Main features

- Adjust the ANC effect level.
- Operation Settings for External Sound Intake
- Auto volume down setting
- Volume level setting
- CODEC switching
- Button setting
- Firmware update

※The function of the app may change with the version up.

## Frequently Asked Questions

Q) Suddenly I heard no sound from one earbud.

A) Please turn off earbud and turn on it again.

Q) Bluetooth connection has dropped.

A) Please delete 「NUARL N10 PRO」 from Bluetooth device list and pairing with your device again.

Q) The pairing between L and R earbud has dropped.

A) Turn off both earbuds and turn on them again.

A) Please try to “Clear” pairing as page 18.

Q) When I place the earbud in the case, it won't turn off itself.

When I get the earbud out from the case it won't turn on.

A) While the case's power is low, the automatic on off function will not be active. Please turn on/off it manually.

Q) The case has run out of charges.

A) The case will discharge itself, please recharge the case regularly.

Q) I want to know about warranty and repair in outside of Japan.

A) The warranty is only valid in the country in which the product was purchased.  
Please contact purchased store directly for the specific repair of the goods.

## Specification

Product Specification	
Driver	Φ10mm PTT Diaphragm NUARL DRIVER[N10]V3
Frequency Response	20～20,000Hz
Battery	Earbuds: 3.7V/60mAh Li-Po Battery Charger Case: 3.7v/760mAh Li-Po Battery
Continuous Play time(ANC OFF)	7hours(SBC/AAC) /5hours(aptX)
Continuous Play time(ANC ON)	5hours(SBC/AAC) / 3.5hours(aptX)
Charging Time	1.5hours
Bluetooth Specification	Version5.0/Class2/Multi Pairing(4)
Bluetooth CODEC	aptX, AAC, SBC
Bluetooth Profile	A2DP, HFP, HSP, AVRCP
Microphone	Omni-direction(cVc NC, ANC, Ambient)
Waterproof Level	IPX4
Operation Temperature	5～50°C
Accessories	Charger Case, Charging Cable, Ear Tip(2Type), EarLoop, Operation Manual
Certification	FCC ID: 2ARGT-N10PRO

# Federal Communications Commission Part 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Hereby declare our ANC Truly Wireless Stereo Earbuds does not have enough space to print the product name、model and trademark on the product itself, thus we locate them on product packaging. About MIC ID and LOGO are printed on the headset