



BY010P Mounting instruction

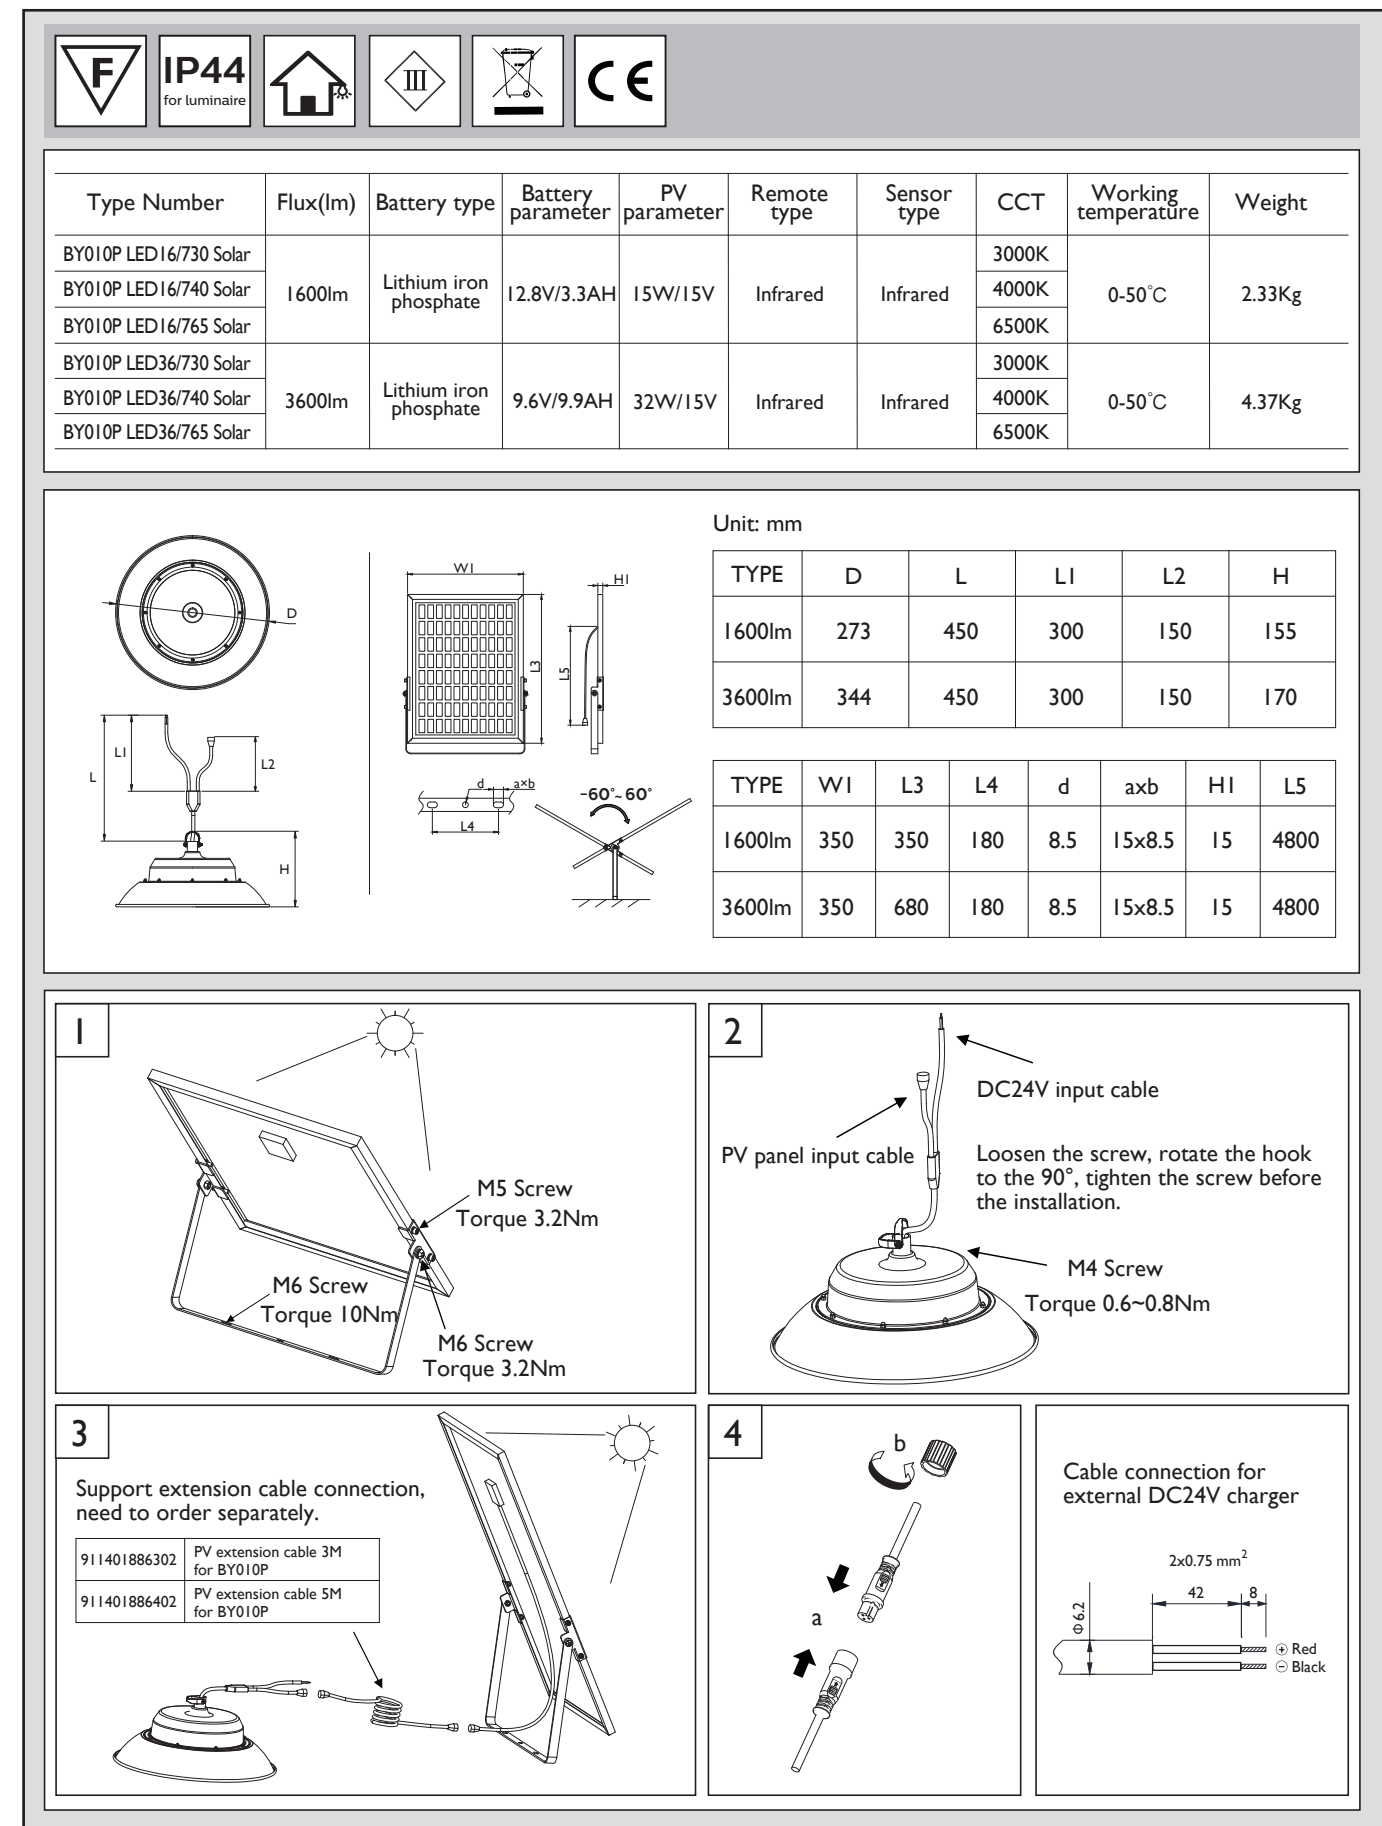

SIGNIFY LUMINAIRES (SHANGHAI) CO., LTD
Address: 2F, Building 1, No. 2555 Hechuan Road, Minhang District, Shanghai, P.R. China
Postal code: 200233
斯诺飞灯具(上海)有限公司
上海市闵行区合川路2555号1幢2楼
邮编: 200233

PHILIPS

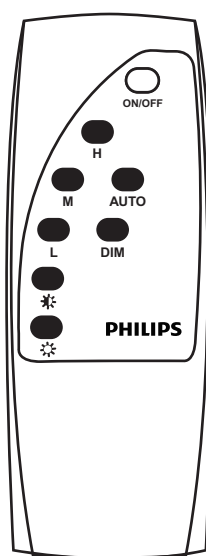

AUTO: Automatic Sensor Dimming Mode, the luminaire automatically turns on as PV panel detects the sunset. (Same as Mode M setting).

M: The luminaire automatically turns ON at 20% brightness as PV panel detects the sunset. If someone is detected, the brightness will be increased to 100% for 15 seconds. Turns off at battery low.

DIM: Time Control Dimming Mode, the luminaire automatically turns ON as PV panel detects the sunset, and the luminaire will keep running according to the time control dimming setting (20% brightness output in first 1 hour,

✱ Constant lighting mode: Decrease the brightness every 10% each time by pressing this button, and the minimum


 Constant lighting mode: Increase the brightness every 10% each time by pressing this button, and the maximum brightness can keep 100%. (The light sensor and PIR sensor and time control function are all disabled in this mode)

mode, the luminaire turns off at battery low. And the luminaire will return to the dimming mode with memory function.

Notes:


1. The setting default of this luminaire is AUTO: Automatic Sensor Dimming Mode.
2. Press the  or  button to turn on the constant lighting mode at day time or at night time.
3. In constant lighting mode, the luminaire turns off at battery low. And the luminaire will return to the dimming mode with memory function after the battery power recharged.
4. In constant lighting mode, the light sensor and PIR sensor and time control function are all disabled in this mode. And the luminaire will keep working at the setting brightness. Turns off at battery low.
5. LED indication on luminaire: solid red light (the state of charging), flashing red light (low battery capacity).

Sensor detective ranges:

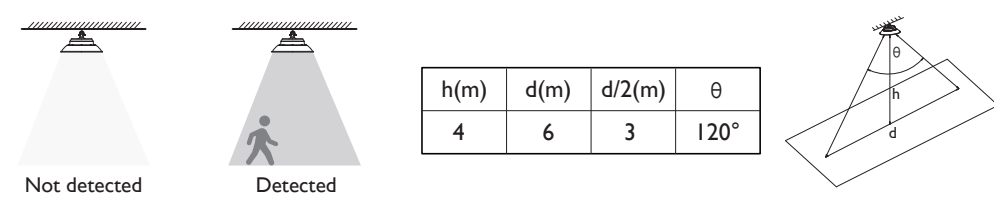

Application NOTES:

1. Install the solar panel on open roof or wall facing towards Sun. The tilt angle can be adjusted.
2. There shall not be any light source over the solar panel at night, as it may interfere with the operations of the luminaire.
3. Charge the battery under Sunlight at least 8 hours before first use.
4. After installation, the working modes can be set by the infrared remote controller.
5. This luminaire works 100% on solar energy, and it also can be charged with the external DC24V charger. The charging power for 1600mAh can be higher than 30Watt, the charging power for 3400mAh one must be higher than 35Watt. The voltage range of external DC24V charger can be DC22V-26V. (In case wrong DC charger is used not matching mentioned specification, the product may get damaged and the warranty will be void.)
6. Detection of dark/dawn is based on lighting intensity falling on solar panel.
7. The battery capacity will be reduced when the ambient temperature is below zero degree Celsius.
8. When the battery low capacity (<30%), the brightness output will diminish to 15% brightness to extend the running time, and the luminaire turns off at battery low.
9. In case of long-term disconnection, it is important to note that if the battery is not used for a long period of time (>11 months), it may be in some state of over-discharge due to its self-discharge characteristics. Over-discharge may degrade battery performance, and the warranty shall be void.
10. Applications: Under Canopy/Backyard/Parking Shed/Warehouse/Amenity/Note it can be used in outdoor areas.
11. The light source and/or control gear and/or external flexible cable contained in this luminaire are not replaceable, in case of damage, please replace the luminaire.
12. Please inform yourself about the local waste disposal, separation and collection system for electrical and electronic products and packaging. Please act according to your local rules and do not dispose your old product and packaging with your normal household waste.
13. Please separate your product and/or batteries will help prevent potential negative consequences for the environment and human health. Batteries should be disposed separately from the non-use water stream via designated collection facilities. When disposing a product that contains non-user-replaceable batteries, the non-user replaceable batteries shall be removed by a professional.

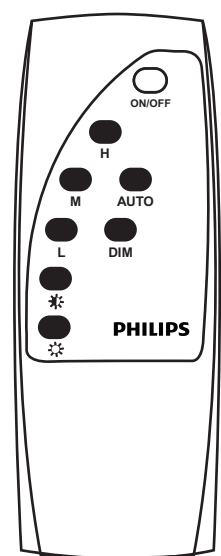

AUTO : โบนัสเงินชดเชยวันพักร้อนไม่ใช้ โบนัสที่จะเกิดขึ้นโดยอัตโนมัติเมื่อหมดอายุของรางวัลจะพิจารณาจากประวัติการจ่าย (เงื่อนไขการจ่ายตาม M)

[illegible]

L : โหมดสว่าง 10% เมื่อพระอาทิตย์ตก โคมไฟจะเปิดโดยอัตโนมัติที่ความสว่าง 10% เมื่อแสงในอาคารลดลงจนพระอาทิตย์ตก
ตรวจจับความเคลื่อนไหว ไฟจะสว่าง 100% นาน 15 วินาที

(ตั้งแต่ความยาวช่วง 20% ขึ้นไป) | 0.5 ช่วง | 40% ขึ้นไป | 30% ขึ้นไป | 5 ช่วง | 100% ขึ้นไป 2 ช่วง

แบบทดสอบทั้งหมด 10 ข้อ ปิด (หมายเหตุ: เซ็นเซอร์ไม่ทำงานในโหมด DIM และ เวลาสองชั่วโมงจะยุติได้เท่านั้นสูงสุด 12 ชั่วโมง เมื่อหมดแบตเตอรี่เต็ม)


 กดปุ่มนี้เพื่อเพิ่มความสว่างขึ้น **10%** ทุกครั้ง โดยปรับให้ได้นาฬิกาอยู่ที่ **100%** (หมายเหตุ: เซ็นเซอร์แสง เช่น เซอร์โวลัมป์จะมีความละเอียดอ่อนไหว และฟังก์ชันควบคุมเวลา ไม่ทำงานในโหมดนี้)

งานแอมเมียมและตะกั่วไดออกไซด์ พลังงาน ชาร์จแบตเตอรี่แล้ว โคมไฟจะกลับไปยังโหมดฟรีโดยจดจำค่าความสว่างที่ผู้ใช้ล่าสุด

Notes:

1. การกดที่ปุ่มบนจอแสดงผลอัตโนมัติ **AUTO**: โหมดถ่ายภาพอัตโนมัติ
2. **โหมดถ่ายภาพ** : เมื่อเปิดกล้องเพื่อถ่ายภาพหรือวิดีโอในโหมดถ่ายภาพ
3. **โหมดถ่ายภาพวิดีโอ** : โหมดใช้สำหรับการถ่ายภาพและวิดีโอทั้งหมด การหมุน ขวบนหรือซ้ายบนจอแสดงผลให้โหมดถ่ายภาพวิดีโอเพื่อทำการถ่ายภาพหรือวิดีโอ
4. โหมดถ่ายภาพนิ่ง: โหมดใช้สำหรับการถ่ายภาพนิ่งเท่านั้น เมื่อหมุนขวาจากโหมดถ่ายภาพนิ่งและกดปุ่มถ่ายภาพ
5. โหมดถ่ายภาพต่อเนื่องหรือถ่ายภาพครั้งเดียว: โหมดใช้เพื่อทำการถ่ายภาพต่อเนื่องหรือถ่ายภาพครั้งเดียว
6. **LED บนหน้าจอ**: ให้แสดงสถานะ (สถานะการชาร์จ), ให้แสดงสถานะ (การควบคุมระยะใกล้)

Sensor detective range:

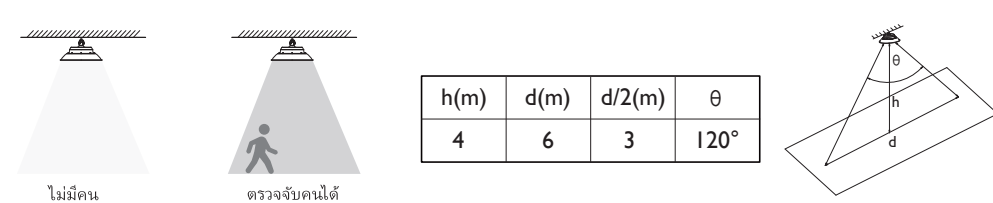

Application NOTES:

- [illegible]