


XBA-TRY6 Option Switch Settings

Supported bill Lira 5, 10, 20, 50, 100, 200 6bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
	Reject Lira 5	ON							
★	Accept Lira 5	OFF							
	Reject Lira 10		ON						
★	Accept Lira 10		OFF						
	Reject Lira 20			ON					
★	Accept Lira 20			OFF					
	Reject Lira 50				ON				
★	Accept Lira 50				OFF				
	Reject Lira 100 & 200					ON			
★	Accept Lira 100 & 200					OFF			
	Disable Bill Reject 4 Times BA Stop By 30 Sec						ON		
★	Enable Bill Reject 4 Times BA Stop By 30 Sec						OFF		
	Stack Banknote when Power-up							ON	
★	Reject Banknote when Power-up							OFF	
	Reserved								ON
★	Reserved								OFF

This dip switch is located at the side of XBA.

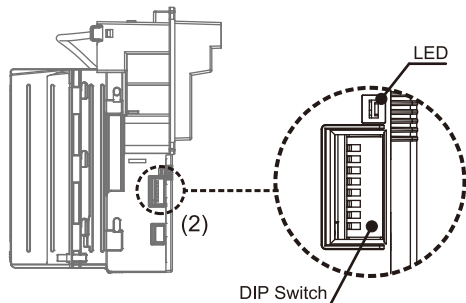

Note, (1) Please reset the bill acceptor after set the dip switch.
 (2) Dip switches 1 to 5 are only used for pulse protocol.
 (3) Calibration card is needed.
 (4) No sleep function
 (5) When Dip 1 is OFF ICT106U ==>
 Lira 5=0x40, Lira 10=0x41, Lira 20=0x42, Lira 50=0x43,
 Lira 100=0x44, Lira 200=0x45
 When Dip 1 is ON ICT106U ==>
 Lira 10=0x40, Lira 20=0x41, Lira 50=0x42, Lira 100=0x43,
 Lira 200=0x44

Currency Assign Data

Interface	Pulse	MDB	ICT104V	ccNet	ICT106U	
					When Dip 1 is OFF	When Dip 1 is ON
Bill value						
BV1	Lira 5	Lira 5	Lira 5	Lira 5	Lira 5	Lira 10
BV2	Lira 10	Lira 10	Lira 10	Lira 10	Lira 10	Lira 20
BV3	Lira 20	Lira 20	Lira 20	Lira 20	Lira 20	Lira 50
BV4	Lira 50	Lira 50	Lira 50	Lira 50	Lira 50	Lira 100
BV5	Lira 100	Lira 100	Lira 100	Lira 100	Lira 100	Lira 200
BV6	Lira 200	Lira 200	Lira 200	Lira 200	Lira 200	

Appendix

XBA-TRY6 (Pulse/MDB/ICT106U/ccNet/ICT104V)

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
	Inhibit Active HIGH	ON							
★	Inhibit Active LOW	OFF							
	Reserved		ON						
★	Reserved		OFF						
	Reserved			ON					
★	Reserved			OFF					
	Reserved				ON				
★	Reserved				OFF				
	Pulse Mode							ON	
★	Other Mode							OFF	
	Pulse Mode								
★	Other Mode								
	1 pulse / Lira 5							OFF	OFF
	5 pulses / Lira 5							OFF	ON
	10 pulses / Lira 5							ON	OFF
	25 pulses / Lira 5							ON	ON

★ Manufacture setting

This dip switch is located on the CPU board, remove the CPU board cover first.

