



120.00 mm

GVM

GREAT VIDEO MAKER

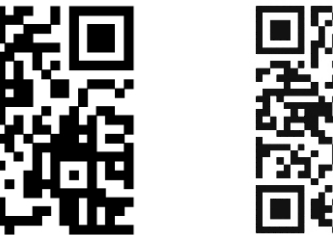


GVM Official website

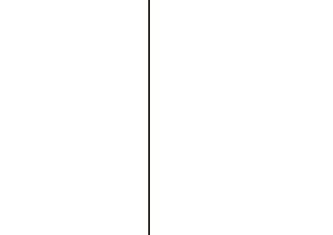

Facebook

Web: www.gvmled.com
 B&H Email: bh@gvmled.com
 GVM Email: support@gvmled.com
 Amazon Email: amazon-support@gvmled.com
 Warehouse Addr: 4301 N Delaware ave, unit D, PHILADELPHIA, PA19137, USA

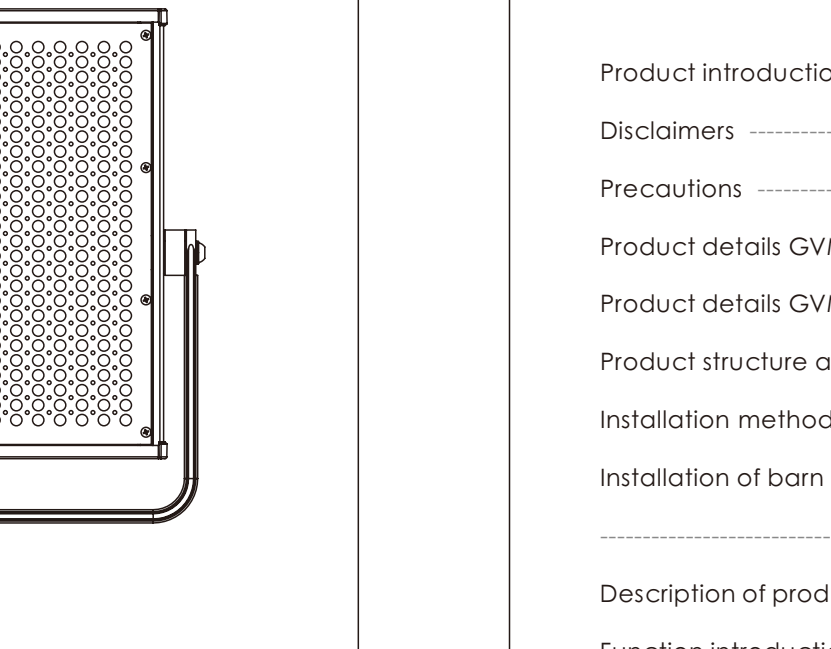

GVM
GREAT VIDEO MAKER

GVM-520S / GVM-672S

C O N T E N T S

Product introduction	Page 1
Disclaimers	Page 2
Precautions	Page 2
Product details GVM-520S	Page 3
Product details GVM-672S	Page 4
Product structure analysis	Page 5
Installation method	Page 6,7,8
Installation of barn doors and external diffuser	Page 9,10
Description of product control keys	Page 11
Function introduction and instruction for use	Page 12~13
Use and preservation	Page 13
Troubleshooting	Page 14
Packing list	Page 15

PRODUCT INTRODUCTION

Welcome to "GVM-520S / GVM-672S". This product is specially designed for senior photography enthusiasts. The product is suitable for live / outdoor / studio photography, and also for youtube video shooting. The main features of the product are:

- Two-color temperature characteristic with stepless adjustment color range 3200K ~ 5600K, with hundreds of closely arranged LED bulbs, helps to restore and enrich the color of objects, providing you with natural and vivid shooting effect
- LCD screen display and stable system, which can support 360° rotation and effectively control the light Line. You can also install folding and external soft light board to avoid redundant light and make the light softer. You can customize the control of fill light, so that you can easily shoot the desired results.

We believe that once using our product correctly, you can make huge progress when shooting. Before using the product, you are strongly recommended to read the instructions below carefully.

1

DISCLAIMERS

- Before using this product, please read the instructions carefully and make sure use the product correctly. If you don't obey the instructions and warnings, you maybe cause harm to yourself and the people around, or even damage the product and other things around.
- Once you use this product, you are deemed to have read the disclaimer and warning carefully, understand and acknowledge all the terms and contents of this statement, and promise to take full responsibility for the use of this product and possible consequences.

PRECAUTIONS

- Please use the matching power adapter or lithium battery with the same specification to power the product. Do not use power adapter with different output voltage parameters.
- The product is not waterproof, please use it in rainproof environment.
- The product is not anti-corrosion, therefore do not let the product touch any corrosive liquid.
- When using the product, make sure the product is put firmly and prevent from falling and damage.
- If the product will not be used for a long time, please switch off the power to reduce energy loss.

2

PRODUCT DETAILS GVM-520S

- Brand : GVM
- Name : Photography light
- Type : Photography fill light
- Number : GVM-520S
- Number of light beads : 528
- Color-rendering Index : ≥97
- Color Temperature : 3200K~5600K
- Luminance : 18500lux/0.5m, 4200lux/1m
- Light Adjustment Method : Stepless adjustment
- Light angle of lamp bead : 45°
- Function / Characteristics : High color rendering index light beads, Joint control
- Power : 30W
- Power Supply Mode : DC input & Battery
- Voltage : AC:100-240V
- Power specification : DC15V/3A
- Battery Capacity : 7.4V-4400mAh*2 (to be purchased separately)
- Weight : 1.9KG
- Size (mm) : 310x320x55
- Material : Aluminum alloy
- Heat Dissipation : Natural way
- Origin : Huizhou, China



3

PRODUCT DETAILS GVM-672S

- Brand : GVM
- Name : Photography light
- Type : Photography fill light
- Number : GVM-672S
- Number of light beads : 672
- Color-rendering Index : ≥97
- Color Temperature : 3200K~5600K
- Luminance : 20000lux/0.5m, 4600lux/1m
- Light Adjustment Method : Stepless adjustment
- Light angle of lamp bead : 45°
- Function / Characteristics : High color rendering index light beads, Joint control
- Power : 40W
- Power Supply Mode : DC input & Battery
- Voltage : AC:100-240V
- Power specification : DC15V/3A
- Battery Capacity : 7.4V-4400mAh*2 (to be purchased separately)
- Weight : 1.9KG
- Size (mm) : 310x320x55
- Material : Aluminum alloy
- Heat Dissipation : Natural way
- Origin : Huizhou, China

4



PRODUCT STRUCTURE ANALYSIS

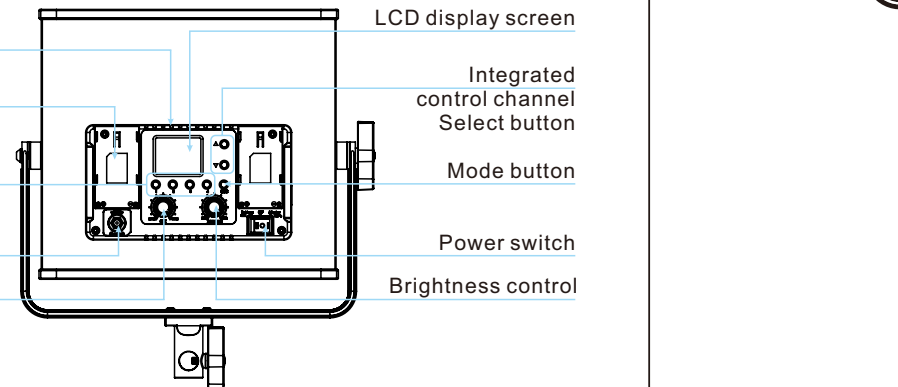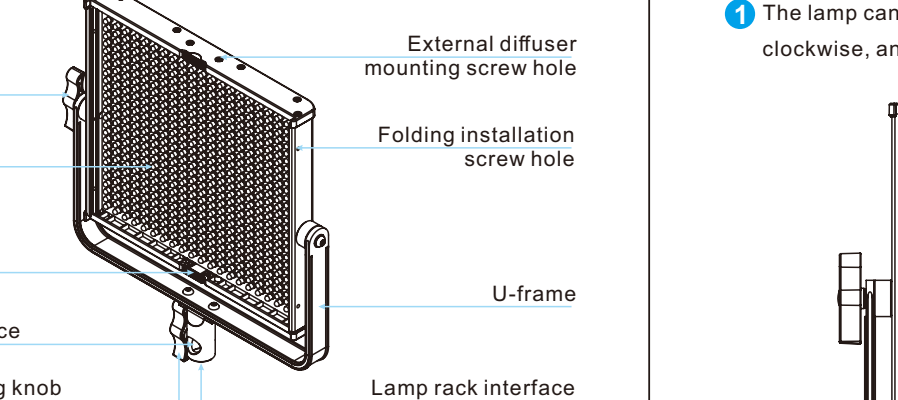

5

INSTALLATION METHOD

- The lamp can be installed and fixed on the bracket by rotating the knob clockwise, and unloaded by rotating in the counterclockwise direction.

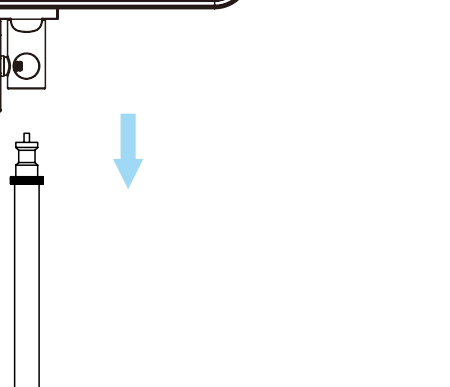
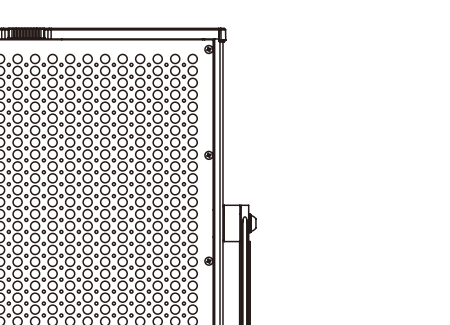


6

INSTALLATION OF BARN DOORS AND EXTERNAL DIFFUSER

Light control barn doors (to be purchased separately):



You can buy a set of light control barn doors to control the angle of light.

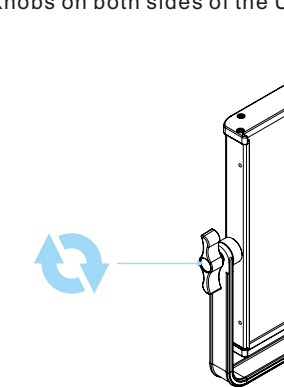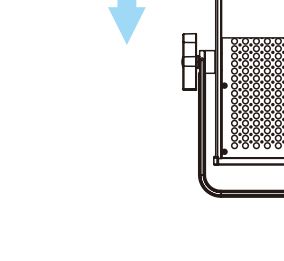

9

EXTERNAL SOFT-BOARD (PURCHASED SEPARATELY):



Make the light softer and achieve the effect of soft light box.

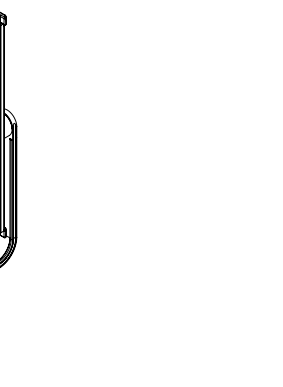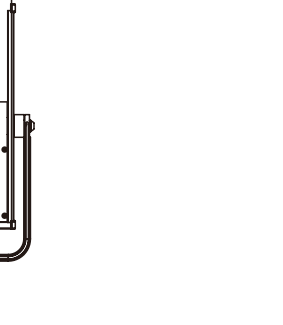

10

DESCRIPTION OF PRODUCT CONTROL KEYS

- DC15V power input interface
- Power switch
- Mode button: Modes include master mode and slave mode.
- Channel addition and subtraction key: Adjust channel
- User defined shortcut key: Each button can be customized to store ray parameters.
- Color temperature adjustment button: Adjust the color
- Brightness adjustment button: Adjust the brightness
- LCD screen: Display brightness, Color temperature, Mode, Channel value and other data

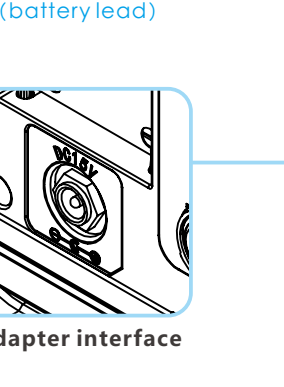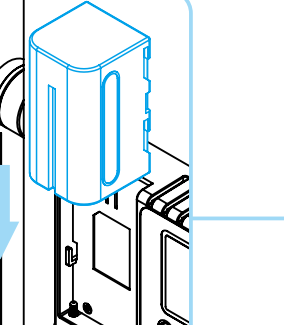

11

FUNCTION INSTRUCTION & INSTRUCTION FOR USE

Mode selection:

Slight press the mode button to shift mode, the mode includes: Master, Slave.

MODE Master: Brightness, color temperature, and channel can be adjusted, and the brightness and color temperature of the same channel slave can also be adjusted simultaneously; brightness, color temperature.

MODE Slave: It can only adjust aisle; master mode and slave mode can only be synchronously controlled by master mode under the condition that they are under the same aisle.

Adjust CH: range 0~11

Set channel value using channel addition and subtraction key.

Adjust brightness (BRG): range 100~100%

In the master mode, adjust lightness through the knob.

Adjust color temperature (CCT): range 3200K~5600K

In the master mode, adjust color temperature through the knob.

Custom shortcuts:

1, 2, 3, 4 four custom shortcuts can store four brightness and color temperature data. In Rotate mode, adjust the brightness and color temperature to the parameters you need to store, then press and hold it One custom shortcut in 3 seconds, "Collectde!" appears at the bottom of the screen to storesuccess. When the same button stores a new

12

USE AND PRESERVATION

Do not put the product in a highly humid, strong electromagnetic field, direct sunlight, high-temperature environment. If not use the product for a long time, disconnect the power and take out the battery.

Clean: Before clean, disconnect the power plug. And use wet cloth rather than any detergent or soluble liquid, avoiding damaging the surface layer.

Power: Make sure the power is in the demanded range, not too high or too low. Correctly load the battery, in order not the damage to machine.

Repairing: If there is fault or performance degradation, do not unpack the shell by yourself, avoiding damage the machine and lose the right of maintenance. When there is a fault, do not hesitate to contact us, and we will do our best to deal with the problem.

Accessories: Please use the accessories provided by manufacturer and approved ones, in order to maximize the performance.

Guarantee: Do does not modify the product, or you will lose the right of maintenance.

13

TROUBLESHOOTING

Phenomenon

The switch indicator does not light up

The knob of lightness and color temperature are out of control

Check the matching power adapter indicator light up or not.

When using lithium battery, make sure there's no "low power" protection.

Check if the mode were set as slave mode, lightness and color temperature of the products cannot be controlled in slave mode.

Make sure the adapter is well contacted with the power plug.

Charge the battery before using it.

Press the "mode" button for once, switch the mode from slave mode to master mode.

14

PACKING LIST

Name

Quantity

Single lamp set

Double lamp set

Three lamp set

Notes

Photography light

Power cable

Adapter

Diffuser

Carrying case

User manual

Barn doors

Light stand

1

2

3

1

1

2

3

15