



REPLACING THE REMOTE CONTROL

To ensure that Human Touch® products are repaired in a manner that is fully consistent with the practices used during the manufacturing process, Human Touch requires that all product repairs are performed using only factory-new parts and in accordance with these product repair instructions.

SERVICE LEVEL: 1

Tools Required: Phillips-head screwdriver

NOTE: SAVE ALL SCREWS FOR USE DURING REASSEMBLY.

REMOVING THE REMOTE CONTROL


1. Power off the chair and unplug it.



2. Locate the remote control bracket on the left-hand side of the chair (Fig.1).
3. Using a Phillips-head screwdriver, remove the two screws that secure the remote control bracket to the power panel.
4. Pull the remote control cables toward you to expose the cables, then disconnect the cables.

INSTALLING THE NEW REMOTE CONTROL

1. Connect the new remote control cable to the corresponding power panel cable, then push the cables into the backrest.
2. Using a Phillips-head screwdriver, replace the two remote control bracket screws.
3. Plug in the chair and power it on.
4. Verify that the new remote control is working properly.

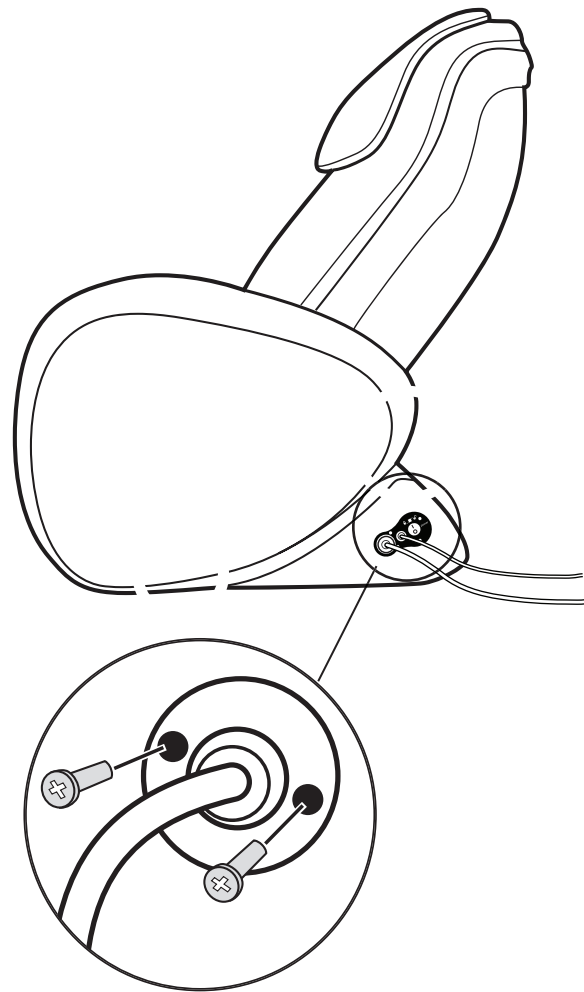

(Fig.1)