




USER INSTRUCTIONS

BASELINE™ SELF RETRACTING LIFELINES

Complies with the ANSI Z359.14 standard and OSHA 29 CFR 1910 and 1926 regulations.

BASELINE™

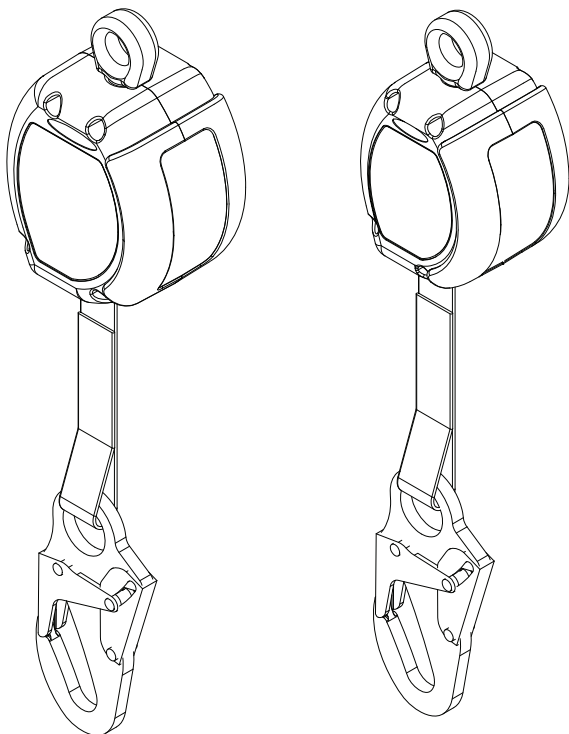

WARNING!

*Compliant fall protection equipment must only be used as it was designed and adhere to the hierarchy of controls as discussed in ANSI Z359.2. Users **MUST** read and follow all user instructions provided with the product. Before using a fall arrest system, users must be trained in the safe use of the system, as required by OSHA 29 CFR 1910.30 and 1926.503, or local safety regulations. **Misuse or failure to heed these warnings and instructions may result in injury or even death.***

WORK SAFE! WORK SMART!

IF YOU HAVE ANY QUESTIONS ABOUT THE PROPER USE OF THE EQUIPMENT, SEE YOUR SUPERVISOR, USER INSTRUCTIONS, OR CONTACT WERNERCO FOR MORE INFORMATION.

GENERAL SAFETY INFORMATION

These User Instructions are not to be removed except by the user of this equipment. Current User Instructions must always be available to the user.

WARNING!

1. *Failure to follow all instructions and limitations on the use of Self-Retracting Lifelines (SRL) may result in serious personal injury or death.*
2. *Minors, pregnant women and anyone with a history of either back or neck problems should not use this equipment.*
3. *Do not use or install equipment without proper training from a "competent person" as defined by OSHA 29 CFR 1926.32(f).*
4. *SRLs are designed for a single user.*
5. *Not all fall protection and rescue components are rated for the same user weight capacity. Only use components rated for the same weight capacity.*
6. *Do not use combinations of components or subsystems, or both, that may affect or interfere with the safe function of each other.*
7. *Caution must be taken when using SRL near moving machinery, electrical hazards, sharp edges, or abrasive surfaces. Contact with these elements may cause equipment failure, personal injury, or death.*
8. *Personal fall arrest systems, including SRLs, must be inspected prior to each use for wear, damage and other deterioration. Defective components must be immediately removed from service in accordance with the requirements of OSHA 29 CFR 1910.140 and 1926.502.*
9. *Do not expose SRL to chemicals, high heat, severe cold or other harsh environments which may produce a harmful effect. The SRL is designed to be used in temperatures ranging from -40°F to +130°F (-40°C to +54°C).*
10. *Avoid using SRLs in applications where engulfment hazards exist.*
11. *Do not use if inspection reveals any defect, wear, damage, deterioration, inadequate maintenance, or unsafe condition. Do not use any equipment that has been subjected to the forces of arresting a fall or if any part of the load indicator warning is showing.*
12. *Only anchor at or above the dorsal D-ring on the users full body harness.*
13. *Not suitable for leading edge applications.*
14. *Dual-connections of twin leg SRLs shall only be made for the purposes of 100% tie-off transitions. If a dual connection is made for any other purpose, anchorages of different elevations must be utilized.*
15. *Never attach the unused leg of the lanyard back to the harness at any location other than the lanyard parking attachment.*
16. *Only lanyards designed for tie-back are approved for tie-back directly onto the webbing.*
17. *Never attach the tie-back snap hook to the tie-back SRL between the shock pack and the housing of the SRL.*
18. *Do not work on the far side of a hole, hatch or floor opening opposite the SRL anchor point.*
19. *Only WernerCo, or persons or entities authorized in writing by WernerCo, shall make repairs or alterations to the equipment.*
20. *Alterations or misuse may result in serious personal injury or death.*

CAUTION!

If an SRL is used in conjunction with a cross-arm strap anchorage connector, other anchorage extension, horizontal lifeline, or extended D-ring, the additional length of the anchorage connector, extended D-ring, or sag from the lifeline must be taken into consideration during the clearance calculation process.

USE INSTRUCTIONS AND LIMITATIONS

IMPORTANT

Before use, the user must read and understand these User Instructions. Keep these User Instructions for reference.

PURPOSE

Self-Retracting Lifelines are designed to be used as part of a complete personal fall arrest system.

USE INSTRUCTIONS

1. Failure to follow all instructions and limitations on the use of the SRL may result in serious personal injury or death.
2. Before using a personal fall arrest system, employees must be trained in accordance with the requirements of OSHA 29 CFR 1910.30 and 1926.503 in the safe use of the system and its components.
3. Personal fall arrest and rescue systems, including the SRL, must be inspected prior to each use for wear, damage, and other deterioration. Defective components must be immediately removed from service in accordance with the requirements of OSHA 29 CFR 1910.140 and 1926.502.
4. The complete fall arrest system must be planned (including all components, calculating fall clearance, and swing fall) before using.
5. Users must have a rescue plan, and the means at hand to implement it, that provides for the prompt rescue of the user in the event of a fall, or assures that the user is able to rescue themselves. A fall over an edge may require special rescue measures.
6. Store the SRL in a cool, dry, clean environment, out of direct sunlight, when not in use.
7. After a fall occurs on the system, immediately remove from service until inspected by a competent person.

USE LIMITATIONS

WARNING!

Not all fall protection and rescue components are rated for the same user weight capacity. Only use components rated for the same weight capacity.

1. CAPACITY: SRL's are designed for users with a capacity (including clothing, tools, etc.) up to 400 lb (181 kg) total working weight.
2. CORROSION: Do not leave SRL's in environments where corrosion of metal parts could take place as a result of vapors from organic materials. Use near seawater or other corrosive environments may require more frequent inspections to ensure corrosion damage is not affecting the performance of the product.
3. CHEMICAL HAZARDS: Solutions containing acids, alkali, or other caustic chemicals, especially at elevated temperatures, may cause damage to the SRL's. When working with such chemicals, frequent inspection of this equipment must be performed. Contact WernerCo with any questions concerning the use of the SRL around chemical hazards.
4. EXTREME TEMPERATURE: SRL's are designed to be used in temperatures ranging from -40°F to +130°F (-40°C to +54°C). Protection should be provided for SRL's when used near welding, metal cutting or similar activities. Contact WernerCo with any questions concerning high temperature environments.
5. ELECTRICAL HAZARDS: Use extreme caution when working near high voltage power lines due to the possibility of electric current flowing through the SRL or connecting components.
6. HEALTH: Minors, pregnant women and anyone with a history of either back or neck problems should not use this equipment.
7. RESCUE: In the event of a fall over the edge, special rescue measures may be required.
8. TRAINING: Do not use SRL's without proper training from a "competent person" as defined by OSHA 29 CFR 1910.140(b) and 1926.32(f).
9. REPAIRS: Only WernerCo, or persons or entities authorized in writing by WernerCo, may make repairs or alterations to the equipment.

ANCHORAGE REQUIREMENTS

ANCHORAGES

All anchorages to which the SRL attaches must meet the requirements of ANSI Z359.2 and OSHA 29 CFR 1910 and 1926.

OSHA states:

Anchorages used for attachment of personal fall arrest equipment shall be independent of any anchorage being used to support or suspend platforms and capable of supporting at least

5,000 pounds (22.2 kN) per employee attached, or shall be designed, installed, and used as part of a complete personal fall arrest system which maintains a safety factor of at least two; and under the supervision of a “qualified” person.

ANSI Z359.2 states that anchorages selected for fall arrest systems must have a strength capable of sustaining static loads, applied in all permitted directions by the system:

- A) no less than 5,000 pounds (22.2 kN) for non-certified anchorages; or
- B) at least two times the maximum arresting force for certified anchorages;
- C) according to ANSI Z359.6, *Specifications and Design Requirements for Active Fall Protection Systems*.

When more than one personal fall arrest system is attached to the anchorage, the strength in (A) or (B) must be multiplied by the number of personal fall arrest systems attached to the anchorage.

CONNECTION REQUIREMENTS

COMPATIBILITY LIMITATIONS


All connecting subsystems must only be coupled to compatible connectors. OSHA 29 CFR 1910.140 and 1926.502 prohibit snap hooks from being engaged to certain objects unless two requirements are met: snap hook must be a locking type and must be “designed for” making such a connection. Under OSHA “designed for” means that the manufacturer of the snap hook specifically designed the snap hook to be used to connect to the equipment in question.

The following connections must be avoided because they can result in rollout* when a non-locking snap hook is used:


- Direct connection of a snap hook to horizontal lifeline.
- Two (or more) snap hooks connected to one D-ring.
- Two snap hooks connected to each other.
- A snap hook connected back on its integral lanyard.
- A snap hook connected to a webbing loop or webbing lanyard.
- Improper dimensions of the D-ring, rebar, or other connection point in relation to the snap hook dimensions that would allow the snap hook keeper to be depressed by a turning motion of the snap hook.

***Rollout:** A process by which a snap hook or carabiner unintentionally disengages from another connector or object to which it is coupled.

COMPATIBLE CONNECTIONS

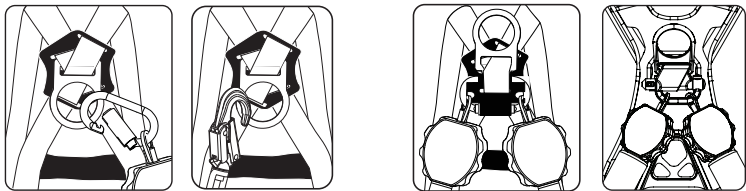

INCOMPATIBLE CONNECTIONS

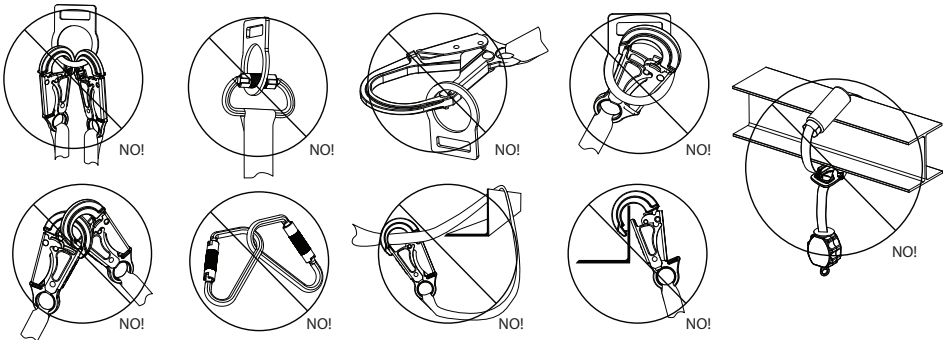




WARNING!


Striking objects horizontally due to the pendulum effect of a swing fall may cause serious injury or death.

SWING FALLS

To minimize the possibility of a swing fall, anchor as directly above the work area as possible. Striking objects horizontally, due to the pendulum effect, may cause serious injury. Swing falls also increase the vertical fall distance of a worker, compared to a fall directly below the anchorage connector. Swing falls may be reduced by using overhead anchorage connectors that move with the worker.

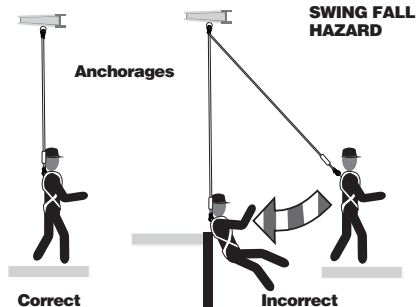

OFFSET CLEARANCE REQUIREMENTS

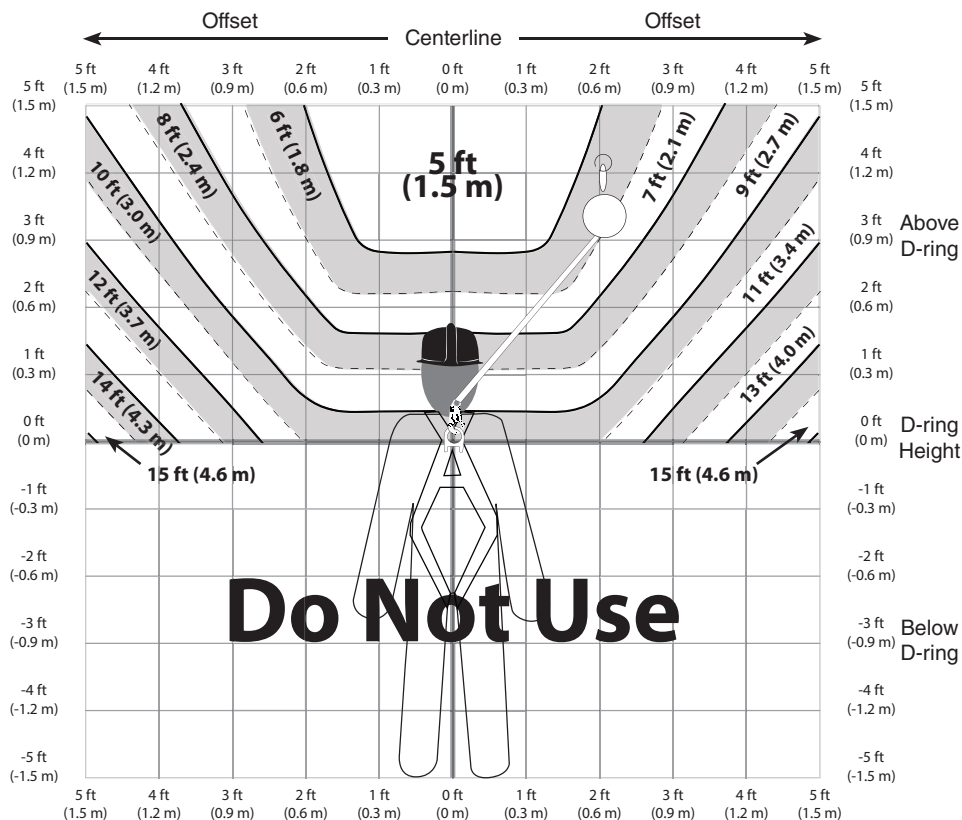


EXAMPLE: With the SRL anchored 4 feet above the users D-ring and the user works 2 feet away (offset) from directly overhead (centerline), the required clearance is 6 feet (1.8 m) from the working level to the nearest obstruction below.

The required clearance includes; Free Fall and Swing Fall Distance, Harness Stretch, Deceleration Distance and Safety Factor.

Not approved for free falls greater than 2 feet.

CLEARANCE CALCULATIONS

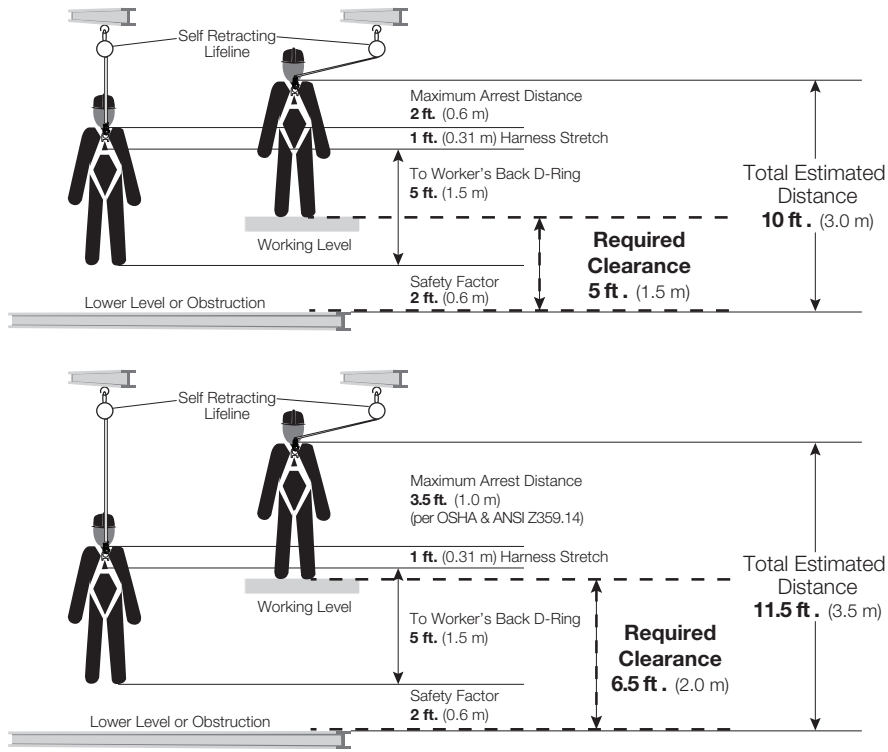

MATERIALS

Model No.	Length	Housing	Housing Connector	Lifeline Constituent	Lifeline Connector
R530007	7 Feet	Aluminum	Steel Carabiner	UHMWPE / polyester webbing 1 in Wide x .05 in Thick	Steel Snap Hook
R530007XAC	7 Feet	Aluminum	Aluminum Carabiner	UHMWPE / polyester webbing 1 in Wide x .05 in Thick	Steel Snap Hook
R530007-R	7 Feet	Aluminum	Steel Carabiner	UHMWPE / polyester webbing 1 in Wide x .05 in Thick	Aluminum Rebar Hook
R530007-SR	7 Feet	Aluminum	Steel Carabiner	UHMWPE / polyester webbing 1 in Wide x .05 in Thick	Steel Rebar Hook
R530011	11 Feet	Aluminum	Steel Carabiner	UHMWPE / polyester webbing 1 in Wide x .05 in Thick	Steel Snap Hook
R530011XAC	11 Feet	Aluminum	Aluminum Carabiner	UHMWPE / polyester webbing 1 in Wide x .05 in Thick	Steel Snap Hook
R530011-R	11 Feet	Aluminum	Steel Carabiner	UHMWPE / polyester webbing 1 in Wide x .05 in Thick	Aluminum Rebar Hook
R530011-SR	11 Feet	Aluminum	Steel Carabiner	UHMWPE / polyester webbing 1 in Wide x .05 in Thick	Steel Rebar Hook
R531007	7 Feet	Aluminum	A100341	UHMWPE / polyester webbing 1 in Wide x .05 in Thick	Steel Snap Hook
R531007-R	7 Feet	Aluminum	A100341	UHMWPE / polyester webbing 1 in Wide x .05 in Thick	Aluminum Rebar Hook
R531007-SR	7 Feet	Aluminum	A100341	UHMWPE / polyester webbing 1 in Wide x .05 in Thick	Steel Rebar Hook

HORIZONTAL SYSTEMS

These units are suitable for use with horizontal lifelines, and deforming or flexible anchorages.

Applications where the SRL is used horizontally for fall arrest or travel restraint, the SRL and horizontal system components must be compatible. For fall arrest, both the horizontal and vertical distances are required for clearance calculations, see horizontal lifeline user instructions for more information. Horizontal systems must be designed and installed under the supervision of a qualified person.

PERFORMANCE FOR R530007(-R,-SR), R530011(-R,-SR) AND R531007(-R,-SR)

Standards and Regulations	Maximum Arrest Distance	Free Fall Limit	Maximum Arrest Force	Average Arrest Force	Capacity
ANSI Z359.14	24 in	2 ft	1800 lbs	900 lbs	130 - 310 lbs
SRD Class 1	(610 mm)	(0.6 m)	(8 kN)	(4 kN)	(59 - 141 kg)
OSHA 29 CFR 1910.140/1926.502	42 in	2 ft	1800 lbs	N/A	400 lbs
	(1067 mm)	(0.6 m)	(8 kN)		(181 kg)

PERFORMANCE FOR R530007XAC AND R530011XAC

Standards and Regulations	Maximum Arrest Distance	Free Fall Limit	Maximum Arrest Force	Average Arrest Force	Capacity
ANSI Z359.14	24 in	2 ft	900 lbs	900 lbs	130 - 310 lbs
SRD Class 1	(610 mm)	(0.6 m)	(4 kN)	(4 kN)	(59 - 141 kg)
OSHA 29 CFR 1910.140/1926.502	42 in	2 ft	1800 lbs	N/A	400 lbs
	(1067 mm)	(0.6 m)	(8 kN)		(181 kg)

OPERATION
BEFORE EACH USE

 **WARNING!**

Before using a personal fall arrest system, employees must be trained in accordance with the requirements of OSHA 29 CFR 1910.30 and 1926.503 and/or applicable local, state, governmental and jurisdictional agencies, in the safe use of the system and its components.

Personal fall arrest systems, including SRL's, must be inspected prior to each use for wear, damage, and other deterioration. Defective components must be immediately removed from service in accordance with the requirements of OSHA 29 CFR 1910.140 and 1926.502 and/or applicable local governmental and jurisdictional standards.

The user must read and understand these user instructions, as well as the user instructions for every component and subsystem of the personal fall arrest system.

Users must have a rescue plan, and the means to implement it, that provides for the prompt rescue of employees in the event of a fall or assures that employees are able to rescue themselves.

Check the operation by pulling smoothly on the lifeline, then pulling sharply on the lifeline to engage the locking mechanism.

SRL's must be inspected prior to each use. See INSPECTION.

CONNECTION

 **WARNING!**

Never attach an additional energy absorbing lanyard, self retracting lifeline, or similar component to lengthen the lifeline.

 **WARNING!**

Only anchor at or above the dorsal D-ring on the users full body harness.

The housing of the SRL is approved to connect to either the anchorage / anchorage connector or to the dorsal D-ring of the full body harness.

Attach the housing connector of the SRL to the anchorage or anchorage connector. The opposing end is connected to the dorsal D-ring of the full body harness.

Attach the housing connector of the SRL to the dorsal D-ring of the full body harness. The opposing end is connected to the anchorage or anchorage connector.

For twin leg connections, see applicable twin leg connector user instructions.

INSPECTION

Type Of Use	Application Examples	Conditions Of Use	Inspection Frequency Competent Person
Infrequent to Light	Rescue and confined space, factory maintenance	Good storage conditions, indoor or infrequent outdoor use, room temperature, clean environments	Annually
Moderate to Heavy	Transportation, residential construction, utilities, warehouse	Fair storage conditions, indoor and extended outdoor use, all temperatures, clean or dusty environments	Semi-annually to annually
Severe to Continuous	Commercial construction, oil and gas, mining	Harsh storage conditions, prolonged or continuous outdoor use, all temperatures, dirty environments	Quarterly to semi-annually

WARNING!

Do not use if inspection reveals any defect, wear, damage, deterioration, inadequate maintenance, or unsafe condition. Do not use any equipment that has been subjected to the forces of arresting a fall, or if any part of the load indicator warning is showing.

FREQUENCY

All components of SRL's must be inspected prior to each use by the user, and annually by an OSHA defined competent person other than the user. Local, state, governmental and jurisdictional agencies governing occupational safety may require the user to conduct more frequent or mandatory inspections.

CRITERIA

WARNING!

If inspection reveals any defect, inadequate maintenance, or unsafe condition, remove from service until a competent person, as defined by OSHA 29 CFR 1910.140(b) and 1926.32(f), can determine the need for authorized repair or disposal.

WARNING!

Any equipment that has been subjected to the forces of arresting a fall, or that has a deployed load indicator, must be removed from service until a competent person can determine the need for authorized repair or disposal.

All components of the SRL must be inspected.

All markings must be legible and attached to the product.

The fold in the webbing is the fall indicator. If the fold is pulled out, breaking the stitching, the SRL has been subjected to the forces of arresting a fall.

Check the operation of the unit by pulling smoothly on the lifeline, then pulling sharply on the lifeline to engage the locking mechanism. Unit must not slip when locked.





Housing must be free from cracks, distortion or any other damage.

To inspect webbing, bend a 6 - 8 inch portion of the webbing into an upside down 'U' shape. Continue along all webbing and rope inspecting for tears, cuts, fraying, abrasion, discoloration, burns, holes, mold, pulled or broken stitches, or other signs of wear and damage.

All equipment must be free of corrosion, chemical attack, alteration, excessive heating or wear.

All snap hooks and carabiners on product must be able to self-close and lock. All hardware must be free of cracks, sharp edges, deformation, corrosion, or any evidence of defect.

LABELS CONTINUED

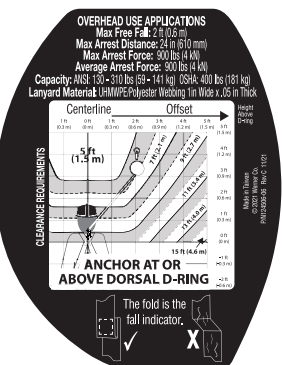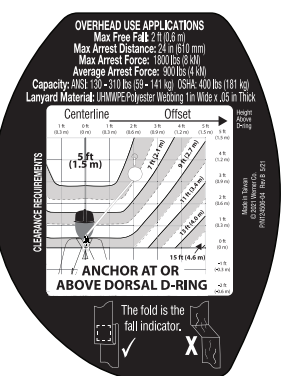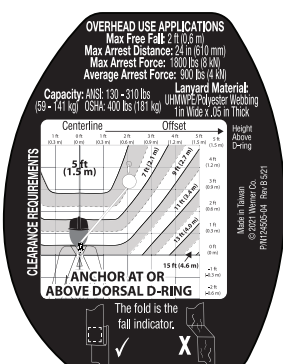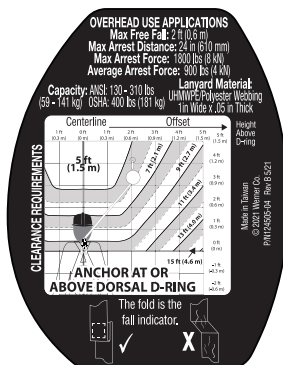

LABELS CONTINUED

BASELINE™

SELF RETRACTING LIFELINE

WERNER®

11ft

Plastic Packaging

R530011-R

Class

1

Anchor at or above dorsal D-ring

ANSI Z359.14-2021

OSHA 1910 & 1926

© 2021 Werner Co. P/N124506-02

Rev A 3/21

OVERHEAD USE APPLICATIONS

Max Free Fall: 2 ft (0.6 m)

Max Arrest Distance: 24 in (610 mm)

Max Arrest Force: 1800 lbs (8 kN)

Average Arrest Force: 900 lbs (4 kN)

Capacity: ANSI: 150-310 lbs (68-141 kg) OSHA: 400 lbs (181 kg)

Lanyard Material: Un/MNPE Polyester Webbing 1 in Wide x .05 in Thick

Centerline

Offset

1.0 ft (0.30 m)

0.5 ft (0.15 m)

0.25 ft (0.075 m)

0.125 ft (0.0375 m)

0.0625 ft (0.01875 m)

0.03125 ft (0.009375 m)

0.015625 ft (0.0046875 m)

0.0078125 ft (0.00234375 m)

0.00390625 ft (0.001171875 m)

0.001953125 ft (0.0005859375 m)

0.0009765625 ft (0.00029296875 m)

0.00048828125 ft (0.000146484375 m)

0.000244140625 ft (0.0000732421875 m)

0.0001220703125 ft (0.00003662109375 m)

0.00006103515625 ft (0.000018310546875 m)

0.000030517578125 ft (0.0000091552734375 m)

0.0000152587890625 ft (0.00000457763671875 m)

0.00000762939453125 ft (0.000002288818359375 m)

0.000003814697265625 ft (0.0000011444091796875 m)

0.0000019073486328125 ft (0.00000057220458984375 m)

0.00000095367431640625 ft (0.000000286102294921875 m)

0.000000476837158203125 ft (0.0000001430511474609375 m)

0.0000002384185791015625 ft (0.00000007152557373046875 m)

0.00000011920928955078125 ft (0.000000035762786865234375 m)

0.000000059604644775390625 ft (0.0000000178813934326171875 m)

0.0000000298023223876953125 ft (0.00000000894069671630859375 m)

0.00000001490116119384765625 ft (0.000000004470348358154296875 m)

0.000000007450580596923828125 ft (0.0000000022351741790771484375 m)

0.0000000037252902984619140625 ft (0.00000000111758708953857421875 m)

0.00000000186264514923095703125 ft (0.000000000558793544769287109375 m)

0.000000000931322574615478515625 ft (0.0000000002793967723846435546875 m)

0.0000000004656612873077392578125 ft (0.00000000013969838619232177734375 m)

0.00000000023283064365386962890625 ft (0.000000000069849193096160888671875 m)

0.000000000116415321826934814453125 ft (0.0000000000349245965480804443359375 m)

0.0000000000582076609134674072265625 ft (0.00000000001746229827404022216796875 m)

0.00000000002910383045673370361328125 ft (0.000000000008731149137020111083984375 m)

0.000000000014551915228366851806640625 ft (0.0000000000043655745685100555419921875 m)

0.0000000000072759576141834259033203125 ft (0.00000000000218278728425502777099609375 m)

0.00000000000363797880709171295166015625 ft (0.000000000001091393642127513885498046875 m)

0.000000000001818989403545856475830078125 ft (0.0000000000005456968210637569427490234375 m)

0.0000000000009094947017729282379150390625 ft (0.00000000000027284841053187847137451171875 m)

0.00000000000045474735088646411895751953125 ft (0.000000000000136424205265939235687255859375 m)

0.000000000000227373675443232059478759765625 ft (0.0000000000000682121026329696178436279296875 m)

0.0000000000001136868377216160297393798828125 ft (0.00000000000003410605131648480892181396484375 m)

0.00000000000005684341886080801486968994140625 ft (0.000000000000017053025658242404460906982421875 m)

0.000000000000028421709430404007434844970703125 ft (0.00000000000000852651282912220223045349122109375 m)

0.0000000000000142108547152020037174224853515625 ft (0.000000000000004263256414561101115226745610546875 m)

0.00000000000000710542735760100185871124267578125 ft (0.0000000000000021316282072805505576133728052734375 m)

0.000000000000003552713678800500929355621337890625 ft (0.00000000000000106581410364027527880668640263671875 m)

0.0000000000000017763568394002504646778106689453125 ft (0.000000000000000532907051820137639403343201318359375 m)

0.00000000000000088817841970012523233890533447265625 ft (0.0000000000000002664535259100688197016716006591796875 m)

0.000000000000000444089209850062616169452667236328125 ft (0.00000000000000013322676295503440985083580032958984375 m)

0.0000000000000002220446049250313080847263336181640625 ft (0.000000000000000066613381477517204925417900164794921875 m)

0.00000000000000011102230246251565404236316680908203125 ft (0.0000000000000000333066907387586024627089500823974609375 m)

0.000000000000000055511151231257827021181583404541015625 ft (0.0000000000000000166533453693793012313544750411987324609375 m)

0.0000000000000000277555756156289135105907917022705078125 ft (0.000000000000000008326672684689650615677237520599366224609375 m)

0.00000000000000001387778780781445675529539585113525390625 ft (0.00000000000000000416333634234482530783861876029968311224609375 m)

0.000000000000000006938893903907228377647697925567626953125 ft (0.0000000000000000020816681711724126539193093801498415561224609375 m)

0.0000000000000000034694469519536141888238489627838134765625 ft (0.000000000000000001040834085586206326959654690074920778061224609375 m)

0.00000000000000000173472347597680709441192448139190673828125 ft (0.00000000000000000052041704279310316347982734503746038903061224609375 m)

0.000000000000000000867361737988403547205961240695953369140625 ft (0.0000000000000000002602085213965515817399136725187301945153061224609375 m)

0.0000000000000000004336808689942017736029806203479766845703125 ft (0.000000000000000000130104260698275790869956836259365097257653061224609375 m)

0.00000000000000000021684043449710088680149031017398834228515625 ft (0.00000000000000000006505213034913789543497841812968254862882653061224609375 m)

0.000000000000000000108420217248550443400745155086994171142578125 ft (0.0000000000000000000325260651745689477174892090648412743144132653061224609375 m)

0.0000000000000000000542101086242752217003725775434970855712890625 ft (0.000000000000000000016263032587284473858744604532420637157206632653061224609375 m)

0.00000000000000000002710505431213761085018628877174854278564453125 ft (0.00000000000000000000813151629364223692937230226621031857860331632653061224609375 m)

0.000000000000000000013552527156068805425093144385874271392822265625 ft (0.000000000000000000004065758146821118464686151133105158934016581632653061224609375 m)

0.0000000000000000000067762635780344027125465721929371356964111328125 ft (0.00000000000000000000203287907341055923234307556655257947200829081632653061224609375 m)

0.00000000000000000000338813178901720135627328609646856784820556640625 ft (0.0000000000000000000010164395367052796161715377832762897360041454081632653061224609375 m)

0.000000000000000000001694065894508600678136643048234284241027783203125 ft (0.000000000000000000000508219768352639808085768891638144868002072704081632653061224609375 m)

0.0000000000000000000008470329472543003390683215241172121205138916015625 ft (0.00000000000000000000025410988417631990404288444581907243400103635204081632653061224609375 m)

0.00000000000000000000042351647362715016953416076205860606025694580078125 ft (0.0000000000000000000001270549420881599520214422229095362170005181760204081632653061224609375 m)

0.000000000000000000000211758236813575084767080381029303030128472900390625 ft (0.000000000000000000000063527471044079976010721111454768108500259088010204081632653061224609375 m)

0.0000000000000000000001058791184067875423835401905146515150642364501953125 ft (0.00000000000000000000003176373552203998800536055572738405425012954400510204081632653061224609375 m)

0.00000000000000000000005293955920339377119177009525732575753211822509765625 ft (0.0000000000000000000000158818677610199940026802778636920271250647720025510204081632653061224609375 m)

0.000000000000000000000026469779601696885595885047628662878766059112548828125 ft (0.000000000000000000000007940933880509997001344038931846013562531140012525510204081632653061224609375 m)

0.0000000000000000000000132348898008484427979425238143314393830295562744140625 ft (0.0000000000000000000000039704669402549985006720194659230067812655700062627525510204081632653061224609375 m)

0.00000000000000000000000661744490042422139897126190716571969161477813720703125 ft (0.00000000000000000000000198523347012749925003360093296150339063278500313127525510204081632653061224609375 m)

0.000000000000000000000003308722450212110699485630953582859845807389068603515625 ft (0.0000000000000000000000009926167350637499250016800465930769515632655015627525510204081632653061224609375 m)

0.0000000000000000000000016543612251060553497428154767914299227903945343017578125 ft (0.0000000000000000000000004963083675318749625000840023296534757816327525510204081632653061224609375 m)

0.00000000000000000000000082718061255302767487140773839571496139519726715087890625 ft (0.000000000000000000000000248154183765937481250004200116476737890816327525510204081632653061224609375 m)

0.000000000000000000000000413590306276513837435703869197857480697598633575439453125 ft (0.00000000000000000000000012407709188296874062500021000712336894540816327525510204081632653061224609375 m)

0.0000000000000000000000002067951531382569187178519345989287403487993167877197265625 ft (0.0000000000000000000000000620385459414843703125000105003561844727040816327525510204081632653061224609375 m)

0.00000000000000000000000010339757656912845935892596729946437017439965839385986328125 ft (0.000000000000000000000000031019272970742185156250000525017780923352040816327525510204081632653061224609375 m)

0.000000000000000000000000051698788284564229679462983649732185087199829196929931640625 ft (0.00000000000000000000000001550963648537109257812500002625008891167617602040816327525510204081632653061224609375 m)

0.0000000000000000000000000258493941422821148397314918248660925035999145984649658203125 ft (0.0000000000000000000000000077548182426355462890625000013125044455830880102040816327525510204081632653061224609375 m)

0.00000000000000000000000001292469707114105741986574591243304625179995729923248291015625 ft (0.0000000000000000000000000038774091213177731445312500000656252222791444005102040816327525510204081632653061224609375 m)

0.000000000000000000000000006462348535570528709932872956216523125899978649616241455078125 ft (0.000000000000000000000000001938704560785386572265625000032812611139572200255102040816327525510204081632653061224609375 m)

0.0000000000000000000000000032311742677852643549664364781082612549499893248081207275390625 ft (0.0000000000000000000000000009693522803926932861328125000016406305569786102040816327525510204081632653061224609375 m)

0.00000000000000000000000000161558713389263217748321823905413062747499466240406036376953125 ft (0.000000000000000000000000000484676140196346643066406250000082031527839255102040816327525510204081632653061224609375 m)

0.000000000000000000000000000807793566946316088741609119527065313737497331202030181884765625 ft (0.0000000000000000000000000002421980700981733215332031250000041015763696275255102040816327525510204081632653061224609375 m)

0.0000000000000000000000000004038967834731580443708045597635326568687486656010150909423828125 ft (0.00000000000000000000000000012119903504908666076660156250000205078818481376275255102040816327525510204081632653061224609375 m)

0.00000000000000000000000000020194839173657902218540227988176627843437433280050754547119140625 ft (0.000000000000000000000000000060599517524521510383300781250000102539440406881376275255102040816327525510204081632653061224609375 m)

0.000000000000000000000000000100974195868289511092701139940883139217187166400253772735595703125 ft (0.0000000000000000000000000000302997587622607551916503906250000051269722034406881376275255102040816327525510204081632653061224609375 m)

0.0000000000000000000000000000504870979341447555463505699704415696085935832001268863677978515625 ft (0.00000000000000000000000000001514987938113037759582519531250000025634861017204406881376275255102040816327525510204081632653061224609375 m)

0.00000000000000000000000000002524354896707237777317528498522078480429679160006344318389892578125 ft (0.0000000000000000000000000000075729374835360937979125976562500000128172305086102040816327525510204081632653061224609375 m)

0.000000000000000000000000000012621774483536188886587642492610392402148395800031721591949462890625 ft (0.000000000000000000000000000003786468741768046898956298781250000006408615254305102040816327525510204081632653061224609375 m)

0.0000000000000000000000000000063108872417680944432938212491305462010741979000158607959747314453125 ft (0.00000000000000000000000000000189323437038402344947814937812500000320430762715255102040816327525510204081632653061224609375 m)

0.00000000000000000000000000000315544362088404722164691062456527310353709895000793039798736572265625 ft (0.000000000000000000000000000000946617185192011724739049478125000001602153813576275255102040816327525510204081632653061224609375 m)

0.000000000000000000000000000001577721



WernerCo Corporate Headquarters:
555 Pierce Rd, Suite 300, Itasca, IL 60143
888-523-3371 Toll Free • 888-456-8459 Fax