

# **Amazon Fire HD 10 Battery Replacement**

Follow this guide to replace your battery.

Written By: Jaie Hillery



### **INTRODUCTION**


Before you begin, make sure the device is off. You will need to use the screen replacement guide as a prerequisite.



# **TOOLS:**

- iFixit Opening Tools (1)
- Spudger (1)

### Step 1 — Screen

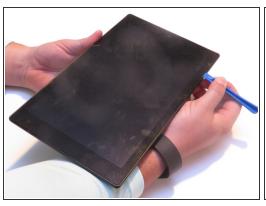







- Avoid prying near bottom right hand side due to LCD Connector
- Use a plastic opening tool to pry the screen up in the right hand corner.

### Step 2

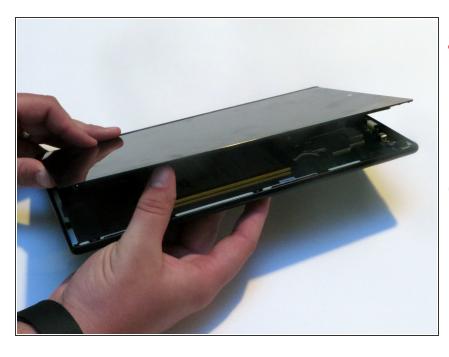

- ♠ Do not completely remove the screen yet as there is a ZIF connector connected.
  - Lift the screen and digitizer from the case.
- (i) You may need to use some force due to the glue.


## Step 3

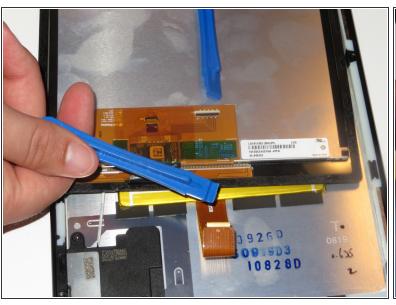



- Be mindful of the ZIF connector.
- Disconnect the ribbon connector from the digitizer side using your hands or the plastic opening tool.

# Step 4

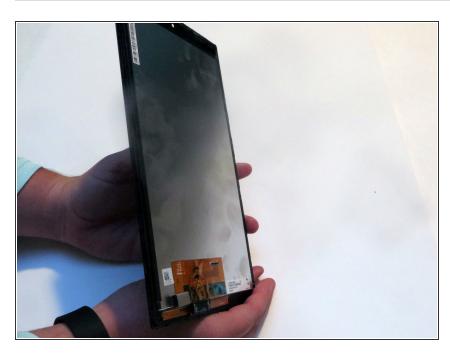

 Remove the screen and digitizer from the case completely.

#### Step 5 — Battery







- Locate the power cable that links the battery to the motherboard.
- Carefully unplug the battery power cable to disconnect the battery from the motherboard.
- (i) The third image shows what it should look like with the battery power cable is disconnected.

#### Step 6







- Begin by locating the double sided pull tape locations.
- ⚠ Do not lift on the battery when doing the following step. You will bend it. It is very pliable.
- Pull the black soft tabs to release the tape's adhesion.
- (i) Make sure you pull the tabs slowly and continuously away from the case until the adhesive is completely out.
- Do this to all 4 tabs until the battery is completely free of adhesion to the device's backing.

### Step 7



- ↑ Make sure all the adhesive is removed before trying to lift the battery from the case.
- After the battery is totally free of any adhesion, simply lift the battery from the case.

### Step 8



- Inspect battery for any leakage.
- Please follow all U.S. regulations and laws when disposing or recycling the battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 11:03:18 PM.