

# **SVEN**®

Wireless microphone

## **USER MANUAL**



# **MK-700 MK-710**

[www.sven.fi](http://www.sven.fi)

***Congratulations on your purchase of the SVEN Wireless Microphone!*****COPYRIGHT**

© SVEN PTE. LTD. Version 1.0 (23.07.2021).

This Manual and information contained in it are copyrighted. All rights reserved.

**TRADEMARKS**

All trademarks are the property of their legal holders.

**NOTICE OF RESPONSIBILITY RESTRICTION**

Despite the exerted efforts to make this Manual more exact, some discrepancies may occur. The information in this Manual is given on «as is» terms. The author and the publisher do not bear any liability to a person or an organization for loss or damage which has arisen from the information contained in this Manual.

**BUYER RECOMMENDATIONS**

- Unpack the device carefully. Make sure there are no accessories left in the box. Check up the device for damage; if the product was damaged during transportation, address the firm which carried out the delivery; if the product functions incorrectly, address the dealer at once.
- Check up the package contents and availability of the warranty card. Make sure the warranty card has a shop stamp, a legible signature or the seller's stamp and purchase date, and the goods number corresponds to that in the warranty card. Remember: in case of warranty card loss or discrepancy of numbers you forfeit the right for warranty repairs.
- Do not switch on the speaker system immediately after you bring it into a room from environment with negative temperature! After unpacking, the speaker system should be kept in conditions of room temperature for at least 4 hours.
- Before installing and using the speaker system, read this Manual carefully and keep it for future reference.
- Shipping and transportation equipment is permitted only in the original container.
- Does not require special conditions for realization.
- Dispose of in accordance with regulations for the disposal of household and computer equipment.
- The date of manufacture of the product is indicated on the box.

**APPLICATION**

MK-700/MK-710 microphone is designed for using at home.

***Technical support is on [www.sven.fi](http://www.sven.fi).***

## User Manual

MK-700  
MK-710**PACKAGE CONTENTS**

- Microphone — 1 pc
- Receiver — 1 pc
- Microphone batteries (AA type) — 2 pcs
- Receiver batteri MK-700 (AA type) — 1 pc
- Receiver batteri MK-710 6LR61(9V) — 1 pc
- User Manual — 1 pc
- Warranty card — 1 pc

**SAFETY PRECAUTIONS**

- Do not install in locations where liquid, moisture, dust and high temperatures.
- Do not open or repair by yourself. In case of malfunction, contact the device for professional advice at your nearest service center.
- When installing batteries, pay attention to the polarity.
- If unused for more than a week, it is recommended to remove the batteries from the device.
- Do not use batteries of poor quality because of the danger of electrolyte draining from them. Escaping electrolyte can damage the components of the device.

**SPECIAL FEATURES**

- Dynamic microphone in a plastic case with a shutdown button and indicator of status, low battery
- Wireless audio transmission in VHF band, fixed frequency
- Less susceptible to interference (radio, TV, mobile phones, etc.)
- Receiver with LED status indicator, antenna and audio output jack (6.5 mm)

**Description**

- ① Microphone status indicator  
(green - microphone on, red - low battery)
- ② Microphone on/off power switch
- ③ Microphone battery compartment
- ④ Jack 6.3 mm output to the amplifier
- ⑤ Receiver status indicator  
(green - receiver on, red - communication with microphone)
- ⑥ Receiver ON/MUTE/OFF switch
- ⑦ Swivel antenna
- ⑧ Receiver battery compartment
- ⑨ Volume control

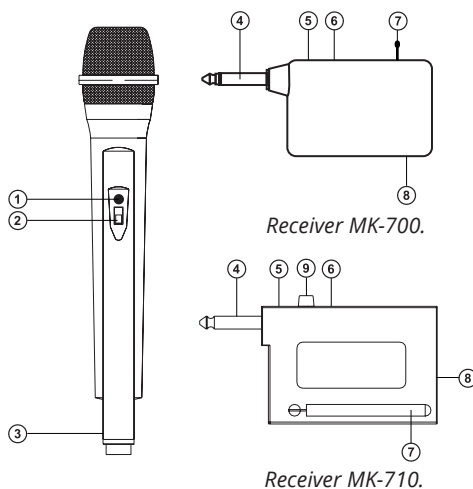


Fig.1.

**PREPARATION FOR USING RECEIVER**

- Open the battery compartment cover ⑧. Insert battery type AA for model MK-700 or 6LR61(9V) for model MK-710, following the polarity.
- Turn switch ⑥ to ON. If the receiver does not light up green power indicator ⑤, replace the batteries with new ones.
- Connect the receiver to your computer's sound card connector, stereo system or amplifier. If necessary, use adapter 6.3 mm jack - 3.5 mm mini-jack (not included).

**PREPARATION FOR USING MICROPHONE**

- Open the battery compartment ③. Insert 2 AA batteries with the correct polarity.
- Turn switch ② to the ON position. If the power indicator ① on the microphone is not lit, replace the battery with a new one.
- If the microphone's sound quality has deteriorated or the red indicator light is on or flashing, replace the microphone's batteries or the receiver's batteries with new ones. Also try changing the position of the receiver's antenna to achieve optimal performance.
- If you turn off the microphone may cause unwanted noise.

**Attention!**

- ***Protect the unit from direct sunlight and rain. Keep it away from electromagnetic waves.***
- ***Do not hold the microphone to the speaker.***

## TECHNICAL SPECIFICATIONS

Parameter, measurement unit	Value
Microphone type:	wireless
Frequency, MHz	228.1 MHz (model MK-700) 224.9 MHz (model MK-710)
Transmitter power, mW	<5
Microphone frequency range, Hz	80-12000
Sensitivity dB	>60
Membrane, mm	25
Microphone power:	AA type batteries 2 pcs
Receiver power:	AA type battery 1 pc (model MK-700) 6LR61(9V) type battery 1 pc (model MK-710)
Range, m	up to 20
Interface	radio
Color	black
Microphone dimensions, mm	Ø 52 x 265
Receiver dimensions, mm	110 x 48 x 18 (model MK-700) 120 x 68 x 33 (model MK-710)
Microphone weight (without batteries), g	126
Receiver weight (without batteries), g	35 (model MK-700) 68 (model MK-710)

**Notes:**

- **Technical specifications given in this table are supplemental information and cannot give occasion to claims.**
- **Technical specifications and package contents are subject to change without notice due to the improvement of SVEN production.**

Wireless microphone

**SVEN**®

**Models: MK-700, MK-710**

Importer: Tiralana OY, Office 102, Kotolahdentie 15, 48310 Kotka, Finland.

Импортер в России: ООО «Регард», 105082, г. Москва, ул. Фридриха Энгельса, д.75, стр. 5. Уполномоченная организация в России: ООО «РТ-Ф», 105082, г. Москва, ул. Фридриха Энгельса, д. 56, стр. 1. Условия гарантийного обслуживания смотрите в гарантийном талоне или на сайте **www.sven.fi**. Гарантийный срок: 12 мес. Срок службы: 2 года.

Производитель: «СВЕН ПТЕ. Лимитед», 176 Джу Чиат Роуд, № 02-02, Сингапур, 427447. Произведено под контролем «Свен Скандинавия Лимитед», 48310, Финляндия, Котка, Котolahдентие, 15. Сделано в Китае.

Manufacturer: SVEN PTE. LTD, 176 Joo Chiat Road, № 02-02, Singapore, 427447. Produced under the control of Oy Sven Scandinavia Ltd. 15, Kotolahdentie, Kotka, Finland, 48310. Made in China.

® Registered Trademark  
of Oy SVEN  
Scandinavia Ltd. Finland.



**MK-700**  
**MK-710**