

**POWERTECH**

**MB4104**

# 2048Wh Power Station



# Instruction Manual

## CONTENTS

|                                     |    |
|-------------------------------------|----|
| Warnings & Safety Information ..... | 3  |
| Before First Use .....              | 4  |
| Box Contents .....                  | 4  |
| Product Diagram.....                | 5  |
| LCD Screen Description .....        | 6  |
| Usage Instructions.....             | 6  |
| Charging Instructions .....         | 8  |
| Other Functions .....               | 13 |
| FAQ .....                           | 14 |
| Error Codes.....                    | 15 |
| Maintenance .....                   | 17 |
| Specifications.....                 | 17 |
| Warranty Information.....           | 18 |

## WARNINGS & SAFETY INFORMATION

**WARNING: The manufacturer is not responsible for any potential injury from misuse**

- Read this user manual carefully before using the product to ensure that you completely understand the product and can correctly use it. After reading this user manual, keep it properly for future reference.
- Improper use of this product may cause serious injury to yourself or others, or cause product damage and property loss. Once you use this product, it is deemed that you understand, approve and accept all the terms and content in this document.
- In compliance with laws and regulations, the Company reserves the right to final interpretation of this document and all documents related to this product. This document is subject to changes updates, revisions, or termination) without prior notice. Please visit the official website to obtain the latest product information.
- No compensation for losses caused by the use of non-standard connectors.


## BEFORE FIRST USE

Prior to using your product, please read all the safety and operating instructions thoroughly. Please ensure you follow the steps below before using the product. We recommend you keep the original packaging for storing the product when not in use.


Please pay close attention to the section entitled Warnings & Safety Information. Find a safe and convenient place to keep this instruction manual for future reference.

Unpack the product but keep all packaging materials until you have made sure your new product is undamaged and in good working order. Ensure you have all accessories listed in this manual.


## BOX CONTENTS

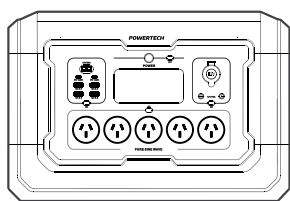


Power Station

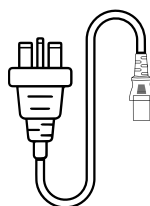

Mains Charging Cable

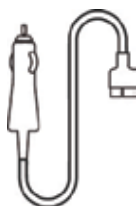


12V Charging Cable

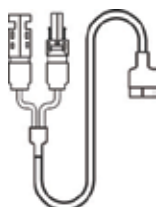


Solar Charging Cable



User Manual

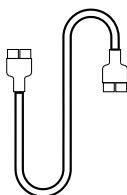


Anderson Cable

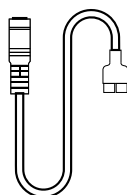


Anderson 7909 Cable

## PRODUCT DIAGRAM

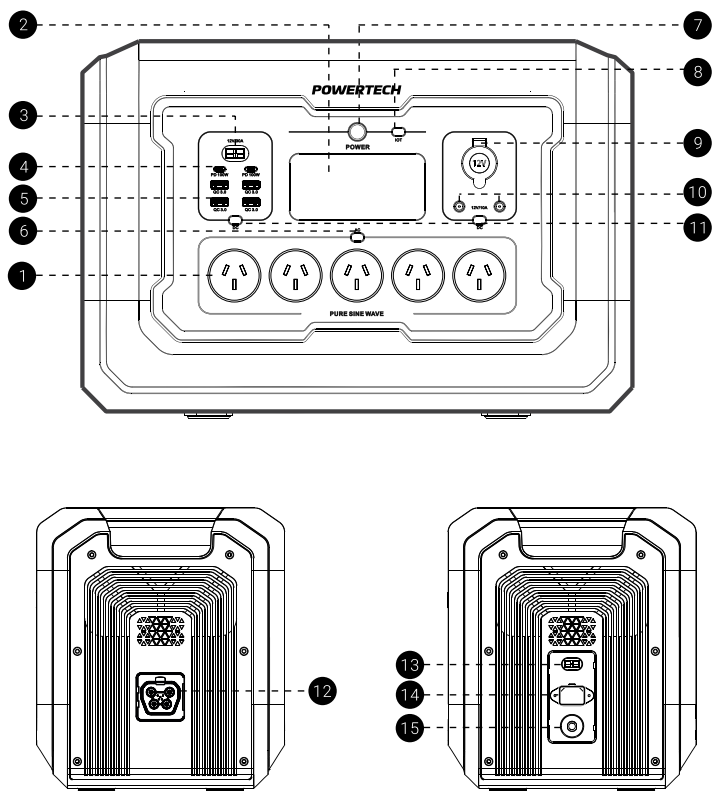

- |                                  |                                   |
|----------------------------------|-----------------------------------|
| 1. AC Outputs                    | 10. DC 5521 Output Port           |
| 2. LCD Display                   | 11. DC Output Power On/Off Switch |
| 3. Anderson Output Port          | 12. Power pack connection port    |
| 4. USB-C Output Port             | 13. Anderson Input Port           |
| 5. USB-A Output Port             | 14. AC Recharging Input Port      |
| 6. AC Output Power On/Off Switch | 15. Circuit Breaker Protection    |
| 7. Main Power On/Off Switch      |                                   |
| 8. 10T On/Off Switch             |                                   |
| 9. 12V Car Charger Output Port   |                                   |


## LCD SCREEN DESCRIPTION

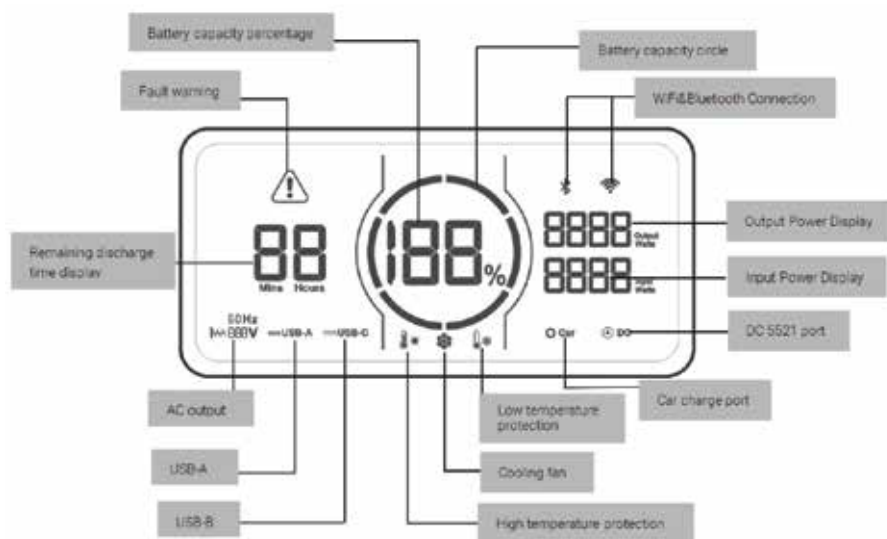

## USAGE INSTRUCTIONS

LCD battery capacity circle indicates battery level. The capacity circle is divided into six sections, accounting for approximately 17%~35%~51%~68%~85%~100% of the capacity. When in use, the LCD display automatically wakes up. When discharging, the blue capacity segment disappears from the display, indicating remaining capacity. When charging, the blue battery capacity circle flashes clock-wise along the trajectory, which indicates that the device is currently charging. The number on the right side of the energy circle now displays the real-time input power. After full charging, all blue capacity segments will be illuminated and keep in stable. After charging is completed, please unplug the charger.

Press and hold the power button, the product will turn on, the LCD screen will light up, and the power button indicator light will turn to a steady state; press and hold the power button for about 3 seconds or more, the LCD screen will display the word "off" and then release it, the product will shut down, and the LCD display will turn off. When the main power button is turned on, lightly press the switch button of each functional area, and the corresponding function icons on the LCD screen will light up at the same time. At this time, the functions in this area can be used normally; tap the corresponding functional area button again, and the corresponding LCD screen icons will turn off. This area function stops working.

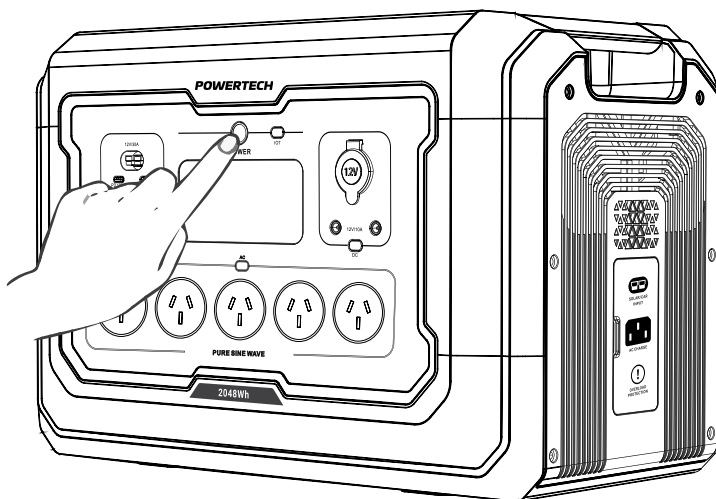


**NOTE:** After the product is turned on, short press the main power button. The LCD screen will turn off but the product will not shut down. If the product is not operated within 5 minutes, the product will automatically shut down.

**NOTE:** The default standby time of this product is 6 hours. If other output power keys are not turned on and no load is connected to the product, the product will automatically shut down after 6 hours. If the product is not operated within 5 minutes, the product will enter sleep state and the LCD screen will automatically turn off. When the product has load changes or operations, the LCD screen automatically lights up. The standby time can be set on the APP.

**NOTE:** In high-temperature environments, it is recommended to use loads below 1600W when the capacity is discharged from 100% to 30%. Otherwise, it may trigger the high-temperature protection of the battery cells.

## CHARGING INSTRUCTIONS

### AC Charging

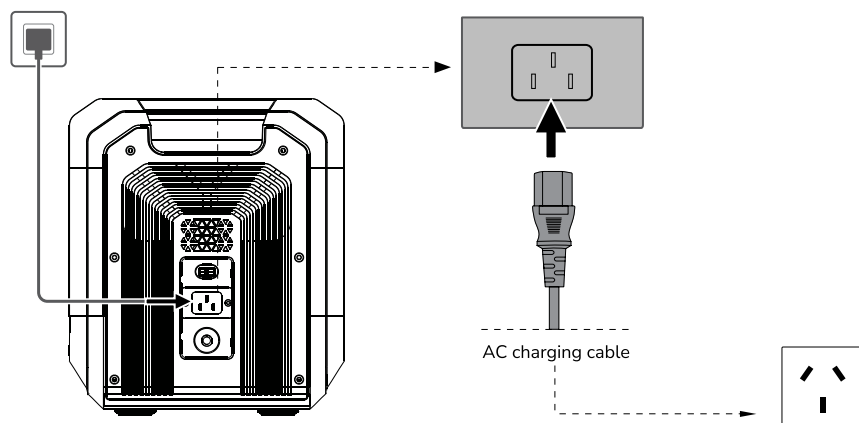


Use the standard AC charging cable to charge the device, connect as shown in the figure, when the input power on the screen shows a reading, the device starts to charge. The maximum fast charge can be 1600W and the device can be fully charged in about 1.5 hours.

**NOTE: Please use the AC Charging Cable included in the package for fast charging. Do not use other cables to charge. Plug directly into an AC wall outlet and make sure that the wall output current is more than 10A. Otherwise, reduce the unit charging speed with the AC Charge Speed Switch. The Company takes no responsibilities for any consequences caused by failures to follow instructions, including but not limited to charging with other AC charging cables.**

## Fast charge & Slow charge function Settings

**Note: The product must be turned on, and the input and output ports must be cut off.**

1. Long press the DC button + IOT button and hold for 5 seconds, the screen flashes and shows the word "SET", the product enters the input power switching interface, then tap the IOT button to switch, L means slow charge (800W input), H means fast charge (1600W input);
2. After switching, hold down the POWER button for 3 to 5 seconds to confirm the setting. The screen stops flashing and the word "SUC" will be displayed, which indicating that the setting is successful.
3. Exiting the fast charge/Slow charge switch function, please press and hold the POWER button again for 3-5 seconds.

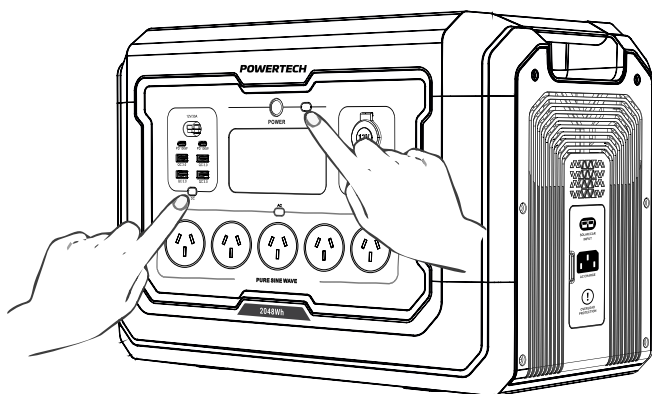


## Solar Charging

Connect the standard solar panels to the device by using the fittings "Anderson to MC4 cable" x1 and "MC4 to 7909 cable" x6. Up to 6 standard solar panels can be connected to the device, which takes about 1.5 hours to be fully charged.

**NOTE: The solar charging cable (MC4-7909 cable) and solar panel need to be purchased separately.**

**NOTE: When using the matching solar panel to charge this product, please connect it according to the user manual.**


**NOTE: Before connecting the solar panel, please confirm that the output open circuit voltage of the solar panel is within 150V to avoid damage to the product.**

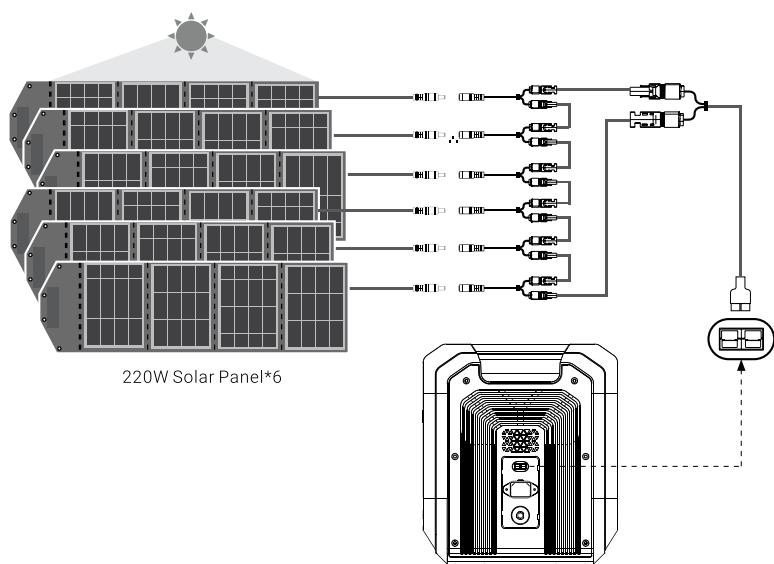

## Car Charging


Use the car charger port of the car to charge this product, supporting 12V/ 8A car charging. For protecting the car battery from losing power and unable to start, it is necessary to use the car charger to charge after the car is started.

At the same time, ensure that the car charger port and the cigarette lighter of the car charger input cable are in good connection. The company shall not be held responsible for any loss caused by non-compliance with the standard operation.

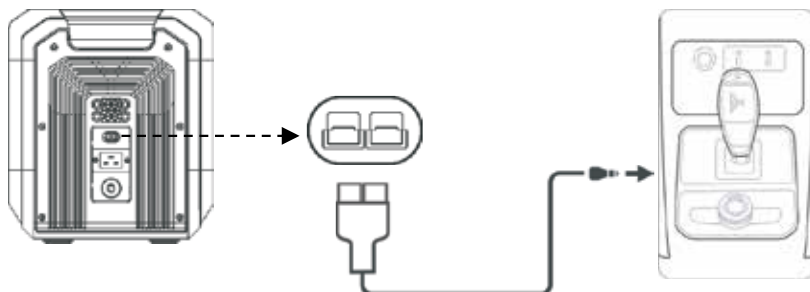

## Extended Battery Charging

Up to one extended battery can be connected to this product. Only use the supplied cable to connect the power station and the extended battery, the device will start to charge when a reading appears on the input power on the screen.

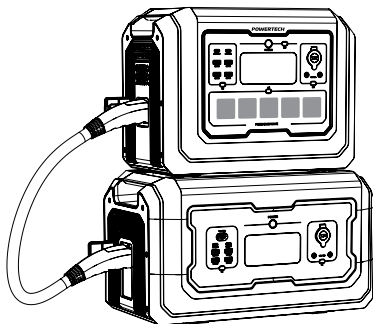

**NOTE:** Please make sure that both the product and the power pack are turned off Before connecting the extended battery to this product.

**NOTE:** After this product is connected to the extended battery, make sure that the LCD display of this product shows the input power, before turning on.


**WARNING:** Do not directly connect or remove the power pack during the charging and discharging process. If you need to connect or remove the power pack when using, please turn off the power before operating.

**WARNING:** Do not use your hands or other objects to touch the metal terminals at the connection port of the power pack. If there are foreign objects attached to the metal terminals, please lightly wipe with a dry cloth.

**WARNING:** The device only allows to plug in and unplug the battery pack in the shutdown status:with the device on, to plug or unplug battery packs will trigger the overcurrent protection. If damage under this situation,no warranty allowed.

## OTHER FUNCTIONS

### Circuit Break Protection Function

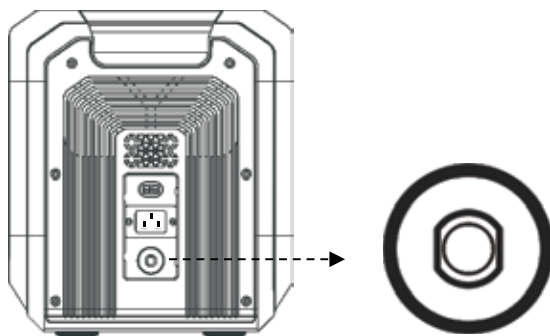

When the AC input current is continuously more than 10A, the device charge input port will protect itself. The AC input overload protector button will pop up automatically. After confirming that the product is not faulty, press the AC input overload protector to reset the circuit breaker.

### **1. What type of battery does the product use?**

This product uses high-quality lithium iron phosphate batteries.

### **2. What equipment can be connected to the AC output port of the product?**

The AC output port of this product has a rated power of 2500W and a peak power of 5400W. It can power most household appliances. However, it is recommended that you confirm the power of the appliance before use and ensure that the sum of the power of all load devices is less than the rated power.

### **3. How to know how long the product can provide power?**

The LCD screen of this product will display the battery life, and devices with stable power consumption can be estimated based on this time.

### **4. How to tell if the product is charging?**

When charging, the LCD screen will display the remaining charging time, and the power indicator circle outside the battery power percentage will begin to rotate in a circular motion, and the input power will be displayed.

### **5. How to clean this product?**

Please use a dry, soft, clean cloth or paper towel to wipe this product.

### **6. How to store the product?**

When storing, please turn off this product first and then store it in a dry, ventilated place at room temperature. Do not place this product near water and fire sources. During long-term storage, it is recommended to charge and discharge the battery every three months to extend the service life of this product.

### **7. Can this product be brought on board a plane?**

No.

### **8. Is the actual output capacity of the product consistent with the capacity specified in the user manual?**

The capacity indicated in the user manual is the rated capacity of the battery pack of this product. Since this product has a certain efficiency loss during the charging and discharging process, the actual output capacity of the product is lower than the capacity specified in the user manual.

## ERROR CODES

| FAULT CODE | FAULT INFORMATION                                              | STATUS                                                                                                                                                                                                                                                                             | REMARKS                                                                                                                                |
|------------|----------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| E000       | AC output short circuit protection                             | Flashing, no output<br>                                                                                          | Press the AC output power on/off button for recovery                                                                                   |
| E001       | Output overload protection                                     | Flashing, no output<br>         | Flashing icons indicates which circuit overload. Overload protection needs to be restored manually, UPS function overload 2500W 1 sec. |
| E002       | AC Battery low voltage protection                              | The corresponding function icon flashes and the corresponding port has no output.                                                                                                                                                                                                  | After protection, restart corresponding function keys to restore functions, and recharge it timely                                     |
| E003       | AC output over-voltage and low voltage protection              | Flashing, no AC output<br>                                                                                                                                                                        | You need to manually press the AC power button to recover                                                                              |
| E004       | Abnormal AC input frequency                                    | Flashing, no output<br>                                                                                                                                                                           | Automatically recover when frequency is normal                                                                                         |
| E005       | High and low bus voltage, over-current                         | Flashing, no output at all ports                                                                                                                                                                  | You need to manually press the AC power button to recover                                                                              |
| E006       | Inverter over-temperature charging over-temperature protection | Flashing, no output<br>         | Temperature lower down to normal level, it will recover automatically                                                                  |
| E010       | Overload and short circuit of the cigarette lighter socket     | Flashing, no output<br>   | You need to manually press the DC power button to recover                                                                              |
| E011       | Overload and short circuit of the USB-A port                   | Flashing, no output at all ports<br>                                                                         | You need to manually press the DC power button to recover                                                                              |
| E012       | Overload and short circuit of the USB-C port                   | Flashing, no output at all ports<br>                                                                         | You need to manually press the DC power button to recover                                                                              |
| E016       | Overvoltage of the inverter input battery                      | E016 code +  Flashing                                                                                                                                                                           | You need to manually press the DC power button to recover                                                                              |

| FAULT CODE | FAULT INFORMATION                 | STATUS                                                                                                                                                                                                      | REMARKS                                                                        |
|------------|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
| E020       | BMS communication failure         | Flashing, no output at all ports                                                                                           | Check BMS communication cable                                                  |
| E021       | Battery cell high voltage alarm   | E021 code flashing                                                                                                                                                                                          | Set the device aside and wait for the battery voltage to recover automatically |
| E022       | Battery cell low voltage alarm    | Battery capacity percentage flashing                                                                                                                                                                        | Connect the AC charging cable and keep charging until the voltage is normal    |
| E023       | Total battery voltage is too high | E23 code flashing but output is normal                                                                                                                                                                      | Set the device aside and wait for the battery voltage to recover automatically |
| E024       | Total battery voltage is too low  | Flashing, no output at all ports                                                                                           | Connect the AC charging cable and keep charging until the voltage is normal    |
| E025       | Battery high temperature          | Flashing, no output at all ports <br>     | Automatically resumes after temperature recovery                               |
| E026       | Battery low temperature           | Flashing, no output at all ports <br>     | Automatically resumes after temperature recovery                               |
| E027       | System overload                   | Flashing, AC output close, DC output is normal, the AC load is higher than 2100W or AC+DC load is higher than 2100W        | You need to manually press the AC power ON/OFF button to recover               |
| E028       | Charging over-temperature         | Flashing, charging stop <br>          | Automatically resumes after temperature recovery                               |
| E029       | MOSFET over-temperature           | Flashing, no output at all ports <br> | Automatically resumes after temperature recovery                               |
| E030       | Abnormal battery pack connection  | Battery pack connection error                                                                                                                                                                               | Please replace with the standard battery pack                                  |

## MAINTENANCE

1. Please store the product away from water sources, heat sources, and metal objects.
2. In order to extend the service life of the battery, it is recommended to use or store this product in an environment of 20°C to 30°C.
3. If long-term storage is required, please charge and discharge this product once every 3 months (first discharge to 0%, then fully charge, then discharge to 60% for long-term storage); products that have not been charged or discharged for more than 6 months warranty will not be provided.
4. For safety reasons, do not store this product in an environment above 45°C or below -10 °C for a long time.
5. If the product is seriously low on power and idle for too long, the product will enter deep sleep mode, and the product must be charged before use again.

## SPECIFICATIONS

|                                        |                      |                                                 |
|----------------------------------------|----------------------|-------------------------------------------------|
| <b>Model</b>                           |                      | S2                                              |
| <b>AC Output</b>                       | <b>Rated Voltage</b> | 230VAC                                          |
|                                        | <b>Rated Power</b>   | 2500W                                           |
|                                        | <b>Peak Power</b>    | 5400W                                           |
|                                        | <b>Frequency</b>     | 50Hz                                            |
| <b>DC 12V &amp; Car Lighter Output</b> | <b>Rated Voltage</b> | 12V                                             |
|                                        | <b>Rated Current</b> | 10A                                             |
| <b>USB-A Output</b>                    |                      | 5V/3A; 9V/2A; 12V/1.5A [18W Max]                |
| <b>USB-C Output</b>                    |                      | 5V/3A; 9V/3A; 12V/3A; 15V/3A; 20V/5A [100W Max] |
| <b>AC Charge Input</b>                 |                      | 220~240V.a.c 7.5A 1600W                         |
| <b>Solar Input</b>                     |                      | 12~150V.a.c MPPT:18-140V/15A 2100W Max          |
| <b>Rated Capacity</b>                  |                      | 2048Wh                                          |
| <b>Rated Voltage</b>                   |                      | 51.2 Vdc                                        |
| <b>Battery Type</b>                    |                      | LiFePO4                                         |
| <b>IP Grade</b>                        |                      | IP21                                            |
| <b>Working Temperature</b>             |                      | 0°C~40°C                                        |
| <b>Dimension</b>                       |                      | 460 x 270 x 305mm                               |
| <b>Net Weight</b>                      |                      | 22kg                                            |

## WARRANTY INFORMATION

Our product is guaranteed to be free from manufacturing defects for a period of 12 Months.

If your product becomes defective during this period, Electus Distribution will repair, replace, or refund where a product is faulty; or not fit for intended purpose.

This warranty will not cover modified product; misuse or abuse of the product contrary to user instructions or packaging label; change of mind and normal wear and tear.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

To claim warranty, please contact the place of purchase. You will need to show receipt or other proof of purchase. Additional information may be required to process your claim.

Any expenses relating to the return of your product to the store will normally have to be paid by you.

The benefits to the customer given by this warranty are in addition to other rights and remedies of the Australian Consumer Law in relation to the goods or services to which this warranty relates.

This warranty is provided by:

Electus Distribution

Address 46 Eastern Creek Drive, Eastern Creek NSW 2766

Ph. 1300 738 555