



Crystal control	Frequency control	Transmit frequency	Channels	32	5" color LCD WGA (800x272 pixels) Maximum power consumption by FCC and IC Actual operating range	Normal effective range	Power requirements	Parent unit power adapter: Output 5V DC @ 1A Parent unit battery: 3.6V 2000mAh Li-ion battery Baby unit power adapter: Output 4V DC @ 200mA Baby unit power adapter: Output 5V DC @ 1A Any baby unit requires an environmentally friendly time of use.
-----------------	-------------------	--------------------	----------	----	--	------------------------	--------------------	--

BASIC OPERATION - PARENT UNIT


Press **VOL+** / **VOL-** to adjust your parent speaker volume.

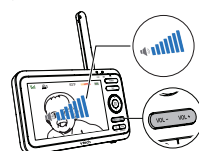


Press $\odot$ to zoom in or out

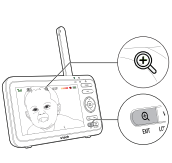

Press and hold **TALK** and speak to your parent unit. Your voice is transmitted to the baby unit. Release **TALK** when finished talking and hear your baby again.

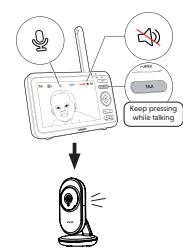

Press and hold LCD ON/OFF to switch off the screen. You can still hear sound from the baby unit.

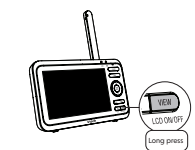

 TIP

- Press any keys on the parent unit to turn on the screen again.

The applied nameplate is located at the bottom of the baby unit's base.

When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Follow all warnings and instructions marked on the product.

- [illegible]

Cautions

1. Use and store the product at a temperature between 32°F and 104°F.
2. Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source.
3. Batteries should not be exposed to excessive heat such as bright sunshine or fire.

Warning—Strangulation Hazard—Children have STRANGLED in cords. Keep this cord out of the reach of children (more than 3 ft (0.9 m) away). Do not remove this tag.

 Always place the battery inside the baby's crib or playpen.

- [illegible]

The diagram shows two views of a mobile phone. The front view on the left has callouts 1 through 10. The back view on the right has callouts 11 through 17. The callouts point to the following components:


- 1 LCD display
- 2 Antenna
- 3 LED lights
- 4 Microphone
- 5 POWER
- 6 TALK
- 7 Arrow keys
- 8 MENU/SELECT
- 9 Power jack
- 10 VOL - / VOL +
- 11 VIEW / LCD ON/OFF
- 13 Speaker
- 14 Battery compartment cover
- 15 Stand

1 set for VM350
2 sets for VM350-2

Quick start guide

The parent unit runs on rechargeable battery or AC power. To continuously monitor your baby, make sure you use both battery and AC power at the same time.

- Use only the battery supplied with this product.
- If the parent unit will not be used for a long time, disconnect and remove the battery to prevent possible leakage.



To replace the battery, press down on the battery compartment cover and pull it out, then follow the steps above to install the battery.

1 **Pair hole**

- Your baby units and parent unit components are already paired.

2 **POWER LED light**

- On when the baby unit is turned on and is paired to the parent unit.
- Flashes when the baby unit is not being viewed; or when the link to the parent unit is lost.

3 **Microphone**

4 **Camera**

5 **Infrared LEDs**

6 **Light sensor**

7 **ON/OFF switch**

- Slide to turn on or off the baby unit.

8 **Speaker**

9 **Power jack**

10 **Wall mount holes**


For operations and guides to help you using your video monitor, and for latest information and supports, go and check the online help topics and online FAQs.

Use your smartphone or mobile device to access our online help.

- Go to <http://help.vechphones.com/vm350> or <http://help.vechphones.com/vm350-zh>
- Scan the QR code on the right. Launch the camera app or QR code scanner app on your smartphone or tablet. Hold the device's camera up to the QR code and frame to get the notification to trigger the reduction of the online help.
- If the QR code is not clearly displayed, adjust your camera's focus by moving your device closer or further away until it is clear.

You can also call our Customer Service at 1 (800) 595-9531 (in US) or 1 (800) 267-7377 (in Canada) for help.

- Use only the power adapters supplied with this product.
- Make sure the baby monitor is not connected to the switch controlled electric outlet.
- Connect the power adapters in a vertical or floor mount position only. The adapters' prongs are not designed to hold the weight of baby monitor, so do not connect them to any ceiling, under-table, or cabinet outlets. Otherwise, the adapters may not properly connect to the outlets.
- Make sure the parent unit, the baby unit and the power adapter cords are out of reach of children.



When you have connected and turned on the parent unit, the battery will be charged automatically.

- Before using the baby monitor for the first time, charge the parent unit battery for 12 hours. When the parent unit battery is fully charged, the battery icon becomes solid .
- It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging.
- The standby time varies depending on the sensitivity level you set, your actual use and the age of the battery.

1 Slide the **ON/OFF** switch to power on or off your baby unit.

2 Press and hold **POWER** to power on or off your parent unit.


The diagram illustrates the power on and power off steps for the baby unit and parent unit. On the left, the baby unit is shown with a callout for the 'ON/OFF' switch. On the right, the parent unit is shown with a callout for the 'POWER' button. The 'Power on' state shows the baby unit with the switch in the 'ON' position and the parent unit with the 'POWER' button pressed. The 'Power off' state shows the baby unit with the switch in the 'OFF' position and the parent unit with the 'POWER' button released.

⚠ CAUTION

- Keep the baby unit out of the reach of your baby. Never place or mount the baby unit inside the baby's crib or playpen.



- The default volume of your parent unit is level 4, and the maximum volume is level 7. If you experience high-pitched screeching noise from your baby monitor while positioning:
 - Make sure your baby unit and parent unit are more than 3 feet (1 meter) apart, OR
 - Lower the volume of your parent unit.

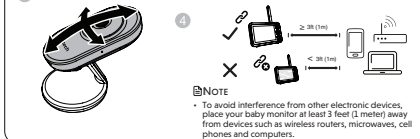

Once you power on both your baby unit and parent unit, your parent unit displays image from the baby unit, and the **LINK** LED light turns on.

The **POWER** LED light of baby unit turns on.

Main menu icons		Main menu icons		Main menu icons			
Main menu	Sub-menu	Main menu	Sub-menu	Main menu	Sub-menu		
 Brightness	Adjust the parent unit's LCD brightness.	 Alert tones	Set the parent unit to beep when the battery is low.	 Sound activation - screen and audio	ON/OFF Turn on/off sound activation - Set sound activation on or off. - When it is on, and the baby unit detects no sound, the parent unit screen stays off to save power. Once a sound is detected, the parent unit screen and speaker turns on automatically, and you can see and hear your baby. The parent unit will then turn off again after 50 seconds of no sound detection.		
	 Camera settings		Set the confirmation tone on or off when selecting an option in the menu.				
 Monitoring mode (For VM350-2 only)	Baby unit speaker volume - Adjust the baby unit's speaker volume.	 Temperature	ON/OFF - Turn on/off temperature alert tone. - Set the parent unit to beep whenever the room temperature detected by the baby unit falls outside of the set temperature range.	VOX (Voice Activated Alert) Sensitivity You can set VOX sensitivity level to activate parent unit screen and sound when baby unit detects sounds that exceed certain levels. See Sound sensitivity and sound activation section.			
	Single mode Split mode Patrol mode		- Set the minimum temperature. - Set the maximum temperature. - Set temperature display in Fahrenheit (°F) or Celsius (°C)				
 Lullaby							
 Play/Stop lullaby	Select one of the soothing sounds, or white noise.						
	- Select one of the five melodies. - Play all melodies.						
 60min 45min 30min 15min							
Set timer to stop playing the selected melody or soothing sound.							

