

WMF 1500S+

Operating & cleaning instructions



My Coffee Shop Pty Ltd
ACN 102 850 037

390 Johnston St
Abbotsford VIC 3067
ph: 03 9946 4160

97/1-5 Harwood Street
Pyrmont NSW 2009
ph: 02 9034 6580

2 Introduction

2.1 Parts of the coffee machine



“Ready to operate” display



Header line

Function line

- 1 Bean hopper (up to 2), lockable
- 2 Powder hopper (choc or topping, for example) (optional), lockable
- 3 Manual insert / tablet insert
- 4 Touch display for beverage buttons and settings
- 5 Combi spout with integrated milk foamer
- 6 Grounds container
- 7 SteamJet cup warmer
- 8 Removable drip tray with drip grid
- 9 Hot water spout / steam outlet (optional)
- 10 Water tank / descaling container (optional)
- 11 Operating panel
- 12 Side illumination
- 13 ON/OFF switch (operating panel open)

"Ready to operate" display

- 14 Menu pad (opens the main menu)
- 15 Beverage buttons
- 16 SteamJet pad
- 17 "Warm rinse" pad
- 18 Eco mode

The pads and buttons on the display are available, depending on the settings and the machine model.

The functions shown here are examples.

Software ▷ starting on page 32

CLEANING TABLET CHECK SHEET

RINZA

MILK



Part No: 12-MKTAB12-40

CAFIZA

COFFEE



Part No: 12-ESPTH12-100



SELF SERVICE EMERGENCY ALERT

ATTENTION IF RED LIGHTS ARE FLASHING
PLEASE ATTEND MACHINE.

TO RESOLVE DO THE FOLLOWING:

1. INSTRUCTIONS DISPLAYED ON SCREEN

Follow instructions displayed on coffee machines screen to clear the message

OR. 2. DRINKS DISPLAYED ON SCREEN

If the lights are flashing red and the  Symbol is displayed in the top right part of the screen, above the drinks, then press this symbol, and follow instructions displayed on coffee machines screen to clear the message.

IMPORTANT PROCESS

REMOVAL OF GROUTS

1. Remove and empty the grouts container in bin, then wipe down inside residue and dry.

2. Carefully replace the grouts container back into the machine.

3. Confirm on the display that container has been emptied.

NOTE: DON'T bang container on rubbish bin and DON'T wash container in dish washer.



REMOVING GROUTS CONTAINER



EMPTY GROUTS INTO BIN

MILK FRIDGE CLEAN

1. Please wipe out fridge regularly.

2. Clean milk container regularly (this can go in the dish washer).

3. Regularly check temperature of milk stored in fridge 4°C.


4. If you see a build up of frost in the fridge remove milk and defrost fridge.

5. Finish milk in container as much as possible before refilling.


6. Wipe any spills.

1. ACCESSING THE CLEANING MENU


A. FINDING MENU

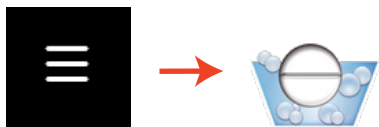

1. Gently double tap the bottom right of screen
2. Select the home icon when it displays
3. Select the care options tab

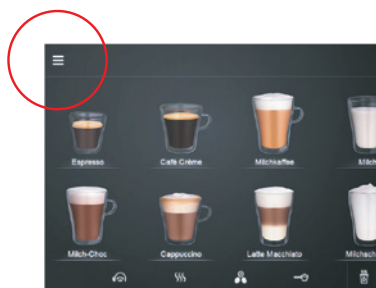

B. CLEANING OPTIONS

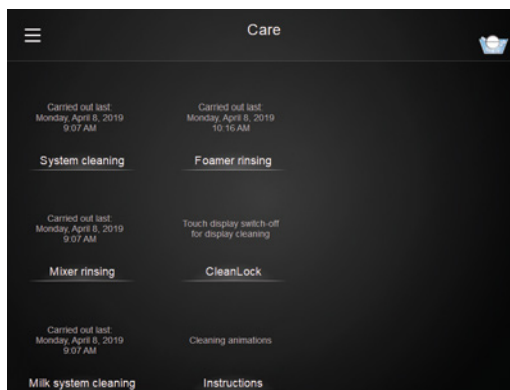

CLEANING PROGRAMS

Different cleaning options

1. System cleaning
2. Mixer rinsing
3. Milk system cleaning

CLEANLOCK

A 15-second countdown starts and the screen is deactivated. The touch display can now be cleaned by wiping action.

INSTRUCTIONS

Animated instructions for the weekly cleaning procedures, includes choc mixer and combi spout.

2. CLEANING INTERVALS OVERVIEW

DAILY	WEEKLY	REGULARLY	
X			System cleaning
X			Clean screen (CleanLock)
X			Grouts container cleaning
		X	Clean the brewing unit
	X		Drip tray cleaning
	X		Milk system manual clean
	X		Clean the mixer
		X	Bean hopper cleaning
		X	Clean powder hopper

END OF DAY SYSTEM CLEAN



PERFORM THIS AT LEAST
ONCE EVERY 24 HOURS



THIS CLEANING PROCEDURE
TAKES APPROX. 15 MINUTES



CHECK CORRECT TABLET IS
USED FOR EACH STAGE. USE
ONLY URNEX TABLETS.

STEP 1.

1.



2.



Access the home menu, and
select the Care option.

STEP 2.

1.

System cleaning


Select Cleaning programs
then select System cleaning

STEP 3.

Switch off after cleaning?

Confirm if machine needs to
shutdown after cleaning

STEP 4.

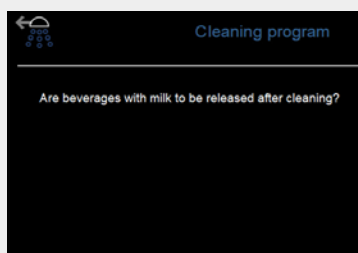

If you are leaving the machine on, but
closing for the day = No
If you plan to make coffees after
the clean = Yes

STEP 5.



Empty & clean the coffee grounds
container and drip tray

STEP 6.



Insert 1 **RINZA** tablet into each
blue container. Do not add water.
Part No: 12-MKTAB12-40 Rinza

STEP 7.




Plug milk line into the blue WMF cleaning
container. Place the cleaning box on drip
tray during the cleaning process. **NOTE:**
DO NOT PLACE CONTAINER IN FRIDGE

STEP 8.



Insert **CAFIZA** tablet into
top chute for brewer cleaning
Part No: 12-ESPTH12-100 Cafiza E18

STEP 9.

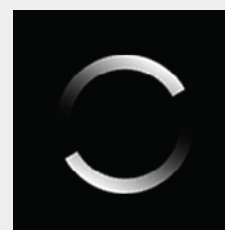

System will progress with cleaning
(up to 15 minutes max)

END OF DAY SYSTEM CLEAN



PERFORM THIS AT LEAST
ONCE EVERY 24 HOURS



THIS CLEANING PROCEDURE
TAKES APPROX. 15 MINUTES




CHECK CORRECT TABLET IS
USED FOR EACH STAGE. USE
ONLY URNEX TABLETS.

STEP 10.




Un-plug milk line from blue
container and back into milk.
Careful warm water inside

STEP 11.

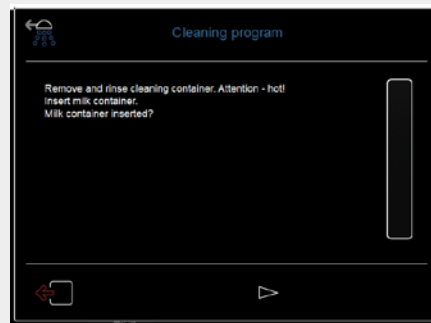

If you are continuing to use
machine after cleaning, please note
the machine will restart, perform a
milk line purge and ready itself for
service. You are required to
activate several prompts for this.

STEP 12.

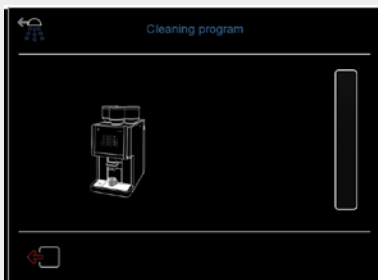

Machine will complete cleaning
and flush lines. And set milk.

STEP 13.



Once completed, machine will
return to home screen

MILK SYSTEM EXCHANGE & CLEAN



PERFORM THIS AT THE END OF THE WEEK.



THIS CLEANING PROCEDURE TAKES APPROX. 15 MINUTES



USE ONLY WMF CERTIFIED MILK CLEANING TABLETS.

STEP 1.



Disconnect the milk line from the foamer

STEP 2.



Remove combi spout & remove milk hose

STEP 3.



Separate foamer into separate pieces ready for soaking

STEP 4.



Re-mount the spare clean foamer, choc hose & milk line

STEP 5.



Fill container with warm water and add one **RINZA** tablet. Place dirty foamer & milk line, soak for 5 hours

Part No: 12-MKTAB12-40 Rinza

STEP 6.



After soaking, rinse all pieces under tap and dry

STEP 7.



Store in tub with lid to avoid contamination ready for next weekly exchange

REFILL COFFEE HOPPERS



PERFORM THIS WHEN
PROMPTED BY MACHINE



THIS PROCEDURE TAKES
APPROX. 2-3 MINUTES



DURING REFIL BE CAREFUL
THAT NO FOREIGN DEBRIS
FALLS INTO HOPPER

NOTE.



DO NOT FILL
ABOVE LINE

Fill hoppers with fresh coffee to just below
lid line. The hoppers will empty at the same
rate so ensure all hoppers are
filled to the same level.

STEP 1.



If the machine runs out of coffee,
it will prompt the operator to
refill hopper.

STEP 2.



Remove lid the pour coffee into
the empty hopper.

STEP 3.



Once hopper is topped up, tap on
the green tick to continue.

CHOCOLATE WHIPPER/MIXER CLEANING



PERFORM THIS AT THE END OF THE WEEK.



THIS CLEANING PROCEDURE TAKES APPROX. 10 MINUTES



USE ONLY WMF CERTIFIED MILK CLEANING TABLETS.

STEP 1.



Open Display Panel

STEP 2.



Remove choc hose from back of foamer & slide spring off

STEP 3.



Remove chocolate mixing bowl

STEP 4.



Separate top of bowl and remove hose

STEP 5.



Disassemble all parts

STEP 6.



Wash unit in water & dry thoroughly

NOTE.



Please ensure wiper disc is insert the correct way.

STEP 7.



Inset mixer back into the machine and reattach choc hose & slide spring on.

STEP 8.



Close Display Panel

HOPPER CLEANING



PERFORM THIS AT THE END OF THE MONTH.



THIS CLEANING PROCEDURE TAKES APPROX. 15 MINUTES



ENSURE HOPPERS ARE DRY BEFORE RE-FITTING

STEP 1.




Open Display Panel

STEP 2.



Swing the green handle right to left to release all hoppers

STEP 3.

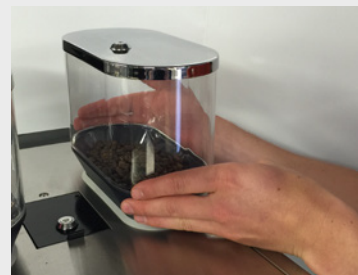

Gently lift hoppers, empty the contents into a clean container

STEP 4.



Hand wash hoppers & dry thoroughly

STEP 5.



Refill hopper with product and place onto machine

STEP 6.



Swing the green handle left to right to re-lock hoppers

STEP 7.




Close Display Panel



IMPORTANT: CHOCOLATE HOPPER REASSEMBLY

Please note, once you have dried the hopper after washing, it is important that the hopper is reassembled correctly for proper functioning. Please use the exploded diagram as a guide for reassembly and make sure that the half moon opening is at the top before re-inserting the hopper.

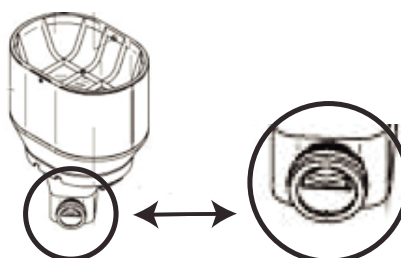

Welcome to My Coffee Shop!

Our hours of operation are Monday – Friday 9am to 5pm. Visit us at your convenience at www.mycoffeeshop.com.au. Orders and service requests can be placed by:

Phone: 1300 365 487
E-mail: clientservices@mycoffeeshop.com.au
Online: www.mycoffeeshop.com.au
Remittances: accountsreceivable@mycoffeeshop.com.au
Service enquiries: servicecentre@mycoffeeshop.com.au

Next business day delivery via courier to:

Adelaide Canberra Melbourne Sydney

for product orders placed by 1.30pm

Please note you will be advised when ordering if delivery charges apply to your order.

Once again, welcome to My Coffee Shop and remember we are here to help. If you have any questions please don't hesitate to contact us.

We look forward to exceeding your expectations and making your day easier and more enjoyable.

Kind regards,

My Coffee Shop

Client Services

My Coffee Shop Pty Ltd



My Coffee Shop Pty Ltd
ACN 102 850 037

390 Johnston St
Abbotsford VIC 3067
Ph: 03 9946 4160

97 / 1-5 Harwood St
Pymont NSW 2009 Ph:
02 9034 6580