

PATRIOT

NVECTECH

Instruction for the
thermal imaging monocular

CONTENT

INTRODUCTION	2
FEATURES	3
Detection range	4
Application scenarios	4
Warning	4
Package content	5
Charging	5
Buttons	6
Lenses settings	6
Pseudo colors pallete	7
AI Range - finder	7
TOP MENU	8
MAIN MENU	9
Joystick	9
Image	9
Reticle	10
Wire+File	10
Settings	10
Sensors	11
System	11
APPLICATION	12
SPECIFICATION	13

INTRODUCTION

DEVICE DESCRIPTION

Patriot 2 thermal imaging monoculars are reliable companions for tactical operations in extreme environments. They provide high resolution and detection range, allowing operators to see in the dark, through fog and smoke.

Patriot 2 is more than just a device, it is guaranteed accuracy and reliability that helps Ukrainian defenders carry out their missions with confidence and efficiency.

UKRAINE




FEATURES

Battery indicator:
Intelligent indication
battery charge.



A wide selection of lenses:

19 mm – 1200 m;
25 mm – 1500 m;
35 mm – 2000 m;
50 mm – 2900 m.

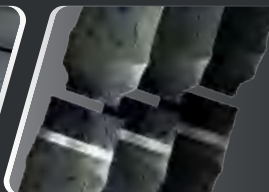


Updated menu:
More convenient
and functional interface.



Updated controls:
Even stronger, more
comfortable and sensitive.



**New altitude and
temperature sensors:**
Additional analysis environment.

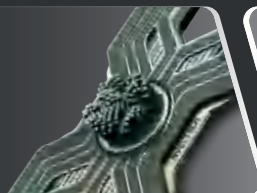


Reinforced robust housing:
High degree protection of the
critical elements.



**The new most
sensitive matrix <18mK:**
(384x288px, 640x512px),
Even faster, even more sensitive.




Development:
NVECTECH (Ukraine).

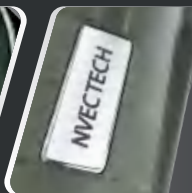

DETECTION RANGE

LENS MM RANGE M

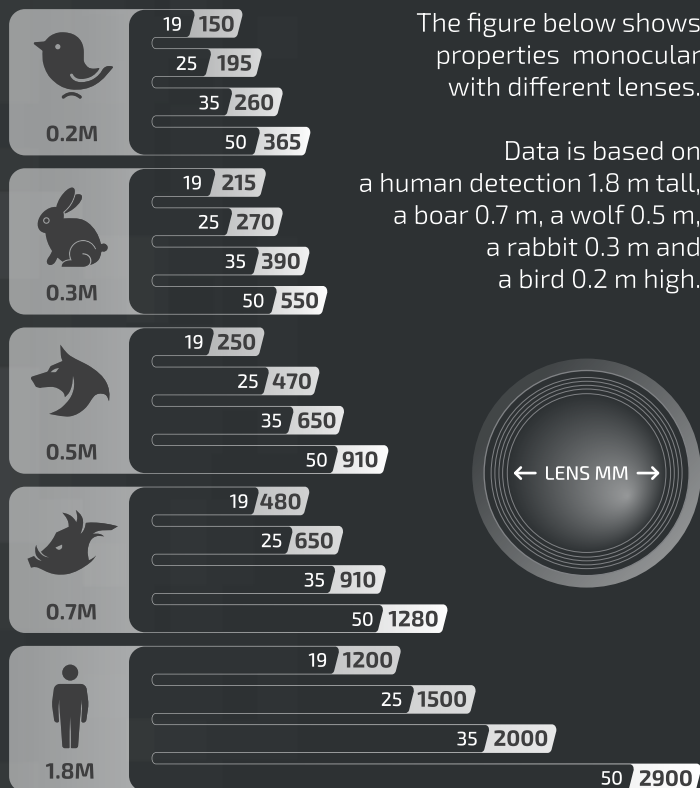

APPLICATION SCENARIOS

Observation of animals
 Adventures in nature
 Protection of law and order
 Emergency search and rescue

WARNING



Avoid hard objects



Do not point the lens directly at the sun or high-temperature light sources



Do not overuse the device cold or hot environment



Charge the battery once every three months when it was not in use



Make sure the Type-C cover is tight closed in the water environment



Do not disassemble or modify the device in any way

PACKAGE CONTENT



ONE MONOCULAR PATRIOT 2



TWO EYECUP (REGULAR AND CAT EYE)



ONE TACTICAL POUCH



ONE Type-C to USB CHARGING CABEL



ONE Type-C to Type-C VIDEO CABLE



ARM AND NECK STRAPS



ONE INSTRUCTION


CHARGING

The battery should be fully charged before use.

Note: The battery is not user replaceable.

To charge the battery, follow these steps:

1. Remove the Type-C port cover.
2. Connect the cable from the kit to the Type-C port.
3. Insert the opposite end of the cable into the source USB power supply.

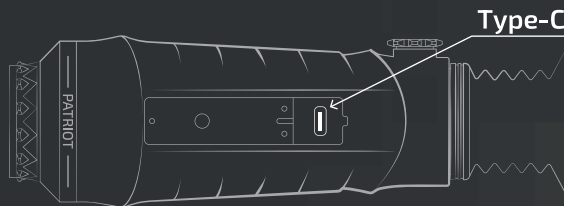

Note: 1 bulb - $\leq 20\%$ charge,
2 bulbs - $\leq 40\%$ charge,
3 bulbs - $\leq 60\%$ charge,
4 bulbs - $\leq 80\%$ charge,
5 bulbs - $\leq 100\%$ charge.

During charging, the corresponding light flashes.

BUTTONS



ON/OFF

Long press for 3 seconds to ON/OFF
Short press to enter/out standby mode



FOTO/VIDEO

Short press - FOTO, long press - VIDEO



LEFT JOYSTICK PRESS

AI range-finder



RIGHT JOYSTICK PRESS

Pseudo-color palette



UP JOYSTICK PRESS

Zoom



DOWN JOYSTICK PRESS

Zoom



CENTRAL JOYSTICK PRESS

One click - shutter, double - main menu

LENSES SETTINGS


Diopter adjustment

Adjust the position while looking into the eyepiece diopter level to optimize sharpness image on the OLED display.



Focusing

Adjust the focus as needed lens manually.

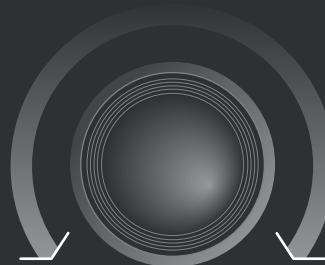

PSEUDO-COLORS PALLETE



RIGHT JOYSTICK PRESS

Changes the pseudo-color to the following



Pseudo-color palette label

Pseudo color - the thermal distribution of objects converted into visual images using an infrared thermal imaging system and displayed on a monitor in shades of gray or pseudo color.

AI RANGE-FINDER



LEFT JOYSTICK PRESS

Activate AI Range-finder function



AI Range-finder label

AI Range-finder - Artificial Intelligence function that distinguishes targets of known size, determines the distance of these targets and notices them on the screen.

TOP MENU



N	GPS N - North coordinate.		HOTSPOT (activated)
E	GPS E - East coordinate.		HOTSPOT (deactivated)
H	GPS H - Height above sea level in meters.		Stabilisation picture (activated)
X	Digital scale coeficient.		Stabilisation picture (deactivated)
	The diameter of the objective lens.		Battery charge level.
	AI Range-finder (activated).	19:04	Time.
	AI Range-finder (deactivated).	°C	The indicator of the temperature sensor in °C.
	GPS (activated).	A	Azimuth - clockwise angle relative to north.
	GPS (deactivated).		Compass.
	NorthEast	East	SouthEast
	South	SouthWest	West
	NorthWest	North	

MAIN MENU



CENTRAL JOYSTICK DOUBLE PRESS

To enter the menu settings.

Note: select by moving the lever and short press the lever to confirm the selection.



IMAGE

Thermal image processing settings.



RETICLE

Adjusting the reticle properties.



WIRE+FILE

Wireless connection and saved files.



SETTINGS

General settings of monocular.



SENSORS

Monocular sensor settings.



SYSTEM

Basic settings and system lock.



IMAGE Thermal image processing settings.

BRIGHTNESS

Brightness of the picture.

SHARPNESS

Sharpness of the picture.

NOISE

Noise level of the picture.

CONTRAST

Contrast of the picture.

MENU

Brightness of the menu buttons.

SHOW MENU

Show or hide the top menu.

MODE

Image enhancement mode – WDR or OBJECT.

 **RETICLE** Adjusting the reticle properties.

RETICLE

ON/OFF the reticle.

BRIGHTNESS

Brightness of the reticle.

POINT

Color of the central point of the reticle.

TYPE

Form of the reticle.

COLOR

Changing the color of the reticle

XY

Moves the reticle pixel by pixel

 **SETTINGS** General settings of monocular.

PIP

ON/OFF picture in picture function.

BLINDPIXEL

Fixes damaged pixels on the thermal imaging matrix.

OLED

Brightness and color of the monitor backlight.

TRECKING

ON/OFF function that marks the hottest areas.

BATT. INDIC.

Set the operating mode of the battery level indicator.

SP

Stabilisation picture (vibration compensation).

 **WIRE+FILE** Wireless connection and saved files.

**Makes monocular
position visible!!!**

HOTSPOT

ON/OFF wireless connection.

FOTO

Saved photos.

VIDEO

Saved videos.

SENSORS Monocular sensor settings.

GPS

ON/OFF GPS and separately height above sea level.

TEMPERAT.

Set the operating mode of the temperature sensor.

COMPASS

ON/OFF compass and separately azimuth.

Compass Calibration: calibration can be carried out at any time. Preferably repeat periodically, especially after turning on the device. In this menu you can see more detailed instructions.

RANGING

Changes mode of the Range-finder (AI or MIL).

CORRECTION

Change mode of the shutter – auto or manual.

SYSTEM Basic settings and system lock.

UPDATE

Update soft.

RESTART

Restart monocular.

VERSION

Show the version of the installed soft.

DATE/TIME

Set the time and date.

LANGUAGE

Set the language.

BLOCK

Set the password to start the monocular.

UVC

Streaming video over a wire to a PC or monitor.

APPLICATION

**Use application that you can find
in the AppStore or PlayMarket.**

FUNCTIONALITY

The application allows you to control the device
in real time, view photos and video recordings
and share them.

Fix target coordinates and share them
(if the device supports this function or manual).

You can also find other NVECTECH products
in the application.

SPECIFICATION

MODELS		PATRIOT 2	L19	L25	L35	L50	H50	L50 PRO
MICROBO LOMETER	RESOLUTION	384X288					640X512	384X288
	PIXCEL PITCH	12μm						
	NETD	≤18mk@300k						
	SPECTRAL RANGE	8-14μm						
	FRAME RATE	50Hz						
OPTICS	OBJECTIVE LENS	19mm (F0.8)	25mm (F0.8)	35mm (F0.8)	50mm (F0.9)		25-50mm (F0.9)	
	FOV	13.8° x 10.4°	10.5° x 7.9°	7.5° x 5.6°	5.3° x 4.0°	8.8° x 7.0°	10.5°x7.9/ 5.3°x4.0°	
	MAGNIFICATION	1.8X	2.4X	3.3X	2.8X	2.8X	2.4X-4.8X	
	DIGITAL ZOOM	1 - 4X continuous zoom						
	EYE RELIEF	40mm						
	EXIT PUPIL	6mm						
	DIOPTER	±5D						

MODELS	PATRIOT 2	L19	L25	L35	L50	H50	L50 PRO
DISPLAY	TYPE	AMOLED					
	OLED COLORS	6					
	DISPLAY SIZE	0.39inch					
	COLOR PALETTE	6					
	IMAGE MODE	WDR (Wide Dynamic Range) Mode					
BATTERY	BATTERY TYPE	Internal high capacity lithium ion (18650 x 2)					
	BATTERY LIFE	Continuous working time ≥20h					
INTERFACE	TYPE-C	Supports battery charging, data transfer, UVC video output					
	WIRELESS	Hotspot connection, App remote control					
ENVIRON- MENT	WORK TEMPER.	-25℃ — +50℃					
	IP RATING	IP67					
	SIZE	221x66x67			224x66x67		241x73x73
ACCESSORY	ACCESSORIES	Video cable, USB data cable, Wrist strap, Protective bag, User manual					

MODELS	PATRIOT 2	L19	L25	L35	L50	H50	L50 PRO
FUNCTION	FOTO/VIDEO PLAY	YES					
	AI DIST. MASURE.	YES					
	MIL DIST. MASURE.	YES					
	RETICLE	YES					
	INBUILD MEMORY	64GB					
	PIP	YES					
	HEAT TRACK	YES					
	GPS	YES					
	HEIGHT SENSOR	YES					
	TERMOMETER	YES					
	COMPASS	YES					
	AZIMUTH	YES					
	REAL TIME REC.	YES					
	UVC	YES					

NVECTECH

Model:

Serial number:

Date of sale:

Seal and signature of the seller:

Kosmichna st. 49-g,
Dnipro, Ukraine

site: www.nvectech.com

site: www.nvectech.ua

e-mail: info@nvectech.com

Manufacturer: LTD NVECTECH


+38 093 698 11 67

+38 098 758 75 85

+38 063 785 78 55


+38 095 761 13 92


www.nvectech.ua

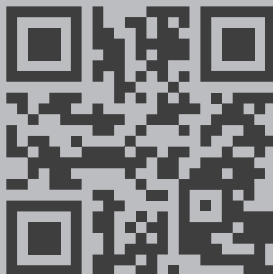

**Warranty
2 years!**

www.nvectech.com

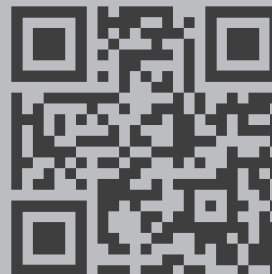

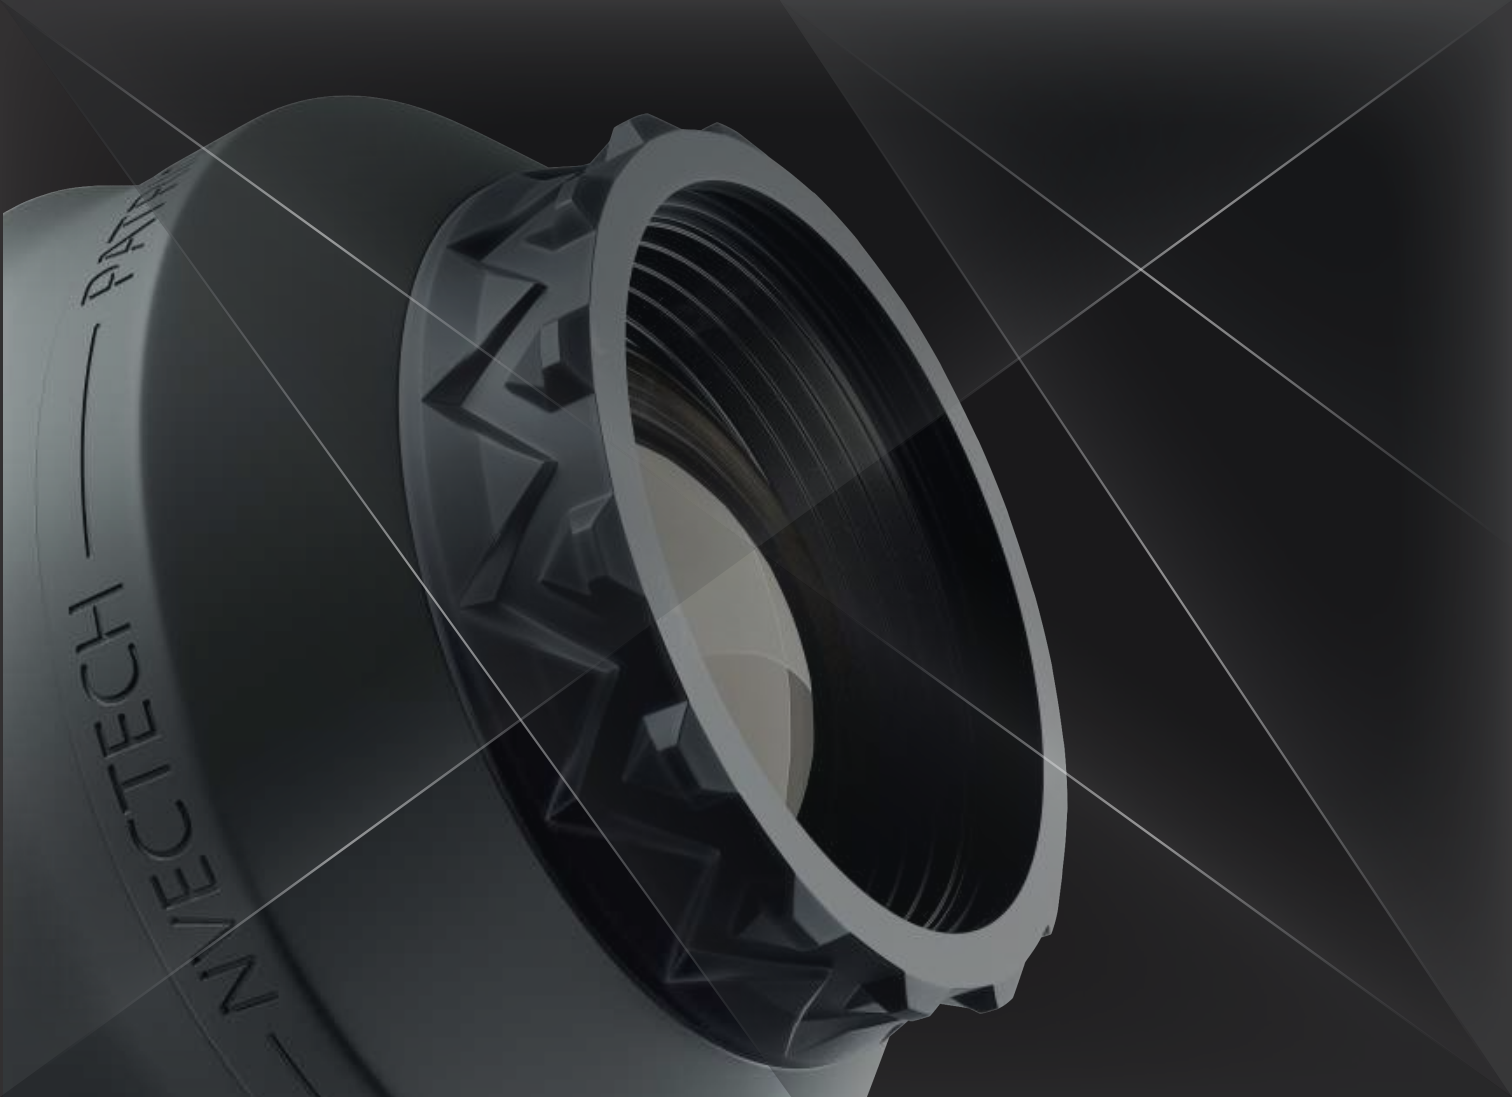

PATRIOT

NVESTECH

Інструкція для
тепловізійного монокуляра

ЗМІСТ

ВСТУП	2
ВЛАСТИВОСТІ	3
Дальність виявлення	4
Варіанти застосування	4
Застереження	4
Вміст пакунку	5
Заряджання	5
Кнопки	6
Об'єктив	6
Палітра псевдо-кольорів	7
ШІ Далекомір	7
ВЕРХНЄ МЕНЮ	8
ГОЛОВНЕ МЕНЮ	9
Джойстик	9
Зображення	9
Прицільна сітка	10
З'єднання + Файли	10
Налаштування	10
Сенсори	11
Система	11
ДОДАТОК	12
СПЕЦИФІКАЦІЯ	13


ВСТУП

ОПИС ПРИСТРОЮ

Тепловізійний монокуляр PATRIOT 2 є надійним компаньйоном для тактичних операцій в екстремальних умовах. Він забезпечує високу роздільну здатність і діапазон виявлення, дозволяє операторам бачити в темряві, крізь туман і дим.

PATRIOT 2 — це гарантована точність і надійність, що допомагає українським захисникам виконувати їх місії зі впевненістю та ефективністю.

УКРАЇНА



ВЛАСТИВОСТІ

Індикатор заряду батареї:

Розумна індикація заряду акумулятора.



Широкий вибір лінз:

19 мм – 1200 м;
25 мм – 1500 м;
35 мм – 2000 м;
50 мм – 2900 м.



Оновлене меню:

Зручніший та більш функціональний інтерфейс.




Оновлені елементи керування:

Більш міцні, комфортні та чутливі.



Нові датчики висоти та температури:

Додатковий аналіз середовища.

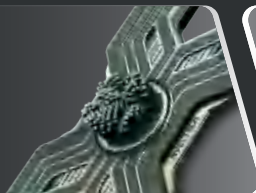

Додаткові металеві елементи і котяче око:

Захист критичних елементів та очей.




Нова, найчутливіша матриця <18mK:

(384x288px, 640x512px),
Більш швидка та чутлива.



Розроблено: NVECTECH (Україна).

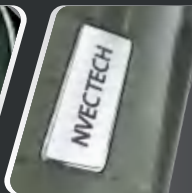

ДАЛЬНІСТЬ ВИЯВЛЕННЯ

ЛІНЗА ММ ВІДСТАНЬ М



0.2M

19 150

25 195

35 260

50 365



0.3M

19 215

25 270

35 390

50 550




0.5M

19 250

25 470

35 650

50 910




0.7M

19 480

25 650

35 910

50 1280



1.8M

19 1200

25 1500

35 2000

50 2900

На малюнку нижче показано властивості монокуляра з різними лінзами.

Дані базуються на виявленні людини заввишки 1,8 м, кабана 0,7 м, вовка 0,5 м, кролика 0,3 м та птаха висотою 0,2 м.



ВАРІАНТИ ЗАСТОСУВАННЯ

Спостереження за тваринами
Пригоди на природі
Охорона правопорядку
Аварійний пошук і порятунку

ЗАСТЕРЕЖЕННЯ



Уникайте твердих предметів



Не спрямовуйте об'єктив прямо на сонце або високотемпературні джерела світла



Бережіть пристрій від занадто холодного або гарячого середовища



Заряджайте батарею раз на три місяця, коли пристрій не використовується



Переконайтеся, що кришка Type-C щільно закрита у водному середовищі



Не розбирайте та не змінюйте пристрою будь-яким способом

ВМІСТ ПАКУНКУ



ОДИН МОНОКУЛЯР PATRIOT 2



2 НАОЧНИКА (ЗВИЧАЙНИЙ ТА КОТЯЧЕ ОКО)



ОДНА ТАКТИЧНА СУМКА



ОДИН Type-C до USB КАБЕЛЬ ЗАРЯДЖАННЯ



ОДИН Type-C до Type-C ВІДЕО КАБЕЛЬ



РЕМЕЦІ ДЛЯ РУКИ ТА ШИЇ



ОДНА ІНСТРУКЦІЯ


ЗАРЯДЖАННЯ

Перед використанням акумулятор слід повністю зарядити.

Примітка: Акумулятор не замінюється користувачем.

Щоб зарядити акумулятор, виконайте такі дії:

1. Відкрийте кришку порту Type-C.
2. Підключіть кабель із комплекту до порту Type-C.
3. Вставте протилежний кінець кабелю в джерело живлення USB.

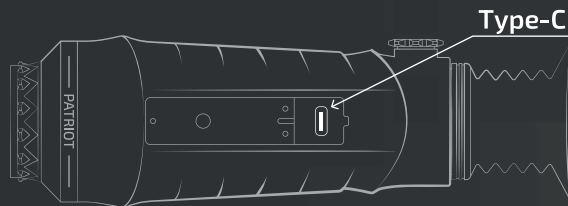

Примітка: 1 лампочка - $\leq 20\%$ заряду,
2 лампочки - $\leq 40\%$ заряду,
3 лампочки - $\leq 60\%$ заряду,
4 лампочки - $\leq 80\%$ заряду,
5 лампочок - $\leq 100\%$ заряду.

Під час заряджання мигає відповідна лампочка.

КНОПКИ



УВІМКНУТИ/ВИМКНУТИ

Тисніть протягом 3 секунд, щоб увімк./вимк.
Коротке натискання для входу/виходу
з режиму очікування



ФОТО/ВІДЕО

Коротке/довге натискання - ФОТО/ВІДЕО



НАТИСКАННЯ ДЖОЙСТИКА ВЛІВО

ШІ Далекомір



НАТИСКАННЯ ДЖОЙСТИКА ВПРАВО

Палітра псевдо-кольорів



НАТИСКАННЯ ДЖОЙСТИКА ВГОРУ

Масштабування ⊕



НАТИСКАННЯ ДЖОЙСТИКА ВНИЗ

Масштабування ⊖



НАТИСКАННЯ ДЖОЙСТИКА ПО ЦЕНТРУ

Один клік - шторка, двічі - головне меню

ОБ'ЄКТИВ


Налаштування діоптрій

Відрегулюйте рівень діоптрій, дивлячись в окуляр для оптимізації різкості зображення на OLED-дисплеї.




Фокусування

Регулювання фокуса об'єктива здійснюється обертанням кожуха об'єктива вручну.

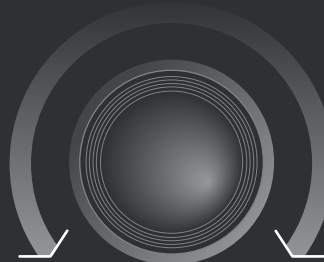

ПАЛІТРА ПСЕВДО-КОЛЬОРІВ

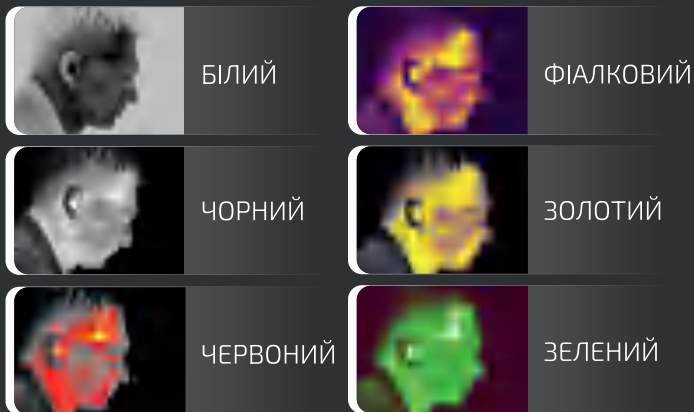

ШІ ДАЛЕКОМІР



НАТИСКАННЯ ДЖОЙСТИКА ВПРАВО

Змінює псевдоколір на наступний



Позначка палітри псевдо-кольорів

Псевдо-колір - термічний розподіл об'єктів, перетворених у візуальні образи за допомогою інфрачервоної тепловізійної системи відображається на моніторі у відтінках сірого або псевдо-кольору.



НАТИСКАННЯ ДЖОЙСТИКА ВЛІВО

Активує функцію ШІ Далекоміра



Позначка ШІ Далекоміра

ШІ Далекомір - функція штучного інтелекту, яка розрізняє цілі відомого розміру, визначає відстань до цих цілей і помічає їх на екрані.

ВЕРХНЕ МЕНЮ

N 0.00000
E 0.00000

1.0X
35

19:04

25° C
H 0.0
A 180°

- | | |
|---|---|
| N GPS N – Північ (North). | HOTSPOT (увімкнено) |
| E GPS E – Схід (East). | HOTSPOT (вимкнено) |
| H GPS H – Висота над рівнем моря в метрах. | Стабілізація зображення (увімкнено) |
| X Коефіцієнт цифрового масштабування. | Стабілізація зображення (вимкнено) |
| Діаметр наявної лінзи об'єктиву. | Рівень заряду батареї. |
| ШІ Далекомір (увімкнено). | 19:04 Час. |
| ШІ Далекомір (вимкнено). | °C Показник сенсора температури в °C. |
| GPS (увімкнено). | A Азимут – кут відхилення від північного напрямку. |
| GPS (вимкнено). | Компас. |
- NorthEast
 East
 SouthEast
 South
 SouthWest
 West
 NorthWest
 North
- Північ-Схід
Схід
Південь-Схід
Південь
Південь-Захід
Захід
Північ-Захід
Північ

ГОВНЕ МЕНЮ



НАТИСКАННЯ ДЖОЙСТИКА ПО ЦЕНТРУ

Вхід у головне меню.

Примітка: виберіть, натиснувши важіль і коротко натисніть важіль для підтвердження вибору.



ЗОБРАЖЕННЯ

Параметри обробки зображення.



ПРИЦІЛЬНА СІТКА

Властивості прицільної сітки.



З'ЄДНАННЯ + ФАЙЛИ

Бездротове підключення та файли.



НАЛАШТУВАННЯ

Загальні налаштування монокуляра.



СЕНСОРИ

Налаштування сенсорів монокуляра.



СИСТЕМА

Базові налаштування та блокування.



ЗОБРАЖЕННЯ

Параметри обробки зображення.

ЯСКРАВІСТЬ

Яскравість зображення.

РІЗКІСТЬ

Різкість зображення.

ШУМ

Рівень шуму зображення.

КОНТРАСТ

Контрастність зображення.

МЕНЮ

Яскравість кнопок меню.

ПОКАЗ. МЕНЮ

Відобразити або приховати верхнє меню.

МОД

Режим покращення зображення – WDR або ОБ'ЄКТ.



ПРИЦІЛЬНА СІТКА Властивості прицільної сітки.

ПРИЦ. СІТКА

Увімкнути/Вимкнути прицільну сітку.

ЯСКРАВІСТЬ

Яскравість прицільної сітки.

КРАПКА

Колір центральної крапки.

ТИП

Форма прицільної сітки.

КОЛІР

Змінює колір прицільної сітки

ХУ

Зміщує попіксельно прицільну сітку



НАЛАШТУВАННЯ Загальні налаштування.

PIR

Увімк./Вимк. функцію «картинка в картинці».

BLINDPIXEL

Виправляє пошкоджені пікселі на матриці.

ДИСПЛЕЙ

Яскравість і колір підсвічування монітора.

ТРЕКІНГ

Увімк./Вимк. позначення найгарячіших областей.

ІНД. БАТ.

Режим роботи індикатора рівня заряду батареї.

SP

Стабілізація зображення (компенсація вібрації).



З'ЄДНАННЯ + ФАЙЛИ Підключення та файли.

Робить позицію
монокуляра видимою!!!

Увімк./Вимк. підключення

HOTSPOT

ФОТО

Збережені фото.

ВІДЕО

Збережені відео.

СЕНСОРИ Налаштування сенсорів монокуляра.

GPS

Увімк./Вимк. GPS і висота над рівнем моря.

ТЕМПЕРАТ.

Режим роботи датчика температури.

КОМПАС

Увімк./Вимк. компас і окремо азимут.

Калібрування компасу: калібрування може здійснюватись в будь-який момент. Бажано періодично повторювати, особливо після увімкнення пристрою. В цьому меню ви можете побачити більш детальну інструкцію.

ДАЛЕКОМІР

Змінює режим далекоміра (ШІ або РУЧНЕ).

КОРЕКЦІЯ

Режиму шторки об'єктива – авто або ручний.

СИСТЕМА Основні налаштування та блок.

ОНОВЛЕННЯ

Оновлення софту.

РЕСТАРТ

Рестарт монокуляра.

ВЕРСІЯ

Показати версію встановленого софту.

ДАТА/ЧАС

Задати час та дату.

МОВА

Задати мову інтерфейсу.

БЛОК

Встановить пароль для запуску монокуляра.

UVC

Трансляція відео по проводу на ПК чи монітор.

ДОДАТОК

Використовуйте програму, яку можете знайти в AppStore або PlayMarket.

ФУНКЦІОНАЛЬНІСТЬ

Додаток дозволяє керувати пристроєм в режимі реального часу, переглядати фото і відеозаписи і ділитися ними.

Фіксувати координати цілі та поділитися ними (якщо пристрій підтримує цю функцію або вручну).

Ви також можете знайти інші продукти NVECTECH у додатку.

СПЕЦИФІКАЦІЯ

МОДЕЛІ	PATRIOT 2	L19	L25	L35	L50	H50	L50 PRO
МІКРО-БОЛОМЕТР	РОЗД. ЗДАТНІСТЬ	384X288				640X512	384X288
	ЩІЛЬН. ПІКСЕЛІВ	12μm					
	NETD	≤18mk@300k					
	СПЕКТРАЛ. ДІАП.	8-14μm					
	ЧАСТОТА КАДРІВ	50Hz					
ОПТИКА	ЛІНЗА ОБ'ЄКТИВА	19мм (F0.8)	25мм (F0.8)	35мм (F0.8)	50мм (F0.9)		25-50мм (F0.9)
	FOV	13.8° x 10.4°	10.5° x 7.9°	7.5° x 5.6°	5.3° x 4.0°	8.8° x 7.0°	10.5°x7.9/ 5.3°x4.0°
	ЗБІЛЬШЕННЯ	1.8X	2.4X	3.3X	2.8X	2.8X	2.4X-4.8X
	ЦИФ. МАСШТАБ.	1 - 4X плавний та ступінчатий					
	ДІАМ. ОКУЛЯРА	40мм					
	ВИХІД. ЗІНИЦЯ	6мм					
	ДІОПТ. ОКУЛЯРА	±5Д					

МОДЕЛІ		PATRIOT 2		L19	L25	L35	L50	H50	L50 PRO
ДИСПЛЕЙ	ТИП	AMOLED							
	КОЛЬОР. ПІДСВІТ.	6							
	РОЗМІР	0.39inch							
	ПСЕВДО-КОЛЬРИ	6							
	РЕЖИМ ЗОБРАЖ.	«WDR» (Wide Dynamic Range) мод та «ОБ'ЄКТ»							
БАТАРЕЯ	ТИП	Внутрішня літій-іонна високої ємності (18650 x 2)							
	ЧАС РОБОТИ	Безперервна робота ≥20годин							
З'ЄДНАННЯ	TYPE-C	Заряджання батарей, обмін інформацією, UVC відеовихід							
	БЕЗДРОТОВЕ	Hotspot з'єднання, віддалене керування							
СЕРЕДО-ВИЩЕ	РОБОЧА ТЕМПЕР.	-25°C — +50°C							
	РІВЕНЬ ЗАХИСТУ	IP67							
	РОЗМІР	221x66x67				224x66x67		241x73x73	
АКСЕСУАРИ	АКСЕСУАРИ	Відео кабель, USB кабель, Ремені, Підсумок, Інструкція, Наочники							

МОДЕЛІ	PATRIOT 2	L19	L25	L35	L50	H50	L50 PRO
ФУНКЦІЇ	ФОТО/ВІДЕО ПЕР.	ТАК					
	ШІ ДАЛЕКОМІР	ТАК					
	РУЧ. ДАЛЕКОМІР	ТАК					
	ПРИЦІЛ. СІТКА	ТАК					
	ВБУД. ПАМ'ЯТЬ	64ГБ					
	PIR	ТАК					
	ТЕМПЕР. ТРЕКЕР	ТАК					
	GPS	ТАК					
	ДАТЧИК ВИСОТИ	ТАК					
	ТЕРМОМЕТР	ТАК					
	КОМПАС	ТАК					
	АЗИМУТ	ТАК					
	ЗАПИС ВІДЕО	ТАК					
	UVC	ТАК					

NVECTECH

Модель/Model:

Серійний номер/Serial number:

Дата продажу/Date of sale:

Печатка та підпис продавця/Seal and signature of the seller:

вул. Космічна 49-г,
Дніпро, Україна

site: www.nvectech.com

site: www.nvectech.ua

e-mail: info@nvectech.com

Виробник: ТОВ НВЕКТЕХ


+38 093 698 11 67

+38 098 758 75 85

+38 063 785 78 55


+38 095 761 13 92


www.nvectech.ua

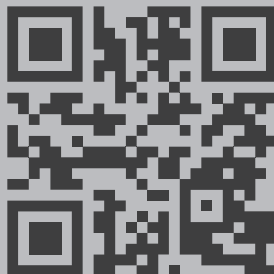

**Гарантія
2 роки!**

www.nvectech.com

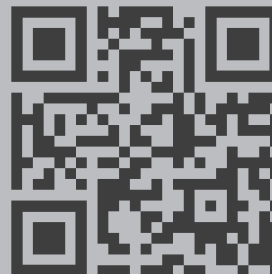

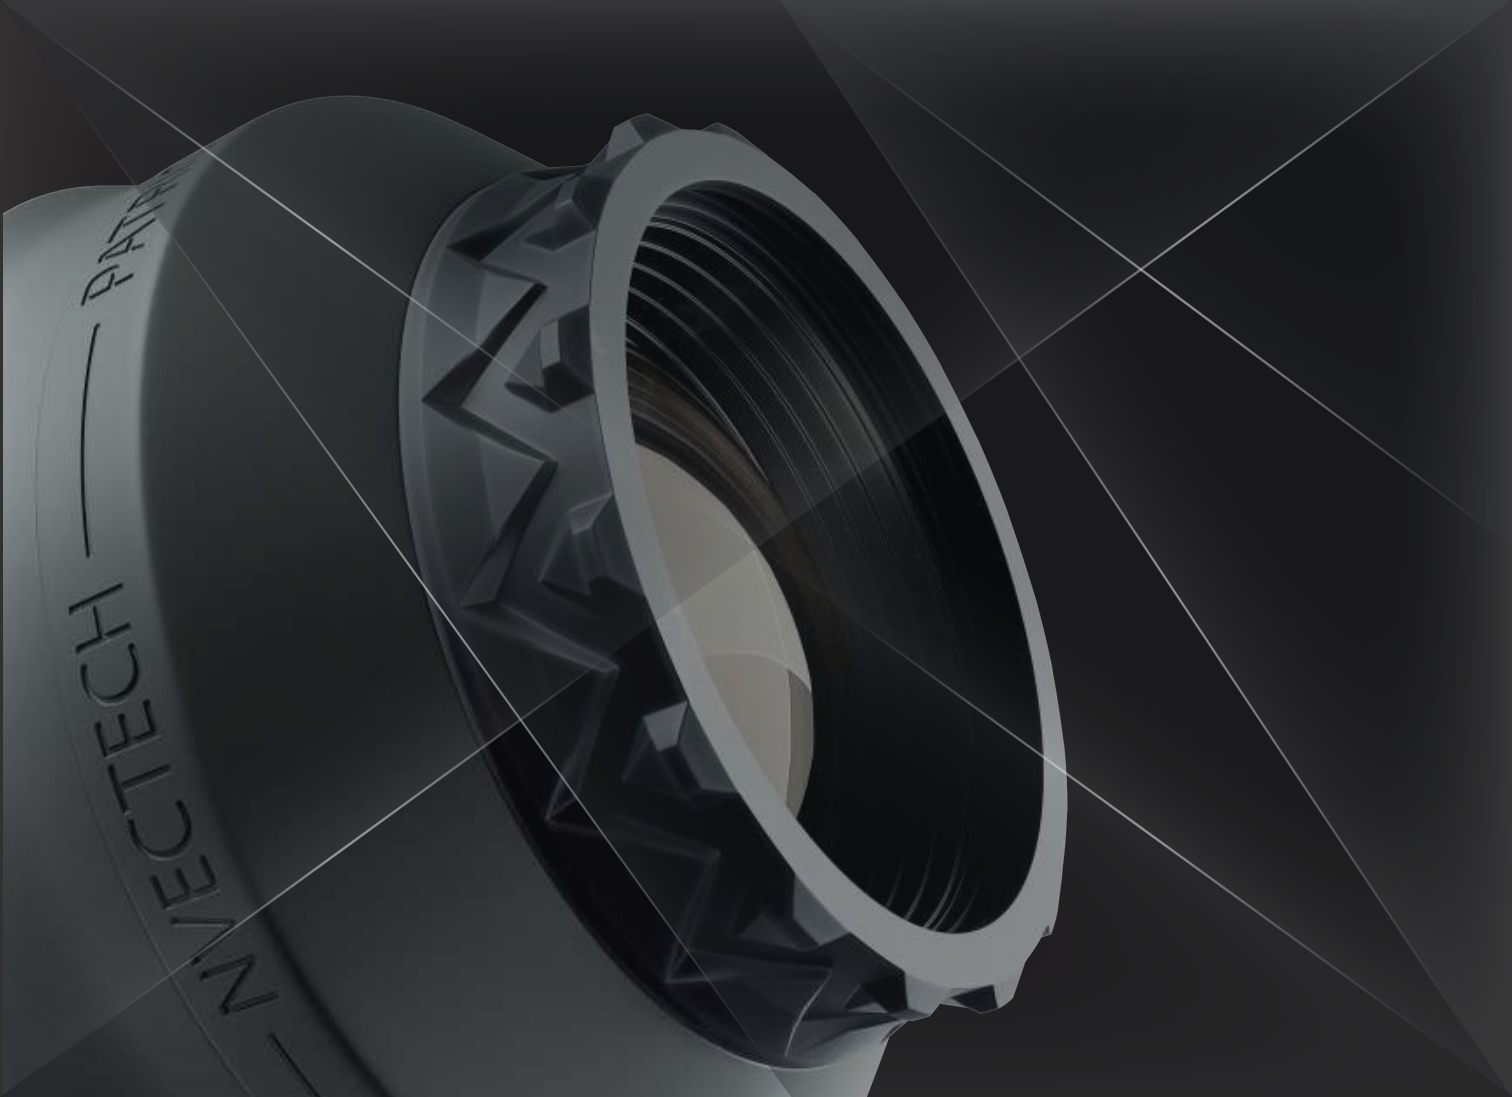

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.