

Thank you for purchasing the Stream from ZEN series. The Stream is a Wi-Fi Audio Transport.

#### 1. Power switch and indicator ( )

#### 2. Network Status LED ( )

The LED color scheme indicates the signal strength and network status received by ZEN Stream from the router.

	LED	Speed
Internet	White	Fast
	Cyan	Slow
Local network	Green	Fast
(no Internet)	Yellow	Slow
No connection	Red	—

#### 3. Audio Format LED (kHz)

The LED colour scheme indicates the audio format and sampling frequency received by ZEN Stream from the music source.

LED	Mode
Green	PCM 44.1/48/88.2/96kHz
Yellow	PCM 176.4/192/352.8/384kHz
Cyan	DSD 64/128
Blue	DSD 256
OFF	No Streaming


#### 4. LED for Hotspot Status

LED	Status
Flashing	On and awaiting connection
ON	Hotspot Connected
OFF	Hotspot off

\*60 seconds auto OFF if no activation.

#### 5. LED/HOTSPOT switch ( / )

- LED ON/OFF (short press)
- Hotspot ON/OFF (long press)

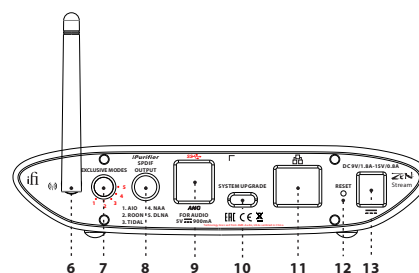

#### 6. Antenna

Please attach the enclosed antenna for maximum reception quality.

#### 7. System (Mode) selector

The following 5 play modes can be selected:

- 1) All In One. Use for set up
- 2) Roon only
- 3) TIDAL only
- 4) NAA (Network Audio Adapter) only
- 5) DLNA only

#### 8. SPDIF (Coaxial) output

This is a coaxial output with iPurifier technology built-in.

#### 9. USB Type A x 2

Compatible with USB 2.0 and USB 3.0.

- a) Input- Connect to DAC
- b) Output- Connect to HDD, USB DISK etc

These two USB ports have ANC technology built-in.

#### 10. System upgrade port

Used for system firmware upgrade.

#### 11. Ethernet

For a Ethernet connection directly from a router.

#### 12. Factory Reset

Please see below

#### 13. DC power supply connection

DC 9V/1.8A-15V/0.8A DC power input. Please connect ZEN Stream to the enclosed power supply.

Tip: For all the various network connection methods, please visit our website.

#### Specifications

<b>Input voltage:</b>	DC 9V/1.8A-15V/0.8A, AC 100-240V, 50/60Hz
<b>Input:</b>	WiFi/Ethernet/USB DISK, HDD etc.
<b>Formats:</b>	PCM384/DSD256
<b>Output:</b>	USB3.0/Type-A Socket x2 and SPDIF (Coaxial)
<b>Power consumption:</b>	No Signal ~6W
	Max Signal ~10W
<b>Dimensions:</b>	158 x 100 x 35 mm 6.2" x 3.9" x 1.4"
<b>Net weight:</b>	578 g (1.27 lbs)
<b>Warranty period:</b>	12 months

Specifications are subject to change without notice.

ifi-audio.com

Ver1.0

## Factory resetting your ZEN Stream

**IMPORTANT – Performing a factory reset incorrectly can leave your ZEN Stream unusable so please follow these instructions carefully and only perform the reset as a last resort.**

1. Power on your ZEN Stream
2. Press and hold the reset button, located on the back of the device, for 2 seconds. **Once you have initiated this process, you must make sure that there is no loss of power to the device. A loss of power at this point may damage your device.**
3. Wait until the connection (left) LED turns red — this may take around 5 minutes or more. **DO NOT POWER OFF! — Loss of power during this period may damage your ZEN Stream and leave it unusable.**
4. When the left LED turns red your ZEN Stream is reset. Follow this YouTube video to set up the Wi-Fi connection: <https://www.youtube.com/watch?v=e33ff3j1hsE>