


Champion Power Equipment, Inc.

MODEL #201238

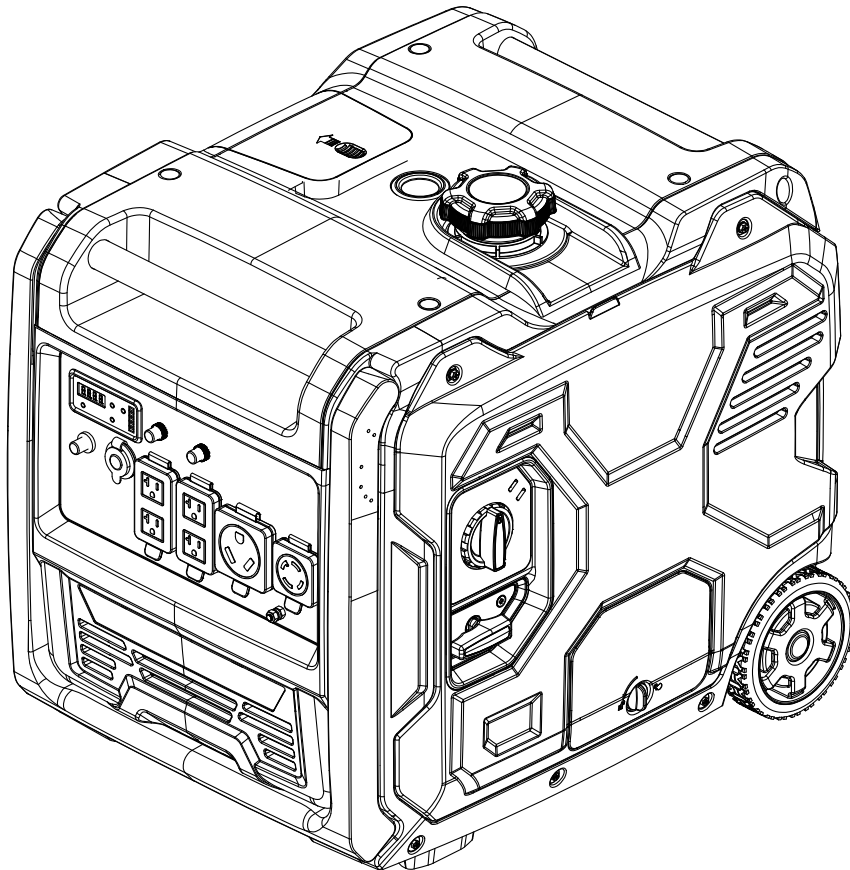

PARTS INFORMATION

6500W PORTABLE INVERTER GENERATOR

SERIAL NUMBER RANGE: ALL



To order replacement parts please visit:
shop.championpowerequipment.com
or call **1-877-338-0999**.

TABLE OF CONTENTS

Generator Parts Diagram..... 3

Generator Parts List 4

Engine Parts Diagram 6

Engine Parts List 7

Cylinder Head Parts Diagram 9

Cylinder Head Parts List 10

Carburetor Parts Diagram 11

Carburetor Parts List 12

Wheel Kit Parts Diagram 13

Wheel Kit Parts List 14

Fuel Tank Parts Diagram 15

Fuel Tank Parts List..... 16

Control Panel Parts Diagram 17

Control Panel Parts List 18

Wiring Diagram 19

GENERATOR PARTS DIAGRAM

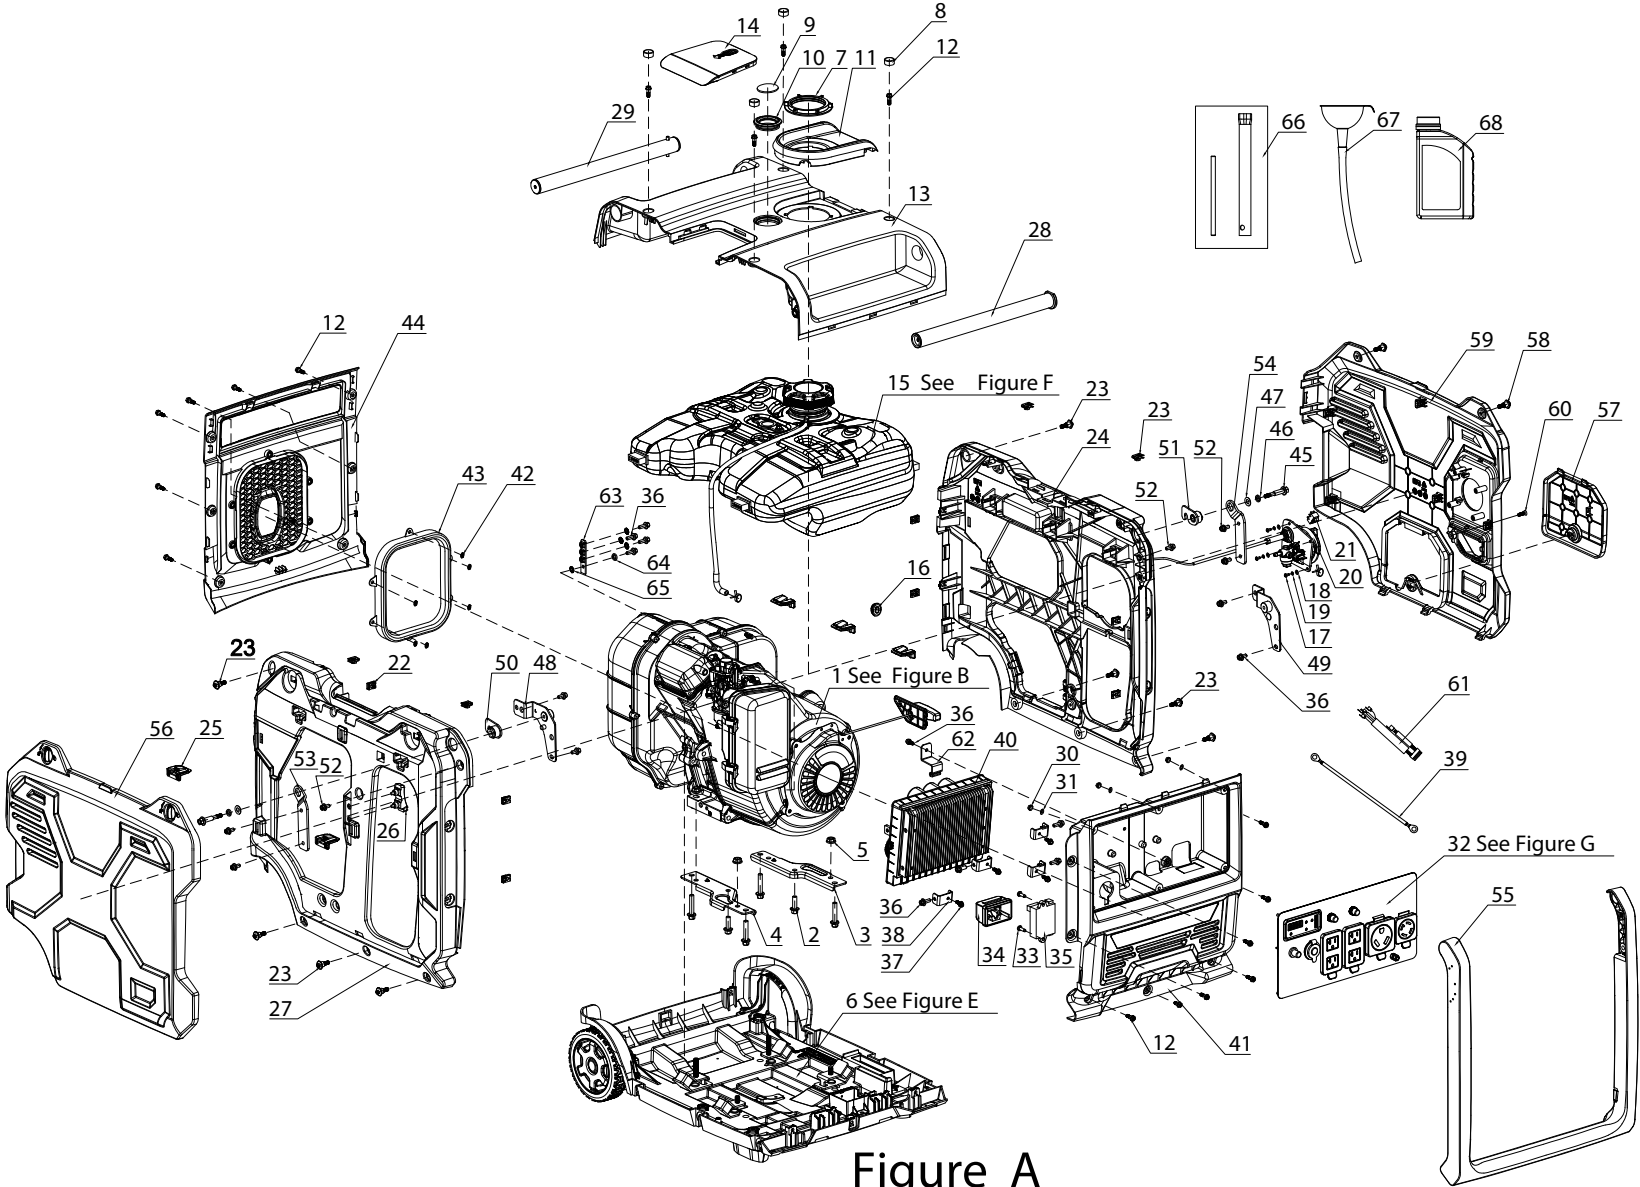


Figure A


GENERATOR PARTS LIST

#	Part Number	Description	Qty.
1	H225i-3-CCM0003	H225iD-3	1
2	91101-0825-001D0	M8 x 1.25 x 25 Hexagon Flange Bolt	2
3	41102-G79D501-000D0	Engine Mounting Bracket, Left	1
4	41102-G79D502-000D0	Engine Mounting Bracket, Right	1
5	92201-0800-001D1	Hexagon Flange Nut, M8, Blue White Zinc	4
6	41400-G79D501-H04D0	Wheel Kit Assembly- See Figure E	1
7	25109-G79D501-H04D0	Fuel Tank Fixing Nut	1
8	23151-G79D501-H04D0	Rubber Plug	4
9	25220-G290010-000D0	Fuel Gauge	1
10	25221-G290010-000D0	Fuel Gauge, Rubber Cushion	1
11	26233-G79D501-000D0	Fuel Filling Port Sleeve	1
12	91705-G290503-000D0	Hexagon Step Bolt, M5 x 16, Black Zinc	17
13	41460-G79D501-H04D0	Cover, Upper	1
14	41403-G79D501-H04D0	Access Panel, Spark Plug Service	1
15	25100-G79D503-H04T0	Fuel Tank Assembly - See Figure F	1
16	41422-G290501-000D0	Fastening Rubber Sleeve	1
17	95206-E010501-000D0	Clamp, 7.5	2
18	91202-0410-001D0	Cross Pan Head Screw	4
19	93108-0408-001D0	Flat Gasket, 4, Blue White Zinc	4
20	93103-4000-001D0	Spring Washer, 4, Blue White Zinc	4
21	31430-G79D501-000D0	Engine Switch Dial Knob	1
22	36104-G790501-000D0	Switch Assembly	1
23	92319-G290501-000D0	M5 Clip Nut	12
24	91705-G220501-000D0	M6 x 20 Hexagon Step Bolt	8
25	41430-G79D501-H04D0	Right Shell	1
26	65419-G79D000-000D0	Retainer Plate	5
27	41433-G79D501-H04D0	Rubber Cushion Support	1
28	41420-G79D501-H04D0	Left Shell	1
29	44410-G79D502-H02D0	Arm 1, Front	1
30	44410-G79D501-H02D0	Arm 1, Rear	1

#	Part Number	Description	Qty.
31	92201-0400-001D0	M4 x 0.7 Hexagon Flange Nut	6
32	93104-0412-001D0	Flat Washer, 4 x 12 x 1	6
33	36100-G79D506-H02T0	Control Panel Assembly- See Figure G	1
34	91206-4816-001D0	Cross Pan Head Tapping Screw	2
35	31311-G79D000-000D0	Rubber Sleeve	1
36	5.1830.022	CO Detection Module	1
37	91101-0612-001D0	M6 x 12 Hexagon Flange Bolt	13
38	91107-0512-001D0	M5 x 12 Hexagon Flange Bolt	5
39	36314-G79B000-H02D0	Inverter Mounting Bracket	4
40	36168-G170502-000D0	Grounding Wire	1
41	36300-G79B506-000D0	Inverter, 5/5.5KW, 120V/240V 60Hz	1
42	36103-G79D502-H04D0	Control Panel Housing	1
43	93208-G290501-000D0	Bearing Clamp Retaining Ring	6
44	23018-G79B501-000D0	Insulator Glue Cushion, Muffler	1
45	23011-G79D501-H04D0	Muffler Housing	1
46	91714-G79D000-001D0	M6 x 13 Hexagon Step Bolt, Flange	2
47	93103-0821-001D0	Spring Washer, 8 x 2.1	2
48	93108-0816-001D0	Flat Gasket, 8	2
49	44402-G79D501-000D0	Arm Support, Left	1
50	44402-G79D502-000D0	Arm Support, Right	1
51	44412-G79D503-H02D0	Arm Connecting Seat 1, Left	1
52	44412-G79D504-H02D0	Arm Connecting Seat 1, Right	1
53	91101-0612-002D0	M6 x 12 hexagon Flange Bolt	6
54	44412-G79D501-H02D0	Arm Connecting Seat 2, Left	1
55	44412-G79D502-H02D0	Arm Connecting Seat 2, Right	1
56	44410-G79D503-H04D0	Arm Assembly	1
57	41421-G79D501-Y01D0	Left Cover Board	1
58	41403-G79D502-Y01D0	Side Access Panel, Oil Service	1
59	91705-G290502-000D0	M5 x 12 Hexagon Step Bolt	2
60	41431-G79D501-Y01D0	Right Cover Board	1

#	Part Number	Description	Qty.
61	91203-0512-002D0	M5 x 12 Countersunk Head Screw	1
62	31402-G79D000-000D0	Control Wiring Harness	1
63	41228-G79D000-000D0	Bracket, Q235	1
64	36153-G79D501-000D0	Ground Terminal Nut, M6, Q235	1
65	93103-0616-001D0	Spring Washer, 6 x 1.6	1
66	93113-6511-000D0	Lock Washer, 6.5 x 11 x 0.6	4
67	96104-G79D501-000D0	Spark Plug Sleeve	1
68	96401-G79D501-000D0	Oil Funnel, 220mm	1
69	82007-G79D502-000D0	Oil Bottle, 0.65L	1

ENGINE PARTS DIAGRAM

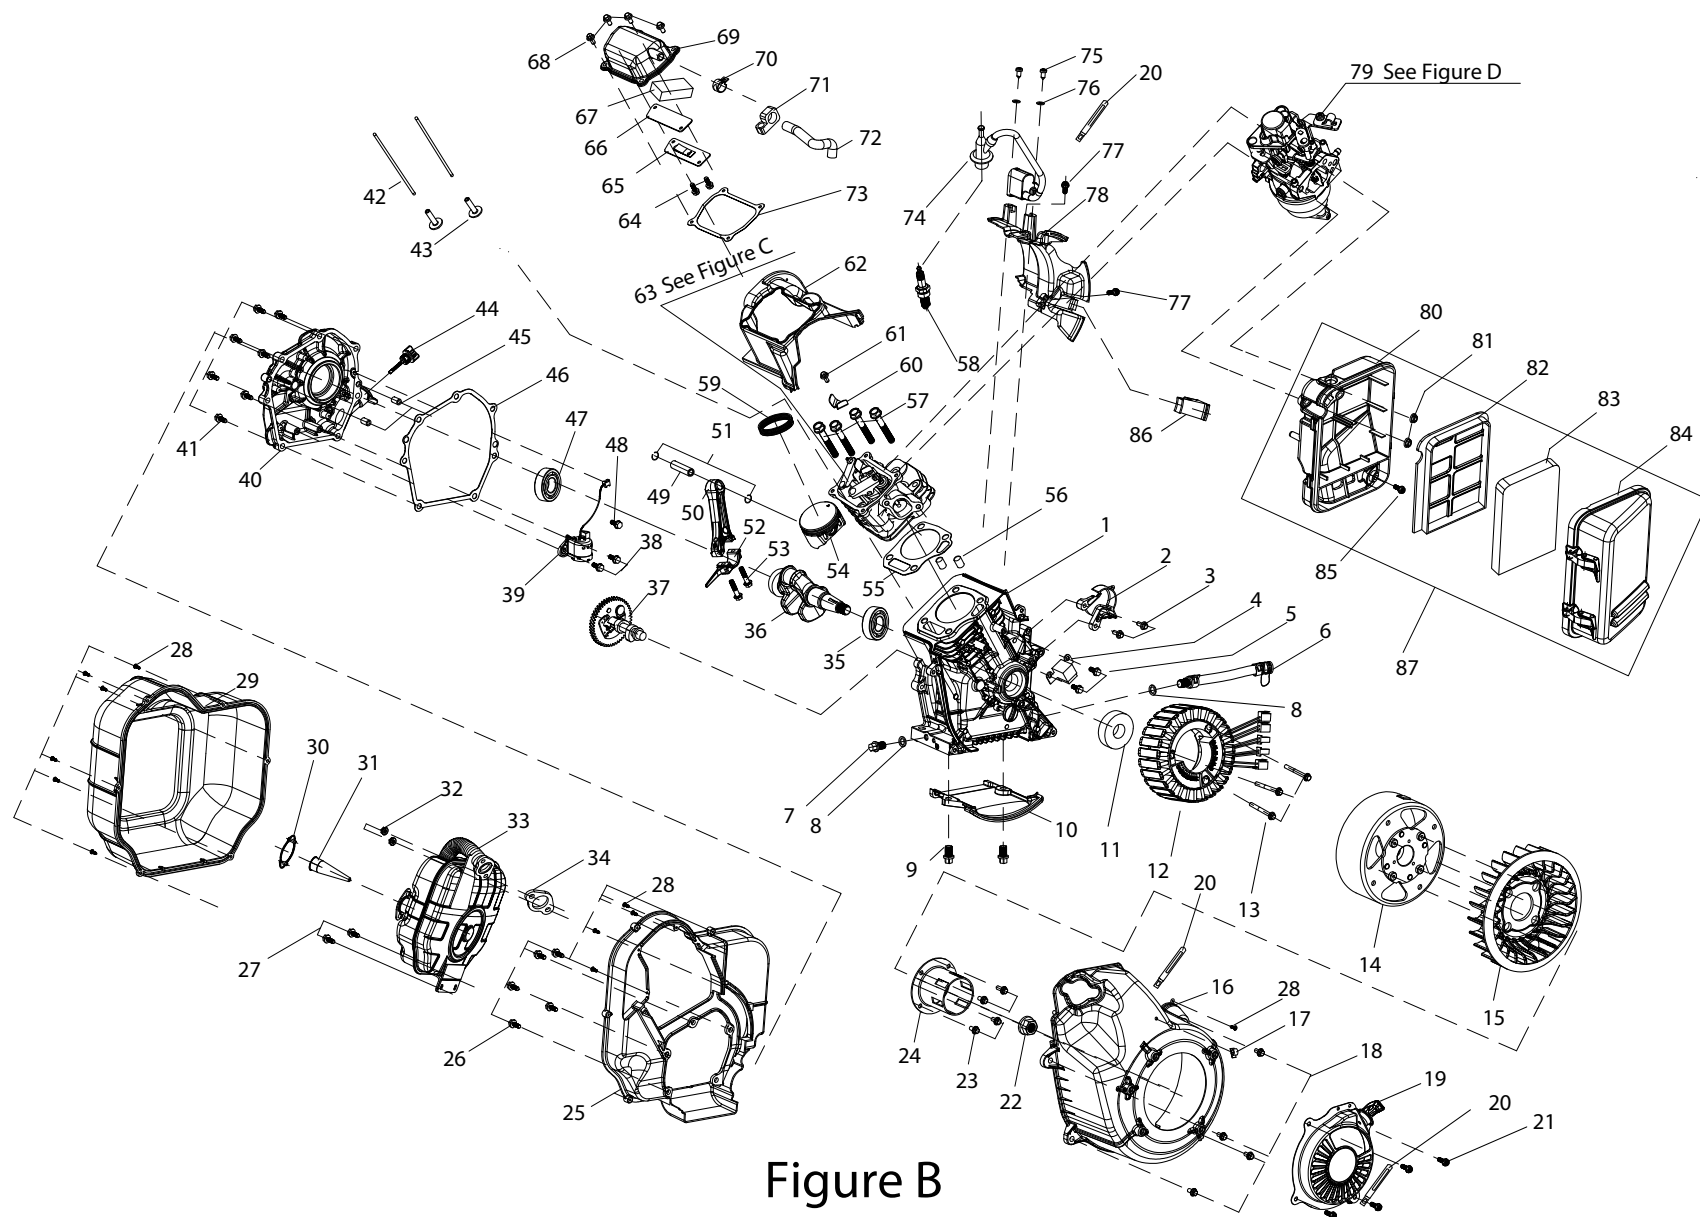

ENGINE PARTS LIST

#	Part Number	Description	Qty.
1	13310-E203501-00000	Crankcase Assembly	1
2	26203-E203501-00000	Wind Block 1	1
3	91101-0632-001D0	M6 x 32 Hexagon Flange Bolt	2
4	31340-E203501-000D0	Trigger	1
5	91101-0612-001D0	M6 x 12 Hexagon Flange Bolt	2
6	13020-G79D501-00000	Oil Drain Hose Assembly, Ø9.5 x Ø17 x 250	1
7	91709-E010010-000D0	M10 x 15 Oil Drain Bolt	1
8	93116-E010010-00000	Flat Washer, Ø10 x Ø15 x 1.5	2
9	91101-0612-001D0	M6 x 12 Hexagon Flange Bolt	2
10	26232-E203501-00000	Crankcase Bottom Shroud	1
11	90001-E090030-00000	Oil Seal, Ø30 x Ø46 x 8	1
12	33310-G79D502-000D0	Stator Component, Ø156 x 45	1
13	91101-0660-001D0	M6 x 60 Hexagon Flange Bolt	3
14	33330-G79D501-000D0	Rotor Component, Ø180 x 73	1
15	26201-E203501-00000	Engine Cooling Fan	1
16	28140-E203501-H0400	Engine Shroud	1
17	95203-E040010-00000	Clip, Ø10	1
18	91101-0620-001D0	M6 x 20 Hexagon Flange Bolt	4
19	28110-E200505-H0200	Recoil Starter Assembly	1
20	91719-E180501-00000	Recoil Starter Clamp	2
21	91101-0612-001D0	M6 x 12 Hexagon Flange Bolt	4
22	92403-E040501-000D0	M16 x 1.5 Hexagon Flange Nut	1
23	91101-0616-001D0	M6 x 16 Hexagon Flange Bolt	4
24	28001-E203501-000D0	Starter Pulley	1
25	26001-E203501-00000	Muffler Front Guard	1
26	91107-0516-001D0	M5 x 16 Hexagon Flange Bolt	5
27	91101-0616-001D0	M6 x 16 Hexagon Flange Bolt	2
28	91206-4213-002D0	Pan Head Tapping Screw, Cross, ST4.2 x 13	11
29	26001-E203502-00000	Muffler Rear Guard	1
30	31320-E203501-00000	Spark Plug Cap Assembly	1

#	Part Number	Description	Qty.
31	23190-E203501-00000	Spark Arrester assembly	1
32	92101-0800-001D0	Hexagon Nut Type 1, M8 x 1.25	2
33	23100-E203502-H0200	Muffler	1
34	23001-E203501-00000	Exhaust Port Gasket	1
35	94100-6306-00000	Bearing 6306	1
36	15310-E203501-00000	Crankshaft Assembly	1
37	17210-E203501-00000	Camshaft Assembly	1
38	91101-0616-001D0	M6 x 16 Hexagon Flange Bolt	2
39	31080-E203502-000D0	Engine Oil Sensor	1
40	13410-E203501-00000	Crankcase Cover	1
41	91101-0832-001D0	M8 x 32 Hexagon Flange Bolt	7
42	17010-E203501-00000	Valve Lifter	2
43	17021-E203501-00000	Valve Tappet	2
44	19010-E203501-H0100	Oil Dipstick Assembly	1
45	93302-0814-00001	Pin, Ø8 x 14	2
46	13001-E203501-00000	Crankcase Gasket	1
47	94100-6205-00002	Bearing 6205	1
48	91101-0612-001D0	M6 x 10 Hexagon Flange Bolt	1
49	15121-E281010-00000	Piston Pin	1
50	15011-E203501-00000	Connecting Rod Shaft	1
51	15122-E070010-00000	Piston Pin Clip	2
52	15012-E203501-00000	Connecting Rod Cap	1
53	91710-E010010-00000	M7x32 Connecting Rod Bolt	2
54	15100-E203501-00000	Piston	1
55	11131-E203501-00000	Cylinder Head Gasket	1
56	93302-1016-00001	Pin, Ø10 x 16	2
57	91718-E203502-000D0	M8 x 60 Cylinder Head Bolt	4
58	31110-E010010-00000	Spark Plug, F7RTC	1
59	15200-E030030-00010	Piston Ring	1
60	17301-E203501-00000	Rocker Arm Shaft Block	1

#	Part Number	Description	Qty.
61	91101-0616-001D0	M6 x 16 Hexagon Flange Bolt	1
62	26235-E203501-00000	Deflector, Cylinder Head	1
63	11100-E203501-00000	Cylinder Head Assembly, See Figure C	1
64	91101-0510-001D0	M5 x 10 Hexagon Flange Bolt	2
65	11431-E203501-00000	Breather Groove Cover	1
66	11432-E203501-00000	Breather Groove Cover Gasket	1
67	19211-E200010-00000	Oil screen	1
68	91101-0620-001D0	M6 x 20 Hexagon Flange Bolt	4
69	11410-E203501-00000	Cylinder Head Cover Assembly	1
70	95206-E203501-000D0	Clip, $\varnothing$ 14.5	1
71	41422-G170010-000D0	Fastening Rubber Sleeve	1
72	22004-E203501-00000	Breather Tube	1
73	11401-E203501-00000	Cylinder Head Cover Gasket	1
74	31300-E203506-000Y0	Ignition Coil	1
75	91206-4213-002D0	Pan Head Tapping Screw, Cross ST4.2 x 13	2
76	93104-0515-001D0	Flat Washer, $\varnothing$ 5 x $\varnothing$ 15 x 1	2
77	91101-0612-001D0	M6 x 12 Hexagon Flange Bolt	2
78	26231-E203501-00000	Crankcase Upper Shroud	1
79	25300-E201501-00000	Carburetor Assembly, See Figure D	1
80	22140-E203501-000I0	Air Cleaner Base Assembly	1
81	92201-0600-001D0	M6 Hexagon Flange Nut	2
82	22111-E203501-00000	Bottom Case, Air Cleaner Element	1
83	22130-E203501-00000	Air Cleaner Element Assembly	1
84	22115-E203501-00000	Air Cleaner Cover	1
85	91107-0616-001D0	M6 x 16 Hexagon Flange Bolt	1
86	13006-E203501-00000	Motor Harness Outlet Block	1
87	22100-E203502-000I0	Air Cleaner Assembly	1

CYLINDER HEAD PARTS DIAGRAM

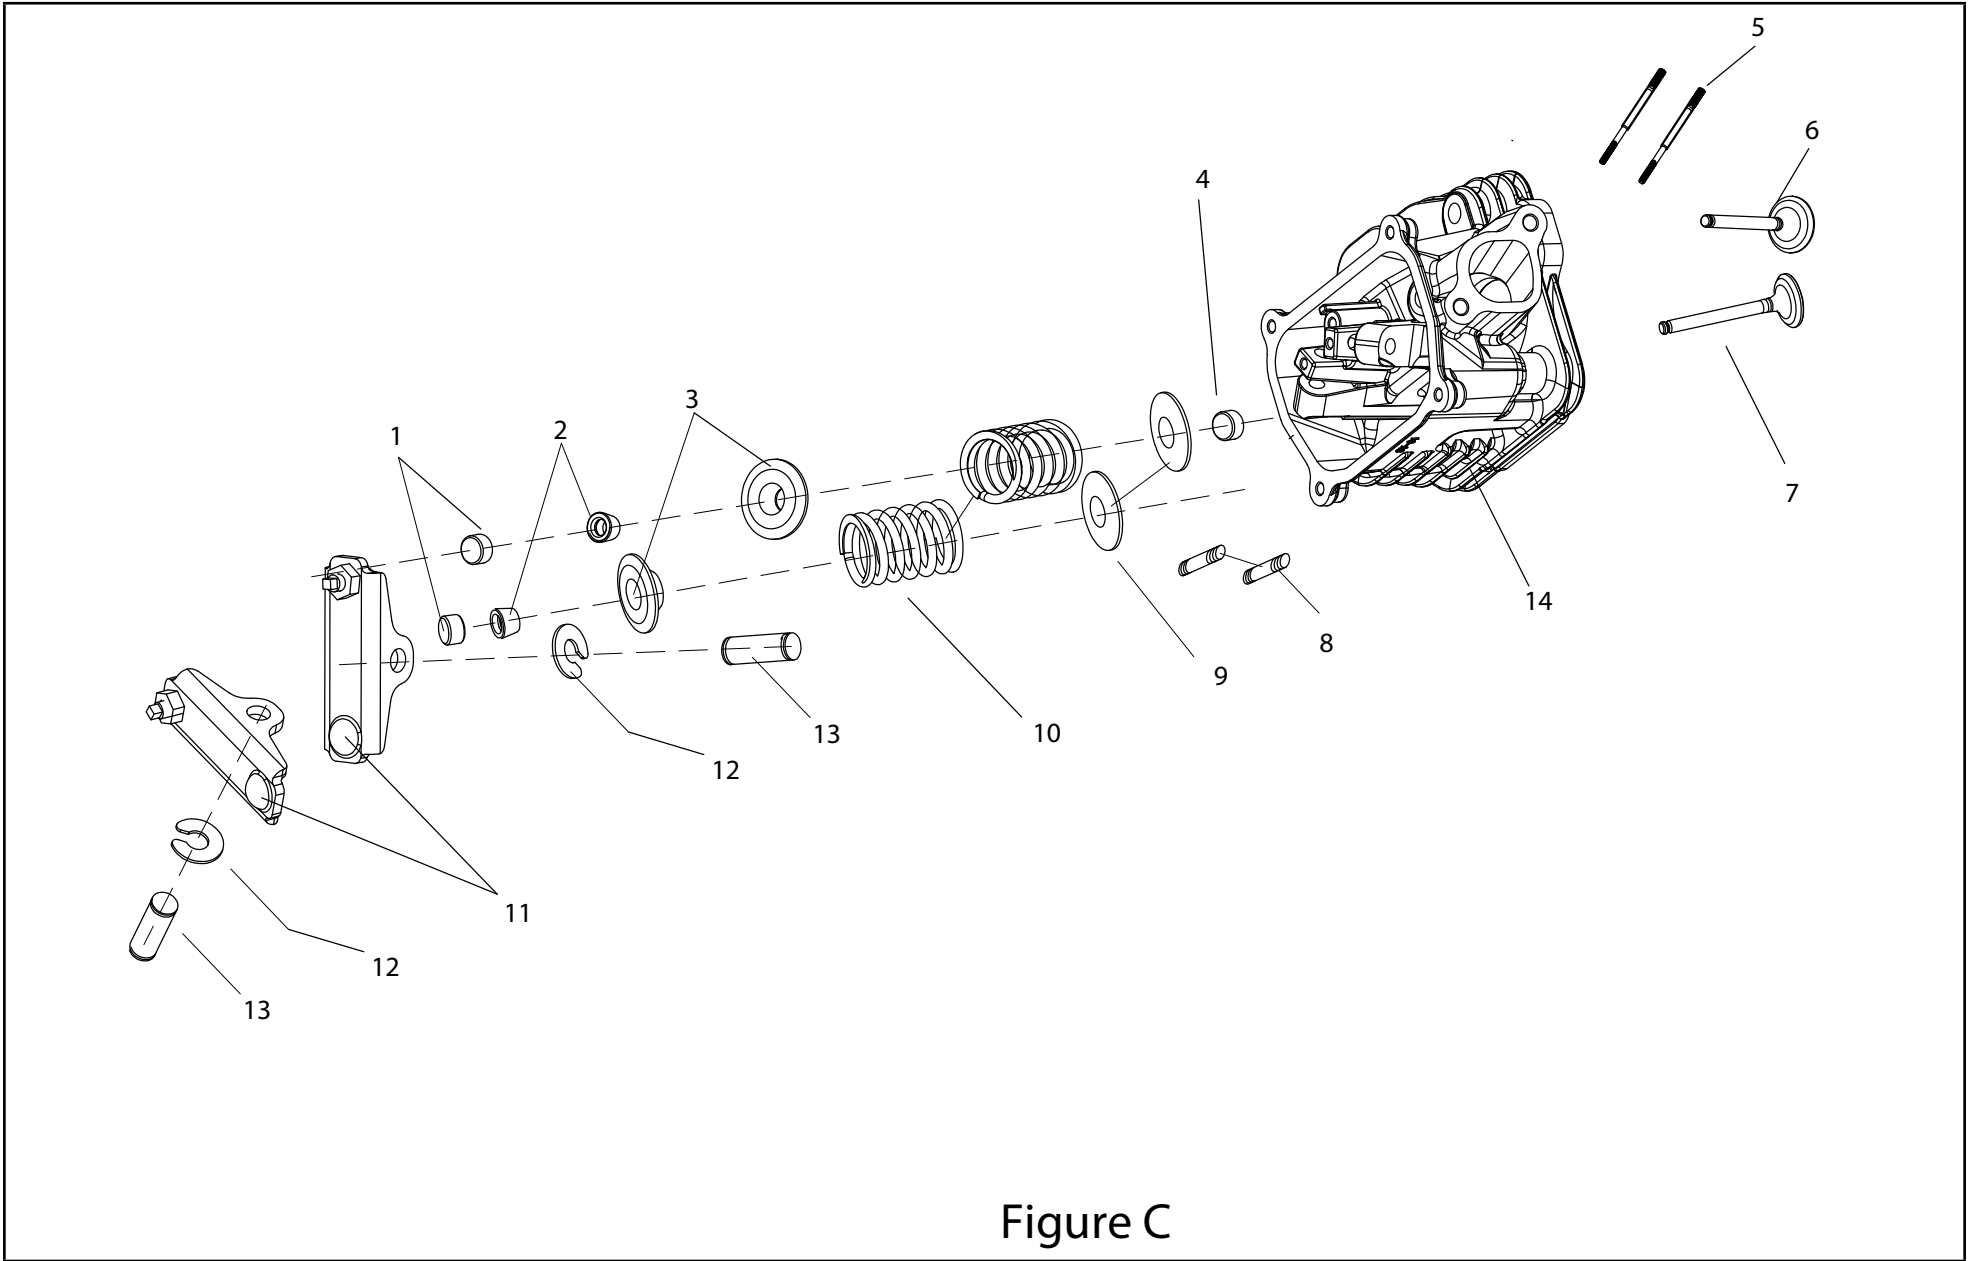


Figure C

CYLINDER HEAD PARTS LIST

#	Part Number	Description	Qty.
1	11103-E010010-00000	Valve Adjusting Cap	2
2	11108-E203000-00000	Valve Lock Clamp	4
3	11105-E203501-00000	Valve Rocker Subassembly	2
4	11101-E140010-Z0100	Seal Guide	1
5	91707-E203501-000D0	Stud, M6-M8 x 115	2
6	11122-E203501-00000	Exhaust Valve	1
7	11121-E203501-00000	Inlet Valve	1
8	91708-E010501-000D0	M8 x 34 Stud	2
9	11104-E203501-00000	Valve Spring Retainer	2
10	11102-E203501-00000	Valve Spring	2
11	17310-E203501-00000	Valve Rocker Subassembly	2
12	93205-0601-00000	Retainer Ring	2
13	17341-E203501-00000	Valve Rocker Shaft	2
14	11140-E203501-00000	Cylinder Head	1

CARBURETOR PARTS DIAGRAM

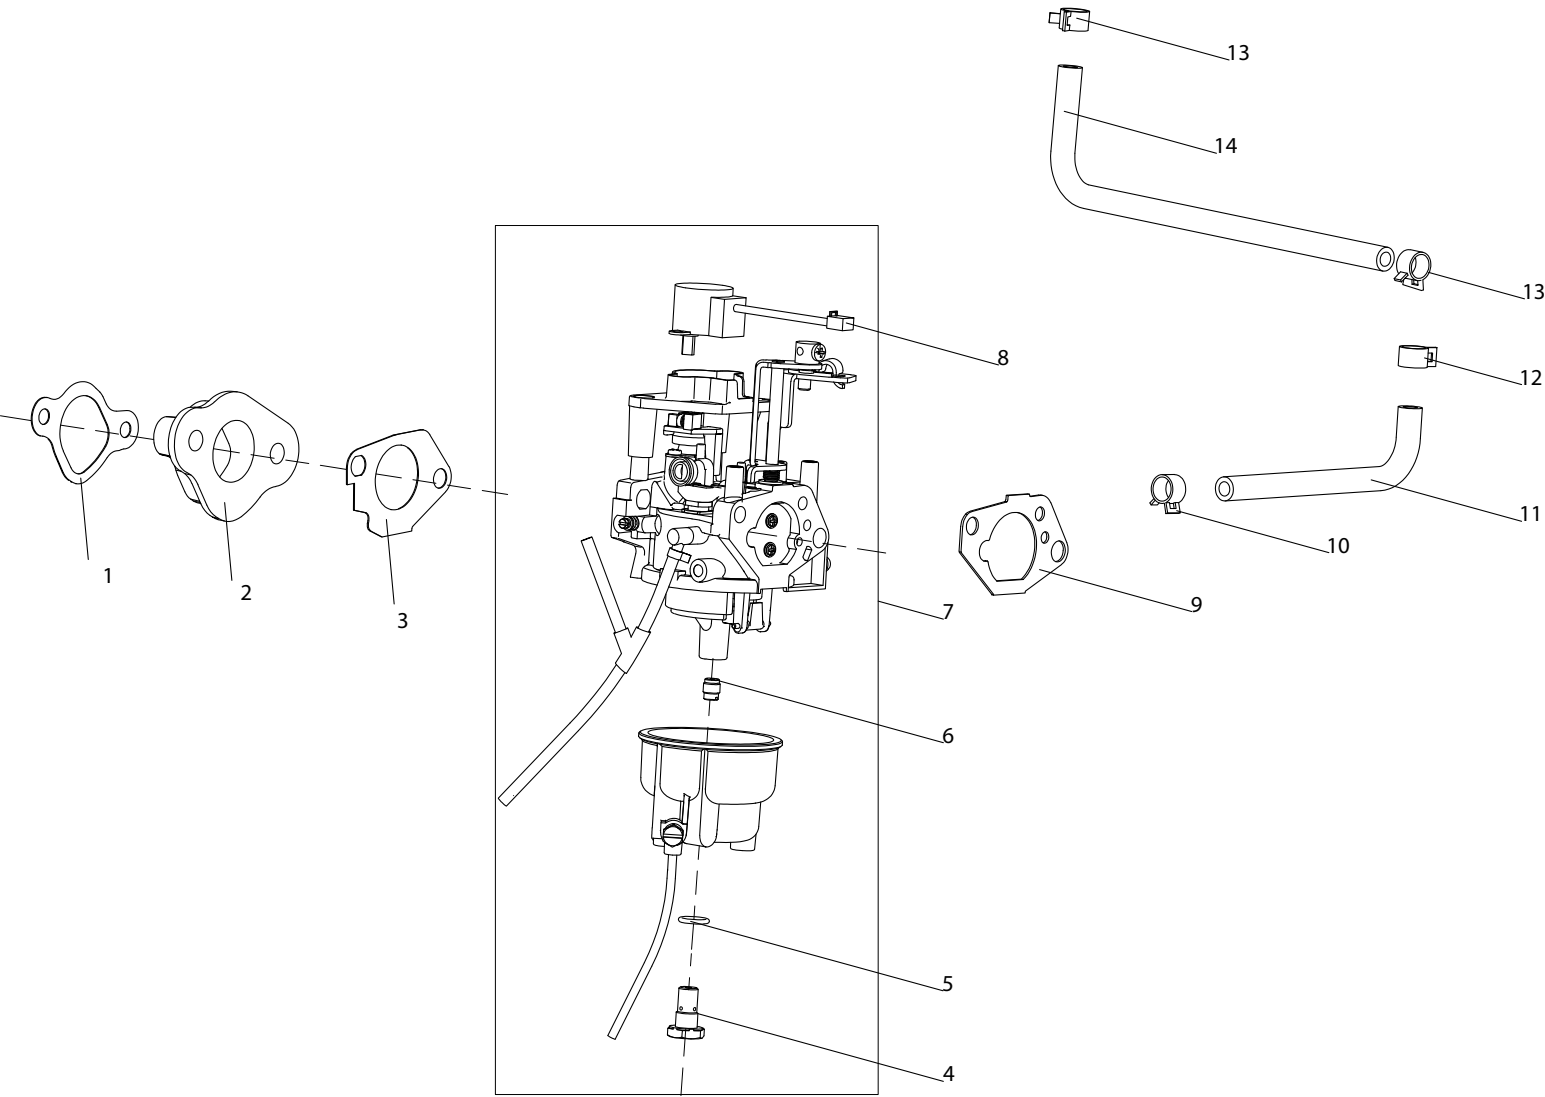


Figure D

CARBURETOR PARTS LIST

#	Part Number	Description	Qty.
1	22002-E203501-00000	Carburetor Insulator Gasket	1
2	22006-E203501-00000	Carburetor Insulator Plate	1
3	22007-E203501-00000	Carburetor Gasket	1
4	25382-E203000-00000	Fuel Cup Bolt	1
5	25315-E203000-00000	Fuel Cup Bolt Sealing Ring	1
6	25341-E203001-00000	Standard Main Jet (YL#92)	1
	25341-E203000-00000	Main Jet (YL#90, Attude 3000-6000 Feet	/
	25341-E203002-00000	Main jet (YL#88), Aititude 6000-8000 Feet	/
7	25300-E203508-000I0	Carburetor	1
8	25316-E203501-00000	Stepping Motor	1
9	22001-E203501-00000	Air Cleaner Gasket	
10	95206-E203502-000D0	Clamp, Ø9.5	1
11	25130-E203504-000I0	Fuel Tube, Ø6 x Ø10 x 340	1
12	95206-E010501-000D0	Clamp, Ø7.5	1
13	95206-G290501-000D0	Clamp, Ø10	2
14	25130-G79D501-000K0	Fuel Tube, Ø4.5 x Ø8.5 x 135	1

WHEEL KIT PARTS DIAGRAM

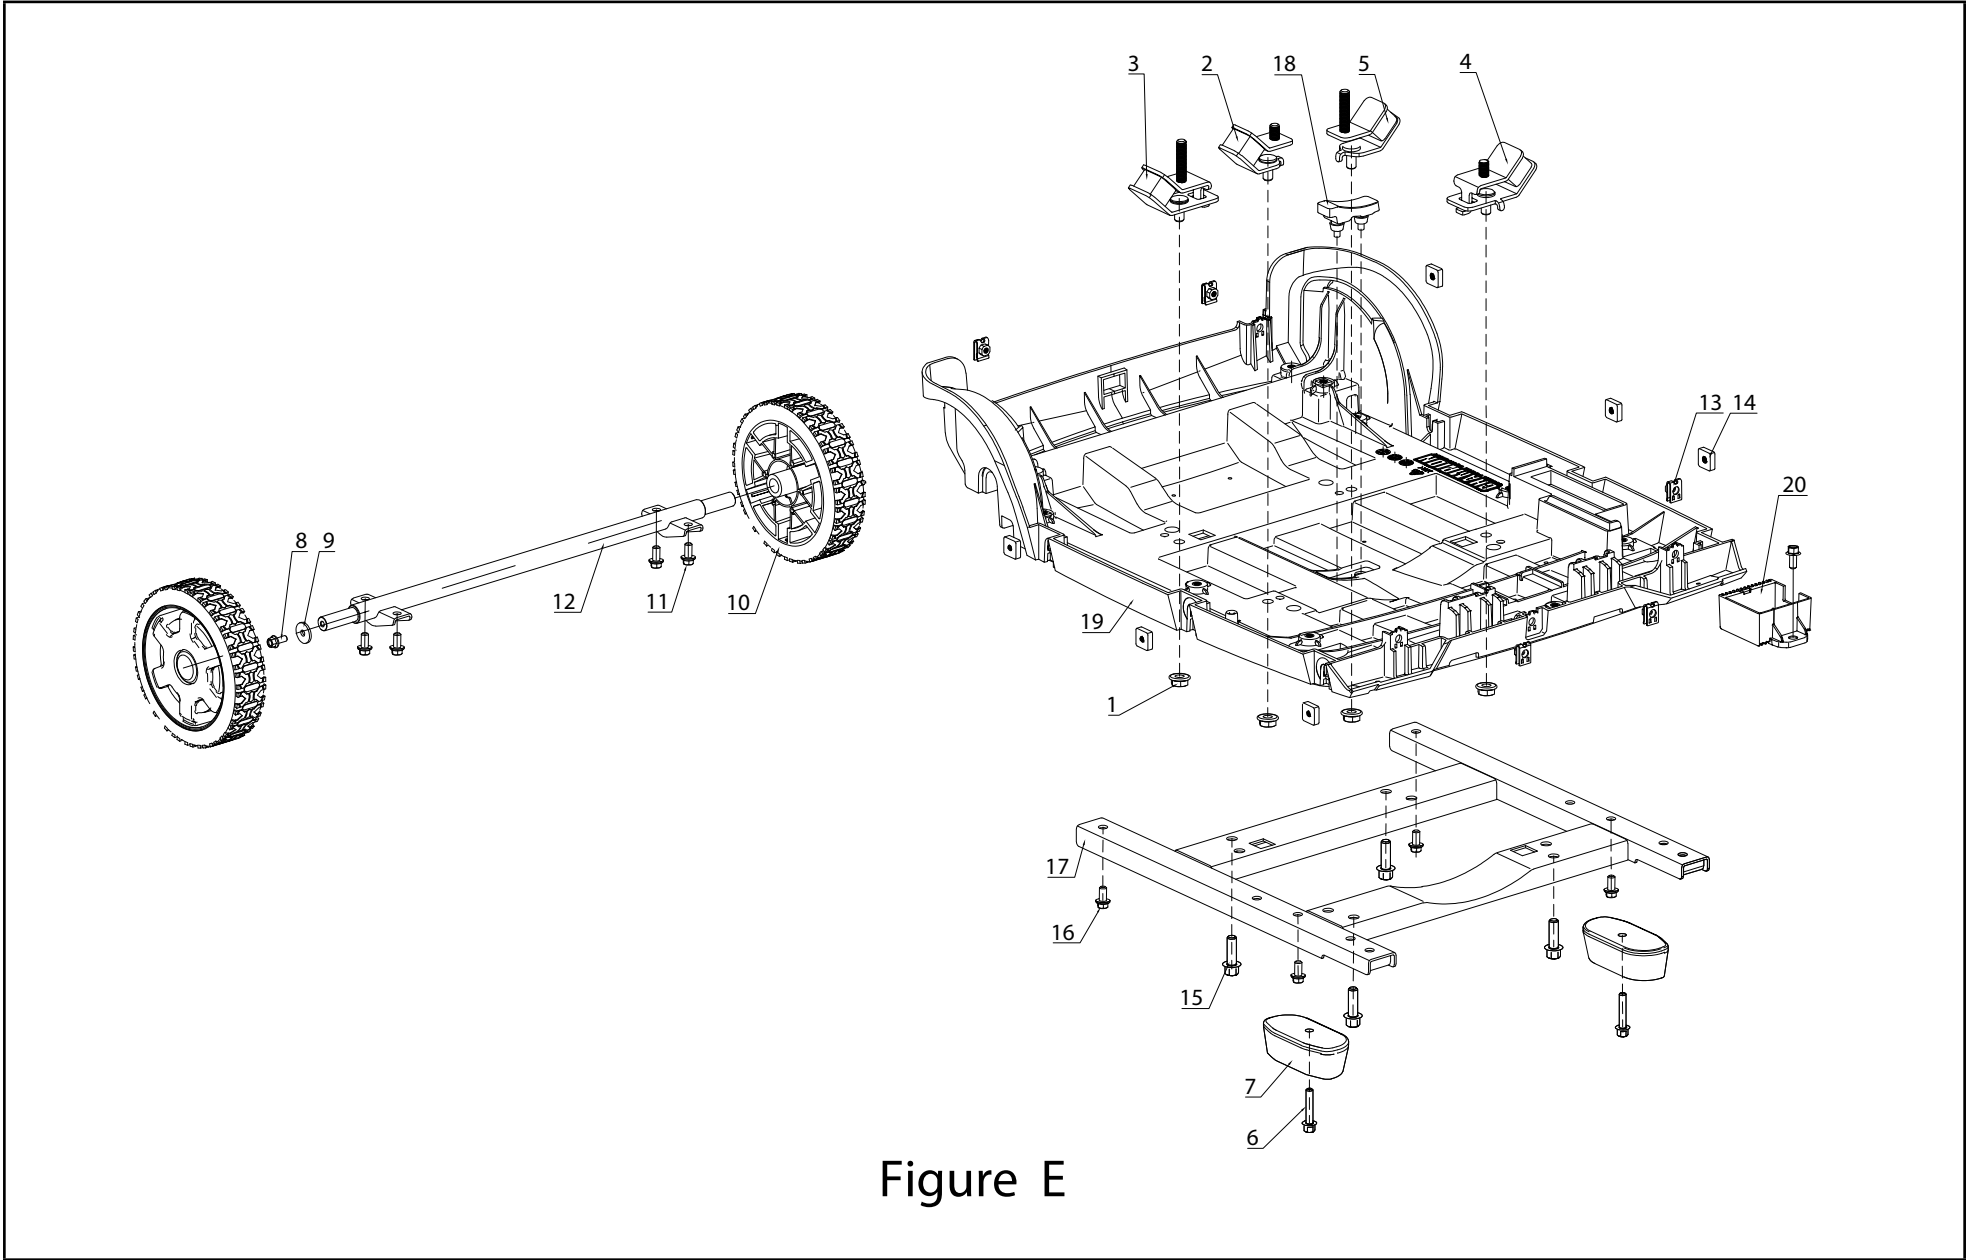


Figure E

WHEEL KIT PARTS LIST

#	Part Number	Description	Qty.
1	92201-0800-001D0	M8 Hexagon Flange Nut	4
2	41110-G79B501-000D0	Vibration Mount 1, Left, Frame	1
3	41110-G79B502-000D0	Vibration Mount 2, Left, Frame	1
4	41120-G79B501-000D0	Vibration Mount 1, Right, Frame	1
5	41120-G79B502-000D0	Vibration Mount 2, Right, Frame	1
6	91101-0630-001D0	M6 x 30 Hexagon Flange Bolt	2
7	41130-G220010-000D0	Rubber Foot	2
8	91101-0512-001D0	M5 x 12 Hexagon Flange Bolt	2
9	93107-0618-001D0	Flat Washer, 1/2" x 1 1/2" x 1.6	2
10	44220-G79D501-H04D0	5in. Wheel, Yellow	2
11	91101-0614-001D0	M6 x 14 Hexagon Flange Bolt	8
12	44110-G79D501-000D0	Axle assembly	1
13	92319-G290501-000D0	M5 Clip Nut	5
14	92318-G290501-000D0	M6 Square Nut	6
15	91714-G79D001-000D0	Flange Hexagon Step Bolt, Orange	4
16	91101-0612-001D0	M6 x 12 Hexagon Flange Bolt	1
17	41214-G79D000-H02D0	Bracket, Q235A	1
18	41433-G79D501-H04D0	Rubber Cushion Support	1
19	41410-G79D501-H04D0	Wheel Kit	1
20	31150-G79D501-000D0	DC Module	1

FUEL TANK PARTS DIAGRAM

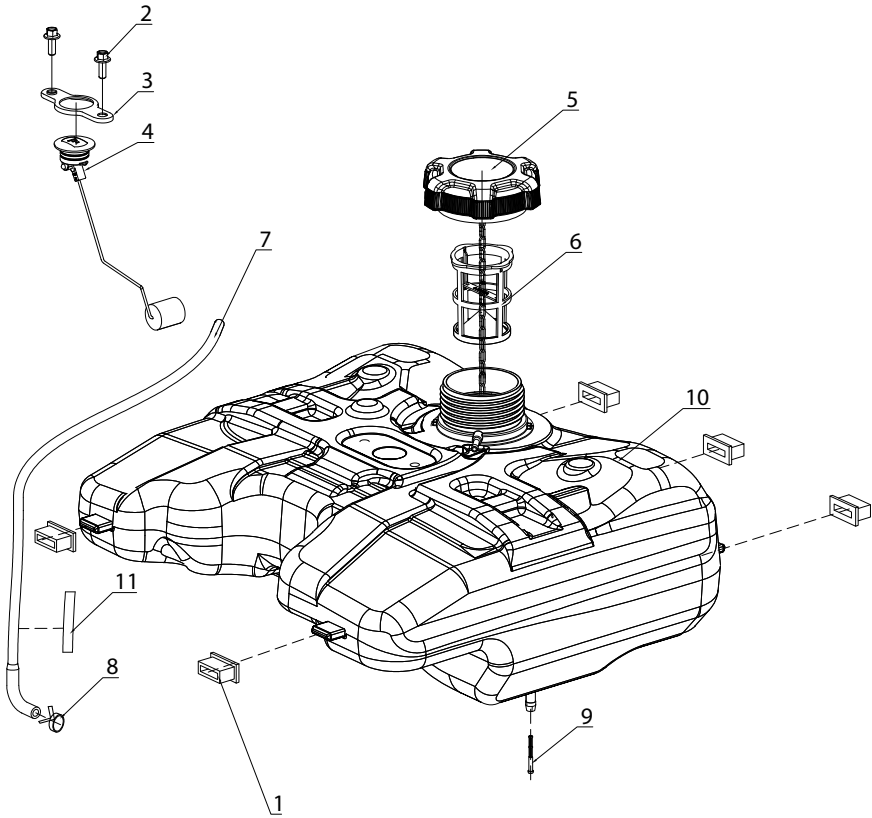


Figure F

FUEL TANK PARTS LIST

#	Part Number	Description	Qty.
1	25108-G79K501-000D0	Support Rubber Sleeve Fuel Tank	5
2	91101-0610-001D0	M6 x 10 Hexagon Flange Bolt	2
3	25214-G290501-000D0	Fuel Gauge Coverplate	1
4	25210-G79D501-000D0	Fuel Gauge	1
5	25110-G79D501-H04D0	Fuel Tank Cap	1
6	25190-G79D501-000D0	Fuel Filter, Fuel Tank	1
7	25501-G79D501-000D0	Fuel Tube Rubber Sleeve	1
8	95206-G290501-000D0	Clamp, Ø10	1
9	25190-G290030-000D0	Fuel Filter, Fuel Tube	1
10	25140-G79D503-H04D0	Fuel Tank	1
11	25134-G79D501-000D0	Fuel Tube Sleeve	1

CONTROL PANEL PARTS DIAGRAM

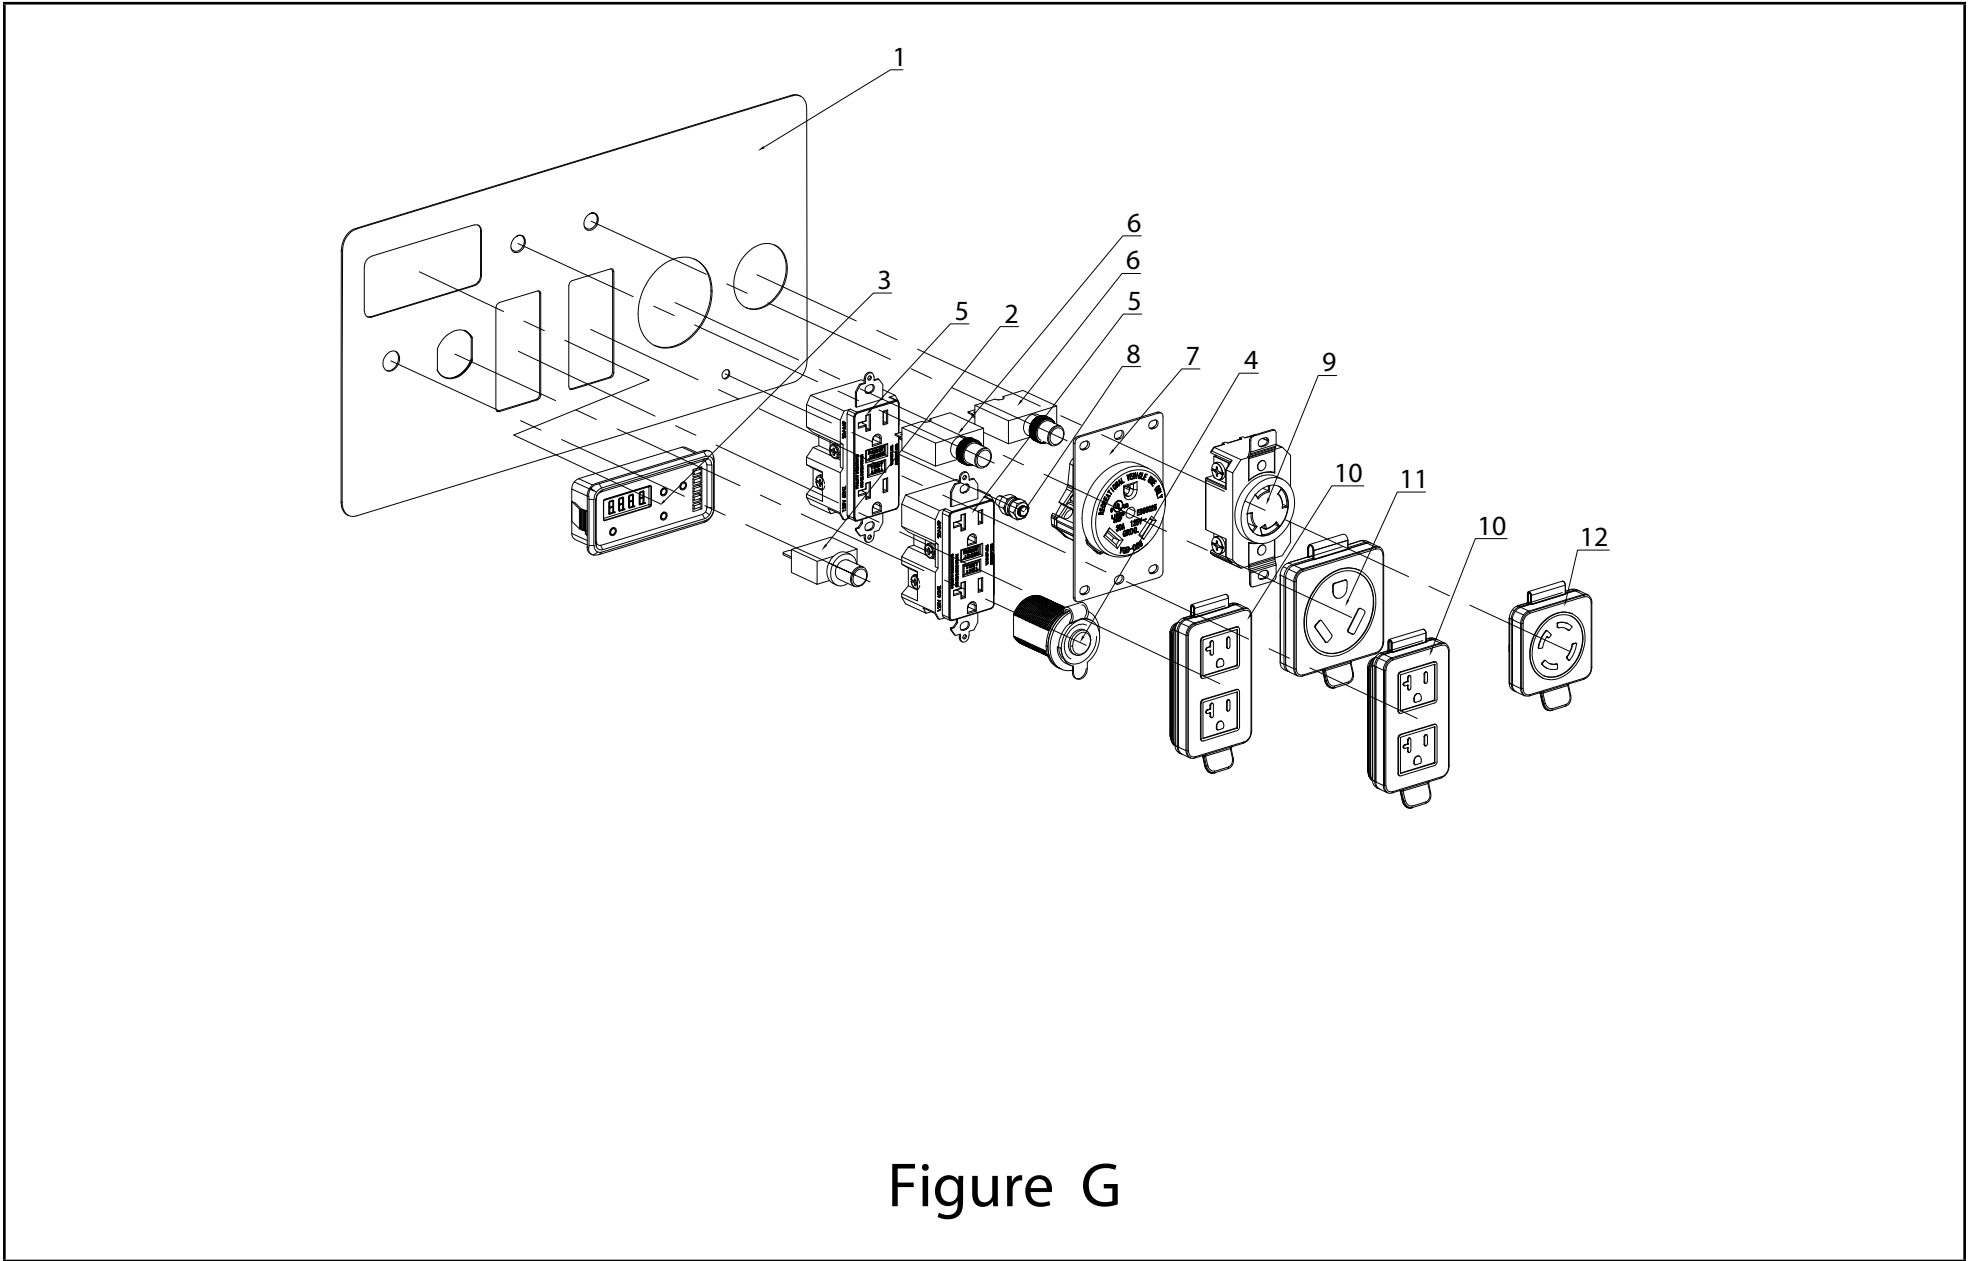


Figure G

CONTROL PANEL PARTS LIST

#	Part Number	Description	Qty.
1	36121-G79D501-00000	Control Panel, B-1.0	1
2	36131-G030502-00000	Overcurrent Protector, 8A, Waterproof Cap	1
3	36126-G790501-000D0	Intelligauge, INT5CINV	1
4	36134-G110010-00000	Automotive Receptacle, 12V DC	1
5	36132-G030080-00000	5-20R GFCI Receptacle, 20A, 125V	2
6	36131-G030504-00000	20Amp Circuit Breaker, Push Button	2
7	36132-G240503-00000	TT-30R Receptacle, 30A, 125V	1
8	36153-G290501-00000	Grounding Terminal	1
9	36132-G030040-00000	L14-30R Receptacle, 30A, 250V	1
10	36163-G290010-00000	Receptacle Cover, 5-20R	2
11	36163-G240502-00000	Receptacle Cover, TT-30R	1
12	36163-G030050-00000	Receptacle Cover, L14-30R	1

WIRING DIAGRAM

