





## Safety Precautions

Before using the product, read the "Safety Precautions / Usage Precautions" carefully to use it correctly. In the text, precautions to prevent personal injury and equipment damage due to mishandling are indicated by symbols. The meaning of each symbol is as follows.

	<b>WARNING</b>	Failure to follow may result in death or severe injury
	<b>CAUTION</b>	Failure to follow may result in personal injury or property damage
		Mandatory (must be done)
		Prohibited (do not)



**WARNING**

## Power supply

### When using an AC adapter

- ❗ Use an AC adapter specified in "Specifications".  
Use an AC adapter that is certified in your region.

## Modification

- ⊘ Do not open the case or modify the product.



**CAUTION**

## Handling the product

- ❗ Do not drop, hit, or apply excessive force to the product.
- ❗ Be careful not to let foreign matter or liquid enter.

## Usage environment

- ⊘ Do not use the product in places where the temperature is extremely high or low.
- ⊘ Do not use near heat sources such as heaters and stoves.
- ⊘ Do not use in places where the humidity is extremely high or where water drops on the product.
- ⊘ Do not use in shaky places.
- ⊘ Do not use in sandy or dusty places.

## Handling the AC adapter

- ❗ Unplug the AC adapter when it will not be used for a long time or when it is thundering.

## Usage Precautions

### Maintenance

If the case gets dirty, wipe it with a dry soft cloth. If stains still remain, wipe the case with a tightly wrung damp cloth. If a rubber or silicone part gets dirty, wipe it with a soft, lint-free, damp cloth. Never use cleansers, waxes, or solvents such as alcohol, benzene, thinner, etc.

### About malfunctions

If any malfunction or abnormality occurs, immediately remove the AC adapter and connected cable.

Please contact the store where you purchased the product or us with the following information: product model number, serial number, specific symptoms of the malfunction or abnormality, as well as your name and telephone number.

## Precautions When Connecting

- Read the Axentrix A1 User's Guide carefully before connecting the Memory Footswitch A1-F.
- Be sure to use the included control cable to connect the Memory Footswitch A1-F to Axentrix A1.
- When connecting to Axentrix A1, turn off the power and turn down the volume of all devices to prevent malfunction and damage to speakers, etc.

## Warranty

If the main body malfunctions while being used in accordance with this user's guide and in a proper manner, we will repair or replace it free of charge within one year after the purchase.

To receive this warranty, present this written guarantee together with a certificate of purchase date (receipt, invoice, etc.). Receiving the warranty may be difficult if you do not present such evidence. Even within the warranty period, you will be charged for the following cases.

- Damage and malfunction due to impact or drop
- Damage and malfunction due to incorrect handling by the user
- Damage or malfunction due to improper disassembly or repair of the main body
- Discoloration, damage, or malfunction due to improper storage of the main body
- Damage and malfunction due to natural disasters such as earthquakes, fires, and floods

Keep this user's guide (warranty certificate) even after reading it.

Features

- A dedicated external footswitch designed with attention to detail for comfortable use of Axentrix A1
- Equipped with RECALL switches that can recall the sound setups memorized by Axentrix A1 with one push
- Switches illuminate to instantly tell Buffered Bypass, Instrument, and drive mode settings (when an AC adapter is connected)

Panel Descriptions

ON/OFF switch


Turns the effect on or off.  
Illumination color indicates as noted below.  
The illumination turns off in True Bypass.

● Buffered Bypass ● Guitar ● Bass

RECALL switch

Sound setups memorized by Axentrix A1 can be recalled.  
A sound setup can be recalled by simply depressing any of the M1 to M3 switches even when the effect is off.  
The illumination lights up in the color corresponding to the drive mode as noted below.

● Crunch ● Over Drive ● Distortion ● Fuzz

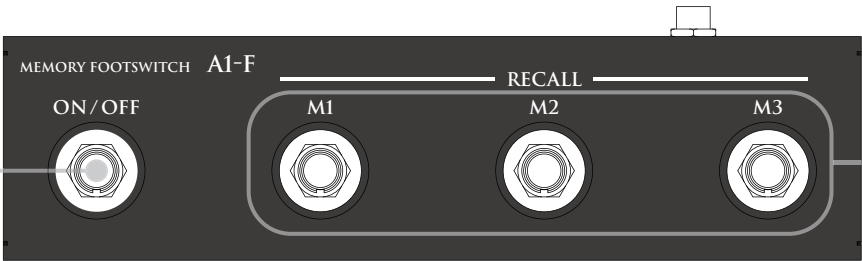

Top View




Rear View

CONTROL jack

Use the included control cable to connect the Memory Footswitch A1-F to Axentrix A1.  
The effect can be turned on/off and the sound setups memorized in M1 to M3 can be recalled.

DC IN jack

Connect a 9 V DC Regulated power supply.  
When an AC adapter is connected, the illumination of each switch lights up.  
The effect can be turned on/off and the RECALL switches can be operated even when an AC adapter is not used.

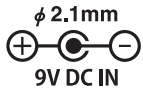

Specifications

Power supply	<b>AC adapter</b> Use an adapter with the following specifications. Rated voltage: 9 V (operating range 6 V to 14 V), Current capacity: 100 mA or more, Terminal: 2.1 mm dia. DC jack (center negative)
Dimensions	70 (D) x 230 (W) x 50 (H) mm
Weight	Approximately 500 g (excluding control cable)
Accessories	Control cable (1 pc.), User's guide

Download

This Memory Footswitch A1-F User's Guide and the Axentrix A1 User's Guide can be downloaded from the URL below.

<https://www.bixonic-sound.com/>

