



# SHARPER IMAGE®

## POWERBOOST® BOOTS



AIR COMPRESSION LEG MASSAGER

Please read all instructions and warnings prior to use. Keep this manual as it contains important information for future reference.

814100356

## WHAT YOU GET

- PowerBoost® Boots
- Control Unit
- Air Hose Extension
- Power Adapter with DC Jack

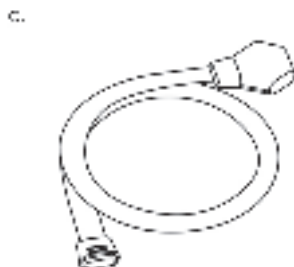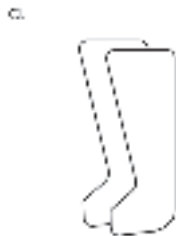

- Accessory type and quantity may vary depending on the model. •
- The images shown in this manual are for illustrative purposes only and may be subject to change. •


## THE FUTURE OF RECOVERY

### 01

Plug the control jack on the end of the power cord into the input port on the control unit.

Plug the power adapter into a wall outlet.

**Note:** Do not use the power adapter to charge or power other devices.

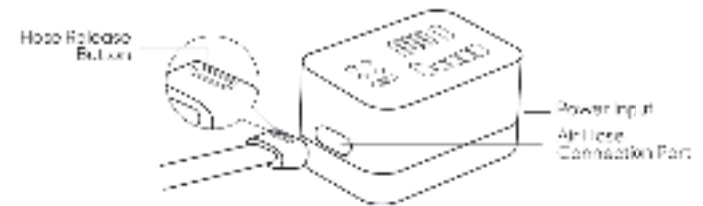

### 02

Wrap the boot in time you want to use for your massage. The boots are labeled L (left leg) and R (right leg).

Find a comfortable place to sit or recline with your legs extended for the duration of your massage and remove any footwear (wearing socks is recommended). Next, pull each boot over the corresponding leg and then sit the boot up all the way to the top of the zipper track.

Lock the zippers in place by flipping the zipper tabs down fully flat against the zipper track. The tabs should point toward the base of the boots. Failure to properly lock the zippers may cause the boots to open during inflation, reducing compression.

**IMPORTANT:** Never attempt to stand or walk while wearing the boots. The boots are intended for massage only. They are not designed for stability or mobility. Using the boots for purposes other than their intended use may damage the boots or result in personal injury.

### 03

**IMPORTANT:** Make sure the hose release button is facing upward when attaching with hose. Press hose connector into hose connector and slowly and firmly until it clicks securely into place.

To use both boots at the same time, plug the end of the air hose extension with a single connector into the air hose connection and on the other end. **Note:** connect both boots of hoses to the connection ports on the other end of the air hose extension.


To use a single boot, connect the hose on boot directly to the control unit or connect to the air hose extension. When using the air hose extension with a single boot, seal the unused connector with the blue plug located on the end of the connector, and secure the extension with the Sharper Image logo.

The air hose can be disconnected by pressing and holding release button while gently pulling the connector away from the narrow connector. Always grip the plastic connectors directly. Never pull or push using the hoses.


Air Hose Extension (Top View)



Air Hose Extension (Bottom View)

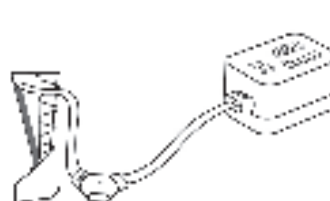

Single Boot Usage

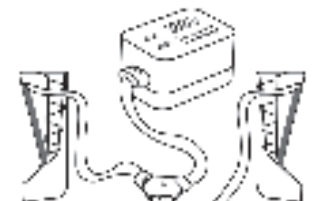

Both Boots Usage

To power on the massage, press and hold the power button. To power off the massage, press and hold the power button again.

Quick press the timer button after massage completion, pressing the timer button to increase the massage timer (add 20mins, 20mins, return to initial time)

Press the mode buttons to cycle through the 3 massage modes.


- Power (default) – full body massage and heat decompression.
- Gradual – zones each decompress sequentially and then all zones decompress sequentially – zones each decompress and decompress sequentially
- Zone – select up to 5 zones for targeted pulse massage
- Manual – select up to 5 zones and manually adjust decompression.

In zones mode or manual mode, make your compression area choice using the up/down and select buttons.

After all mode selections have been made, press and hold the select button to start your massage.

Quick press the decompression button to cycle through the 3 compression levels.

Quick press the power button during a massage to begin decompression. The massage will automatically power off after 3 minutes and the boots will be fully decompressed.

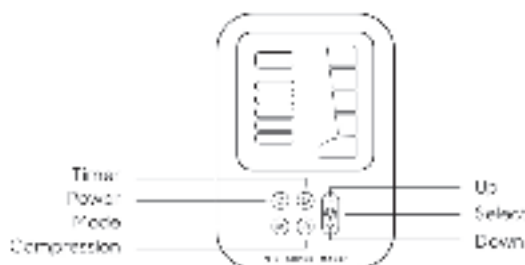

NOTE: The images shown here are for illustrative purposes only and may be subject to change, the actual descriptions of control panel and their locations may vary depending on the model.

## CARE INSTRUCTIONS

- Feet clean only. Do plug and ease with a damp cloth.
- Air dry only, never place in a dryer.
- Allow to dry fully before reusing. Do not use wet.
- Do not submerge in water.
- Do not use detergent or soap when cleaning.
- Hang the boots or lay them flat for long term storage.
- Never crumple or fold the boots.
- Do not use for a fully band any of the included boots.

## SAFETY WARNINGS

### PLEASE READ BEFORE USE

- Not a children's toy. Keep out of the reach of children.
- As with any massage, be using it regularly. That your comfort level and of each targeted area often, stop your massage immediately if you feel any increase in physical pain or discomfort.
- If you experience numbness, tingling or loss of sensation, stop your massage immediately. Feel gentle skin and wait until these symptoms pass.
- Do not fall asleep while using the massage.
- Do not use attachments of any kind other than those that may be included.
- Do not use this massage unit and when it is plugged into a power source.
- Do not expose to extreme temperatures or moisture.
- Keep away from sources of water and heated surfaces.
- Never touch the power cable or parts with wet hands.
- Do not use this device by yourself, outside, near or attached to.
- For indoor use only.
- This is only for use by adults. Do not use if the product appears worn, frayed, splintered, cracked, or broken in any manner. Do not use and discard immediately.
- This product is not intended to treat, cure, or prevent medical conditions.
- Do not use this device if you are pregnant or have an injury or illness. Consult your physician if you have a medical condition that may prevent safe use of this device.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

SHARP® IMAG™ NAME AND LOGOS (INCLUDING THE 77 LOGO, TOMORROW'S TOMORROW, AND POWERBOOST) ARE TRADEMARKS OR REGISTERED TRADEMARKS. © DISTRIBUTED BY AND © 2022 MFRCHSOURCE, LLC. ALL RIGHTS RESERVED.

PRINTED IN MEXICO

SC:12-17-2024 / Elbrd: J.M

OBP:N/A / SHNMDL: 1017189\_B

8 1 4 1 0 0 3 5 6

