

## **Remote Control**



Applicable model: ERF3C84H(1344)





### 1 Introduction

### 1.1 Scope

This document is to specify the technical specifications of Bluetooth Low Energy Remote Control Unit based on A624KO platform, which complies with Bluetooth V5.0 Low Energy Specifications. The unit is powered by 2x AAA Alkaline batteries with power consumption as low as 10uA in Sleep mode when it is not in use. RC can be waken up from Sleep mode and re-connected with Host device(Amazon Fire TV, OS 7.0) within 500ms, when any of the RC keys is pressed.

The following basic functions are supported in this Remote Control (RC) Unit:

- ◆ RC Keys(BLE+IR)
- ◆ Voice Control over BLE
- ◆ LED behavior
- ◆ Device Control System(DCS)
- ◆ Firmware OTA (Firmware upgraded Over the Air)

### 1.2 Power Supply:

◆ 2 x AAA Alkaline Batteries

### 1.3 Operating Conditions:

Operating Supply Voltage Range: 3.0V, 0.1A

◆ Operating Temperature Range: -5°C ~ +40°C

♦ Humidity: 45% ~ 85%

### 1.4 Bluetooth Profile:

◆ HID over GATT Profile (HOGP)

### 1.5 RF Frequency Band:

◆ 2.4GHz ISM Band (2400MHz ~ 2483.5MHz, 40 channels@ 2MHz step).

### 1.6 Bluetooth Specification:

◆ Comply with Bluetooth V4.2 Low Energy(BLE) Specifications.

### 1.7 Pairing:

◆ The BLE RC needs to be paired with Host Device (Amazon Fire TV) before it can be used. The details pairing procedures can be found in Section 2.11.

### 1.8 Operation modes:

RC can enter into either Normal Operation Mode or Sleep Mode.

- Under Normal Operation Mode, the RC is connected with Host Device and sends HID Key codes when a key or Voice Control operation is triggered.
- Under Sleep mode, as soon as the any of RC keys is pressed, the RC shall be waken up and re-connected with Host device within 500ms.



### 1.9 Unit Weight and Dimension

- ullet 49g $\pm$ 2g (Net Weight, excluding batteries)
- ♦ 38.16 x 158.03 x 17 mm

### 1.10 Hardware and Software Version:

♦ HW: PCB: RF565D-RTK-V3.5

• Out-of-box FW Ver. and Setting:

FW Ver.	SKUID	IRID	PID
Sunflower_FW18	0x0227	0x0001	0x0435

## 1.11 HW Specification

Feature	POR
Battery Type	2 AAA alkaline (replaceable)
Battery life time	More than 12 months
Dimensions	38.16 x 158.03 x 17 mm
Weight	$49\mathrm{g}\pm2\mathrm{g}$ (without batteries)
SoC chip	Realtek A624KO
Bluetooth	Bluetooth V5 Low Energy (BLE)
Voice	Single Mic (MSM38A3729Z8 or equivalent) + Near Field (push to talk)
Fire TV buttons	Power, Voice, Volume +, Volume - , Mute, D-Pad, Home, Back, Menu, PP/FF/RW, Guide, Prime Video, Mute, Channel Up, Channel Down
Host List	please refer to the host list
Content Partner Buttons	Netflix button, Prime Video, Disney+, Hulu(US)/Amazon Music(CA)
Certification	CE, BT Sig
LED	2 IR LED + 1 LED
РСВ	2-layer/FR4
SW	Sunflower_FW18
	- No PCR resin requirement, - material spec benchmark: ABS 758 Equivalent
Plastic Material	1. Requirments - UL94 Flame Class Compliance : HB (1.2mm ~ 6mm), HWI (1.5mm - 4, 3mm - 3, 6mm - 3),
	HAI 0 (1.5mm ~ 6mm), RTI Elec, Imp, Str (60) - ROHS Compliance
	2. Texture FH: MT11500, SPI-A2, Amazon Badge MF: MT11500 main surfaces, SPI-A2, Lens area, battery surround BC: MT11500, SPI-A2, Eject Icon



**Packaging** 

PE Bag / Carton box

### 1.12 REFERENCES

- 1. BS EN 60950-1:2006+A2:2013: Information technology equipment. Safety General requirements specifies requirements intended to reduce risks of fire, electric shock or injury for the OPERATOR and layman who may come into contact with the equipment and, where specifically stated, for a SERVICE PERSON.
- 2. ETSI EN 300 328 V1.8.1 (2012-06): Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband transmission systems; Data transmission equipment operating in the 2,4 GHz ISM band and using wide band modulation techniques; Harmonized EN covering the essential requirements of article 3.2 of the R&TTE Directive [Harmonized European Standard (Telecommunications series)]
- 3. FCC PART 15C- Intentional Radiators: American EMC Standard
- 4. IC RSS 247: Radio Standards Specification RSS-247, Issue 2, Digital Transmission Systems (DTSs), Frequency Hopping Systems (FHSs) and Licence-Exempt Local Area Network (LE-LAN) Devices
- 5. ETSI EN 300 328 V1.9.1 (2015-02):Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband transmission systems; Data transmission equipment operating in the 2,4 GHz ISM band and using wide band modulation techniques; Harmonized EN covering the essential requirements of article 3.2 of the R&TTE Directive.
- 6. ETSI EN 301 489-1 V1.9.2 (2011-09): Electromagnetic compatibility and Radio spectrum Matters (ERM); Electro Magnetic Compatibility (EMC) standard for radio equipment and services; Part 1: Common technical requirements.
- 7. ETSI EN 301 489-17 V2.2.1 (2012-09): Electromagnetic compatibility and Radio spectrum Matters (ERM); Electro Magnetic Compatibility (EMC) standard for radio equipment; Part 17: Specific conditions for Broadband Data Transmission Systems
- 8. Bluetooth Core Specification V4.0(30 June 2010)



## 2. Electrical Performance

SN	Test Item	Requirement	Test Condition
2.1	Control Distance(RF)	≥10m for Key operation ≥10m for Voice Control	Test in the shielded room. Use BT Dongle as HOST device, pairing with Remote Control (EUT). Tested with new 2x AAA batteries, or 3V DC supply. Press the key and observe the responses on the PC screen and LED blinking on BT dongle.
2.2	Operation Power Supply Range	DC 2.2V ~ 3.3V	All the main functions (Key, Voice) of RC should be operating correctly within the defined supply Voltage Range (DC power Supply Source).
2.3	Current Consumption in Power models	w 50uA (typical) @ Connected Idle (TV Session) w 2.5mA (Max) @ Short Button Press (BLE) w 22mA (Max) @ Voice Operation	RC is powered by 3V external DC power supply (connected through a $10\Omega$ resistor to simulate the internal impedance of battery), Measure the average power supply current with a multi-meter in each of the power model.
2.4	Current Consumption in Sleep Standby with host off	≤20uA	RC is powered by external 3V DC power supply (connected through a $10\Omega$ resistor to simulate the internal impedance of battery), Measure the average power supply current with a multi-meter in Sleep Standby(with host off)
2.5	IR Operating Distance: Transmission Level	Follow Amazon's Spec.:  1. ≥15µW/cm2 or >10m  2. ≥15µW/cm2 or >10m  3. ≥15µW/cm2 or >10m	Test over standard approved Fire TV:  1. Remote control maximum operating range at zero angle  2. Horizontal IR beam angle >30 Degrees (+/- 15 degrees from center)  3. Vertical beam angle > 30 Degrees ( 0 degrees to 30 degrees)
2.6	Contact Resistance	$\leq$ 2K $\Omega$ (between Input and Output ports of MCU.)	Press and hold any of the keys, and measure the resistance between Input and Output ports of the MCU.
2.7	Battery Life time	More than 12months	According to Amazon's defined battery modeling    Usage Cases



2.8	TX Power	-12dBm ≤TX Power ≤3dBm	◆ Test Method: Radiated method.
2.9	Initial Frequency error tolerance (f0)	-75KHz≤ f0≤75KHz	<ul> <li>◆ Test equipment: Lite Point 8852B.</li> <li>◆ Test channels:2402MHz, 2442MHz, 2480MHz.</li> </ul>
2.10	RX Sensitivity	≤-70dBm @BER=0.1%	<ul> <li>Test point: Feed point of Antenna and its matching network (Note: in mass production, the antenna and its matching network need to be kept connected for continuous production).</li> <li>■ TX test FUT (RE) transmits that a packets, Lite Point receives the packets and measure the RF performance.</li> <li>■ TX Sensitivity test: Te Point transmits data packets at a TX power of -70dBm, EUT (RC) receive the data packets and measure the BER via serial interface test points, BER shall not be more than 0.1%.</li> </ul>
2.11	Pairing Success Rate:	≥99%	To be tested in RF shielding room. RC is pairing with Host Device in a distance within 1 meter.  1) Virgin Pairing:  Pre-condition: RC is Virgin and Pairing table is empty;  On a Virgin RC, press "Home" key for 9s, the RC will enter into Advertising mode and execute pairing. A success Pairing can also be verified by RC controlling Host Device.  In case the pairing is unsuccessful, the RC will discard all the data during pairing, exit from Advertising mode, clear the pairing table and go back to the Virgin mode.  Repeat above procedures if another pairing is needed.  2) Re-Pairing:  Pre-condition: RC is paired with a Host Device before.  Press "LEFT+BACK+OPTION" combi-key for 12s, the RC will clear the old pairing table, and then enter into Advertising mode and execute pairing. A success Pairing can also be verified by RC controlling Host Device.  In case the pairing is unsuccessful, the RC will discard all the data during pairing, exit from Advertising mode, clear the pairing table and go back to the its original status. Repeat above procedures if another pairing is needed.



2.12	Timing of entering into Sleep mode	6-8 Minutes	For the STR mode, the required time is around 6-8 Minutes to get into STR mode and 8-10 second to wake up from STR mode.
2.13	Re-connection Time	≤ 4-5s	When RC is in Sleep Standby (with host off), triggering any key, RC shall be re-connected with Host Device within 4-5 s.
2.14	Voice Sensitivity@1KHz	≥-30dB	Tested in Anechoic Box, with BLE USB dongle and
2.15	Voice S/N@1KHz	≥ -30dB	Electro-Acoustic Testing System Software.
2.16	HD@1kHz	≤ 5%	
2.17	Connectivity KPI(RSSI)	Button press latency <kpi limit (300ms) with RSSI stronger than -90dBm.</kpi 	Testing at Neusoft connectivity testing lab required This chart is for the reference test:

## 3 EMC/EMI/ESD/Safety Certifications

SN	Certification/Test Item	Regulation Authorities	Regulation Standards
5.1	ESD	IEC / ETSI	<ul> <li>IEC 61000-4-2: 2008 / EN 61000-4-2: 2009</li> <li>Electromagnetic compatibility (EMC) – Part</li> <li>4-2: Testing and measurement techniques - Electrostatic discharge immunity test</li> <li>Air discharge: ± 4kV, ± 8kV, ± 15kV,</li> <li>Discharge Module: 150pF/330Ω.</li> <li>No functional failures and no parts should be damaged after tests.</li> </ul>
5.2	CE	ETSI	SAFETY: EN 62368-1:2018 Audio/video, information and communication technology equipment - Part 1: Safety requirements (or latest amendment) EN 62479 Assessment of the compliance of low power electronic and electrical equipment with the basic restrictions related to human exposure to electromagnetic fields (10 MHz to 300 GHz) (or latest amendment)  ERM/EMC:  ETSI EN 301 489-1 V2.1.1 (2017-02) Electro Magnetic  Compatibility (EMC) standard for radio equipment and services;



			Part 1: Common technical requirements;
			Harmonised Standard covering the essential requirements of article 3.1(b) of
			Directive 2014/53/EU and the essential requirements of article 6 of Directive
			2014/30/EU (or latest amendment)
			ETSI EN 301 489-17 V3.1.1 (2017-02) Electro Magnetic
			Compatibility (EMC) standard for radio equipment and services;
			Part 17: Specific conditions for Broadband Data Transmission Systems;
			Harmonised Standard covering the essential
			requirements of article 3.1(b) of Directive 2014/53/EU (or latest amendment)
			ETSI EN 300 328 V2.1.1 (2016-11) Wideband transmission systems;
			Data transmission equipment operating in the 2,4 GHz
			ISM band and using wide band modulation techniques;
			Harmonised Standard covering the essential requirements of article 3.2 of Directive
			2014/53/EU (or latest amendment)
5.3	BQB	Bluetooth SIG	Bluetooth V5.0 Low Energy Specifications

#### **Note:**

- ω The specific regulatory certifications depend on the individual region where the product will be marketed.
- ω The regulation standards could be changed at any time by different regulative authorities, so please check the details of newest official regulation standards at the beginning of each certification process.
- $\omega$  The Remote Control Unit must be labeled with the Approved ID numbers according to the specific requirement of individual regulation authorities.
- $\omega$  Declaration Statement of Conformity must be included in the user manual of Host end product according to the specific requirement of individual regulation authorities.



## 4 Appearance check

## **4.1 Checking Condition**


Part checking position

Checking angle Customer viewing position = front side

Light intensity : 600 - 1000 lux

Checking distance: 50cm within 10 seconds:

Requirement:

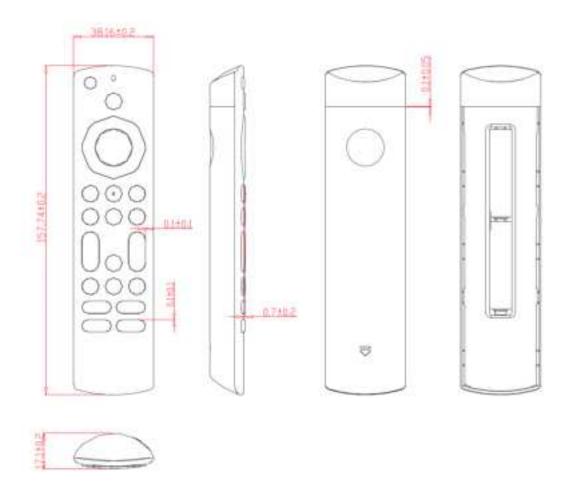

100% Visual inspection checking, Smooth at Foil edges

Finishing Defects in mm(=or less than)

The key symbol cannot offset more than 1°C horizontally or vertically.

The position of key symbol cannot offset more than 0.2mm horizontally or vertically.

\*Not more than 2 defects visible are allowed in one surface (viewing at 50 cm)

\*Distance between defects are allowed 50 mm (viewing at 50 cm)



## 5 Bluetooth RC(HID) Key code Table

序号 技罐名称	10004-0150	#I5h(NEC)			蓝牙	
	系统码	键值	Usage Page	Usage data	ERF3C84H(1344) V1.1	
1	Power	0270	0x46	07	Ox66	57
2	Alexa	0270	DxAG	OC .	0x0221	MIC
3	Up	0270	Dx48	07	0x52	1177
4	Down	027D	Ox4D	07	0x51	
5	Left	027D	CostE	07	0x50	
6	Right	027D	0x49	07	Ox4F	
7	OK (Select)	027D	Ox4A	07	0x58	
8	Back	027D	0x0D	07	0xF1	
9	Home	027D	Ox9F	OC.	0x0223	
10	Menu	027D	0x45	OC.	0x40	or:
11	Rewind	0270	0x16	DC:	0xB4	FR
12	Play/Pause	027D	0x58	OC:	0xCD	
13	Forward	027D	Dx17	OC.	0xB3	FF.
14	Volume+	027D	OxOC	DC .	0xE9	Vol+
15	Volume-	027D	0x19	OC:	0xEA	Voi-
16	Guide	027D	0x14	OC:	Ox8D	
17	Channel+	027D	0x0F	0C	0x9C	CH+
18	Channel-	027D	0x5A	00	0x90	CH-
19	Mute	0270	Ox4C	OC:	0xE2	Control
20	Settings	0270	0xC3	00	0x0242	
21	Recents.	027D	0xB1	OC.	0x02	Section of the Control of the Contro
22	PrimeVideo	0270	OxA1	09	OxA1	Partner Button 1
23	Netflix	0270	OxSF	09	0xA2	Partner Button 2
24	Disney+	0270	DxA4	09	0xA3	Partner Button 3
25	peacock	027D	0xA5	09	QxA4	Partner Button 4

Power			
	Alexa		
	Up		
Left	OK (Select)	Right	
	Down		
Back	Home		Menu
Rewind	Play/Pause		Forward
Volume+			Channel+
Volume-	Guide		Channel-
Mute	Settings		Recents
PrimeVideo			Netflix
Disney+			peacock



# **6 Printing and Button Color**





## 7. RC Operation

### 7.1 Demo mode and User mode

**7.1.1** The remote should by default work as the Demo mode. IR is working but the user cannot use the voice button.

7.1.2 If the user selects the "Demo Mode" from the first page of TV host, the remote will stay with IR mode.

**7.1.3** If the user selects the "Home Mode", if the remote is paired already, it will gets into the WIFI configuration directly. Otherwise, the user needs press "Home" key once or "Home" key for 9 seconds depends on the state to pair.

The Power key will stay the IR protocol when the TV is in the home mode,it will always send the IR code.

**7.1.4** Once it is paired, the host will get into the WIFI setting page.

#### 17.2 Pair

Press the Home button for 9 seconds, release the button, and the remote control begins to send broadcasting. After pairing with the host the remote control should be able to control the host.



#### BTW:

A: When you do the pairing, make sure that the host is turned on, and it is in pairing mode, and make the remote control to close the host as close as possible.

B: If the host is not paired with the host within 1 minutes, please check and confirm that the host side is in the pairing mode. After confirmation, repeat the A pairing operation.

**17.3 Unpair** Press the Left+ Back+Option button at the same time for 12 seconds, release the button, the remote

cleared the existing pairing information and begins to send a pair broadcast and enter into demo mode.





### 7.4 Voice

After pressing the voice button, the remote controller begins o transmit the voice.

(When using the voice function, you should try to keep the remote control MIC close to the sound source.)



### **FCC**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

### TC

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet émetteur ne doit pas être colocalisé ou fonctionner en conjonction avec une autre antenne ou un autre émetteur.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Le matériel a été évalué pour répondre aux exigences générales d'exposition aux radiofréquences.Le dispositif peut être utilisé dans des conditions d'exposition portables illimitées.