

EN

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

DE

Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE und EFFIZIENTEN SERVICE zu bieten!

FR

Avec votre évaluation inspirante, COSTWAY continuera à fournir une EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ et un SERVICE EFFICACE !

ES


Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS y SERVICIO EFICIENTE.

IT

Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti ESPERIENZA DI ACQUISTO FACILE, BUONI PRODOTTI e SERVIZIO EFFICIENTE!

PL


Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY i SPRAWNIEJSZĄ OBSŁUGĘ KLIENTA.

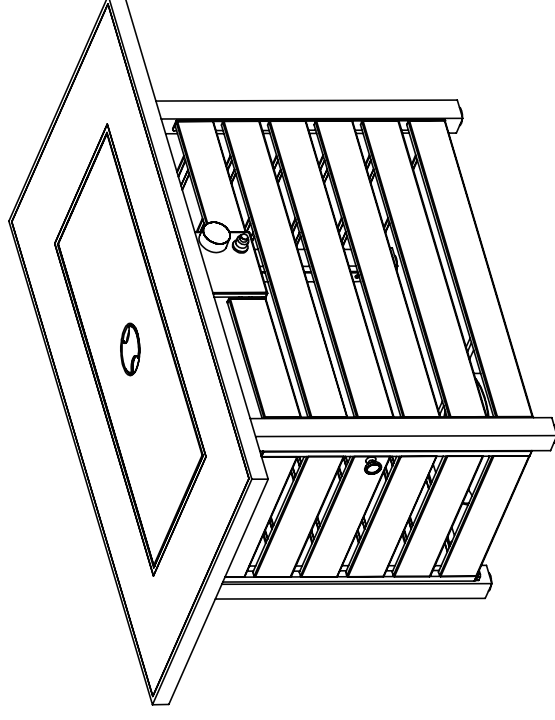

USER'S MANUAL

Fire Pit Table

US office: Fontana **UK** office: Ipswich **AU** office: Truganina
DE office: Hamburg **FR** office: Saint Vigor d'Ymonville **PL** office: Gdańsk

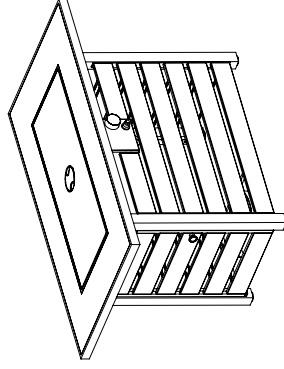

ANS Z21.97 • CSA 2.41-2017

Outdoor Decorative Gas Appliances

INSTALLER: Leave this manual with the appliance.
CONSUMER: Retain this manual for future reference

⚠ DANGER

FIRE OR EXPLOSION HAZARD

If you smell gas:

- Shut off gas to the appliance.
- Extinguish any open flame.
- If odor continues, leave the area immediately.
- After leaving the area, call your gas supplier or fire department.

Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.


⚠ WARNING: For Outdoor Use Only.

Installation and service must be performed by a qualified installer, service agency, or the gas supplier.

⚠ WARNING

Do not store or use gasoline, or other flammable vapors and liquids, in the vicinity of this or any other appliance.

An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

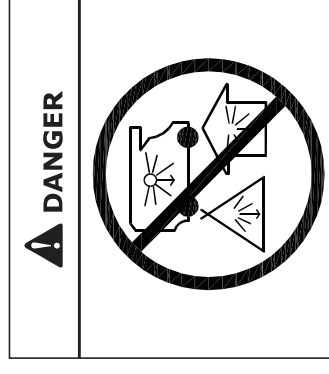

CARBON MONOXIDE HAZARD

This appliance can produce carbon monoxide which has no odor. Using it in an enclosed space can kill you. Never use this appliance in an enclosed space such as a camper, tent, car or home.

⚠ WARNING:

If the information in this manual is not followed exactly, a fire or explosion may result in causing property damage, personal injury, or loss of life.

IMPORTANT SAFETY INFORMATION

1. The installation must conform with local codes or, in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1 • NFPA 54; National Fuel Gas Code; Natural Gas and Propane Installation Code, CSA B149.1; or Propane Storage and Handling Code, CSA B149.2, as applicable.
2. The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psi (3.5 kPa).
3. The appliance area must be kept clear and free from combustible materials, gasoline, and other flammable vapors and liquids.
4. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control that has been under water.
5. Children and adults should be alerted to the hazards of high surface temperatures and should stay away to avoid burns or clothing ignition.
6. Young children should be carefully supervised when they are in the area of the appliance.
Clothing or other flammable materials should not be hung from the appliance or placed on or near the appliance.
7. Any guard or other protective device removed for servicing the appliance shall be replaced prior to operating the appliance.
8. Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required as necessary. It is imperative that the control compartment, burners, and circulating air passageways of the appliance are kept clean.
9. CAUTION: The propane gas pressure regulator provided with this appliance must be used. This regulator is set for an outlet pressure of 1.1 inches water column.


10. DO NOT burn solid fuels in this appliance.
11. This outdoor gas appliance is for Outdoor Use ONLY.
12. This outdoor gas appliance is not intended to be installed in or on recreational vehicles and/or boats.
13. This outdoor appliance is not for use on wood decks or other flammable surface.
14. Before each use of this gas appliance, open the door and/or the propane Tank Drawer and inspect the hose. If there is evidence of excessive abrasion or wear or if the hose is damaged, the hose assembly must be replaced prior to the appliance being put into operation. Use only the replacement hose assembly specified in this manual.
15. Make sure to perform a leak test.
16. Before each use of this gas appliance, inspect the burner. The burner must be replaced prior to the appliance being put into operation if it is evident that the burner is damaged. Use only the replacement burner specified in this manual.
17. Make sure to properly locate the gas hose including locating the hose out of pathways where people may trip over it or away from areas where the hose may be subject to accidental damage.
18. Keep the fuel supply hose away from any heated surface.
19. Never use this appliance closer than 10 feet from anything flammable, including houses or overhead tree branches.
20. Never use gasoline, kerosene, or any other liquid fuel to start a fire.
21. Always maintain a safe distance from the fire.
22. Always supervise children around the fire.
23. Never leave a fire unattended.
24. The appliance is hot during and after use, always allow ample cooling time before touching or moving.

IMPORTANT SAFETY INFORMATION ABOUT PROPANE GAS

1. The propane supply cylinder to be used must be constructed and marked in accordance with the U.S. Department of Transportation (D.O.T.) Specifications for propane cylinders, or the Standard for Cylinders, Spheres and Tubes for Transportation of Dangerous Goods and Commission, CAN/CSA-B339, as applicable.
2. The propane supply cylinder to be used must have a listed overfilling prevention device (See Figure 1).
3. The propane supply cylinder to be used must have a cylinder connection device compatible with the connection for the appliance.
4. A self-contained propane cylinder for use with this appliance must have a capacity of 20 lbs cylinder (Height approximately 18 in., Tank Body approximately 12 in. diameter, Base approximately 8 in. diameter).
5. The cylinder supply system must be arranged for vapor withdrawal.
6. The cylinder used must include a collar to protect the cylinder valve.
7. This appliance shall be used only outdoors in a well-ventilated space and shall not be used in a building, garage or any other enclosed space.
8. When this appliance is not in use, the gas must be turned off at the supply cylinder.
9. Storage of this appliance indoors is permissible only if the cylinder is disconnected and removed from the appliance.
- 10.Cylinders must be stored outdoors in a well-ventilated area out of the reach of children. Disconnected cylinders must have threaded valve plugs tightly installed and must not be stored in a building, garage or any other enclosed areas.
- 11.This appliance is certified by CSA (Canadian Standards Association) to ANS Z21.97 • CSA 2.41-2017, Outdoor Decorative Gas Appliances.

WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause cancer, and carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm.

For more information, go to:
www.P65Warnings.ca.gov.

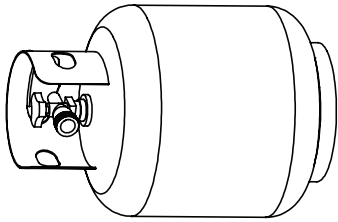


Standard 20 lb.tank
Figure 1

SPECIFICATIONS


Rated Heat Input (Liquid Propane & Natural Gas)	50,000 BTU/hr
Propane Regulator Pressure	11 inches water column
Natural Gas Inlet Pressure	7 inches water column
Clearance to combustible surfaces	Sides: 24in. (610mm), Top: 72in. (1829mm)

PACKAGE CONTENTS

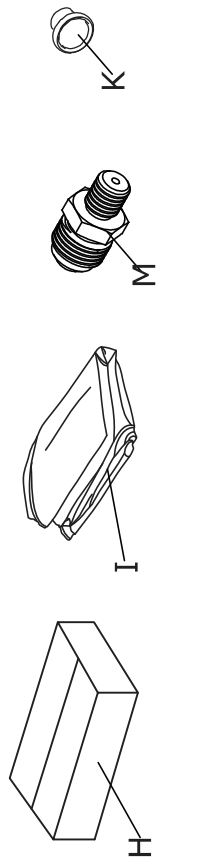

PART	DESCRIPTION	QUANTITY
A	Lid	1 pc
B	Table top assembly	1 pc
C	Right panel	1 pc
D	Front panel	1 pc
E	Door panel	1 pc
F	Back panel	1 pc
G	Gas cylinder support	1 pc
H	Lava rock	2 pack

PART	DESCRIPTION	QUANTITY
I	Weather cover	1 pc
M	Natural gas orifice	1 pc
N	Door handle	1 pc
AA	Bolt (M6 x 15)	16 pcs
BB	Washer (M6)	16 pcs
CC	Hex screw driver	1 pc
DD	Bolt (M4 x 10)	1 pc

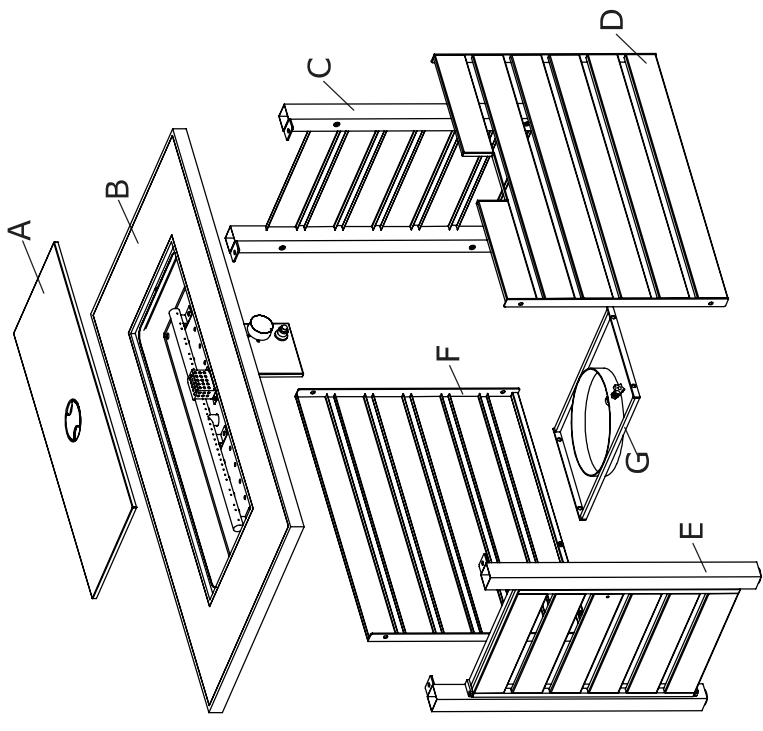

ASSEMBLY INSTRUCTIONS

- Carefully unpack all parts from the box, compare parts with package content listed above, make sure all parts are present before beginning assembly of product. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.
- Attach right panel (C) and door panel (E) to table top assembly (B) with bolts (AA) and washer (BB) by using hex screw driver (CC), (see Figure 2).

NOTE: DO NOT tighten the screws completely.

Hardware Used:			
AA	Bolts (M6 x 15)	x 4	
BB	Washer (M6)	x 4	
CC	Hex screw driver	x 1	

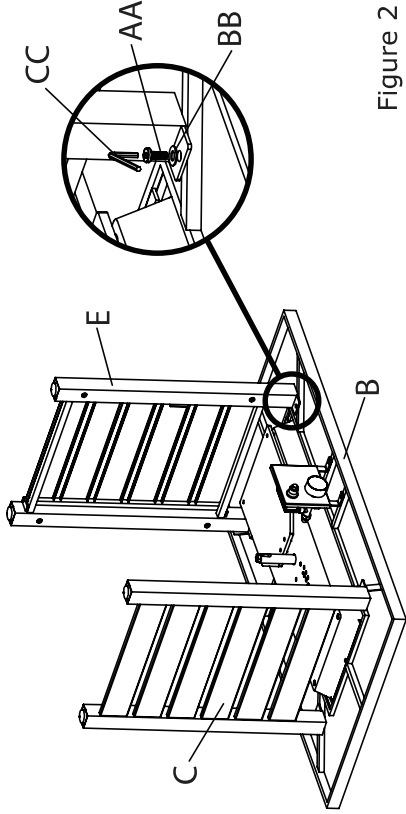


Figure 2

- Attach back panel (F) to right panel (C) and door panel (E) with bolts (AA) and washer (BB) using hex screw driver (CC), (see Figure 3).

NOTE: DO NOT tighten the screws completely.

Hardware Used:			
AA	Bolts (M6 x 15)	x 4	
BB	Washer (M6)	x 4	
CC	Hex screw driver	x 1	

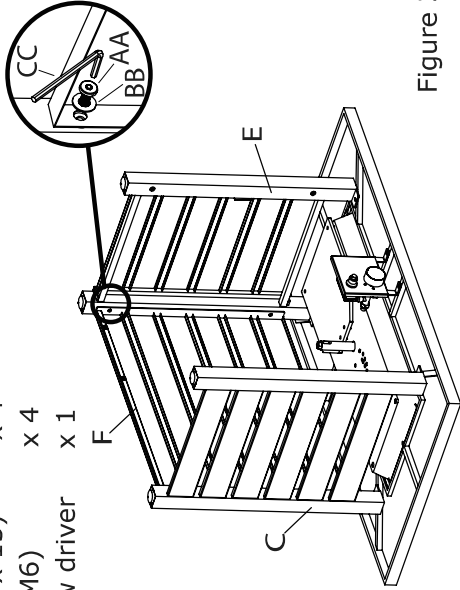


Figure 3

- Attach front panel (D) to right panel (C) and door panel (E) with bolts (AA) and washer (BB) using hex screw driver (CC), (see Figure 4).

NOTE: DO NOT tighten the screws completely.

Hardware Used:			
AA	Bolts (M6 x 15)	x 4	
BB	Washer (M6)	x 4	
CC	Hex screw driver	x 1	

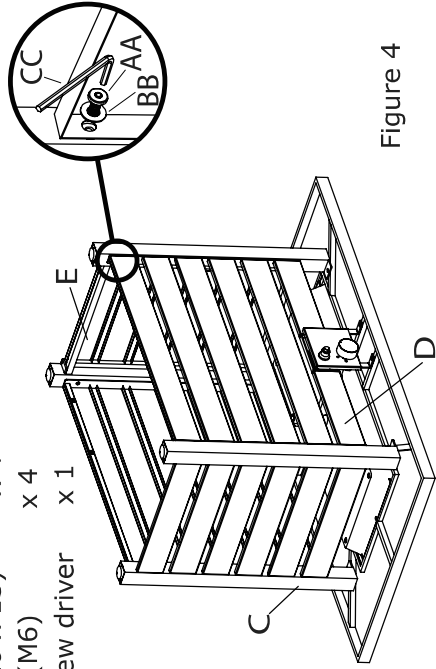


Figure 4

5. Attach gas cylinder support (G) to back panel (F) and front panel (D) with bolts (AA) and washer (BB) using hex screw driver (CC), (see Figure 5).

NOTE: DO NOT tighten the screws completely.

Hardware Used:

AA	Bolts (M6 x 15)	x 4
BB	Washer (M6)	x 4
CC	Hex screw driver	x 1

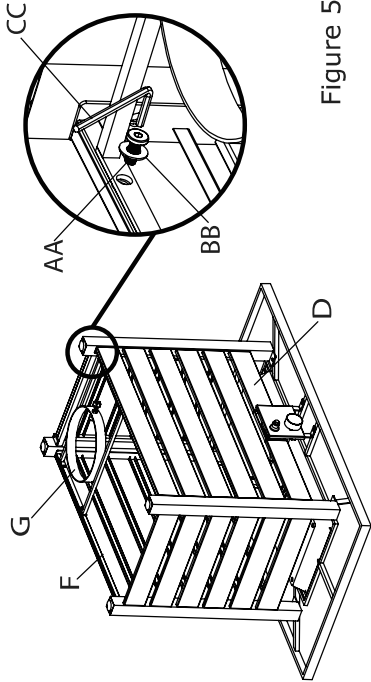


Figure 5

6. Attach the door handle (K) to the door panel (E) with the bolt (DD) using a Phillips screwdriver (NOT included), (see Figure 6).

Hardware Used:

DD	Bolt (M4 x 10)	x 1
----	----------------	-----

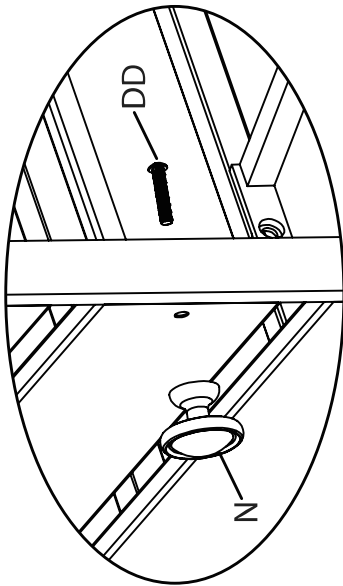


Figure 6

7. Open the box of lava rocks, put the lava rocks (K) into the fire bowl of the fire table, (see Figure 9). A gas fire pit requires 13.2 lbs lava rocks.

WARNING: Keep children away during assembly, as this item contains lava rocks, which are small pieces and can be swallowed by children.

NOTE: Leave the pilot box uncovered by the lava rock.

CAUTION: Please be advised that this fire pit is equipped with natural lava rock that may crackle or pop the first time it is used. The lava rock has been pre-heat treated to release any natural inherent moisture. However, in rare cases on first time use, the lava rock may pop or burst causing small pieces of hot rock to potentially be a projectile. These hot pieces could cause injury or property damage. As a precaution, please follow these instructions the first time the fire pit is used:

- (1). On first use, do not stand over or near the fire pit once lit.
- (2). Light the fire pit and let it run on high for 20 minutes.
- (3). Once lit, do not go within 12 feet of the fire pit for at least the first 20 minutes on the first use to ensure any residual moisture trapped in the rocks gets released.
- (4). After the first heating cycle, there is little further concern. It is rare that any cracking will happen on the first use, this is simply a precaution.
- (5). Keep lava rock covered and dry when not in use to prevent additional moisture from getting in the rocks.
- (6). If lava rocks are exposed to moisture after first use, run the burner on low to gradually warm and dry the rocks before repeating steps 1 through 3.



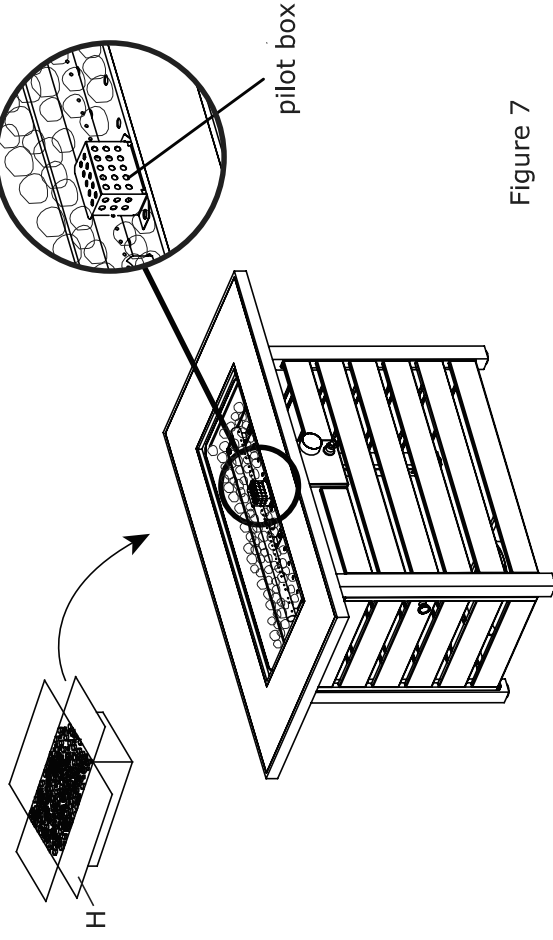


Figure 7

8. Open the door panel (E). Place the gas cylinder into the gas cylinder support (G) and connect the regulator by turning the black handle clockwise to tighten. To remove the regulator, turn the black handle counter-clockwise.

Secure the gas cylinder by tightening clockwise the retention point found on gas cylinder support (G), (see Figure 8), so that the gas cylinder cannot move from side to side or fall down. The knob on the control panel is turned all the way to the "OFF" position when the fire pit is NOT in use.

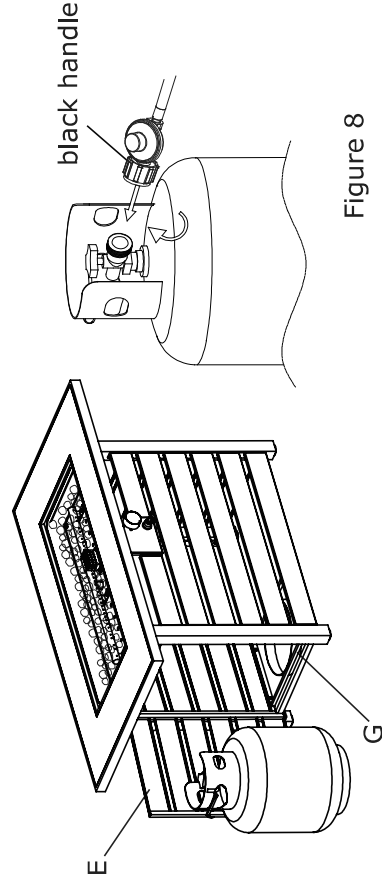


Figure 8

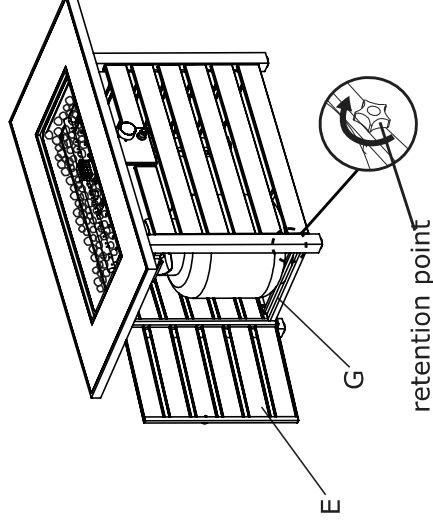


Figure 8

9. Once the firepit has cooled completely after use, carefully place the lid (A) onto the fire bowl and use the weather cover (I) to protect your fire pit from the elements (see Figure 9).

WARNING: Allow 30 minutes after use for fire pit to cool down before placing the lid to prevent scalding.

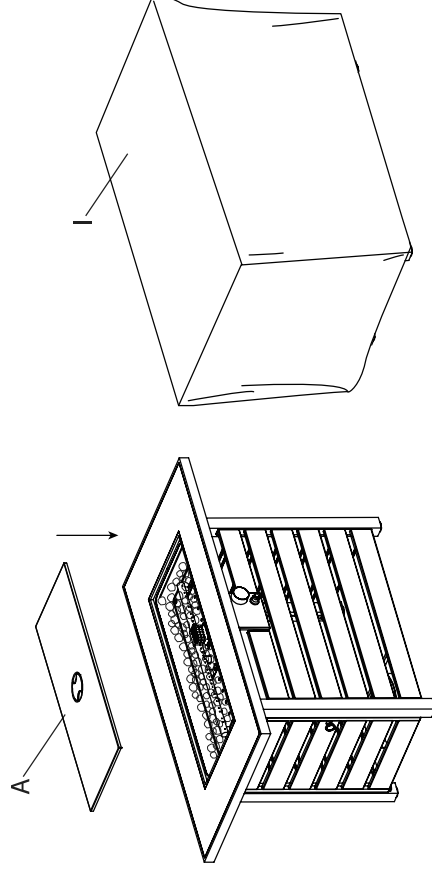


Figure 9

STOP

NATURAL GAS CONVERSION

STOP

Natural gas conversion must be performed only by natural gas provider or a service company.

1. Disconnect the propane hose from the gas valve (see Figure 10).

Caution: The propane tank shall be shut off prior to disconnecting the propane hose, before proceeding with the conversion.

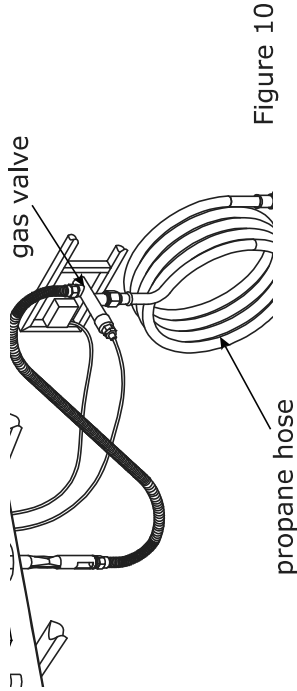


Figure 10

2. Unscrew and disconnect the propane orifice from the bellows (see Figure 11). Propane orifice (2.21 mm diameter size) is painted with red mark.

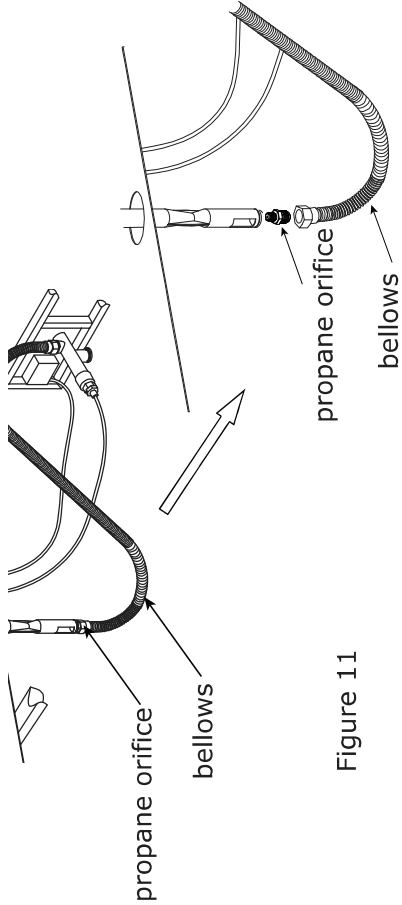


Figure 11

3. Replace the propane orifice with the natural gas orifice and screw the natural gas orifice to the bellows tightly.

Then connect and tighten the natural gas orifice to the inlet tube

(see Figure 12). The Natural gas orifice (4.18 mm diameter size) is painted with a black mark.

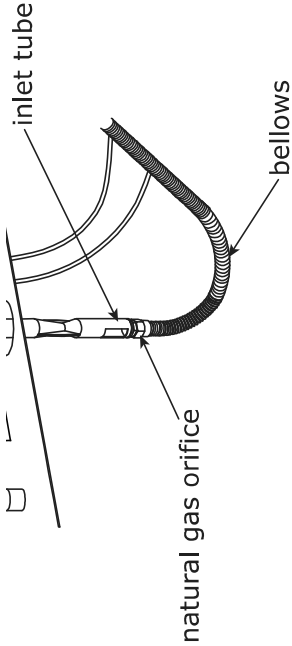


Figure 12

4. Connect the natural gas hose to the gas valve by screwing clockwise tightly (see Figure 13). Plug the natural gas fixture into the natural gas supply system (see Figure 14). The conversion kit should be CSA certified. Below are several suggested CSA certified conversion kits for your reference.

(1). Part# DH22 / QH1, manufacturer: KSUN

or (2). Part# WH02 / KJ50A2, manufacturer: Laité

or (3). Part# KJ-3/8G-3/8 / KJ-3/8G, manufacturer: Wanan

The natural gas orifice is included in the package. Please follow the instructions for gas conversion.

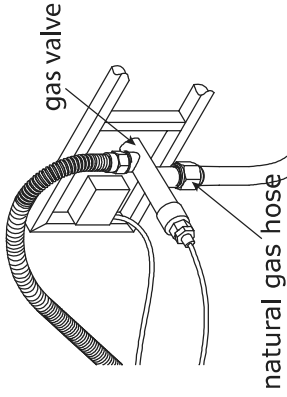


Figure 13

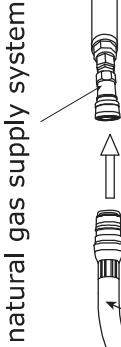


Figure 14

5. Stick and cover the conversion label onto the propane rating plate (see Figure 17).

WARNING: This conversion kit shall be installed by a qualified service agency in accordance with the manufacturer's instructions and all applicable codes and requirements of the Authority Having Jurisdiction.

If the information in these instructions is not followed exactly, a fire, explosion or production of carbon monoxide may result in causing property damage, personal injury or loss of life. The qualified service agency is responsible for the proper installation of this kit. The installation is not proper and complete until the operation of the converted appliance is checked as specified in the manufacturer's instructions supplied with the kit.

conversion label

GOPLUS CORP
11250 poplar Ave,
Fontana, CA 92337

Serial No: _____
Model No: _____

CAUTION: This appliance has been converted to use natural gas. Propane orifice dia 2.27 mm.
Natural Gas Pressure: 7.0 in. WC (0.175 PSI)
Water column (1.74 kPa).
This appliance was converted on _____ (date) by _____ (signature)
(name and address of organization making the conversion), which accepts the responsibility that this conversion has been properly made.

Minimum Clearance From Unit To Combustible Construction: 72" (192.9cm) from the top.
For Outdoor Use Only. If Stored Indoors, Detach and Leave Cylinder Outdoors.
The gas supply must be turned off at the LP-gas supply cylinder when this appliance is not in use.

WARNING: Improper installation, adjustment, repair or maintenance can cause property damage, personal injury or loss of life. Read and follow all warnings and instructions before assembling and using the appliance. Removal of this marking will void compliance with standard ANSI Z21.97-2017 - CSA 2.41-2017.
Do not connect to a remote gas supply.

WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury, or loss of life.

WARNING: Placing the cylinder too close to the appliance might cause the fire hazard or property loss or personal injury.

WARNING: This manual contains important information necessary for the proper assembly and safe use of the appliance. Read and follow all warnings and instructions before assembling and using the appliance. If it is missing or damaged, or you need help with assembly, please do not hesitate to contact our customer service email us at csa-us@go-plus.com

SAFETY
240001

⚠ DANGER

CARBON MONOXIDE HAZARD
This appliance can produce carbon monoxide which has no odor. Using it in an enclosed space can kill you. Never use this appliance in an enclosed space such as a camper, tent, car or home.

propane rating plate

Figure 15

BATTERY

Make sure the control knob is in the "OFF" position. Unscrew the push button cap on the ignitor module located on the control panel to access the battery compartment. The ignitor module requires one AAA size battery, (see Figure 16).
BATTERY IS NOT INCLUDED.

WARNING:

- 1. Please observe proper polarity and use the correct battery type when installing or replacing the battery. Improper installation could result in ignition failure.
- 2. Please remove the battery if consumed or if product is to be left unused for a long period of time.

LIGHTING INSTRUCTIONS

1. Push in gas control knob slightly and turn to "OFF".
2. Turn gas control knob to "ON/MIN".
3. Push in gas control knob all the way and hold. Continue to press the ignition button for 15 seconds.
4. If the burner does not light in 15 seconds, release the knob and it will pop back out. Wait 5 minutes before attempting to light the burner again, repeat step 1 to 3.

TO TURN OFF GAS

1. Push in gas control knob slightly and turn to "OFF".

INSTRUCCIONES DE ENCENDIDO

1. Presione ligeramente la perilla de control del gas y gírela a la posición "APG" (apagado).
2. Gire la perilla de control del gas a "ENC/MIN" (encendido/mínimo).
3. Presione la perilla de control del gas hasta al fondo y manténgala presionada. Siga presionando el botón de encendido durante 15 segundos.
4. Si el quemador no se enciende en 15 segundos, suelte la perilla y esta volverá a su posición hacia afuera. Espere 5 minutos antes de intentar encender el quemador nuevamente, repita los pasos 1 al 3.

PARA CERRAR EL GAS

1. Presione ligeramente la perilla de control del gas y gírela a la posición "APG" (apagado).

OFF (APG.)

ON/MIN (ENC./MIN.)

MAX (MAX.)

IGNITOR
(Encendedor)


1 AAA
1.5V

Figure 16

LEAK TEST

To prevent fire or explosion hazard when testing for a leak:


1. Always perform the leak test as described below before lighting this appliance or each time the cylinder is connected for use.
2. Do not smoke or allow other sources of ignition in the area while conducting a leak test.
3. Conduct the leak test outdoors in a well-ventilated area.
4. Do not use matches, lighters or a flame to check for leaks.
5. Do not use this appliance until any and all leaks are corrected. If you are unable to stop a leak, disconnect the propane supply and call a gas appliance service shop or your local propane gas supplier.

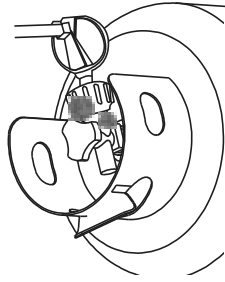


cylinder / regulator connection (Figure 17)




natural gas fixture / natural gas supply system connection (Figure 18)

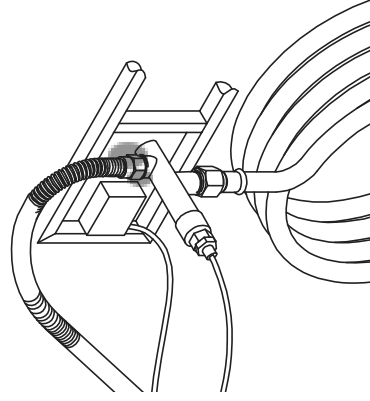

gas valve / bellows connection (Figure 19)

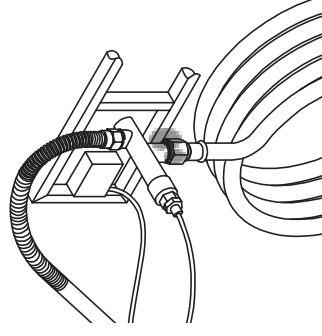

gas valve / regulator hose connection (Figure 20)

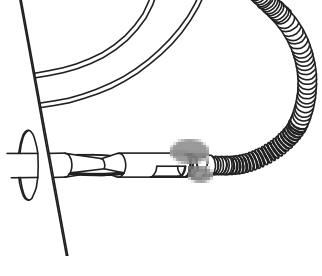

inlet tube / bellows connection (Figure 21)

To perform a leak test:

1. Make 2~3 oz. of leak solution by mixing one part liquid dishwasher detergent and three parts water. Noted: make sure control knob is "OFF".
2. Apply several drops of solution where the cylinder attaches to regulator, (see Figure 17), inspect the solution at the connection looking for bubbles. If NO bubbles appear, the connection is secure. If bubbles appear, the connection has the leak, disconnect the regulator, reconnect, perform another leak check. If you continue to see bubbles after several attempts, cylinder valve is defective and should be returned to cylinder's supplier.
3. Apply several drops of solution where natural gas fixture attaches to natural gas supply system connection (see Figure 18), If NO bubbles appear, the connections are secure. If bubbles appear, the connection has the leak, disconnect, reconnect, perform another leak check. If you continue to see bubbles after several attempts, the conversion hose is defective and should replace with a new one.
4. Apply several drops of solution where gas valve attaches to bellows, (see Figure 19), where gas valve attaches to regulator hose, (see Figure 20), and where inlet tube attaches to bellows, (see Figure 21). If NO bubbles appear, the connections are secure. If bubbles appear, the connection has the leak, disconnect, reconnect, perform another leak check. If you continue to see bubbles after several attempts, both parts are defective and should be replaced with the new ones.

LIGHTING INSTRUCTIONS

1. Push in gas control knob slightly and turn to "OFF".
2. Turn gas control knob to "ON/MIN".
3. Push in gas control knob all the way and hold. Continue to press the ignition button for 15 seconds.
4. If the burner does not light in 15 seconds, release the knob and it will pop back out. Wait 5 minutes before attempting to light the burner again and repeat step 1 to 3.

TO TURN OFF GAS

1. Push in gas control knob slightly and turn to "OFF".

WARNING: For your safety, read and follow the Lighting Instructions in this manual and in the Rating Plate on the appliance. IMPROPER LIGHTING PROCEDURES COULD RESULT IN A FIRE HAZARD OR EXPLOSION HAZARD OR PROPERTY DAMAGE, INJURY OR LOSS OF LIFE.

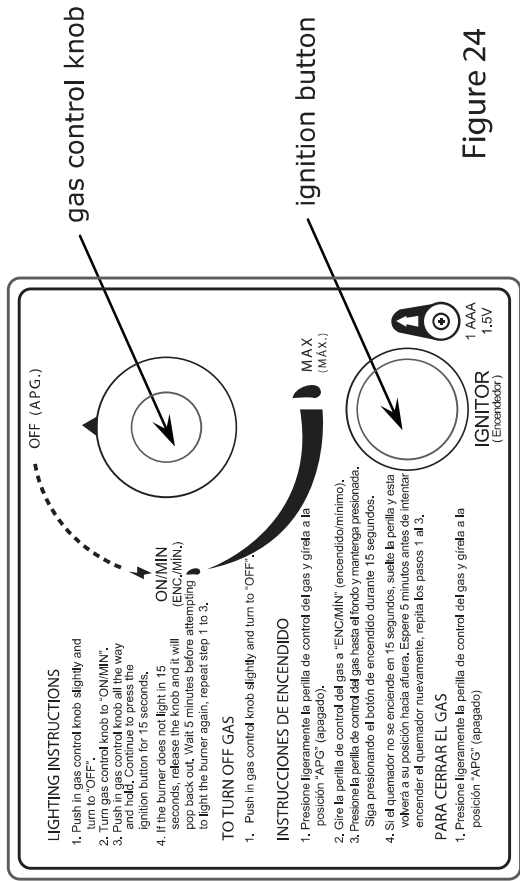


Figure 24

Observe Flame Height When Lit: The burner will display blue and yellow flames. These flames should be a blue / yellow color between 1~2 in. height, (see Figure 23). These flames should not be yellow or produce thick smoke. This would indicate an obstruction of airflow through the burners. The flames should be blue with straight yellow tops.

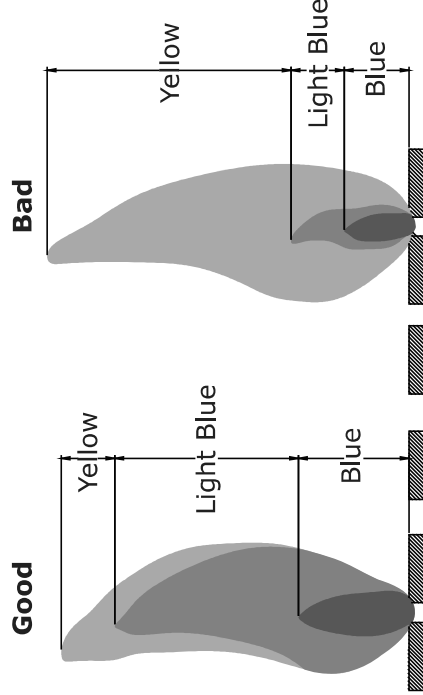


Figure 23

CARE AND MAINTENANCE

To enjoy the outstanding performance from your fire pit, make sure you perform the following activities on a regular basis:

1. Use warm soapy water for cleaning. Never use flammable or corrosive cleaning agents.
2. While cleaning the fire pit, make sure to keep the area around the burner dry at all times. DO NOT submerge the control valve assembly. If the gas control is submerged in water, DO NOT use it. It must be replaced.
3. Air flow must be unobstructed. Keep controls, burner, and circulating air passageways clean. Signs of possible blockage include:
 - (1). Gas odor with extreme yellow tipping of flame.
 - (2). Fire pit does NOT reach the desired temperature.
 - (3). Fire pit flame is excessively uneven.
 - (4). Fire pit makes popping noises.
 - (5). Spiders and insects can nest in burner or orifice. This dangerous condition can damage fire pit and render it unsafe for use. Clean burner holes by using a heavy-duty pipe cleaner.
4. Compressed air may help clear away small particles. Carbon deposits may create a fire hazard. Clean burner with warm soapy water if any carbon deposits develop.
5. Cover your fire pit with an outdoor weather cover when not in use to protect it from the elements.

NOTE: Always allow fire pit to cool COMPLETELY before you cover the fire pit with an outdoor weather cover or you attempt to service or perform maintenance.

REPLACEMENT PARTS LIST

NO	PART#	DESCRIPTION
A	PF-FIREPIT-LID710	Firepit rectangular lid, 710mm x 300mm x 9mm
B	F210112-B	Table top assembly
C	F210112-C	Right panel
D	F210112-D	Front panel
E	F210112-E	Door panel
F	F210112-F	Back panel
G	F210112-G	Gas cylinder support
H	PF-FIREPIT-ROCK-132	Firepit lava rock (red)
I	F210112-I	Weather cover
J	PF-FIREPIT-GAS-418	Firepit orifice nature gas for 50000 BTU
K	PF-FIREPIT-ET-HDL	Firepit door handle ET
	PF-FIREPIT-GV	Firepit gas valve
	PF-FIREPIT-PI	Firepit pulse ignition
	PF-FIREPIT-KNOB-ET-L	Firepit control knob ET, large #6
	PF-FIREPIT-TC-10	Firepit thermocouple, 250 mm/10"
	PF-FIREPIT-ET-S-W12	Firepit electrode 3" tip, wire 300 mm for 40000, 50000 BTU
	PF-FIREPIT-LVL-ET-32	Firepit foot leveler 03, 32 x 23 mm
	PF-FIREPIT-R180H14	Firepit regulator 180 degree hose 350 mm/14"