


LITEMONS

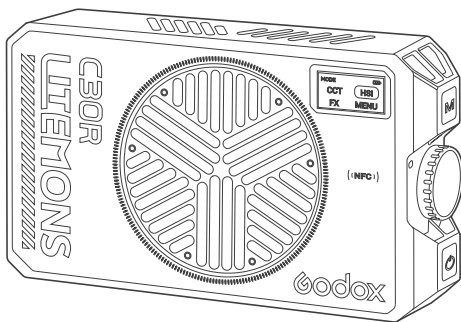

C30R

光小兽全彩 LED 摄影面板灯
Litemons Full Color LED Video Light Panel

使用手册
Instruction Manual

V1.0

重要安全须知与注意事项

使用前请务必完整阅读并理解产品说明书，严格遵循安全操作指南。未按规范操作可能导致以下风险：人身伤亡、设备损坏或财产损失。



危险

- 本产品为摄影灯具，禁止儿童使用。当儿童靠近时，家长或监护人必须密切监督，以免儿童因碰撞灯具或私用灯具造成人身伤害。
- 本产品并非普通照明灯具，不可用于普通照明，任何有过眼部损伤或眼部敏感的人群均应避免使用本灯具。灯具点亮时，任何情况下均禁止直视灯珠，应该在专业灯光师指导下使用强光，任何情况下避免长时间处于强光环境，如引起眼睛不适，请及时关闭灯具，暂停使用，及时就医。
- 灯具点亮时，必须小心使用，禁止接触高温部件，如 LED 灯珠，避免造成灼伤。
- 禁止使用损坏的产品。产品在使用过程中，因跌落、受到挤压或遭受强烈冲击而造成外壳破裂，请勿继续使用，以免因接触到内部电子元件而受到电击伤害。
- 请勿私自拆卸产品，如产品出现故障，须由本公司或授权的维修人员进行检查维修。如灯珠损坏或因热变形，应停止使用，并及时联系制造商、服务代理商维修灯珠，以免发生意外。
- 请勿在易爆环境中（酒精、汽油等易燃挥发性溶剂或甲烷、乙烷等气体附近）使用和存放本产品。
- 产品在运行期间和运行后，灯头与用户、其他人员、热敏和可燃材料之间的距离必须随时保持至少 1 米以上。



警告

- 部分产品无防水性能，此类产品请让其保持干燥，禁止浸入水中或其他液体中，安装时需干燥且通风处，避免在雨天、潮湿、多尘或过热环境下使用。请勿将任何物体置于灯具上或使液体流入灯具内部，以免发生意外。
- 不能阻挡、覆盖产品散热口。
- 使用后，产品完全冷切后才能包装。
- 部分产品内置锂电池，此类产品请使用专用的充电器进行充电，并且按正确的操作说明，在规定的电压、温度范围内使用。

小心

- 使用产品前，必须拆除所有运输包装材料和保护装置。
- 不使用产品时，请及时关机和停止供电。
- 请务必经常清洁灯珠玻璃并使其保持干净，玻璃如粘上蚊虫尸体或深色有机物污渍，可能引起玻璃炸裂。清洁本产品时，请勿用湿布擦拭，请用干燥的软布擦拭产品污垢。
- 安全说明依据本厂严格测试制定，产品设计和规格如有变更，恕不另行通知。客户可以登录神牛官网查看最新的电子版说明，了解产品最新资讯。

请勿直视光源


前言

感谢您购买神牛产品！


神牛全新推出全彩 LED 摄影面板灯 C30R，内置彩光调节，拓宽 1800K-10000K 色温，14 类 FX 特效，是一款外观精巧的口袋式 LED 补光灯；适用于漫展拍摄，机头补光，美食探店，Vlog 补光等场景。

部件名称

1. 灯珠
2. 1/4 " 螺孔
3. USB-C 接口
4. 开关按键
5. 调节旋钮 (旋转 / 短按)
6. 模式按键

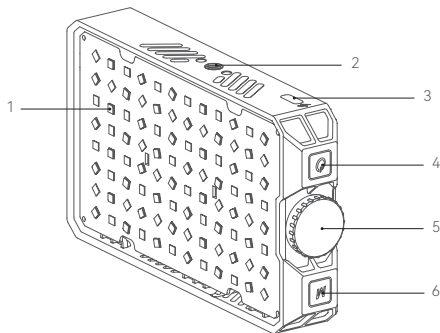

7. 显示屏
8. NFC 感应区

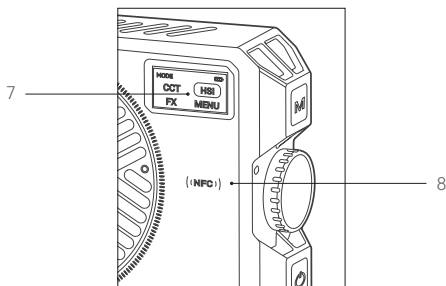

物品清单



灯体 × 1



充电线 × 1



磁吸菲涅尔透镜
MF01 × 1



硅胶柔光罩
× 1



说明书 × 1

温馨提示：说明书中线图均为示意图，仅供参考。

由于产品不断更迭与升级，产品实物与线图可能存在差异，请以实物为准。

另购附件

硅胶半球柔光罩 Do01、扩散板 MD01

安装方法

支架：1/4 " 螺孔对准另购支架上的螺丝，顺时针旋转锁紧即可。

磁吸附件：将磁吸附件吸附于灯珠面即可。

电源管理

开机：长按开关按键显示屏出现 <  > 后旋转调节旋钮进入主界面。

关机：再次长按开关按键，显示屏熄灭。

充电：使用标配充电线插入灯体 USB-C 接口，接入电源后可进行充电。

模式 / 菜单设置

短按模式按键并旋转调节旋钮可选图中任意一种模式，短按调节旋钮进入该模式的具体设置。通过旋转调节旋钮选择参数组，选中后短按并旋转调节旋钮设置该组参数值，设置完毕短按模式按键返回上一级。



CCT 模式

选中 CCT 后短按调节旋钮进入该模式，可选亮度 / 色温 / 绿品。

亮度范围：0% ~ 100%

色温范围：1800K ~ 10000K

绿品范围：-50% ~ +50%



HSI 模式

选中 HSI 后短按调节旋钮进入该模式，可选亮度 / 色相 / 饱和度。

亮度范围：0% ~ 100%




色相范围: $0^{\circ} \sim 360^{\circ}$

饱和度范围: $0\% \sim 100\%$

特效模式

选中特效后短按调节旋钮进入该模式, 可选以下 14 类特效, 短按调节旋钮进入某一类特效的具体设置。



光效	亮度	类型	色温 / 色相	速度	其他
闪光灯	0% -100%	CCT/HSI	1800K-10000K /0-360°	1-100	模式: 闪光灯 / 镁光灯 触发: 自动 / 手动
雷闪电		×	1800K-10000K	×	闪烁次数: 随机 /1-10 频率: 随机 /2-20 触发: 自动 / 手动
多云		×	×	随机 /1-100	亮暗比例: 30%-90%
坏灯泡		CCT/HSI	1800K-10000K /0-360°	1-100	×
电视机		CCT/HSI	×	1-100	×
蜡烛		×	×	1-100	×
火		×	×	1-100	×
烟花		×	×	1-100	余烬: 1-100
爆炸		CCT/HSI	1800K-10000K /0-360°	1-100	余烬: 1-100 触发: 自动 / 手动
焊接		CCT/HSI	1800K-10000K /0-360°	1-100	×
警车		红 + 蓝、红、蓝、蓝 + 白、蓝 + 黄、黄、红 + 白 + 蓝、红 + 黄 + 蓝	×	×	模式: 1-5
SOS		CCT/HSI	1800K-10000K /0-360°	×	×
彩光循环		×	×	1-100	饱和度: 0%-100%
派对		×	×	1-100	饱和度: 0%-100%

注: 根据需求旋转调节旋钮设置当前参数值, 设置完毕后短按并旋转调节旋钮可跳入下一栏参数进行设置; 选中手动时, 通过短按一次调节旋钮触发一次该光效; 某个特效设置完毕后短按模式按键返回上一级。

菜单设置

选中菜单后短按调节旋钮进入设置，旋转并短按调节旋钮可进入以下任意一项的设置，设置完毕短按模式按键返回上一级。



蓝牙

短按调节旋钮进入蓝牙，通过短按并旋转调节旋钮设置开启或关闭，如需重置，旋转调节旋钮到重置栏，短按调节旋钮选择取消或确定，选定后短按调节旋钮完成设置；下方查看蓝牙 MAC 码，方便查找灯具。



防误触

短按调节旋钮进入防误触，通过旋转调节旋钮选择开机方式，选定后短按调节旋钮完成设置。

关闭：长按开关按键进入主界面

开启：长按开关按键后旋转调节旋钮进入主界面



过热保护

短按调节旋钮进入过热保护，通过旋转调节旋钮选择触发过热保护后的灯具状态，选定后短按调节旋钮完成设置。

降低最大功率：灯具亮度自动降低且无法增加，待温度下降后可手动增加。

灭灯：灯具亮度自动关闭，待温度下降后自动恢复。



风扇

短按调节旋钮进入风扇，通过旋转调节旋钮可选静音 / 自动 / 中速 / 高速，选定后短按调节旋钮完成设置。



语言

短按调节旋钮进入语言，通过旋转调节旋钮可选简体中文 / English，选定后短按调节旋钮完成设置。



版本与升级

短按调节旋钮进入版本与升级，此界面可查看升级提示。



“Godox Light”app 固件升级

手机中打开 Godox Light，进入其中一个场景，点击 +（添加设备），设备添加完成后，点击 < : > 延伸出多项设置，再选择固件升级即可。



恢复出厂设置

短按调节旋钮进入恢复出厂设置，通过旋转调节旋钮可选确定 / 取消；短按调节旋钮确定恢复出厂，灯具自动重启，界面出现简体中文和 English 选项，设置需要的语言后灯体亮度值自动变为 100%。



灯具信息

短按调节旋钮进入灯具信息，此界面可查看当前设备的基础信息。



NFC 加灯

通过手机 NFC 功能与灯具 NFC 芯片相互通信后完成快速添加灯具到【Godox light】App 中。

1、前置条件：灯具支持 NFC 添加、【Godox light】App 版本 V3.2.4 以上、手机开启蓝牙和 NFC 功能。

2、使用方法：前置条件成立情况下，打开【Godox light】进入对应场景中，点击【+】选择【NFC 加灯】功能，进入【NFC 添加设备】页面将手机 NFC 感应区靠近灯具感应区即可完成加灯，支持多灯添加。

注意：Android 系统直接靠近感应加灯，iOS 需点击右上角（）图标后出现弹窗感应加灯。

照度数据

色温	测试条件	照度单位	0.5m	1m
1800K	裸灯	lux	1020	263
		fc	95	24
	搭配磁吸菲涅尔透镜 MF01	lux	1390	357
		fc	129	33
	搭配硅胶柔光罩	lux	577	136
		fc	54	13
2800K	裸灯	lux	3320	860
		fc	308	80
	搭配磁吸菲涅尔透镜 MF01	lux	4520	1170
		fc	420	108
	搭配硅胶柔光罩	lux	1840	441
		fc	171	41
3200K	裸灯	lux	3310	860
		fc	307	80
	搭配磁吸菲涅尔透镜 MF01	lux	4580	1170
		fc	425	108
	搭配硅胶柔光罩	lux	1840	447
		fc	171	42
4300K	裸灯	lux	3470	901
		fc	322	84
	搭配磁吸菲涅尔透镜 MF01	lux	4830	1230
		fc	449	114
	搭配硅胶柔光罩	lux	1940	470
		fc	180	44
5600K	裸灯	lux	3700	960
		fc	344	89
	搭配磁吸菲涅尔透镜 MF01	lux	5140	1320
		fc	477	122
	搭配硅胶柔光罩	lux	2050	505
		fc	196	47
6500K	裸灯	lux	3840	993
		fc	375	92
	搭配磁吸菲涅尔透镜 MF01	lux	5290	1370
		fc	491	128
	搭配硅胶柔光罩	lux	2140	525
		fc	199	49

色温	测试条件	照度单位	0.5m	1m
8500K	裸灯	lux	3720	966
		fc	346	90
	搭配磁吸菲涅尔透镜 MF01	lux	5190	1350
		fc	483	125
	搭配硅胶柔光罩	lux	2070	516
		fc	192	48
10000K	裸灯	lux	3490	906
		fc	324	84
	搭配磁吸菲涅尔透镜 MF01	lux	4920	1270
		fc	457	118
	搭配硅胶柔光罩	lux	1940	486
		fc	181	45
R 红光	裸灯	lux	347	92
		fc	32	9
	搭配磁吸菲涅尔透镜 MF01	lux	533	142
		fc	50	13
	搭配硅胶柔光罩	lux	200	54
		fc	19	5
G 绿光	裸灯	lux	1240	320
		fc	115	30
	搭配磁吸菲涅尔透镜 MF01	lux	1740	450
		fc	162	42
	搭配硅胶柔光罩	lux	689	177
		fc	64	16
B 蓝光	裸灯	lux	234	60
		fc	22	6
	搭配磁吸菲涅尔透镜 MF01	lux	329	83
		fc	31	8
	搭配硅胶柔光罩	lux	130	32
		fc	12	3

以上数据均为平均值，非绝对值，以上测试皆在灯体 100%亮度下进行

规格参数

型号	C30R
锂电池	DC7.2V,3400mAh,24.48Wh
	充电时长≈ 2 小时 30 分钟
	使用时长≈ 43 分钟 (100% 亮度)
USB-C 接口	输入: 5V ➡ 3A, 9V ➡ 3A, 12V ➡ 3A
调光范围	0% ~ 100%
色温范围	1800K ~ 10000K
绿品范围	-50% ~ 50%
FX 光效	14 类
CRI	≈ 96
TLCI	≈ 97
蓝牙控制距离	20m
工作环境温度	-10℃ ~ 40℃
裸灯尺寸	≈ 133mm*78mm*25mm
裸灯净重	≈ 243g

规格和参数如有变更，恕不另行通知

Important Safety Instructions and Precautions

Carefully read and fully understand the instruction manual before use and strictly follow the safety instructions. Failure to do so may result in death, serious injury, damage to the product, or other property damage.



Danger

- Professional lighting fixture is prohibited for children. When children are near, parents or guardians must supervise closely to prevent them from personal injury due to collision with light or private use of light.
- This product is not ordinary lighting fixture and cannot be used for general lighting. Anyone who has suffered eye damage or has sensitive eyes should avoid using this product. When the light is on, it is forbidden to look directly at the lamp beads under any circumstances. Strong light should be used under the guidance of professional lighting engineers. Avoid prolonged exposure to strong light under any circumstances. If it causes eye discomfort, turn off the light, suspend use and seek medical attention promptly.
- When the light is on, it must be used with care. Do not touch high-temperature parts, such as LED lamp beads, to avoid burns.
- Do not use damaged product. Stop using immediately if the product shell is cracked due to falling, squeezing, or strong impact, to avoid touching the internal electronic components and getting an electric shock.
- Do not disassemble the product without permission. If the product malfunctions, it must be checked and repaired by authorized maintenance personnel. If the lamp bead is damaged or deformed by heat, stop using it, and contact the manufacturer, service agent or qualified maintenance personnel to replace the lamp bead in time to avoid accidents.
- Do not use and store this product in explosive atmospheres (near flammable volatile solvents such as alcohol, gasoline, or gases such as methane and ethane).
- Maintain at least 1 meter distance between the light head and the user, other people, and heat-sensitive or flammable items during and after operation of the product.

Warning

- This equipment is not waterproof, please keep it dry and do not immerse it in water or other liquids. The equipment should be installed in a dry and ventilated place, and avoid using it in rainy, humid, dusty or overheated environments. Do not place any objects on the light or let liquid flow into the light to avoid accidents.
- Do not block or cover the heat dissipation port of the product.
- After use, the product should be completely cooled before packaging.
- Some products have built-in lithium batteries. Please use a dedicated charger to charge, and use them within the specified voltage and temperature range according to the correct operating instructions.

Attention

- All transport protective materials and packages on the product must be removed before use.
- When not in use, please turn off the product and stop the power supply promptly.
- Please make sure to clean the glass of the lamp bead frequently and keep it clean, the glass may explode if it is stained with mosquito bodies or dark-colored organic matter. When cleaning the device, please do not use a wet cloth to wipe, please use a dry soft cloth to wipe the device dirt.
- The safety instructions are formulated according to the strict testing of the factory, and the design and specifications of the equipment are subject to change without prior notice. Customers can view the latest electronic instruction manuals on the official website of Godox and learn about the latest product information.

 **Do not stare at the operating light source.**


Foreword

Thank you for purchasing !


The newly launched C30R is a delicate pocket-size LED light equipped with adjustable full color, 1800K-10000K wide CCT range and 14 FX modes, quite suitable for comic exhibition shooting, camera filling light, food exploration, Vlog filming light and etc.

Name of Parts

1. Light Beads
2. 1/4" Screw Hole
3. USB-C Port
4. Power Switch Button
5. Select Dial (Rotate/Press)
6. Mode Button

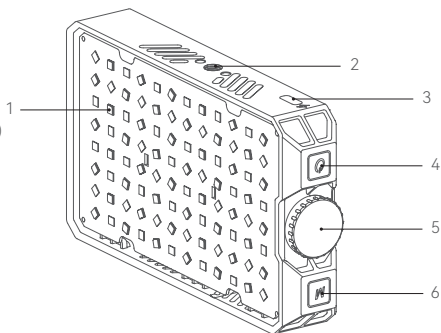

7. Display
8. NFC Sensing Area

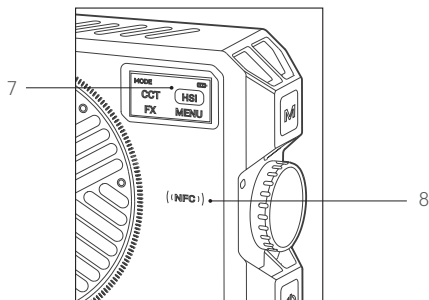

What's Inside



Light Body
× 1



Charging Cord
× 1



Magnetic
Fresnel Lens
MF01 × 1



Diffusion
Dome
× 1



Instruction
Manual
× 1

Note: Due to continuous updates and upgrades of the products, there may be differences between the actual products and the pictures. Therefore, the pictures are for reference only, products to prevail in kind.

Separately Sold Accessories

Collapsible Diffusion Dome Do01, Magnetic Diffusion MD01

Installation Instructions

Bracket: The 1/4 screw hold design allows for quick mounting to the optional bracket by rotating clockwise to lock the screw after alignment .

Magnetic Accessories: Attach the magnetic accessories onto the side of the light beads.

Power Management

Power on: Press and hold the power switch button , then rotate the select dial after the <  > is displayed on the panel to enter the main interface.

Power off: Press and hold the power switch button until the screen lights off.

Charging: Connect the USB-C port on the light body to the power source with the attached charging cord to charge it.

Mode/Menu Settings

Press the mode button then rotate the select dial to choose among the following modes or menu, press the select dial to enter the corresponding setting interface. Rotate and press the select dial to adjust the parameters, then press the mode button to return to the previous interface.



CCT Mode

Press the mode button to enter mode selection, rotate and press the select dial to select CCT mode, in which you can adjust the DIM/CCT/GM.

DIM range: 0%~100%

CCT range: 1800K~10000K

GM range: -50% ~ +50%



HSI Mode

Press the mode button to enter mode selection, rotate and press the select dial to select HSI mode, in which you can adjust the DIM/HUE/SAT.

DIM range: 0%~100%


HUE range: 0°~ 360°

SAT range: 0%~100%



FX Mode

Press the mode button to enter mode selection, rotate and press the select dial to select FX mode, in which you can choose among the following 14 effects and adjust their respective parameters.



Effect	DIM	Color	CCT/HUE	Speed	Others
Flash	0% -100%	CCT/HSI	1800K-10000K /0-360°	1-100	Mode: Camera Flash /Flash Bulb Trigger: Auto/Manual
Lightning		×	1800K-10000K	×	Times: Random/1-10 Frequency: Random / 2-20 Trigger: Auto/Manual
Cloudy		×	×	Random /1-100	Ratio: 30% -90%
Broken Bulb		CCT/HSI	1800K-10000K /0-360°	1-100	×
TV		CCT/HSI	×	1-100	×
Candle		×	×	1-100	×
Fire		×	×	1-100	×
Firework		×	×	1-100	Ember:1-100
Explosion		CCT/HSI	1800K-10000K /0-360°	1-100	Ember: 1-100 Trigger: Auto/Manual
Welding		CCT/HSI	1800K-10000K /0-360°	1-100	×
Cop Car		Red+Blue, Red, Blue, Blue+White, Blue+Yellow, Yellow, Red+White +Blue, Red +Yellow+Blue	×	×	Mode:1-5
SOS		CCT/HSI	1800K-10000K /0-360°	×	×
RGB Cycle		×	×	1-100	SAT: 0%-100%
Party		×	×	1-100	SAT: 0%-100%

Note: Please rotate the select dial to adjust the parameters, then press the and rotate the select dial to the next parameter. Select manual, the effect can be triggered once by pressing the select dial once. After a certain effect is set, press mode button can return to the 14 effects interface.

MENU Settings

Press the mode button to enter mode selection, rotate and press the select dial to enter the following menu settings, press the mode button can return to the previous interface.



Bluetooth

Press the select dial to enter Bluetooth interface, rotate and press the select dial to Bluetooth to turn it on or off. If you need to reset the Bluetooth, rotate the select dial to reset and press it. The MAC code is on the corner for quick check.




Anti-False Touch

Press the mode button to enter anti-false touch interface, rotate and press the select dial to select between off and on.

Off: Press and hold the power switch button to enter the main interface.

On: Press and hold the power switch button then rotate the select dial to enter the main interface.



Overheat Protection

Press the mode button to enter overheat protection interface, rotate and press the select dial to select between reduce max power and turn off.


Reduce max power: The brightness is automatically reduced and cannot be increased, but can be increased manually when the temperature drops.

Turn off: The brightness is automatically turned off, but can be resumed when the temperature drops.




Fan

Press the select dial to enter fan interface, rotate and press the select dial to select among off, auto, medium and high.




Language

Press the select dial to enter language interface, rotate and press the select dial to select between simplified Chinese and English.




Upgrade

Press the select dial to enter upgrade interface to check the firmware upgrade instruction.




“GODOX Light” app Firmware Upgrade

Open Godox Light, enter a certain scene and click “+” to add a fixture, then click < ⋮ > to display more settings, choose firmware upgrade.

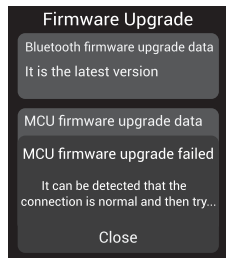


Factory Reset

Press the select dial to enter factory reset interface to choose no or yes. If you choose yes, the device will automatically reset and reboot, then simplified Chinese and English options show on the display for your choice, after which the brightness will turn to 100% automatically.



Fixture Info

Press the select dial to enter fixture info interface to check the basic information of the product.



NFC Fixture Addition

Use the NFC function of smartphone and NFC chip of the light fixture to connect them, then add the light fixture to **【Godox Light】** app.

1. Preconditions: **【Godox Light】** app is V3.2.4 or above, Bluetooth function of smartphone is turned on.
2. Operation Instructions: subject to the fulfillment of preconditions, turn on the **【Godox Light】** app and enter the corresponding scene, click **【+】** to select **【NFC Addition】** function, bring the NFC sensing area of smartphone near the sensing area of light fixture to scan to add in **【NFC Addition】** interface, bulk addition is also supported.

Note: Android systems can complete the addition by directly closing the sensing area, while iOS system need to click the  > icon on the right top and wait for the pop-up window then add.

Illuminance Data

CCT	Testing Condition	Unit	0.5m	1m
1800K	Bare Light	lux	1020	263
		fc	95	24
	With Magnetic Fresnel Lens MF01	lux	1390	357
		fc	129	33
	With Diffusion Dome	lux	577	136
		fc	54	13
2800K	Bare Light	lux	3320	860
		fc	308	80
	With Magnetic Fresnel Lens MF01	lux	4520	1170
		fc	420	108
	With Diffusion Dome	lux	1840	441
		fc	171	41
3200K	Bare Light	lux	3310	860
		fc	307	80
	With Magnetic Fresnel Lens MF01	lux	4580	1170
		fc	425	108
	With Diffusion Dome	lux	1840	447
		fc	171	42
4300K	Bare Light	lux	3470	901
		fc	322	84
	With Magnetic Fresnel Lens MF01	lux	4830	1230
		fc	449	114
	With Diffusion Dome	lux	1940	470
		fc	180	44
5600K	Bare Light	lux	3700	960
		fc	344	89
	With Magnetic Fresnel Lens MF01	lux	5140	1320
		fc	477	122
	With Diffusion Dome	lux	2050	505
		fc	196	47
6500K	Bare Light	lux	3840	993
		fc	375	92

CCT	Testing Condition	Unit	0.5m	1m
6500K	With Magnetic Fresnel Lens MF01	lux	5290	1370
		fc	491	128
	With Diffusion Dome	lux	2140	525
		fc	199	49
8500K	Bare Light	lux	3720	966
		fc	346	90
	With Magnetic Fresnel Lens MF01	lux	5190	1350
		fc	483	125
	With Diffusion Dome	lux	2070	516
		fc	192	48
10000K	Bare Light	lux	3490	906
		fc	324	84
	With Magnetic Fresnel Lens MF01	lux	4920	1270
		fc	457	118
	With Diffusion Dome	lux	1940	486
		fc	181	45
R (Red)	Bare Light	lux	347	92
		fc	32	9
	With Magnetic Fresnel Lens MF01	lux	533	142
		fc	50	13
	With Diffusion Dome	lux	200	54
		fc	19	5
G (Green)	Bare Light	lux	1240	320
		fc	115	30
	With Magnetic Fresnel Lens MF01	lux	1740	450
		fc	162	42
	With Diffusion Dome	lux	689	177
		fc	64	16
B (Blue)	Bare Light	lux	234	60
		fc	22	6
	With Magnetic Fresnel Lens MF01	lux	329	83
		fc	31	8
	With Diffusion Dome	lux	130	32
		fc	12	3

Note: All the data are average values instead of absolute values. All the above tests are based on the condition of 100% brightness.

Technical Data

Model	C30R
Lithium Battery	DC7.2V, 3400mAh, 24.48Wh
	Charging Time $\approx$ 2h30min
	Battery Life $\approx$ 43min (100% DIM)
USB-C Port	Input: 5V= 3A, 9V= 3A, 12V= 3A
Brightness Range	0% ~ 100%
CCT Range	1800K ~ 10000K
GM Adjust	-50% ~ 50%
FX Modes	14
CRI	$\approx$ 96
TLCI	$\approx$ 97
Bluetooth Controlling Distance	20m
Working Environment Temperature	-10°C ~ 40°C
Dimension of Bare Light	$\approx$ 5.24"*3.07"*0.98"
Net Weight of Bare Light	$\approx$ 243g

Specifications and data may subject to changes without notice.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the

following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.

Warning

Operating frequency : 2402 MHz – 2480 MHz (BT)
Maximum EIRP Power : 5 dBm

Declaration of Conformity

GODOX Photo Equipment Co.,Ltd. hereby declares that this equipment are in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. In accordance with Article 10(2) and Article 10(10), this product is allowed to be used in all EU member states. For more information of DoC, Please click this web link:

<https://www.godox.com/eu-declaration-of-conformity/>

The device complies with RF specifications when the device used at 0mm from your body.

IC Warning

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement

Tout changement ou modification non expressément approuvé par la partie responsable de la réglementation de l'OCDE peut faire perdre à l'utilisateur le droit d'utiliser l'appareil.

Remarque: cet appareil a été testé pour répondre aux limites des appareils numériques de classe B conformément à la partie 15 des règles de la Federal Communications Commission des États

- Unis. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans les installations résidentielles. L'appareil génère de l'énergie RF utilisée et rayonne, ce qui peut causer des interférences nocives pour les communications radio s'il n'est pas installé et utilisé conformément aux instructions. Cependant, aucun

Garantie contre les interférences dans une installation spécifique. Si l'appareil cause des interférences nuisibles à la réception de la radio ou de la télévision, qui peuvent être déterminées en éteignant et en allumant l'appareil, l'utilisateur est encouragé à tenter de corriger les interférences par une ou plusieurs des mesures suivantes:

- redirection ou repositionnement de l'antenne de réception.
- augmenter l'espacement entre l'appareil et le récepteur.
- Connecter l'appareil à une prise sur un circuit différent de celui auquel le récepteur est connecté.
- consultez votre revendeur ou un technicien radio / tv expérimenté pour obtenir de l'aide.

Avertissement RF pour les appareils portables:

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux radiofréquences.

Équipement Peut être utilisé sans restriction dans des conditions d'exposition portables.

保修期

产品及部件的相应保修期按相关的《产品保修信息》执行。保修期自产品首次购买日起算，购买日以购买产品时保修卡登记日期为准。

如何获得保修服务

您可直接与产品销售商或授权服务机构联系，也可拨打神牛产品售后服务电话，与我们联系，由我们的服务人员为您安排服务。申请保修时，您应提供有效的保修卡作为保修凭证，方可获得保修。如您不能提供有效的保修卡，则在我们确认产品或部件属于保修范围的情况下，也可以为您提供保修，但这不作为我们的义务。

不适用保修情况

如产品存在下列情况，本文件项下的保证和服务将不适用：①产品或部件超过相应保修期；②错误或不适当使用、维护或保管导致的故障或损坏，如：不当搬运；非按产品合理预期用途使用；不当插拔外接设备；跌落或外力挤压；接触或暴露于不适当温度、溶剂、酸碱、水浸或潮湿环境；③由非神牛授权机构或人员安装、修理、更改、添加或拆卸造成的故障或损坏；④产品或部件原有识别信息被修改变更或除去；⑤无有效保修卡；⑥使用非合法授权、非标准或非公开发行的软件造成的故障或损坏；⑦因不可抗力或意外事件造成的故障或损坏；⑧其他非因产品本身质量问题导致的故障或损坏。遇上述情况，您应向相关责任方寻求解决，神牛对此不承担任何责任。因非在保修期或保修范围内的部件、附件或软件导致产品不能正常使用的，不是保修范围内的故障。产品使用过程中正常的脱色、磨损和消耗，不是保修范围内的故障。

产品保修和服务支持信息

产品的保修期和服务类型按以下《产品保修信息》执行：

类别	名称	保修期（月）	保修服务类型
部件	电路板	12	客户送修
其他	光效附件、各类线材或其他包装	无	无保修

神牛产品售后服务电话 0755-29609320-8062

Warranty

Dear customers, as this warranty card is an important certificate to apply for our maintenance service, please fill in the following form in coordination with the seller and safe-keep it. Thank you!

Product Information	Model	Product Code Number
Customer Information	Name	Contact Number
	Address	
Seller Information	Name	
	Contact Number	
	Address	
	Date of Sale	
Note		

Note: This form shall be sealed by the seller.

Applicable Products

The document applies to the products listed on the Product Maintenance Information (see below for further information). Other products or accessories (e.g. promotional items, giveaways and additional accessories attached, etc.) are not included in this warranty scope.

Warranty Period

The warranty period of products and accessories is implemented according to the relevant Product Maintenance Information. The warranty period is calculated from the day (purchase date) when the product is bought for the first time, And the purchase date is considered as the date registered on the warranty card when buying the product.

How to Get the Maintenance Service

If maintenance service is needed, you can directly contact the product distributor or authorized service institutions. You can also contact the Godox after-sale service call and we will offer you service. When applying for maintenance service, you should provide valid warranty card. If you cannot provide valid warranty card, we may offer you maintenance service once confirmed that the product or accessory is involved in the maintenance scope, but that shall not be considered as our obligation.

Inapplicable Cases

The guarantee and service offered by this document are not applicable in the following cases:
The product or accessory has expired its warranty period; Breakage or damage caused by inappropriate usage, maintenance or preservation, such as improper packing, improper usage, improper plugging in/out external equipment, falling off or squeezing by external force, contacting or exposing to the improper temperature, solvent, acid, base, flooding and damp environments, etc; Breakage or damage caused by non-authorized institution or staff in the process of installation, maintenance, alternation, addition and detachment; The original identifying information of product or accessory is modified, alternated, or removed; No valid warranty card; Breakage or damage caused by using illegally authorized, nonstandard or non-public released software; Breakage or damage caused by force majeure or accident; Breakage or damage that could not be attributed to the product itself. Once met these situations above, you should seek solutions from the related responsible parties and Godox assumes no responsibility. The damage caused by parts, accessories and software that beyond the warranty period or scope is not included in our maintenance scope. The normal discoloration, abrasion and consumption are not the breakage within the maintenance scope.

Maintenance and Service Support Information

The warranty period and service types of products are implemented according to the following Product Maintenance Information:

Product Type	Name	MaintenancePeriod(month)	Warranty Service Type
Parts	Circuit board	12	Customer sends the product to designated site
Other Items	Optical accessories, cables, or other packages, etc.	No	Without warranty

Godox After-sale Service Call 0755-29609320-8062



Wechat
Official Account
神牛微信公众号

深圳市神牛摄影器材有限公司

地址：深圳市宝安区福海街道塘尾社区耀川工业园厂房 2 栋

电话：0755-29609320（8062） 传真：0755-25723423 邮箱：godox@godox.com

GODOX Photo Equipment Co., Ltd.

Add.: Building 2, Yaochuan Industrial Zone, Tangwei Community, Fuhai Street, Bao'an District, Shenzhen
518103, China Tel: +86-755-29609320(8062) Fax: +86-755-25723423 E-mail: godox@godox.com

www.godox.com

Made in China

合格证
QC PASS

UK
CA

C

E

FC

