

# CONFIER

Electric Heated Blanket



User Manual  
NA-T1811A

## Safety Instructions

### INSTRUCTIONS BEFORE USING

PLEASE CHECK IF THE UNIT AND ITS PARTS ARE INTANT AND NOT DAMAGED. IN ANY WAY, IF THERE IS ANY ISSUE, PLEASE CONTACT THE SELLER.



#### WARNING:

PLEASE ENSURE THAT POLYBAG IS KEPT AWAY FROM CHILDREN!  
RISK OF SUFFOCATION!



#### IMPORTANT SAFETY INSTRUCTIONS, DO NOT DESTROY

-- **To reduce the risk of burns, electric shock and fire, this product must be used in accordance with the following instructions.**

1. Always turn off the device and disconnect the power cord from the outlet when not in use.
2. Wrapping of the cord around the controls may damage the cord. Loop loosely when storing.
3. NEVER iron your warming product.
4. NEVER use dry cleaning fluid on this product. Cleaning solvents may damage the wiring insulation.
5. Do not tuck in the wired area of this bedding.
6. Do not route electrical cords between the mattress and box spring. Do not allow the cords to be pinched.
7. Keep the control away from drafty areas that may become damp or wet such as an open window. Do not use pins - They may damage the electric wiring.
8. Be sure that this bedding is used on an alternating- current supply circuit of the proper voltage.
9. Excessive heating may result from folding bedding, other than a mattress, when in actual use.
10. If improper operation of this bedding is observed, discontinue its use immediately and consult the manufacturer or the dealer regarding its repair.
11. For throw blankets only: Do not use with rocking chairs, recliners, chairs with casters or wheels, or other furniture subject to movement.
12. Do not tuck the blanket or supply cord in a sofa or other furniture.
13. All portions of the blanket or controller should be visible at all times. Wrapping of cord around the controller may damage the cord.
14. Loop cord loosely when storing, tight wrapping may damage cord and internal parts.

Failure to observe the above instructions may constitute misuse of the product and can cause serious injury or burns.

## Instruction


Thank you for purchasing Electric Heated blanket from Comfier.

With normal care and proper treatment, it will provide years of reliable service.

**Please read all instructions carefully before use this product.**

**Please retain this manual for future reference.**

## FEATURES

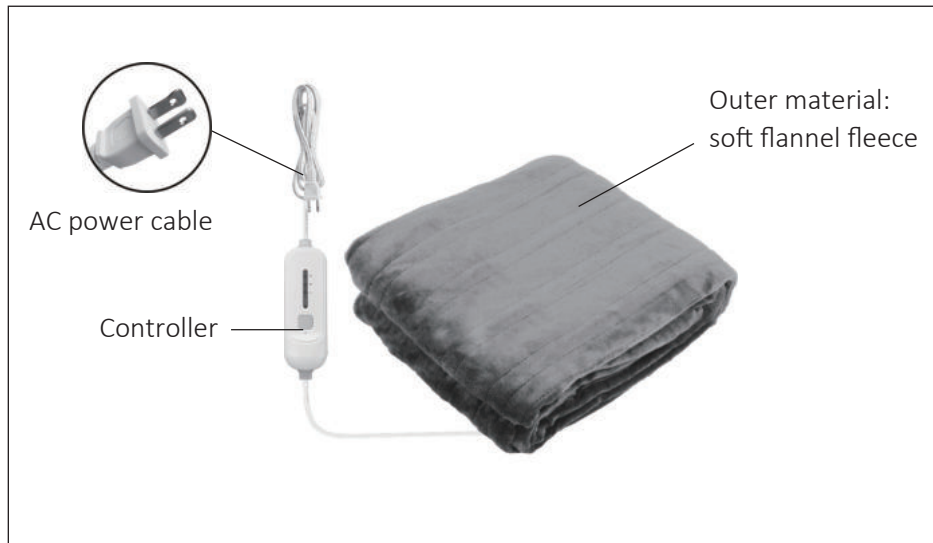

## CONTENTS

- Electric Heated Blanket
- User manual

## TECHNICAL DATA

<b>Model No.:</b>	NA-T1811A
<b>Measurements:</b>	50 x 60 inches
<b>Weight:</b>	2.5lbs
<b>Input:</b>	Input: AC120V/60Hz
<b>Rated Power:</b>	115W
<b>Automatic runtime:</b>	4 hours



**Intertek**  
**5005390**  
CONFORMS TO UL STD.  
**964 CERTIFIED TO CSA STD.**  
**C22.2NO.101 120VAC**

## Safety Instructions



**IMPORTANT- PLEASE STORE THESE INSTRUCTIONS FOR FUTURE REFERENCE. READ THE INSTRUCTIONS CAREFULLY BEFORE USING THE UNIT**

To operate this warming product properly and safely, there are some critical safety precautions you need to follow. As with all electrical appliances, there is an inherent danger of overheating, fire or personal injury if the product is not used correctly. Please carefully read what follows before using the warming product.

### **Never use this warming product with:**

Infants or very small children;  
People with disabilities;  
Anyone who is immobile or cannot operate the controls properly;  
Anyone who is insensitive to heat (e.g. a person with poor circulation);  
Anyone who cannot or will not understand these directions.

### **Setting up**

NEVER trap or pinch any of the electrical cords in any way.  
Make sure the cords are NEVER rested between the mattress and box springs.  
The heated area should always lie flat to prevent overheating.  
If the plug does not fit into your outlet, contact a qualified electrician.  
Be sure that the power supply is used only on 120V, 60 HZ current supply.  
Make sure the cord from the controller to your heated product is connected and locked tightly.  
You may use this electric product with any sheet mattress pads or other blankets but NEVER in combination with any other electric blankets or electric mattress pads.  
The warming product should never be folded, balled up or bunched in any way when in use, or it may result in overheating and/or permanent wrinkling of the fabric.

### **Care and Maintenance**


Do not use with generators, power converters, or inverters.  
NEVER use pins in and around the warming product.  
Cats, dogs and other pets should always be kept away from the product, as a sharp claw may result in damage to the heating element.  
Keep the controls away from drafty areas that may become damp or wet, such as an open window.

## Setup and Operation

**When setting up your heated blanket, be sure to follow these steps in order.**

1. Connect the power cable to the connector on the heated blanket.
2. To connect the cable to the connector, align the connector and cable arrows and push gently until it locks.

**CAUTION:** The cable must be fully plugged in. A loose connection could cause a fire hazard.

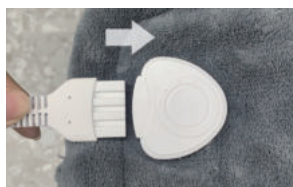

3. Plug the power cord into an electric outlet(120V/60Hz).
4. Make sure all cords are tangle free and not trapped or pinched in any way, including but not limited to between mattress and box spring, sofa cushions, against wall, chairs, or other furniture
5. Do not wrap the controller in the blanket while in use.
6. Do not use with generator power.
7. Turn on the device by operating the controller (refer to controller instructions.).
8. To disconnect the controller, first unplug the cord from the outlet, then pinch sides of the connector and pull apart.

## Controller instructions



**High**  
**Mid**  
**Low**

### **One Button Control:**

Press to turn on the device, the device will default to the low setting, continue to press the button to select the heat at Low/Mid/High Level, the corresponding indicator will light on. To turn off the device, press the button until no light is visible on the controller.

### **Note:**

- The device will automatically switch off after 4-hour timer runs out.
- Do not setup or use the device in a bathroom or similiary wet/damp areas.
- Caution: Always turn off the device and disconnect the power cord from the outlet when not in use.

## Care and Cleaning Instructions

### **WASHING INSTRUCTIONS**

NEVER DRY CLEAN OR USE BLEACH. BEFORE WASHING, DISCONNECT ALL CORDS.

### **MACHINE WASHING**

NEVER submerge cords or control unit. Place textile portion without cords in the washing machine. Machine wash warm on gentle or delicate cycle.

### **HAND WASHING**

Washing your warming product by hand is the best way to make it last. To do this, disconnect all cord(s). Wash your textile separately by hand in a tub of lukewarm (100 °F ) water using a small amount of mild laundry soap or detergent. Soak for 5 minutes. Next, gently work the textile up and down for five more minutes. NEVER rub or scrub. Rinse thoroughly in cool water until all traces of soap or detergent are gone. Squeeze excess water out by hand, NEVER twist. Do not use a wringer.

### **DRYING INSTRUCTIONS**

NEVER USE COMMERCIAL DRYERS AT THE LAUNDROMAT THEY MAY BE EXTRA HOT AND COULD DAMAGE THE WIRING. DO NOT IRON. DO NOT PLUG IN UNTIL COMPLETELY DRY.

### **MACHINE DRY**

To machine dry, put your product into a dryer on low heat and allow to tumble until dry. Ensure that the textile has enough room to tumble freely. If product draws in during washing, while still damp gently stretch until it returns to its original size.

### **LINE DRY**

You can line dry, simply by draping over two parallel clotheslines or a shower rod with the head and foot ends down. Do not reconnect warming products until they are completely dry. Do not use clothes pins that can pinch wires.

### **STORAGE**

Store as you would any other bedding, folded in a dry place.

## Troubleshooting Guide

### **Q: The indicator light on my controller is flashing. What should I do?**

A: Turn the controller off. Unplug the controller from the wall outlet. Unplug the controller cord from the product. Wait 30 seconds and reconnect, making sure the arrows are properly aligned. Now plug into the 120 volt wall outlet. Push control button until the temperature is on high. If you still have issues, contact customer service.

### **Q: The controller is lit but the product does not heat up.**

A: Test the product by folding the textile over on itself and turning the setting to high. Ensure that the indicator light is on. After approximately five minutes, carefully feel between the layers. Caution: Never leave the product turned on and folded up for more than 5-7 minutes.

### **Q: I feel some warmth but not a lot. How warm should this product get?**

A: This product will provide enough warmth to keep you quite comfortable even in a very cold room. This product is not like a heating pad. In normal operation, it does not feel hot to the touch, however the warmth is evident when in use.

### **Q: Why is my controller warm?**

A: A small amount of heat is produced when transferring power from the wall to the product. This warmth is completely normal and is nothing to be concerned about.



---

#### **Note:**

This Heated Blanket has a polarized plug (one blade is wider than the other) as a safety feature. This plug will fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

## Warranty

If you have any issue about the product, please feel free to contact us by sending email to supportus@comfier.com We will strive to provide the best service possible within 24 hours.

### **30 days unconditionally Return**

Comfier product can be returned to receive a full refund for any reason within 30 days. Please contact our customers service (supportus@comfier.com), our staff will contact you within 24 hours.

### **90 days refund/replace**

Comfier product can be returned / replaced within 90 days if the product break down in the period of proper use.

### **12 months Warranty**

If the product break down within 12 months in the period of proper use, customers can enjoy the relevant warranty to get them replaced.

### **Attention!**

No warranty will be given to any force majeure and man-made causes to a defective product, such as improper care, personal tear down and willful damage,etc.

## **Extend Warranty for Free**


- 1) Enter the following URL or scan the QR code below to find COMFIER facebook page and like it, enter "Warranty" to messenger to extend your warranty from 1 year to 3 years.



<https://www.facebook.com/comfiermassager>

- OR 2) Send message "Warranty" and email us supportus@comfier.com to extend your warranty from 1 year to 3 years.

## ***Have question ?***

 **Tel:** (248) 819-2623  
Monday-Friday 9:00AM-4:30PM



# FCC STATEMENT

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



COMFIER TECHNOLOGY CO.,LTD.  
Address:573 BELLEVUE RD  
NEWARK, DE 19713 USA  
[www.facebook.com/comfiermassager](http://www.facebook.com/comfiermassager)  
[supportus@comfier.com](mailto:supportus@comfier.com)  
[www.comfier.com](http://www.comfier.com)