


NO	Item
1	Main unit
2	Battery
3	Antenna
4	Power adapter
5	User manual
6	Safety Information and Warranty Card
7	Safety Information Card (for intrinsically safe radio)
8	Strap
9	Desktop charger

1. Press gently the upper part of the belt clip so that it springs up.
2. Align the battery with the battery holder at the back of the radio, and then insert the battery.
3. Push the battery in the direction indicated until the latch is in position.
4. Press the low part of the battery until it is latched.

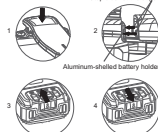

1. Plug the power adapter into an AC power socket of the required voltage.
2. Connect the power adapter to the charger, and green LED indicator light is on.
3. Put a battery or the radio installed with a battery into the charger, and make sure the battery contacts well the charging contacts. During charging, the indicator light is on.
4. It takes about 5 hours to fully charge the battery, and then the LED indicator light turns green. After this, wait 1 to 2 hours before taking out the battery to achieve the best performance.
5. Disconnect the power adapter from the socket.

Note:

1. The radio is delivered unchanged. Before using it for the first time, please charge the battery.
2. Always use the supplied lithium battery and desktop charger.
3. A new battery or one that has been stored for more than 2 months after charging needs to be charged for several times to achieve its normal capacity.



To uninstall the antenna, rotate it counterclockwise.




Frequency Range: 400-470MHz
Rated Output Power: 4.0Watts (High), 1.0Watt(Low)
For CE: Head SAR 2.092(W/kg) , Body SAR 3.696(W/kg)

Frequency Range: 400-470MHz
Rated Output Power: 4.0Watts (High), 1.0Watt(Low)
For CE: Head SAR 2.092(W/kg) , Body SAR 3.696(W/kg)

167W06000XXX

Align the two screw holes of the belt clip with the screw holes at the back of the radio, and screw up the screws using a screwdriver. To uninstall the belt clip, unscrew the screws and take off the belt clip.



Connect an audio accessory to the audio accessory interface, and fasten it using the screw.

- (1) Rotate the cover leftwards to the edge of the aluminum housing.
- (2) Push the TF card rightwards and take it out.
- (3) To install a TF card, perform the above operation reversely.



Indicator State	Radio State
Red light on	Transmitting signals.
Green light on	Receiving signals, e.g. voice, text message and data.
Orange light on	Within call hang time (in digital mode) or auto reset time (in analog mode).
Orange light flashing	In emergency state, missed a call, received a call alert, or scanning.
Red light flashing	Low power, receiving emergency alarm, failed startup self-detection.

[illegible]

1.Powering On/Off
To power on the radio, rotate the Power/Volume knob clockwise until you click. The welcome page is displayed, the backlight is on, and there is a "beep" sound.
To power off the radio, rotate the Power/Volume knob counterclockwise until you click.

SN	Faults Description	Reason and Solution
1	Power on failed	1. Low remaining battery capacity. 2. Charger is not using the battery 3. Poor contact between the battery and the wiring terminals of the power supply.
2	Communication failed	1. Install the battery again. 2. Dirty battery contacts. 3. Check battery contacts. 4. Poor antenna contact. 5. Install the antenna again. 6. Different frequencies in 30-70 frequency pair between both sides. 7. Use the same frequency in 30-70 frequency pair between both sides. 8. Set the same CTCSS/DCSS code on both sides. 9. Set the same CTCSS/DCSS code on both sides via PC. 10. Beyond communication distance. 11. Decrease communication distance.
3	Programming exception	1. Irregular connection. 2. Connect the USB to PC properly. 3. No USB driver is installed on the PC. 4. Install the USB driver on the PC. 5. Poor contact of telephone interface board. 6. Replace the telephone interface board.

Caution for Using the Battery:
Explosion may be incurred by using a battery of a non-supplied model, shorting the anode and cathode of the battery.
Charge the battery using the attached charger, and dispose it as instructed.
Do not strike, squeeze, short out or disassemble the battery.
Do not put the battery in a high temperature or throw it into a fire.
Stop using the battery if it is seriously bulged or immersed in water.

Kiruxun reserves the right to the final interpretation of this document

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

ISED Warning

This product meets the applicable Innovation, Science, and Economic Development Canada technical specifications.

Le présent matériel est conforme aux spécifications techniques applicables d'Innovation, Sciences et Développement économique Canada.

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil n' doit pas produire de brouillage, et*
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RF Exposure Compliance and Control Guidelines and Operating Instructions

To control your exposure and ensure compliance with the occupational/controlled environment exposure limits always adhere to the following procedures.

Guidelines:

- Do not remove the RF Exposure Label from the device.
- User awareness instructions should accompany device when transferred to other users.
- Do not use this device if the operational requirements described herein are not met.

Operating Instructions:

- Transmit no more than the rated duty factor of 50% of the time. To transmit (talk), push the Push-To-Talk (PTT) button. To receive calls, release the PTT button. Transmitting 50 % of the time, or less, is important because this radio generates measurable RF energy exposure only when transmitting (in terms of measuring for standards compliance).
- Hold the radio in a vertical position in front of face with the microphone (and the other parts of the radio, including the antenna) at least one inch (2.5 cm) away from the nose. Keeping the radio at the proper distance is important because RF exposures decrease with distance from the antenna. Antenna should be kept away from eyes.
- When worn on the body, always place the radio in approved clip, holder, holster, case, or body harness for this product. Use of non-approved accessories may result in exposure levels, which exceed the occupational/controlled environment RF exposure limits.
- Use only manufacturer's name approved supplied or replacement antennas, batteries, and accessories. Use of non-manufacturer-name approved antennas, batteries, and accessories may exceed the FCC and IC RF exposure guidelines.
- For a list approved accessories please consult your local dealer for information.

Pour contrôler votre exposition et garantir le respect des limites d'exposition en milieu professionnel / contrôlé, respectez toujours les procédures suivantes.

Des lignes directrices:

- Ne retirez pas l'étiquette d'exposition RF de l'appareil.
- Les instructions de sensibilisation de l'utilisateur doivent accompagner l'appareil lorsqu'il est transféré à d'autres utilisateurs.
- N'utilisez pas cet appareil si les exigences opérationnelles décrites ici ne sont pas satisfaites.

Mode d'emploi:

- Ne transmettez pas plus que le facteur de service nominal de 50% du temps. Pour transmettre (parler), appuyez sur le bouton Push-To-Talk (PTT). Pour recevoir des appels, relâchez le bouton PTT. La transmission à 50% du temps, ou moins, est importante car cette radio génère une exposition à l'énergie RF mesurable uniquement lors de la transmission (en termes de mesure de conformité aux normes).
- Tenez la radio en position verticale devant le visage avec le microphone (et les autres

parties de la radio, y compris l'antenne) à au moins 2,5 cm (2,5 cm) du nez. Il est important de garder la radio à la bonne distance car les expositions aux RF diminuent avec la distance de l'antenne. L'antenne doit être éloignée des yeux.

- Lorsqu'elle est portée sur le corps, placez toujours la radio dans un clip, un support, un étui, un étui ou un harnais de sécurité approuvés pour ce produit. L'utilisation d'accessoires non approuvés peut entraîner des niveaux d'exposition qui dépassent les limites d'exposition aux RF de l'environnement professionnel / contrôlé.
- Utilisez uniquement les antennes, batteries et accessoires fournis ou de remplacement approuvés par le fabricant. L'utilisation d'antennes, de batteries et d'accessoires non approuvés par le fabricant peut dépasser les directives d'exposition RF FCC et IC.
- Pour obtenir une liste des accessoires approuvés, veuillez consulter votre revendeur local pour plus d'informations.