


XBA-KZT6

XBA Option Switch Settings(Pulse/MDB/ICT104U/ICT104V)

Supported bill KZT 200, 500, 1000, 2000, 5000, 10000 6bills.

	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
★	Reject KZT 200	ON							
★	Accept KZT 200	OFF							
★	Reject KZT 500 & 1000		ON						
★	Accept KZT 500 & 1000		OFF						
★	Reject KZT 2000			ON					
★	Accept KZT 2000			OFF					
★	Reject KZT 5000				ON				
★	Accept KZT 5000				OFF				
★	Reject KZT 10000				ON				
★	Accept KZT 10000				OFF				
★	Disable Bill Reject 4 Times BA Stop By 30 Sec					ON			
★	Enable Bill Reject 4 Times BA Stop By 30 Sec					OFF			
★	Stack Banknote when Power-up						ON		
★	Reject Banknote when Power-up						OFF		
★	Reserved							ON	
★	Reserved							OFF	

This dip switch is located at the side of XBA.

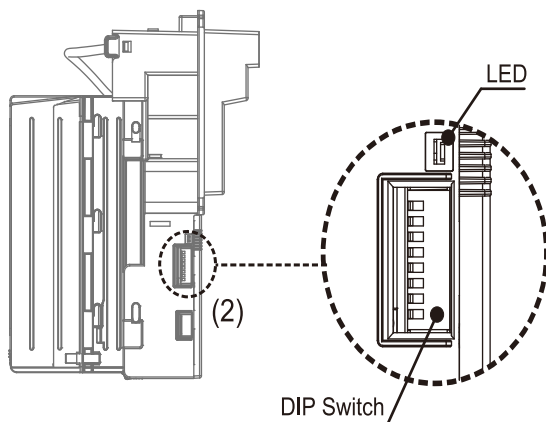


Currency Assign Data

Interface	ICT104U	ICT104V	Pulse	MDB
Bill value				
BV1	KZT 200	KZT 200	KZT 200	KZT 200
BV2	KZT 500	KZT 500	KZT 500	KZT 500
BV3	KZT 1000	KZT 1000	KZT 1000	KZT 1000
BV4	KZT 2000	KZT 2000	KZT 2000	KZT 2000
BV5	KZT 5000	KZT 5000	KZT 5000	KZT 5000
BV6	KZT 10000	KZT 10000	KZT 10000	KZT 10000

XBA-KZT6 (Pulse/MDB/ICT104U/ICT104V)

FUNCTION					SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8		
★	Inhibit Active HIGH				ON									
	Inhibit Active LOW				OFF									
★	Reserved					ON								
	Reserved					OFF								
★	Reserved						ON							
	Reserved						OFF							
★	Reserved							ON						
	Reserved							OFF						
★	Pulse Mode				MDB Mode			ICT104V Mode						
	Credit-Pulse Normal HIGH				Scaling Factor (SF) = 0.01 Decimal Point Position (DPP) = 0			Connect with coin changer					ON	
★	Credit-Pulse Normal LOW				Scaling Factor (SF) = 1 Decimal Point Position (DPP) = 0			Connect with ICT JPSTD converter board		OFF				
	Pulse Mode									ON				
★	Other Mode									OFF				
	Pulse Mode				Other Mode									
★	1 pulse / KZT 100				MDB Mode							OFF	OFF	
	2 pulses / KZT 100				Reserved							OFF	ON	
	5 pulses / KZT 100				ICT104U Mode							ON	OFF	
	20 pulses / KZT 100				ICT104V Mode							ON	ON	

This dip switch is located on the CPU board, remove the CPU board cover first.

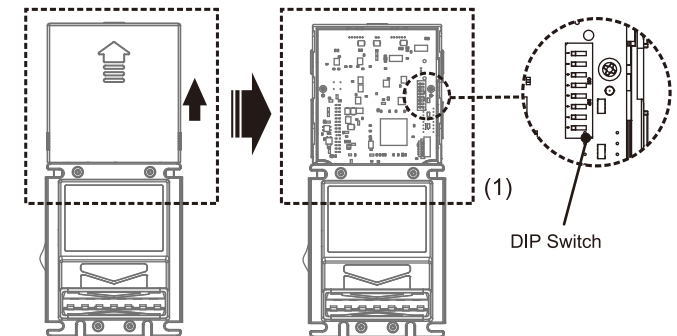

★ Manufacture setting

After setting dip switch of the credit pulses, you should reset the bill acceptor again.

Note : 1. Please reset the bill acceptor after set the dip switch.

2. Dip switches 1 to 5 are only used for pulse protocol.

3. Calibration card is needed.