

KeContact

P40 / P40 Pro Charging Station Operating instructions V 1.04

Translation of the original instructions

Document No.: 131993 | Version published: 08.2025
Document: V 1.04
Pages: 36

© KEBA 2024

Specifications are subject to change due to further technical developments. Details presented may be subject to correction.

All rights reserved.

KEBA Energy Automation GmbH

Reindlstraße 51, 4040 Linz, Austria, www.keba.com/emobility
 +43 732 7090-0,  +43 732 7309-10,  kecontact@keba.com

For information about KEBA and our subsidiaries please look at www.keba.com.

Table of contents

1	Introduction.....	5
1.1	Representation of safety instructions.....	5
1.2	Purpose of the document.....	5
1.3	Intended use	6
1.4	Warranty	6
1.5	Notes on this document	6
2	Safety notes	7
3	Description of the charging station.....	9
3.1	Front view (cable variant).....	9
3.2	Type plates	11
3.3	Product key (variants of the charging station).....	12
4	Status displays	14
4.1	LED bar (status display).....	14
4.2	Displays in event of error	16
5	Integrated energy meter.....	17
5.1	Displays with calibratable energy meter (MID)	18
5.2	Displays with calibrated charging system (MessEV)	18
6	Optional operating elements	19
6.1	RFID reader	19
6.2	Touch button	19
6.3	Smart charging symbol	20
7	Authorization	21
7.1	Displays and signals	21
7.2	Managing (teaching in/deleting) RFID cards.....	22
7.3	RFID authorization in the charging network.....	22
8	Charging process	23
8.1	Starting the charging procedure.....	23
8.2	Ending the charging process	23
9	Error diagnosis	24
10	Short description of the eMobility app	25
10.1	Establishing an app connection via Bluetooth®.....	27
10.2	Establishing an app connection via LAN/WLAN	27

11 Short description of the eMobility portal 28

12 Maintenance..... 29

 12.1 Cleaning..... 29

 12.2 Software update..... 30

13 Disposal..... 32

 Index 33

1 Introduction

This manual is valid for the KeContact P40.

The pictured devices used in this manual are visual examples. The figures and explanations contained in this manual refer to a typical device design. The devices used by you may differ in their appearance.

1.1 Representation of safety instructions

At various points in this manual, you will see notes and precautionary warnings regarding possible hazards. The symbols used have the following meaning:



DANGER!

Indicates an imminently hazardous situation, which will result in death or serious bodily injury if the corresponding precautions are not taken.



WARNING!

Indicates a potentially hazardous situation, which can result in death or serious bodily injury if the corresponding precautions are not taken.



CAUTION!

Means that if the corresponding safety measures are not taken, a potentially hazardous situation can occur that may result in slight bodily injury.

Caution

Means that damage to property can occur if the corresponding safety measures are not taken.



ESD

This symbol reminds you of the possible consequences of touching electrostatically sensitive components.

Information

Identifies practical tips and useful information. No information that warns about potentially dangerous or harmful functions is contained.

1.2 Purpose of the document

This document contains information for people who want to operate a KeContact P40 charging station.

1.3 Intended use

The charging station is intended for charging electrically powered vehicles (e.g. e-cars). The connection of other devices (such as power tools) is not allowed.

Vehicle charging which requires ventilation is not supported.

KeContact P40 has been developed, manufactured, tested and documented in accordance with the appropriate safety standards. Therefore, provided that the instructions and safety precautions relating to the intended use are observed, the products do not pose any danger to the health of personnel or a risk of damage to other property or equipment under normal circumstances.

1.4 Warranty

Only general maintenance work that is expressly permitted by the manufacturer may be performed. Any other tampering to the device will result in a loss of the warranty claim.

A device with a broken manufacturer's seal or removed lead seal may no longer be put into operation. The necessary steps must be taken for having the charging station replaced or repaired by a specialist dealer or service partner.

1.5 Notes on this document

The manuals are part of the product and must be downloaded, read and understood before initial use.

The current manuals can be downloaded directly from our homepage:
www.keba.com/emobility-downloads

The downloaded manuals must be kept for the entire life of the product. If you require the information in another language, please contact your customer advisor.

Contents of the document

- Description of the charging station
- Operating behavior of the charging station
- Operation of the charging station

Mention of names

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by KEBA is under license. Other trademarks and trade names are those of their respective owners.

2 Safety notes



WARNING!

Risk of electric shock and fire hazard!

- All work on the charging station that requires opening the protective cover must be performed by correctly trained, qualified and authorized electricians¹⁾ who are fully responsible for compliance with existing standards, tests and installation regulations.
 - An upstream main switch must be used to interrupt the power supply.
 - The charging station may only be installed and operated in a perfect condition. A damaged charging station must be promptly taken out of service and repaired or replaced by a qualified and authorized electrician¹⁾.
 - Repairs may only be made to the charging station by trained electricians¹⁾ with replacement parts approved by the manufacturer and checked before installation.
 - No unauthorized conversion work or modifications may be made to the charging station.
 - The charging station may only be stored and transported with the protective cover closed and in the original packaging.
 - Markings must not be removed from the charging station or made illegible.
 - The charging station and charging cable must be checked regularly to ensure that they are in proper condition. Never use faulty, worn-out or dirty charging plugs or charging cables.
 - Using cable extension sets or adapters of any kind is prohibited.
 - Charging a defective vehicle is prohibited, especially if the electrical installation for charging the vehicle battery or the parking safety system is defective and could cause the vehicle to roll away.
 - It is prohibited to light fires or heat materials with open flames within 5 meters of the charging station, as well as to store flammable materials or pour flammable liquids near the charging station.
-

¹⁾ Persons who, due to their special training, expertise and experience as well as knowledge of current standards, are able to assess the work performed and the possible hazards.



CAUTION!

Risk of injury!

Children must be supervised while using the charging station or when plugging and unplugging the charging cable, as minors, and especially children, cannot fully assess potential dangers, such as strangulation or electrical hazards. Parents are responsible for their children!

Caution**Possible damage to property!**


- When the charging cable is not in use, always plug it into the plug holder or use a suitable plug protective cover.
 - Pull the charging cable out of the plug holder only by the plug and not by the cable.
 - Do not place or hang any objects on the charging station or plug holder and do not use these as climbing aids.
 - Clean the charging station using only a soft, damp cloth, with a little detergent as needed.
-

Not observing the safety notes can result in risk of death, injuries and damage to the device!

The device manufacturer does not accept any liability for claims that result from non-compliance with the safety notes!

3 Description of the charging station

3.1 Front view (cable variant)

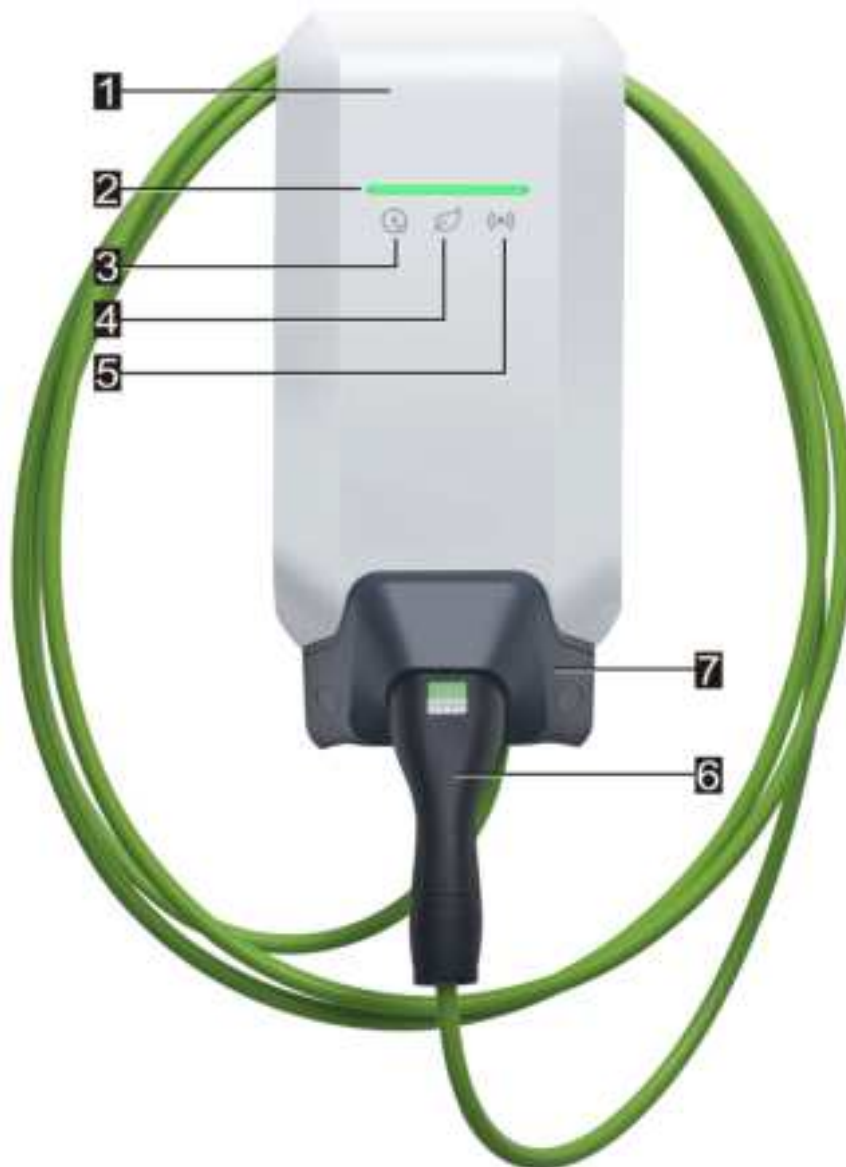

1 ... Housing cover	2 ... LED bar (status display)
3 ... Touch button	4 ... Smart charging symbol
5 ... RFID reader	6 ... Charging plug with charging cable
7 ... Plug holder	

Depending on the design of the charging station, the colors or functions may differ from the illustration.

Plug holder




The plug holder for the charging cable can be installed directly beneath or separately from the charging station.

Information

If the plug holder for the charging cable is installed directly beneath the charging station, it can be used to secure the housing cover.

3.2 Type plates

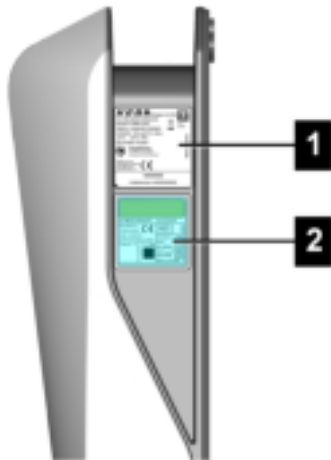

1 ... Type plate of the charging station	2 ... Type plate of the installed KC-MS10 module
--	--

The two type plates are located on the right side of the charging station.

Information


The type plates shown below represent the maximum characteristics. Type plates may contain less data depending on the device variant.

Type plate of the charging station



1 ... Manufacturer	2 ... Product key
3 ... Serial number / Material number	4 ... Electrical data
5 ... ClimatePartner certification	6 ... CE marking
7 ... Manufacturer address	8 ... Operator information
9 ... Country of manufacture	10 ... Production location and date
11 ... Production code	

Type plate of the KC-MS10

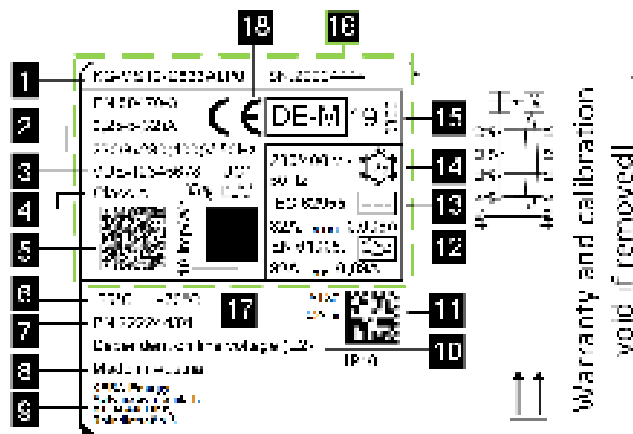

1 ... Product key / Serial number	2 ... Electrical data
3 ... Type examination number	4 ... Accuracy class
5 ... Public key information	6 ... Operating temperature range
7 ... Material number	8 ... Country of manufacture
9 ... Manufacturer address	10 ... Production location and date
11 ... Production code	12 ... Electrical data RCD (Residual current detection)
13 ... Electrical data RDC (DC fault current monitoring)	14 ... Electrical data RCD+RDC
15 ... Metrology marking	16 ... Part of the type plate visible through the window in the outer housing
17 ... Meter constant	
18 ... CE marking	

3.3 Product key (variants of the charging station)

KC-P40- 32 EU 0 - C 6 S 3 A L P 0 - L S 1 R 1 1 1 1 B L 0 - xxxx
 I II III IV V VI VII VIII IX X XI XII XIII XIV XV XVI XVII XVIII XIX XX XXI XXII XXIII XXIV

Form designation system (example)			
I	Device series	KC-P40	...Device generation
II	Nominal current	16 32	...16 A ...32 A
III	Region	EU GB	...Europe ...Great Britain
IV	Future options	0	...none
V	Connector	C P T N	...type 2 cable ...type 2 cable with protective cap ...type 2 cable with shutter ...cable variant, no cable attached
VI	Cable	0 4 6	...no cable ...cable 4m ...cable 6m

VII	Phases	1 3 S	...1 phase ...3 phases ...3 phases→1 phase (phase switching)
VIII	Maximum Charging Current	1 3	...16 A ...32 A
IX	RCD functionality	A D	...RCCB Type A + RDC-DD ...RDC-DD
X	Metering	0 E M L	...not equipped ...functional, not calibrated ...MID (Measuring Instruments Directive) certified ...MessEV (Mess- und Eichverordnung) certified
XI	PLC	0 P	...not equipped ...PLC communication
XII	Future options	0	...none
XIII	LAN	0 L	...not equipped ...LAN interface
XIV	Serial meter interface	0 S	...not equipped ...Serial meter interface (RS485)
XV	I/O interface	0 1	...not equipped ...Switch contact inputs and output
XVI	RFID	0 R	...not equipped ...RFID functionality
XVII	SRWC	0 1	...not equipped ...Short range wireless communication (Bluetooth®)
XVIII	WLAN	0 1	...not equipped ...WLAN module
XIX	Mobile communication	0 1	...not equipped ...LTE module (4G)
XX	Processing unit	0 1	...Variant 0 ...Variant 1
XXI	Touch button	0 B	...not equipped ...Touch button
XXII	User interface	L	...LED
XXIII	Future options	0	...None
XXIV	Customer options	xxxx	Options for individual customer versions, not relevant for EU declaration of conformity


4 Status displays

The charging station has an LED bar for the display of the operating states and a smart charging symbol (optional) for the display of an intelligent charging current specification.

Audio signals

The installed buzzer uses various audio signals to aid in operation based on the operating state.

4.1 LED bar (status display)

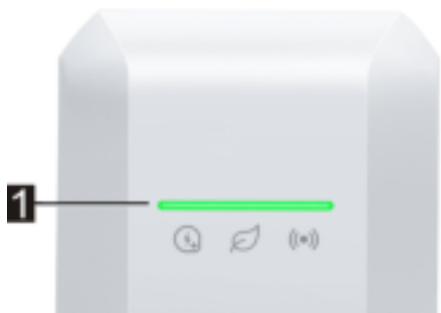

The LED bar (1) provides visual information about the current operating state of the charging station and can light up, flash or pulse in different colors.

The LED bar is only visible with activated power supply.

Information on the display of status displays




	Indicates that the LED bar lights up continuously.
	Indicates that the LED bar flashes in different manners or speeds.
	Indicates that the LED bar pulses at a consistent speed.

Example

A timeline diagram showing a sequence of events over 5 seconds. The timeline is marked from 0s to 5s in 1s increments. A green bar is shown from 0s to 0.5s, and another green bar is shown from 4.5s to 5s. An arrow points from the second bar to a starburst icon, indicating a flashing state.

The light pattern explanations are shown in a short time sequence for a duration of 5 seconds. The example shows that the entire LED bar flashes green for 0.5 seconds every 5 seconds.

Common operating states

LED bar	Description
 Flashing orange	- The charging station is being started. - The charging station is performing a self-test upon start-up (with audio signal). - Software update of parts of the charging station related to safety technology or measuring technology.
 Flashing green (very slow)	Charging station is ready and no vehicle is connected. No authorization is required.
 Illuminated green	Charging station is ready, a vehicle is connected but has not yet requested charging. No authorization is required.
 Pulsing green Optional 	The vehicle is charged. If the smart charging symbol is also flashing, smart charging current control is also active and limits the possible charging current.
 Flashing green	- Charging station is ready, a vehicle is connected but has not requested charging in the last 5 minutes. - The charging process request was ended by the vehicle. - The charging process is blocked by the charging station (e.g. vehicle not ready, switch contact input or load management specification).
 Flashing green (one cycle)	KEBA eMobility App can be used to start identification of the charging station. The charging station emits a short flashing signal and audio signal in order to be identified.
 Flashing blue (very slow)	The charging station is ready but no vehicle is connected. Authorization is required.
 Illuminated blue	Charging station is ready, vehicle is connected but authorization has not yet been performed via RFID card or switch contact input.
 Flashing blue	Charging station is ready but authorization was not performed within 5 minutes.
 Flashing blue	The RFID card has been read and is being checked for validity (with audio signal).
 Flashing blue/green (one cycle)	The RFID card has been accepted and the charging process can start (with audio signal).
 Flashing blue/orange (one cycle)	The RFID card has been rejected (with audio signal).

4.2 Displays in event of error

LED bar	Description
 Flashing orange	The charging station has detected an error (e.g. temperature too high) and attempts to remedy it. The status flashes until the error has been remedied. No activity by the operator required.
 Flashing red	Error that requires an action (with one-time audio signal after occurrence of the error). Possible actions by the operator: • Unplug the charging plug and plug it back in. • Restart the charging station by switching the upstream disconnection device (e.g. circuit breaker) of the supply line off and on again. • Residual current device (RCD) has tripped. Check the plug and cable for damage and repeat the charging process. If the error occurs more frequently, have the vehicle checked.
 Flashing red	Serious error (with one-time audio signal after occurrence of the error). 1) Switch off the power supply to the charging station by switching off the upstream disconnection device (e.g. circuit breaker) on the supply line. 2) Have the charging station checked by an electrician.
 No display	No power supply or defect.

5 Integrated energy meter



A charging station with an (optional) **calibrated** energy meter has a two-line LCD display on the right side. This display shows the status of the energy meter and additional information.

The energy meter measures only the energy that is actually transmitted to the vehicle. The energy for the charging station's internal power supply is not recorded by the energy meter.

- **Functional energy meter:**
Variants with this option are used for informative analysis of energy transmitted.
- **Calibrated energy meter:**
Variants with this option are suitable for the measurement of active energy in accordance with MID or MessEV. With these devices, there is a corresponding identifier on the type plate.

Information

Calibratable energy meters have additional requirements for installation and operation.

Information on this is available on our website:

www.keba.com/emobility-downloads

5.1 Displays with calibratable energy meter (MID)

Display		Description
		The backlighting of the display is activated by certain "triggers:" - Restart of the charging station. - Plugging and unplugging the charging cable. - Start and end of the charging session.
Line 1:	99999.9999 kWh	Total sum of the energy registered by the device in [kWh] for all charging sessions to date.
Line 2:	01.00.00	Firmware version
	AB12	Checksum
	*	New log entry present.
	Error	Relevant error on the KC-MS10, the module is out of operation. Operation can only be restored by replacing the charging station or the KC-MS10 module. If an energy meter reading is displayed, this count value is correct despite the error.


5.2 Displays with calibrated charging system (MessEV)

Display		Description
		The backlighting of the display is activated by certain "triggers:" - Restart of the charging station. - Plugging and unplugging the charging cable. - Start and end of the charging session.
Line 1:	99999.9999 kWh	Total sum of the energy registered by the device in [kWh] for all charging sessions to date..
	 00000.0000 kWh	Transmitted energy in [kWh] for the current charging session. Value indicated by a plug symbol during the charging session.
Line 2:	01.00.00	Firmware version
	AB12	Checksum
	Error	Relevant error on the KC-MS10, the module is out of operation. Operation can only be restored by replacing the charging station or the KC-MS10 module.
	ID: xxxx	Identification data for the current charging session, for traceability of the transaction in billing. Display during the charging session and for 60s after the end of the charging session.
Line 3:	*	New log entry present. Display is reset on restart.
	2024-06-20 T12:00:00	Current system time (YYYY-MM-DD T HH:MM:SS) End of charge: Timestamp at the end of charging for 60s.

6 Optional operating elements


The pictured devices used in this manual are visual examples. The figures and explanations contained in this manual refer to a typical device design. The devices used by you may differ in their appearance.

6.1 RFID reader

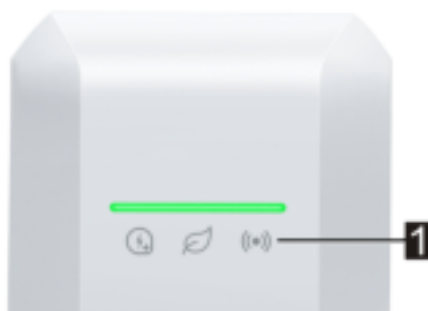

The RFID reader (1) is used for non-contact authorization of a charging process using cards, tags or a smartphone in accordance with ISO 14443 and ISO 15693.

6.2 Touch button

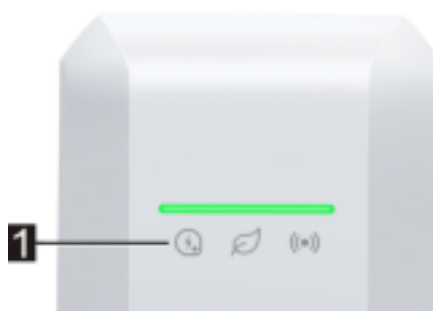

If the charging current is limited by a smart charging current specification, the smart charging symbol lights up. In this case, the charging current limit can be waived once for the current charging session using the touch button (1) (contact surface), if this is permitted by the grid operator. This charges the vehicle faster, if needed.

6.3 Smart charging symbol



The smart charging symbol (1) indicates whether smart charging current specifications are currently reducing the maximum charging power. This can cause the charging process to take longer.

Display	Description
 No display	The charging station operates with the full, pre-configured power.
  Green / blue	Smart charging current control is active and limits the possible charging current (PV-optimized charging, switch contact input, OCPP charging profile, etc.). This makes the charging process take longer. Color and animation follow the display on the light bar.
 Orange	The charging current is currently limited because there is no connection to the higher-level control system (e.g. due to a network problem). The animation follows the display on the light bar.
 Red	The charging station is in a critical error state. The animation follows the display on the light bar.

7 Authorization

This section deals with the possible authorization functions of the charging station, depending on the device variant:


Authorization	KeContact P40	KeContact P40 Pro
Switching contact input X1.x	•	•
RFID module	Option	•
Management of up to 1000 RFID cards	Option	•

Authorization via switch contact input

With the switch contact input, it is possible to authorize the charging process via external components (e.g. house control). For more information, see the "Installation Manual".

7.1 Displays and signals

During authorization, the charging station can display different light patterns on the LED bar. Depending on the operating state, additional audible signals support operation.

 Flashing blue (very slow)	The charging station is ready but no vehicle is connected. Authorization is required.
 Illuminated blue	Charging station is ready, vehicle is connected but authorization has not yet been performed via RFID card or switch contact input.
 Flashing blue	Charging station is ready but authorization was not performed within 5 minutes.
 Flashing blue	The RFID card has been read and is being checked for validity (with audio signal).
 Flashing blue/green (one cycle)	The RFID card has been accepted and the charging process can start (with audio signal).
 Flashing blue/orange (one cycle)	The RFID card has been rejected (with audio signal).

7.2 Managing (teaching in/deleting) RFID cards

By default, a charging procedure can be started without authorization. In order to use the authorization via RFID, RFID cards first need to be taught in.

KEBA eMobility App or the optional KEBA eMobility Portal can be used for managing (teaching in or deleting) RFID cards.

7.3 RFID authorization in the charging network

If a KeContact P40 charging station is operating as a **client** of a charging network, all RFID cards must be taught in to the master device (e.g.: KeContact M20). The permitted RFID cards for the entire charging network must be managed on the master device.

A KeContact P40 charging station cannot take over the function of a master in a charging network.

8 Charging process

8.1 Starting the charging procedure

The starting of a charging process depends on whether the charging station has authorization. This is visible on the LED bar:

Display	Description
 Illuminated blue	The charging station is waiting for authorization to enable a charging session. Authorization necessary either via RFID card or switch contact input.
 Illuminated green	No authorization required to start the charging session.

Starting the charging procedure

To start the charging process, proceed as follows:



1) Plug the charging cable into the vehicle.

2) At charging station with authorization:



Perform authorization at the charging station by holding up an RFID card. If the charging station is authorized without a vehicle plugged in, a vehicle can be plugged in for 5 minutes and this will start a charging session.

The charging process can now be started by the vehicle.

If an interruption occurs during the charging process, the charging station will automatically attempt to restart the procedure (max. 5 times). If the charging process cannot be started after 5 attempts, the charging station goes into an error state. This can be remedied by properly terminating the charging process. If the error occurs repeatedly, please contact your service partner.

8.2 Ending the charging process

To end the charging process, proceed as follows:

- 1) End the charging process on the vehicle.
- 2) Unplug the charging cable from the vehicle.
- 3) Stow the charging cable and plug the charging plug into the plug holder of the charging station.

The charging process is completed.

9 Error diagnosis

Errors	Possible causes	Remedy
LED bar does not light up	No supply voltage.	Check the cut-off device (e.g. circuit breaker) of the supply line and switch it on if necessary.
	The charging station is faulty.	Contact your service partner.
Charging process is not started	The charging cable is not plugged in correctly.	Unplug the charging cable and plug it in again.
	The charging process was not carried out correctly.	Follow the instructions in " 8 Charging process ".
	The charging plug or charging socket may be dirty or damaged.	Visual inspection for soiling, wear or damage. Clean dirty parts or have damaged parts replaced.
	The vehicle does not require energy or it has an error.	Check the vehicle.
	The vehicle is programmed to charge at a later starting time.	Check the settings in the vehicle.
	Lack of enable signal due to external control device (house control, photovoltaic system, etc.)	-
The vehicle not fully charged / longer charging time	Electricity reduction or interruption of the charging process by vehicle or charging station due to high temperature.	When the charging station has cooled down, the charging process is continued and the charging current may be increased again. Protect the vehicle and charging station from direct sunlight during the charging process (carport, garage, etc.).
	Electricity reduction by charging current specification (house control, PV system, etc.)	Check the configuration.
Charging cable cannot be unplugged	Charging process was not completed by the vehicle.	Complete the charging process as per the vehicle manufacturer's instructions.
	The charging socket may not unlock due to tensile stress on the charging cable.	Push the charging plug into the charging socket and start and end the charging process again.
LED bar flashes red	Error (see " 4.2 Displays in event of error ")	Errors must always be acknowledged by unplugging the charging cable.
		Switch off the power supply of the charging station. Disconnect the charging cable from the vehicle. Switch the power supply back on.
	The charging station is faulty.	Contact your service partner.

If you have any questions or problems, please contact your service partner. For this purpose, make a note of the product designation and serial number of the device (see "[3.2 Type plates](#)").

10 Short description of the eMobility app

The KEBA eMobility App is an extended user interface for the charging station and can be used for the following applications:



- View the current status.
- Start and stop charging processes.
- View information on past charging sessions.
- Set the charging power.
- Use comprehensive configuration options.
- Manage RFID cards.
- Perform a software update.

Connection options for the KEBA eMobility App:

- Local connection via Bluetooth® wireless technology.
- Connection via LAN/WLAN in own network.
- Connection of a smartphone to the charging station worldwide via the Internet (remote access). For this, the charging station must be connected to the Internet.
- KEBA eMobility Portal

Downloading the app		
 Download page of the manufacturer	http://www.keba.com/emobility-app	
	https://play.google.com/store/apps/details?id=com.keba.emobility.app	
	https://apps.apple.com/us/app/keba-emobility-app/id1614805616	
Google™, Google Play™ and their logos are trademarks of Google Inc in the US and other countries. Apple®, App Store® and their logos are registered trademarks of Apple Inc in the US and other countries.		

Operating mode and configuration options of the app

The initial network settings of the charging station can only be configured on site via a Bluetooth® connection. For the charging station's extended scope of configuration, a connection between the app and charging station via LAN, WLAN or WLAN hotspot is required.

App mode	Connection	Remarks
Setup guide	Bluetooth®	Selection of the charging station and connection. Access protection: - Bluetooth® PIN + User PWD password (see sticker on the back side of the included short manual) - Alternative: Scan QR code (see sticker on the back side of the included short manual)
Network configuration wizard	Bluetooth®	Configuration of the network connection (LAN, WLAN or WLAN hotspot).
Installer mode	Bluetooth®	Basic electrical settings of the charging station. Access protection: - Service key in the charging station and Installer PWD password (see sticker on the back side of the included short manual) Possible settings are: - Maximum charging current - Power supply - Phase rotation - Avoid asymmetrical loads - Switch contact inputs (X1a, X1b) and switch contact output (X2), with the option to lock them.
User mode	LAN, WLAN, WLAN hotspot	Full app functionality and full scope of settings. Access protection: User PWD password (see sticker on the back side of the included short manual) Possible settings are: - Start and stop charging processes - Comprehensive configuration options (interfaces) - RFID card management - And much more

10.1 Establishing an app connection via Bluetooth®

For the initial use of the KEBA eMobility App and for configuring or operating the charging station, proceed as follows:

- 1) Install the KEBA eMobility App on your mobile device.
- 2) Switch on the mobile device's Bluetooth® function.
- 3) The power supply for the charging station must be switched on. The integrated Bluetooth® function is activated by default upon delivery. If the Bluetooth® function is deactivated, it can be activated using a LAN/WLAN connection or by activating installation mode (directly at the device).
- 4) Be within a distance of maximum 10 m from the charging station to enable wireless communication.
- 5) Open the KEBA eMobility App.
- 6) Select the corresponding charging station or add a new charging station using the **[+]** button.
- 7) For a newly added charging station, enter the **PIN** of the charging station (see sticker on the back side of the included short manual).
- 8) Select the **"User"** or **"Installer"** role and enter the corresponding User PWD/Installer PWD password (see sticker on the back side of the included short manual).

The connection to the charging station is established.

10.2 Establishing an app connection via LAN/WLAN

To configure a LAN or WLAN connection for the first time, proceed as follows:

- 1) Move within 10 m of the charging station to enable radio communication.
- 2) Open the KEBA eMobility App and establish a Bluetooth® connection to the charging station.
- 3) In the KEBA eMobility App run the „**Network-Configuration-Wizard**“ and make the desired LAN/WLAN settings.

The charging station can then be reached via a LAN/WLAN connection.

If the connection has already been established via a LAN/WLAN network with the mobile device used, the charging station remembers this connection data. To use the app, proceed as follows:

- 1) Start the KEBA eMobility App and establish the connection to the charging station. Re-entering the PIN is not necessary.

The connection to the charging station is established.

11 Short description of the eMobility portal

The KEBA eMobility Portal (<https://emobility-portal.keba.com/>) is next to the KEBA eMobility App the digital interface between you and your charging station or entire charging networks. Once logged in, you can use a variety of functions on your PC or tablet:



- Management of charging stations at different locations
- View details of connected charging stations (charging sessions)
- One-click software update
- Planning charging time windows with defined maximum power (charging profiles)
- RFID card management
- Filter charging sessions by RFID cards, charging stations, etc.
- Creating reports and statistics
- Automatic charging reports via email
- Advanced configuration options
- Invite additional users with different roles and rights

Using the KEBA eMobility Portal for the first time

- 1) Creating a new portal account in the KEBA eMobility Portal under:
<https://emobility-portal.keba.com/>
The person who creates the portal account receives the role of “owner” of the portal account.
- 2) Optional: In the created portal account, additional users with different roles (rights) can be invited. Charging stations can then be assigned to these users.

Register the charging station in the KEBA eMobility Portal

Requirements:

- The charging station must be operational and connected to the Internet via LAN or WLAN.
- The charging station and the mobile device with the installed KEBA eMobility App must be in the same network.
- Portal account and optional users were created in the KEBA eMobility Portal.

To register the charging station in the KEBA eMobility Portal, proceed as follows:

- 1) Log in to the charging station via LAN or WLAN using the KEBA eMobility App.
- 2) Register the charging station using the app (“Add Wallbox to portal account” menu item) in the KEBA eMobility Portal. To do this, follow the instructions on the screen.

Information

The KEBA eMobility Portal and another OCPP backend cannot be used at the same time.

12 Maintenance

Visual inspection

The hardware of the charging station is generally maintenance-free, but must be checked regularly by the customer or system operator for defects in the charging plug (including charging cable) and damage to the housing (visual inspection).

Notes on proper handling

- In order to extend the service life of the charging cable and avoid damage, it should not be bent, pinched, dragged over the ground or driven over.
- The contact area of the charging plug should not come into contact with heat sources, dirt or water.
- If the charging plug is not being used, always plug it into the plug holder or put a protective cap on it.

12.1 Cleaning

Caution

Risk of damage to the housing!

Use a soft, damp cloth to clean the charging station. Stubborn dirt can be removed using a mild, solvent-free, non-scouring cleaning agent. The cleaning agent must not contain any anionic surfactants.

- Regularly clean the exterior housing parts.
- If the cleaning notes are not observed, severe contamination (especially bird droppings) can lead to discoloration, yellowing and damage to the housing material.

12.2 Software update

The software of the charging station is subject to mandatory updates in accordance with the EU Directives "Sale of goods 2019/771" and "Digital content 2019/770" and their national versions.

The software of the charging station must therefore always be kept up to date, as updates may contain safety updates, function extensions and bug fixes.

A software update can be obtained through the following sources:

- KEBA eMobility App
- KEBA eMobility Portal
- Download address: www.keba.com/emobility-downloads
- OCPP backend

The information and instructions for the current software package from the associated release notes must be observed.

Information

- A software update is only performed if a vehicle is not connected to the charging station.
- Software updates may take some time. The update process is indicated by a slow orange flashing of the LED bar.
- The power supply must not be interrupted during the software update. Otherwise, the software update will not end correctly and continued normal operation of the charging station is no longer ensured.
- After the software update, the charging station restarts automatically.

Software update with KEBA eMobility App

To update the software of the charging station, proceed as follows:

- 1) Open KEBA eMobility App and connect with the charging station.
- 2) A more recent software version is shown in the app. The update process can be started directly from there.

Alternative:

- 1) Download a software update package from the manufacturer's website and copy it to the mobile device.
- 2) Open KEBA eMobility App and connect with the charging station.
- 3) Manually select the software update package in the app and transfer it to the charging station.

Depending on the device variant, the charging station may be integrated into the network differently:

- LAN connection
- WLAN connection

Software update via KEBA eMobility Portal

If the charging station is registered in KEBA eMobility Portal and connected with it, a software update can be initiated conveniently through the portal.

In the portal, the RAUC update method can also be selected, for example. Using this method, files are only transferred for which the charging station does not yet have the latest version.

Software update via OCPP backend

A software update for the entire charging network can be executed via the OCPP backend.

An HTTP link is required for the software update. The HTTP link is located with the information available for download along with the software update on our website.

Details on using the HTTP link can be found in the instructions for the OCPP backend.

13 Disposal

Caution

Please observe the regulations regarding disposal of electric appliances and electronic devices!



- The symbol with the crossed-out waste container means that electrical and electronic devices including their accessories must not be disposed of in the household garbage.
- The materials are recyclable in accordance with their labeling. You can make an important contribution to protecting our environment by reusing, renewing and recycling materials and old appliances.

Sustainability

Please consider the environment. The device contains valuable raw materials which should be recycled.

Index

A

App	
Connection via Bluetooth®	27
Establishing an app connection via LAN/ WLAN	27
Audio signals	14
Authorization	21
LED bar	21

B

Buzzer	14
--------------	----

C

Cleaning	29
----------------	----

E

Ending the charging process	23
Energy meter	17
MID:Displays	18
Error handling	24

F

Front view of the charging station	9
--	---

I

Information on this document	6
Intended use	6

L

LED bar	14
Authorization functions	15, 21
Common operating states	15
Display information	14
Error states	16

M

Maintenance	29
Visual inspection	29

N

Notes on proper handling	29
--------------------------------	----

O

Operation with the app	25
------------------------------	----

P

Plug holder	10
-------------------	----

R

RFID	19
Authorization	21
Authorization in the charging network ..	22
Managing cards	22

S

Safety notes	7
Service partner	24
Smart charging symbol	20
Software update	30
Starting the charging procedure	23

T

Touch button	19
Type plates	
Charging station	11
Position	11

KEBA Energy Automation GmbH
Reindlstraße 51
4040 Linz / Austria
www.keba.com

