



## magicplux MGP-IM12-SG Portable Automatic Ice Maker Instruction Manual

[Home](#) » [magicplux](#) » magicplux MGP-IM12-SG Portable Automatic Ice Maker Instruction Manual 

# magicplux

PORTABLE AUTOMATIC ICE MAKER  
INSTRUCTION MANUAL  
MGP-IM12/SG



It is important that you read these instructions before using your portable ice maker and we strongly recommend that you keep them in a safe place for future reference.


## Contents

- 1 PREPARING YOUR ICE MAKER FOR USE
- 2 GETTING TO KNOW YOUR UNIT
- 3 Automatic self-cleaning program
- 4 OPERATING PROCEDURES & MAINTENANCE
- 5 USING YOUR ICE MAKER
- 6 TROUBLESHOOTING
- 7 TECHNICAL PARAMETERS & CIRCUIT DIAGRAM
- 8 Documents / Resources
  - 8.1 References

## PREPARING YOUR ICE MAKER FOR USE

**Your safety and the safety of others are very important.**

We have provided many important safety messages manual and your appliance. Always read and obey all safety messages.

This is the safety alert symbol: 

All safety messages will follow the safety alert symbol and the word “DANGER” or “WARNING”.



These words mean:

You can be killed or seriously injured if you don't immediately follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

When using electrical appliances, basic safety precautions should be followed to reduce the risk of fire, electric shock, and injury to persons or property. Read all instructions before using any appliance.

- Do not operate this, or any other appliance with a damaged cord.  
If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. This ice-maker must be positioned so that the plug is accessible . Connect to properly polarized outlets only. No other appliance should be plugged into the same outlet. Be sure that the plug is fully inserted into the receptacle.
- Do not run the power cord over carpeting or other heat insulators. Do not cover the cord. Keep cord away from traffic areas, and do not submerge in water.
- We do not recommend the use of an extension cord, as it may overheat and become a risk of fire. If you must use an extension cord, use No.14AWG minimum size and rated no less than 1875 watts.
- Unplug the ice maker before cleaning or making any repairs or servicing.
- Exercise caution and use reasonable supervision when appliance is used near children.
- Do not use your ice-maker outdoors. Place the ice-maker away from direct sunlight and make sure that there is at least 4 inches of space between the back of your unit and wall.  
Keep a minimum distance of 4 inches on each side of your unit free.

- Do not use other liquid to make the ice-cube other than water.
- Do not clean your ice maker with flammable fluids. The fumes can create a fire hazard or explosion,
- Do not tip over.
- If the ice maker is brought in from outside in wintertime, give it a few hours to warm up to room temperature before plugging it in.

**WARNING:** This appliance must be earthed.

- **DANGER** — Risk Of Fire or Explosion. Flammable Refrigerant Used. Do Not Use Mechanical Devices To Defrost Ice Maker. Do Not Puncture Refrigerant Tubing.



- **DANGER** — Risk Of Fire Or Explosion. Flammable Refrigerant Used. To Be Repaired Only By Trained Service Personnel. Do Not Puncture Refrigerant Tubing.
- **CAUTION** — Risk Of Fire Or Explosion. Flammable Refrigerant Used. Consult Repair Manual/Owner's Guide Before Attempting To Install or Service This Product. All Safety Precautions Must be Followed.
- **CAUTION** — Risk Of Fire Or Explosion. Dispose Of Property In Accordance With Federal Or Local Regulations. Flammable Refrigerant Used .
- **CAUTION-Risk** Of Fire Or Explosion Due To Puncture Of Refrigerant Tubing; Follow Handling Instructions Carefully. Flammable Refrigerant Used.
- The ice maker should be installed in accordance with the safety standard for Refrigeration Systems, ASHRAE15. The ice maker shall not be installed in corridors or hallways of public buildings.
- If the unit is with problem need to be maintained, that replacing with like components and that servicing shall be done by factory authorized service personnel, so as to minimize the risk of possible ignition due to incorrect parts or improper service.

#### **IMPORTANT:**

The wires in this mains lead are colored in accordance with the following code:

Green or Green with a strip yellow: Grounding

White: Neutral


Black: Live

To avoid a hazard due to instability of the appliance, it must be placed at an even or flat surface.

## **GETTING TO KNOW YOUR UNIT**

### **General instruction**

1. Ice shovel
2. Ice full sensor
3. Ice basket
4. Top cover with transparent window
5. Air exhausting
6. Water drain cap: at front btm side of the unit
7. Ice basket handle
8. Ice scoop
9. MAXIMUM WATER LEVEL: ————— ▼ ————— Remove the ice basket, you can see the water level mark.
10. Handle

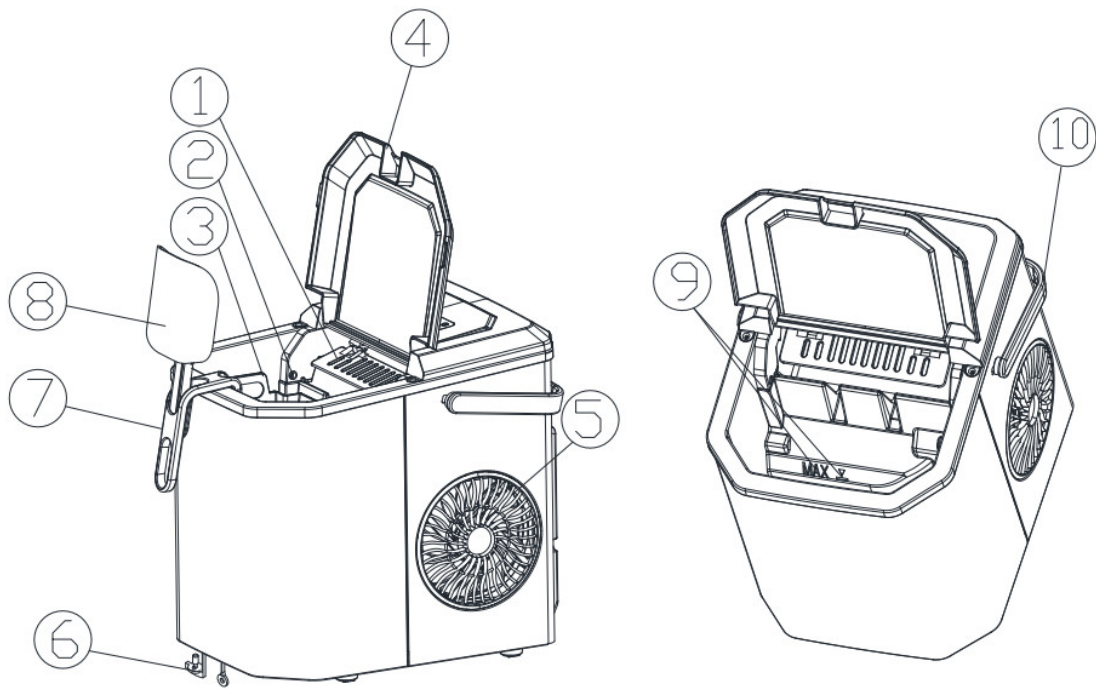

### Automatic self-cleaning program


Plug on the unit.press” ON/OFF “button on control panel for more than 5 seconds, to enter the self-Cleaning program need 30 minutes ,the “SMALL ICE.LARGE ICE” indicator flashes in turn during cleaning.After cleaning, Drain the water from the inner tank through the drainage outlet at the bottom of the machine.

### OPERATING PROCEDURES & MAINTENANCE

#### Position of control panel & function

Control Panel: Easy to use, visible functions touch display setting.

- A. Selected ice size displaying: SMALL ICE and LARGE ICE
- B. Power ndicator
- C. Ice-Full indicator
- D. Water shortage indicator
- E. Button to turn on/off the unit.
- F. Button to select ice cube size.

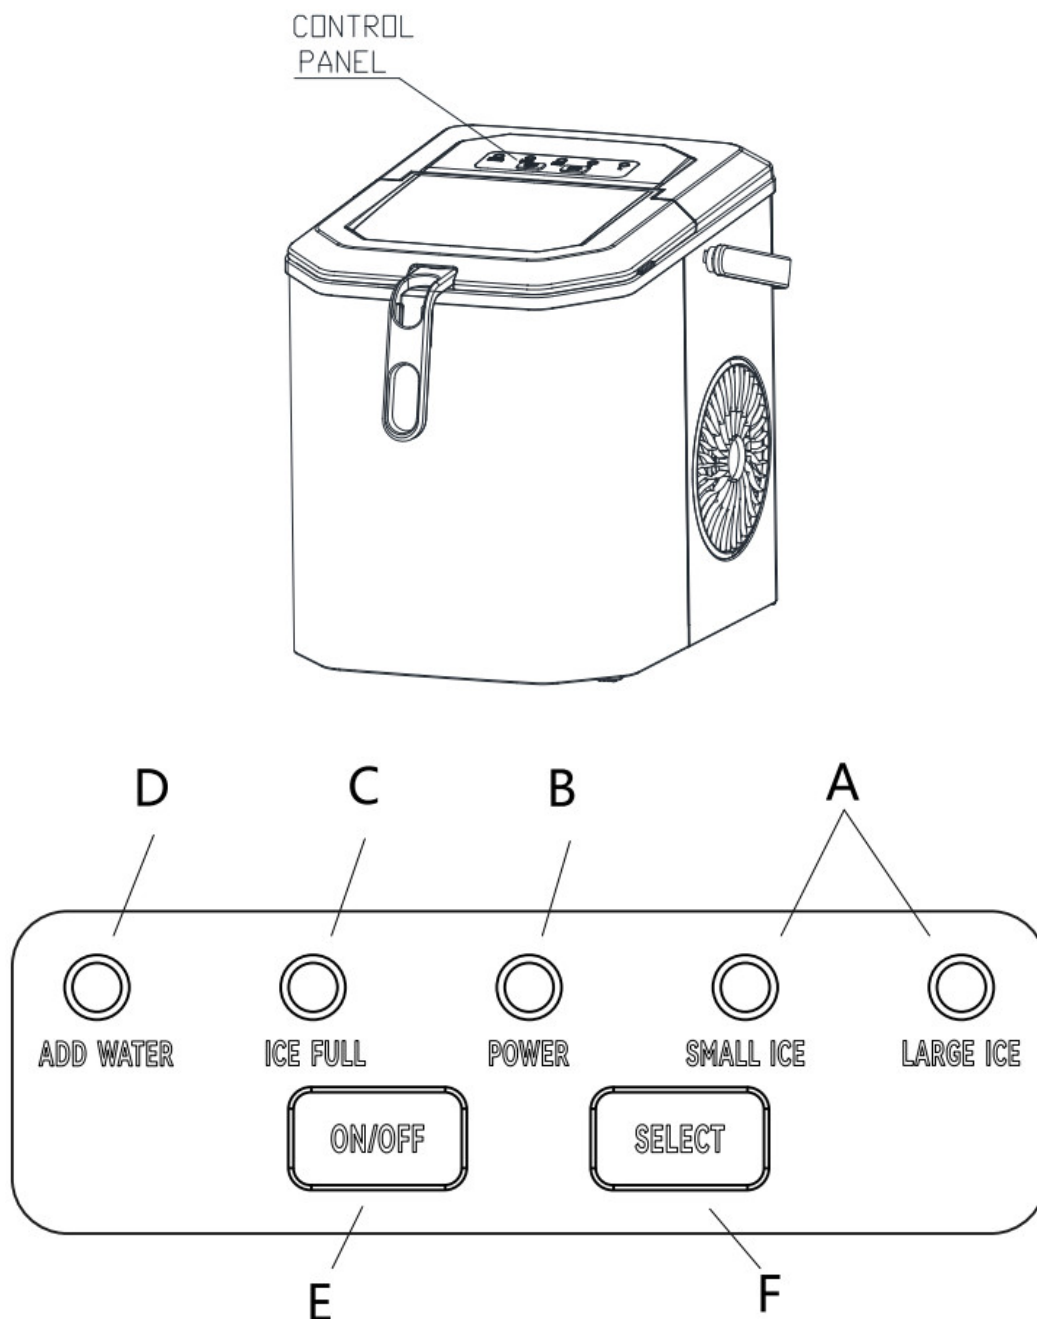


## UNPACKING YOUR ICE MAKER

1. Remove the exterior and interior packaging. Check if ice basket and ice scoop inside. If any parts are missing, please contact our customer service.
2. Remove the tapes for fixing ice shovel, ice basket & ice scoop. Clean the tank & ice basket.
3. Put the ice maker on a level & flat counter top without direct sunlight and other sources of heat (i.e.: stove, furnace, radiator). Make sure that there is at least 4 inches gap between the back & LH/RH sides with the wall.
4. Allow one hour for the refrigerant fluid to settle before plugging the ice maker in.
5. The appliance must be positioned so that the plug is accessible.


**WARNING:** fill with potable water only. Only use drinking water.

## ASSEMBLE HANDLE

Rotate the handle to the same angle as the mounting hole on the machine, Put It on the machine.

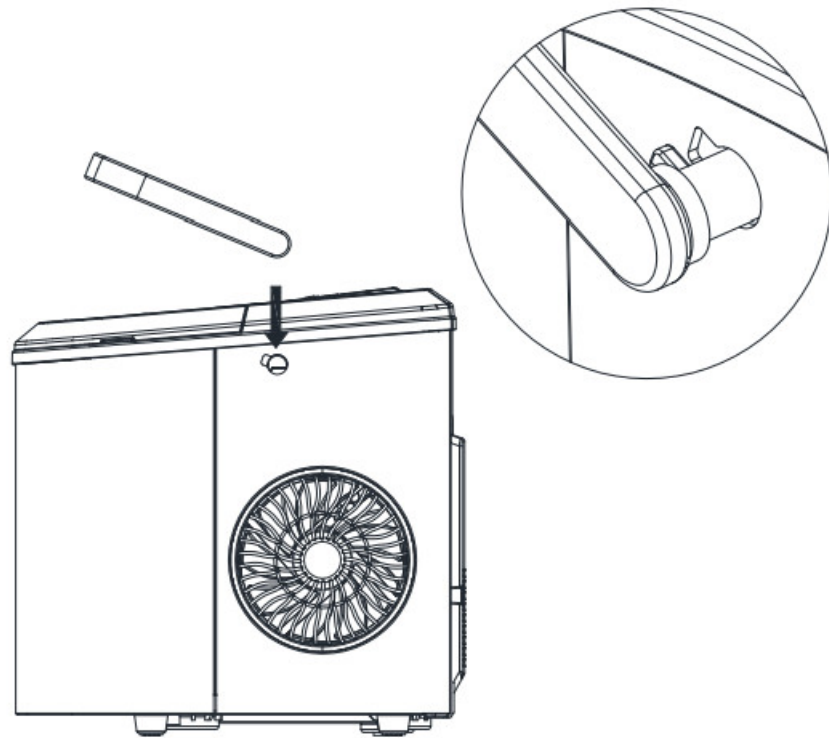

The ice basket handle gets stuck in the ice basket.  
The ice spoon can be placed on the handle of the ice basket.

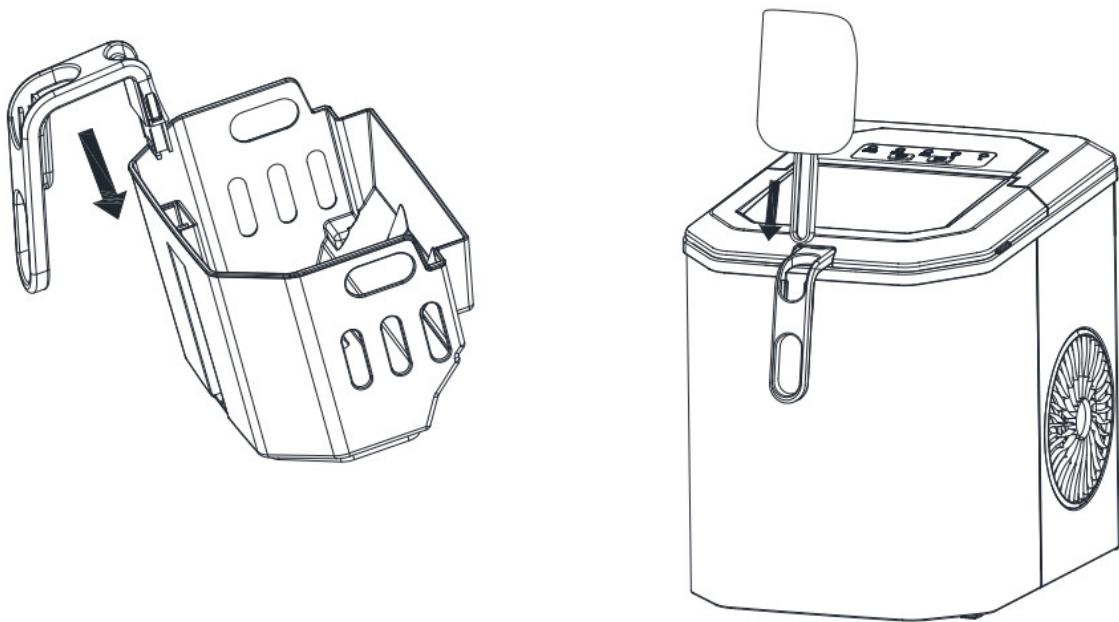

## CONNECTING YOUR ICE MAKER



### **DANGER**

\* Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged please call our customer service.

1. This unit should be properly grounded for your safety. The power cord of this appliance is equipped with a three-prong plug which mates with standard three prong wall outlets to minimize the possibility of electric shock.
2. Plug your appliance into an exclusive, properly installed, grounded wall outlet. Do not under any

circumstances, cut or remove the third (ground) prong from the power cord. Any questions concerning power and/or grounding should be directed toward a certified electrician.

3. This appliance requires a standard 110-120volt, 60Hz electrical outlet with three-prong ground.

## **CLEANING AND MAINTAINING YOUR ICE MAKER**

Before using your ice maker, it is strongly recommended to clean it thoroughly.

1. Take out the ice basket.
2. Clean the interior with diluted detergent, warm water and a soft cloth.
3. Then use the water to rinse the inside parts, and drain out the water by unplugging the drain cap on front bottom side.
4. The outside of the ice maker should be cleaned regularly with a mild detergent solution and warm water.
5. Dry the interior and exterior with a clean soft cloth.
6. When the machine is not to be used for a long time, drain water completely & dry the interior.

## **USING YOUR ICE MAKER**

1. Open the cover, remove the ice basket and pour water into tank. Keep water level below the water level mark.
2. Press "ON/OFF" button on the control panel to begin the ice making cycle.
3. Select the ice cube size by pressing the "SELECT" button. If the room temperature is lower than 60°F, it is recommended to select small ice cube in order to avoid ice sticking together.
4. The ice making cycle lasts approx. 6 to 13 minutes, depending on selection of ice cube size and the room temperature. The recommended room temperature is 50°F to 105 °F
5. If water pump can't inject water, the ice maker will stop automatically, and the "ADD WATER" indicator will be on. Press "ON/OFF" button, fill water up to the max. water level mark and press "ON/OFF" button again to turn on the unit again. Allow the refrigerant liquid inside the compressor at least 3 minutes to settle before restarting.
6. The ice maker stops when the ice basket is full and the "ICE FULL" indicator will be on.  
Warning: Direct sunlight or sunlight reflection may cause infrared sensor malfunction.  
If the unit doesn't stop even ice cubes obstruct sensor, move the unit where no sunlight.
7. Change water in the water reservoir every 24 hours to ensure a reasonable hygiene level.  
If unit isn't to be used, drain all the water and dry the tank.


## **TROUBLESHOOTING**

PROBLEM	POSSIBLE CADS	SOLUTIO
“ADD WATER” indicator is on.	Lack of Water.	Stop the ice maker, fill water, and press “ON/OFF” button again to restart the unit.
“ICE FULL” indicator is on.	Ice is full in basket.	Remove ice from ice basket. Continuous press “Select” button 5 seconds, the unit could make ice 10 cycles even “Ice” i ndicator is on.
Ice cubes stick together.	The ice making cycle is too long	Stop the ice maker, and restart it when the ice blocks melt. Select the small size ice cube selection.
	Water temperature in inner tank is too low.	Replace the water. Temperature of water recommended at 40°F-90°F
Ice making cycle is normal but no ice formed.	Room temperature or water temperature in inner tank is too high.	The room temperature should be 50 °F -105° F , water temperature should be 40°F-90°F
	Refrigerant in cooling system leaks.	Verify by a qualified technician.
	Pipe in the cooling system is blocked.	Verify by a qualified technician.

## TECHNICAL PARAMETERS & CIRCUIT DIAGRAM

Model	MGP-IM12/SG
Protection Type	I
Power	115V/60Hz
Ice Making Current	1.5A
Ice Harvest Current	1.8A
Refrigerant	R600a 0.740z/21g
Design Pressure High Side	290Psig
Design Pressure Low Side	88Psig
Vesicant	C5F-110
Net Weight	14.11lbs
Dimension ( W * D *H )	8.74×11.57×11.42inch
Enclosure	Stainless Steel



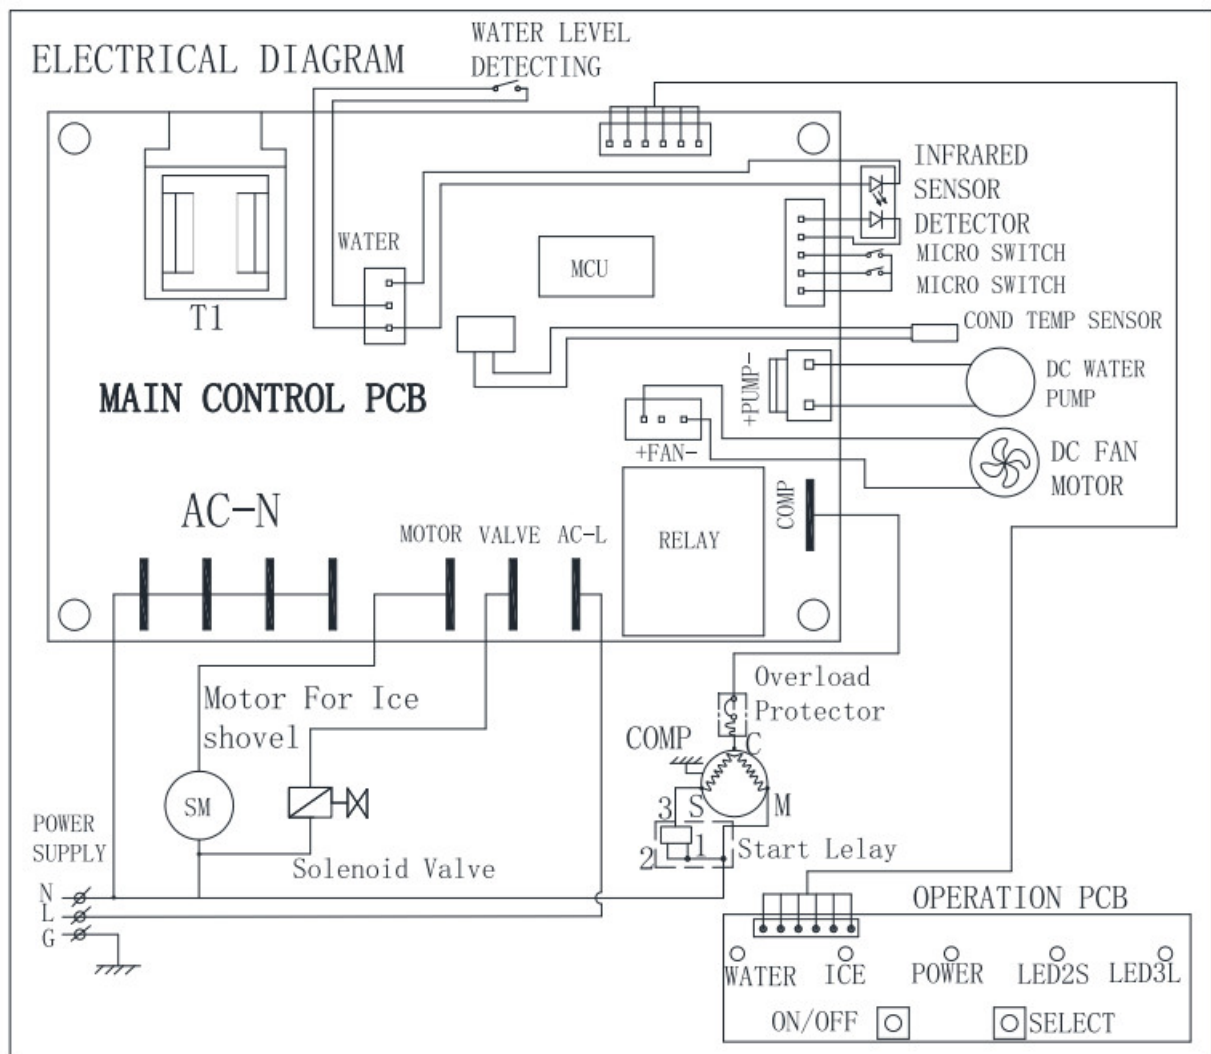

**magicplux**

**Guang Dong Mei Zhi Dian Qi Ke Ji You Xian Gong Si**  
 Guang Dong Sheng Zhong Shan Shi Huang Pu Zhen  
 Kui Dong Si Lu 1 Hao Ban Gong Lou Di San Dong Shou Ceng  
 E-mail: [info@mgplux.com](mailto:info@mgplux.com) Website: [www.mgplux.com](http://www.mgplux.com)

### Warranty Card

Product: PORTABLE AUTOMATIC ICE MAKER  
 Model: MGP-IM12/SG  
 Sr.No.of Product  
 Cash memo no./ Date of Dealer  
 Name &Address/ Stamp of Dealer  
 Signature of Dealer

### NOTE

For easier reference, please Original Sales Invoice or Official Receipt when claiming warranty.  
 The Manufacturer and I or Exclusive Distributor has the sole discretion in determining the cause of defects.

The magic of cooking  
[www.mgplux.com](http://www.mgplux.com)

**COMPANY NAME:**


Guang Dong Mei Zhi Dian Qi  
Ke Ji You Xian Gong Si

**ADDRESS:**

Guang Dong Sheng Zhong Shan  
Shi Huang Pu Zhen  
Kui Dong Si Lu 1 Hao Ban Gong  
Lou Di San Dong Shau Ceng  
E-MAIL: [info@mgplux.com](mailto:info@mgplux.com)

---

## Documents / Resources

	<p><a href="#">magicplux MGP-IM12-SG Portable Automatic Ice Maker</a> [pdf] Instruction Manual MGP-IM12-SG, MGP-IM12-SG Portable Automatic Ice Maker, Portable Automatic Ice Maker, Automatic Ice Maker, Ice Maker, Maker</p>
---	---

## References

- [User Manual](#)