



MAMI Fingerprint Access Control System User Manual

[Home](#) » [MAMI](#) » MAMI Fingerprint Access Control System User Manual 

MAMI

Contents


- [1 MAMI Fingerprint Access Control System](#)
- [2 Product Overview and Installation Instruction](#)
- [3 Inputting Fingerprint](#)
- [4 Ports & Wiring Diagram](#)
- [5 Administrator Operation](#)
- [6 Registering User](#)
- [7 User Operation](#)
- [8 Deleting Users](#)
- [9 Access Control System Management](#)
- [10 Unpacking](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

MAMI Fingerprint Access Control System



Product Overview and Installation Instruction


Applicable Models

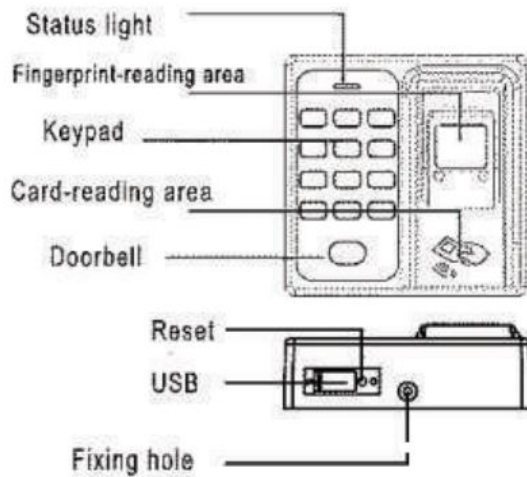

S.N.	Functions
1	Dark-background fingerprint reader
2	Built-in card reader
3	User verification with fingerprint or card
4	Numeric keys
5	Tamper alarm
6	Reading head for data output
7	86mm box-type panel for installation

Operating Environment:


- Room temperature: -20°C-+50°C
- Relative humidity: 95%
- Operating Voltage & Current
- Input DC: +12V
- Standby current:s60mA
- Operating current:s120mA

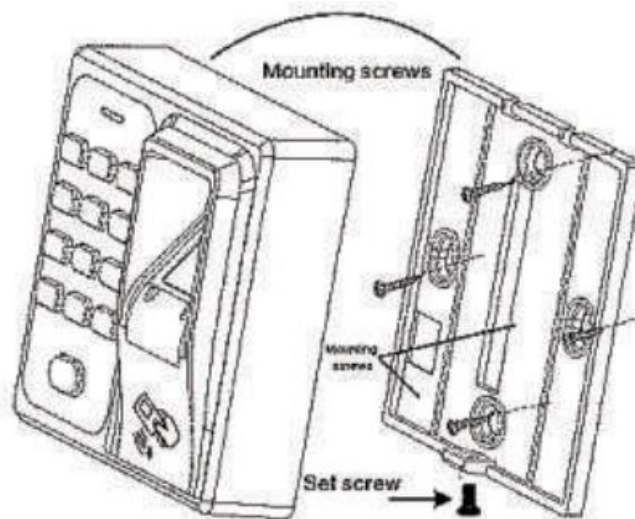

Inputting Fingerprint

Suggested finger: index finger, middle finger or ring finger instead of thumb or little finger


1) Correct method :

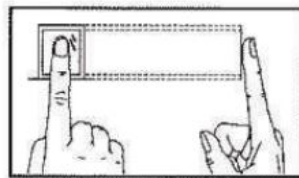


Use the finger to evenly press the center of fingerprint are

2) Wrong methods:


Not Flat

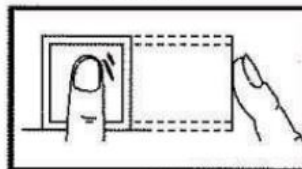


Not centered

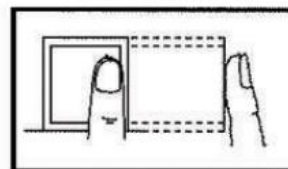

Tilted

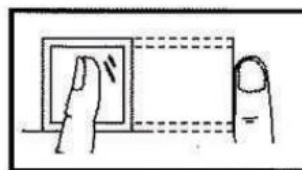

Low position

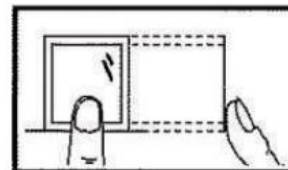

Please input fingerprint correctly for verification, and improper operation might result in poor performance of this device

Ports & Wiring Diagram



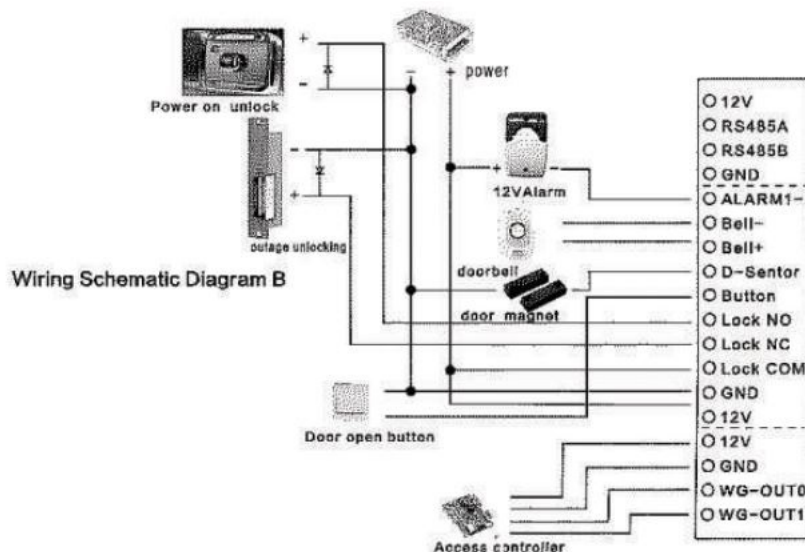



Diagram A instructions is electricity lock, using a special power supply access of the connection mode;
 Diagram B instructions is electricity lock and fingerprint access to share a power supply.
 Special attention: to protect the power supply, locks needed to mount a diode in the positive and negative ends,
 the diode marked on one end white electric lock positive

Administrator Operation

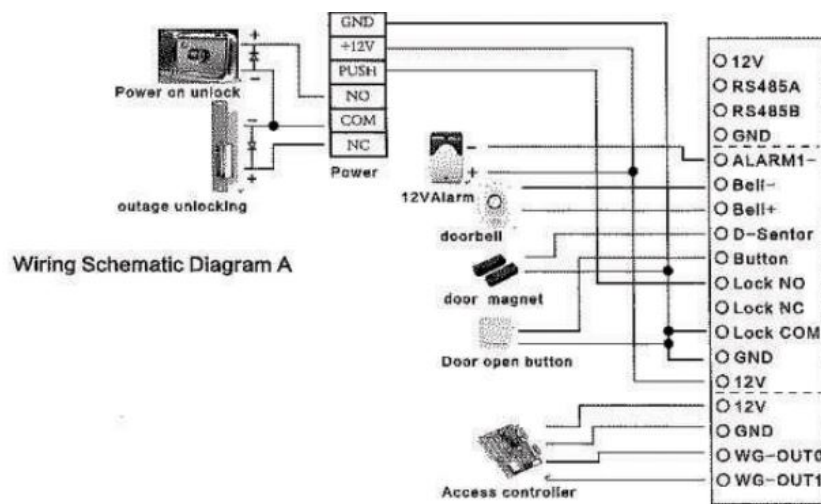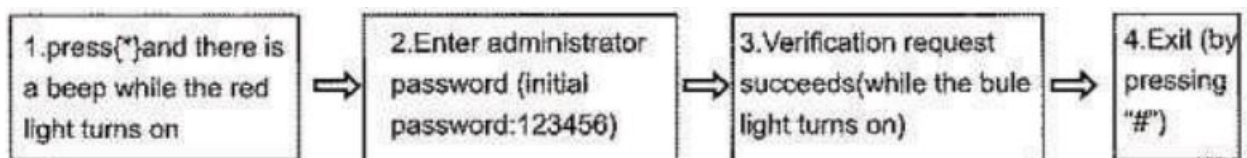

Remarks: once verification request succeeds, it is allowed to register administrator and the initial password will be out of use.


Registering administrator

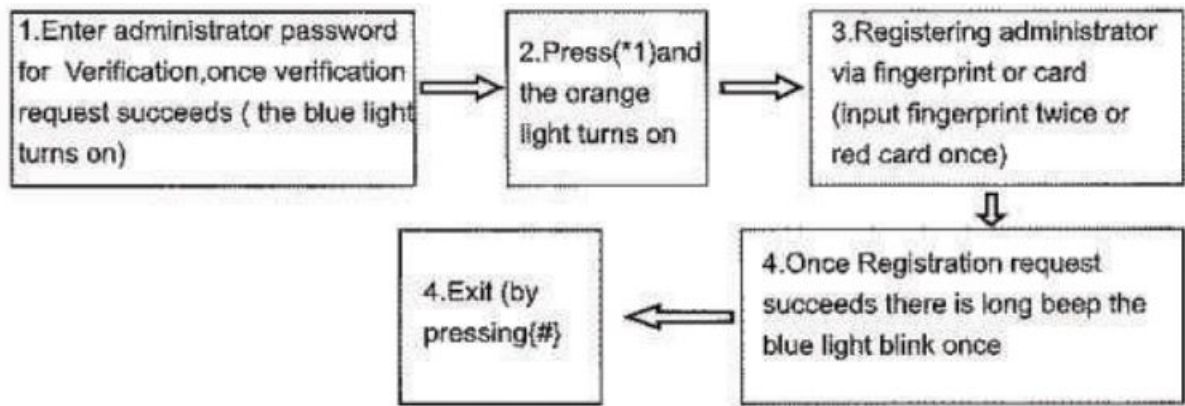

Remarks:


1. It is allowed to register at most 5 administrators via fingerprint or card.
2. In case administrator quantity reaches the maximum value, they will be cleared according to serial number.

Missing administrator password

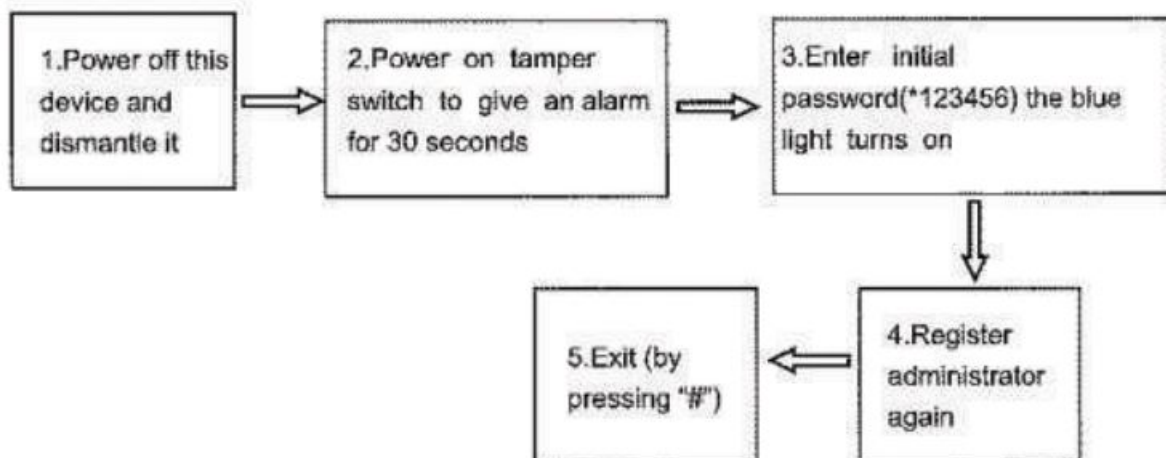


Registering User

Register Users Automatically

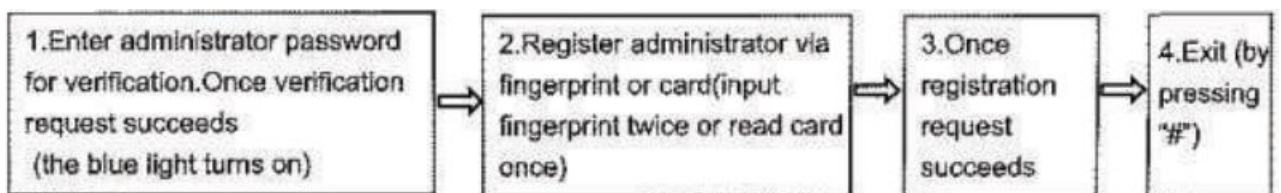


Register Users by Adding Employee 1D

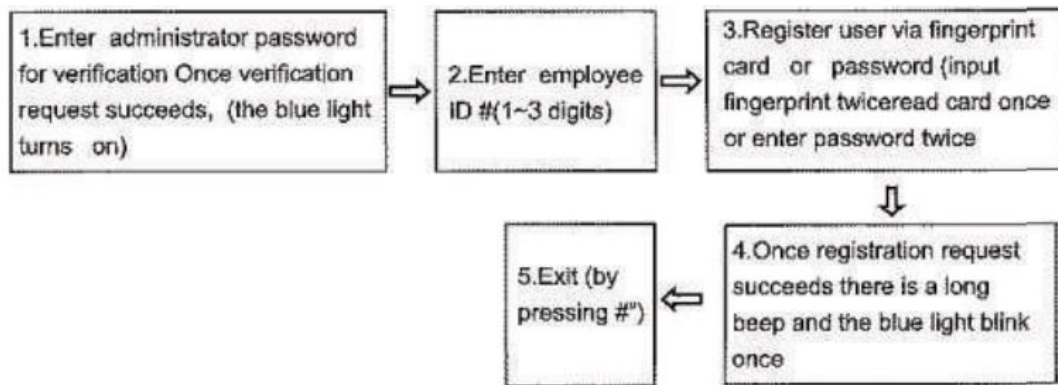


User Operation

User Verification via Fingerprint or Card

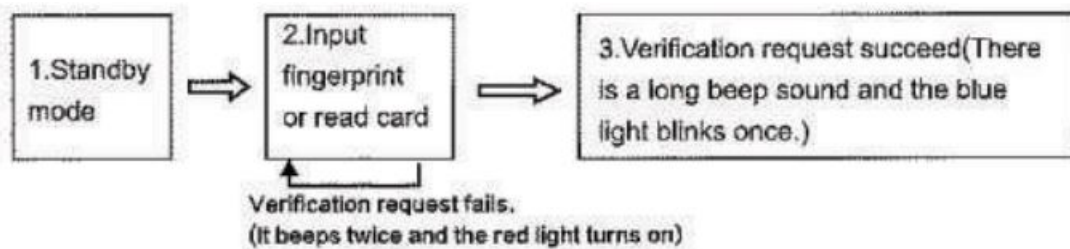


User Verification via Password

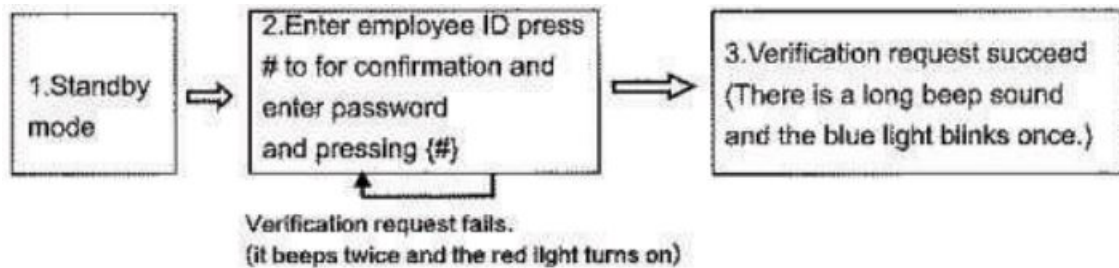


Deleting Users

Delete a User

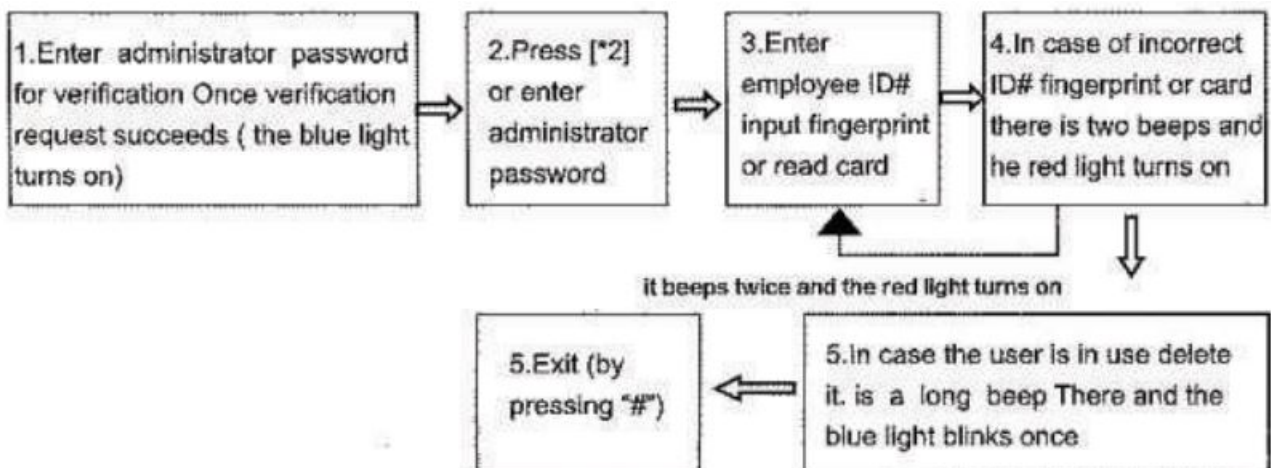


Delete AI Users

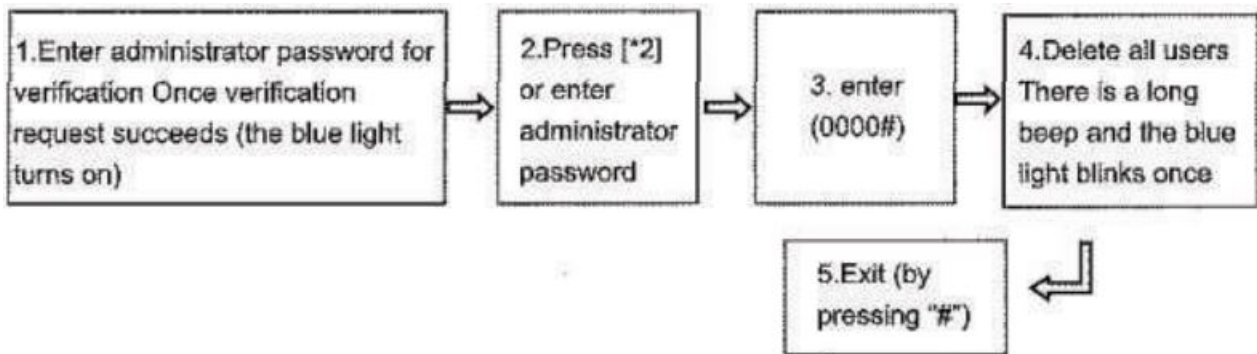


Access Control System Management

System Settings

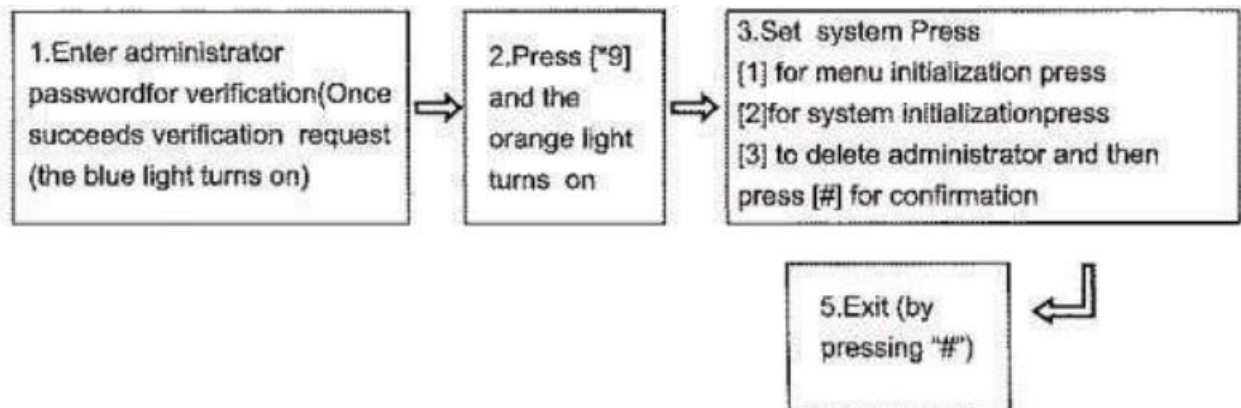

Setting Unlocking Time

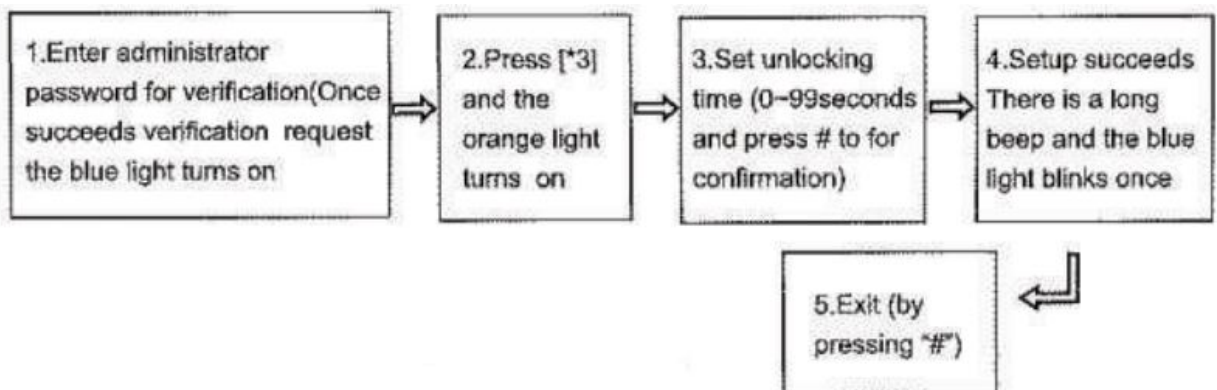


Note: 5 seconds have been set as factory default.

Unpacking

Description		Specifications	Quantity	Remarks
Device Packaging box			1	
			1	
Plastic plugs 4mmx28mm			4	For mounting and fixing
Self-tapping screws 4mmx28mm			4	For mounting and fixing
Diode 1n4007			2	

Documents / Resources

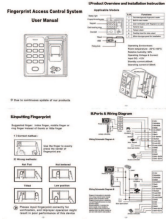	<p>MAMI Fingerprint Access Control System [pdf] User Manual Fingerprint Access Control System, Fingerprint, Access Control System, Control System</p>
---	---