

MEAN WELL PSPA-1000 Series 1000W with PFC and Parallel Function Instruction Manual

Home » MEAN WELL » MEAN WELL PSPA-1000 Series 1000W with PFC and Parallel Function Instruction Manual

Contents

- 1 MEAN WELL PSPA-1000 Series 1000W with PFC and Parallel
- **Function**
- **2 Product Information**
- 3 Specifications
- **4 Product Usage Instructions**
- **5 Remote Sense**
- **6 Remote ON-OFF Control**
- 7 POK Signal
- **8 Parallel Operation**
- 9 Features
- **10 Description**
- 11 Model Encoding
- 12 SPECIFICATION
- 13 Function Manua
- **14 Mechanical Specification**
- 15 Documents / Resources
 - 15.1 References
- **16 Related Posts**



MEAN WELL PSPA-1000 Series 1000W with PFC and Parallel Function



Product Information

The PSPA-1000 series is a 1000W power supply with PFC (Power Factor Correction) and Parallel Function. It is available in four different models with DC voltages of 12V, 15V, 24V, and 48V. The power supply has a high efficiency of up to 94% and has various protection features such as OVP (Over Voltage Protection), OTP (Over Temperature Protection), and OCP (Over Current Protection). It also has Remote Sense and Remote ON-OFF Control functions.

Specifications

DC Voltage: 12V, 15V, 24V, 48V
Rated Current: 80A, 64A, 42A, 21A
Ripple & Noise: 150mVp-p (max.)

• Efficiency: 92%-94%

• Input Voltage Range: 90-264VAC

• Frequency Range: 47-63Hz

• Power Factor: 0.95/230VAC, 0.99/115VAC at full load

• **Dimension**: 170*120*93mm (L*W*H)

Product Usage Instructions

Before using the PSPA-1000 series power supply, please read the user manual carefully and follow the instructions provided. Here are some general usage instructions:

Remote Sense

If you are using the Remote Sense function, make sure to connect the RS+ and RS- terminals to your load. The sense lines should be twisted in pairs to minimize noise pick-up. The minimum load when using Remote Sense function is 5%.

Remote ON-OFF Control

The PSPA-1000 series power supply can be turned ON-OFF individually or along with other units by using the

Remote ON-OFF function. To turn ON the power supply, switch the RC and RCG terminals to short. To turn OFF the power supply, switch the RC and RCG terminals to open.

POK Signal

The POK signal indicates the output status of the power supply. It can operate in two ways: sinking current from an external TTL signal or sending out a TTL voltage signal. The maximum sink current is 10mA and the maximum external voltage is 5.6V. Please refer to the user manual for more information on how to use the POK signal.

Parallel Operation

The PSPA-1000 series power supply has Parallel Functionality, which means that multiple units can be connected in parallel for higher output power. When connecting multiple units in parallel, make sure to use the same model and connect the RC, RCG, and FG terminals together. However, please note that the current shared among units may not be fully balanced.

Features

- Universal AC input / Full range Built-in active PFC function
- Protections: Short circuit / Overload / Over voltage. Over temperature
- Forced air cooling by built-in DC fan Current sharing up to 4000W(3+1) With DC OK Signal output Built-in remote ON-OFF control
- Built-in remote sense function 5 years warranty

Applications

- · Factory control or automation apparatus
- Test and measurement instrument Laser-related machine Burn-in facility
- RF application


GTIN CODE

MW Search: https://www.meanwell.com/serviceGTIN.aspx

Description

PSPA-1 000 series is a 1KW single output enclosed type AC/DC power supply. This series operates from 90-264VAC input voltage and offers models with different rated voltage ranging between 12V and 48V. Thanks to high efficiency up to 94% and built-in fan, the entire series is able to work for -20°C~ +70°C ambient temperature. PSPA-1000 is equipped with various built-in functions, such as current sharing, remote ON-OFF control and remote sense, providing great design flexibility for different types of applications.

Model Encoding

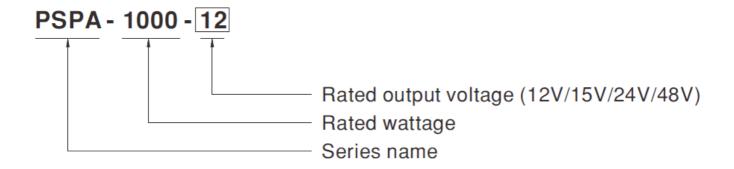


SPECIFICATION


MODEL		PSPA-1000-12	PSPA-1000-15	PSPA-1000-24	PSPA-1000-48	
	DC VOLTAGE	12V	15V	24V	48V	
	RATED CURRENT	80A	64A	42A	21A	
	CURRENT RANGE	0~80A	0 ~ 64A	0 ~ 42A	0~21A	
	RATED POWER	960W	960W	1008W	1008W	
	RIPPLE & NOISE (max.) Note.2	150mVp-p	150mVp-p	200mVp-p	250mVp-p	
OUTPUT	VOLTAGE ADJ. RANGE	11 ~ 14V	14 ~ 17V	22 ~ 28V	46 ~ 56V	
	VOLTAGE TOLERANCE Note.3	±2.0%	±1.5%	±1.0%	±1.0%	
	LINE REGULATION	±0.5%	±0.5%	±0.5%	±0.5%	
	LOAD REGULATION	±2.0%	±1.5%	±0.5%	±0.5%	
	SETUP, RISE TIME	1000ms,50ms/115VAC 1000ms,50ms/230VAC				
	HOLD UP TIME (Typ.)	16ms at full load	16ms at full load			
	VOLTAGE RANGE Note.4	90 ~ 264VAC(300VAC for 5 sec.	127 ~ 370VDC			
	FREQUENCY RANGE	47 ~ 63Hz				
	POWER FACTOR (Typ.)	0.95/230VAC 0.99/115VAC at full load				
INPUT	EFFICIENCY(Typ.)	92%	93%	93.5%	94%	
	AC CURRENT (Typ.)	8.5A/115VAC 5A/230VAC				
	INRUSH CURRENT (Typ.)	20A/115VAC 40A/230VAC				
	LEAKAGE CURRENT	<0.5mA/240VAC				
	OVERLOAD	105 ~ 135% rated output power				
	OVERLOAD	Protection type: Constant current limiting, recovers automatically after fault condition is removed				
PROTECTION	ON OVER VOLTAGE	14.5 ~ 16.5V	18.2 ~ 20.6V	29 ~ 33V	58 ~ 65V	
	OVER VOLTAGE	Protection type : Shut down o/p voltage, re-power on to recover				
	OVER TEMPERATURE	Shut down o/p voltage, re-power on to recover				
	CURRENT SHARING	Up to 4000W or (3+1) units. Please refer to the Function Manual.				
FUNCTION	REMOTE ON-OFF CONTROL	Power ON: short; Power OFF: open. Please refer to the Function Manual.				
FUNCTION	REMOTE SENSE	Compensate voltage drop on the load wiring up to 0.5V. Please refer to the Function Manual.				
POK SIGNAL The TTL signal out, PSU turn on = 2.4 ~ 5V; PSU turn off = 0 ~ 0.4V. Please refer to the Function				4V. Please refer to the Function	Manual.	
	WORKING TEMP.	-20 ~ +70°C (Refer to "Derating Curve")				
	WORKING HUMIDITY	20 ~ 90% RH non-condensing				
ENVIRONMENT	STORAGE TEMP., HUMIDITY	-40 ~ +85°C, 10 ~ 95% RH non-condensing				
	TEMP. COEFFICIENT	±0.03%/°C (0~50°C)				
	VIBRATION	10 ~ 500Hz, 2G 10min./1cycle, period for 60min. each along X, Y, Z axes				

	SAFETY STANDARDS UL62368-1, CAN/CSA C22.2 No. 62368-1, TUV BS EN/EN62368-1, BSMI CNS14336-1, AS/NZS62368.1, EA				
	WITHSTAND VOLTAGE	I/P-O/P:3KVAC I/P-FG:2KVAC O/P-FG	O/P-FG:0.5KVAC		
	ISOLATION RESISTANCE	VDC / 25°C / 70% RH			
		Parameter	Standard	Test Level / Note	
	EMC EMISSION	Conducted	BS EN/EN55032 (CISPR32)	Class B	
		Radiated	BS EN/EN55032 (CISPR32)	Class B	
		Harmonic Current	BS EN/EN61000-3-2	Class A	
SAFETY &		Voltage Flicker	BS EN/EN61000-3-3		
EMC		BS EN/EN55035, BS EN/EN61000-6-2, E	3SMI CNS13438		
(Note 5)		Parameter	Standard	Test Level / Note	
		ESD	BS EN/EN61000-4-2	Level 3, 8KV air ; Level 2, 4KV contact	
	EMC IMMUNITY	Radiated	BS EN/EN61000-4-3	Level 3	
		EFT / Burst	BS EN/EN61000-4-4	Level 3	
		Surge	BS EN/EN61000-4-5	Level 4, 2KV/Line-Line 4KV/Line-Earth	
		Conducted	BS EN/EN61000-4-6	Level 3	
		Magnetic Field	BS EN/EN61000-4-8	Level 4	
		Voltage Dips and Interruptions	BS EN/EN61000-4-11	>95% dip 0.5 periods, 30% dip 25 periods, >95% interruptions 250 periods	
	MTBF	807.1K hrs min. Telcordia SR-332 (Bellcore) ; 94.9K hrs min. MIL-HDBK-217F (25°C)		(25°C)	
OTHERS	DIMENSION	170*120*93mm (L*W*H)			
	PACKING	1.93Kg; 8pcs/16.4Kg/1.53CUFT			
NOTE	1. All parameters NOT specially mentioned are measured at 230VAC input, rated load and 25°C of ambient temperature. 2. Ripple & noise are measured at 20MHz of bandwidth by using a 12" twisted pair-wire terminated with a 0.1uf & 47uf parallel capacitor. 3. Tolerance: includes set up tolerance, line regulation and load regulation. 4. Derating may be needed under low input voltages. Please check the derating curve for more details. 5. The power supply is considered a component which will be installed into a final equipment. All the EMC tests are been executed by mounting the unit on a 360mm*360mm metal plate with 1mm of thickness. The final equipment must be re-confirmed that it still meets EMC directives. For guidance on how to perform these EMC tests, please refer to "EMI testing of component power supplies." (as available on http://www.meanwell.com) 6. The ambient temperature derating of 3.5°C/1000m with fanless models and of 5°C/1000m with fan models for operating altitude higher than 2000m(6500ft). **We Product Liability Disclaimer: For detailed information, please refer to https://www.meanwell.com/serviceDisclaimer.aspx				


Block Diagram

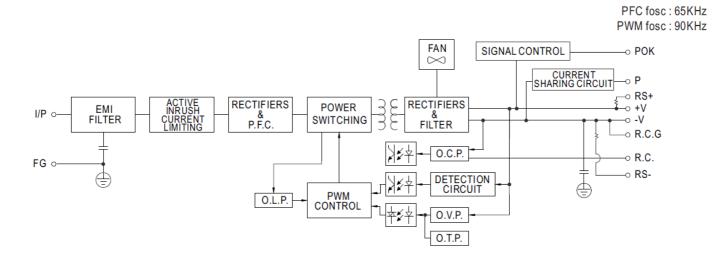

Derating Curve

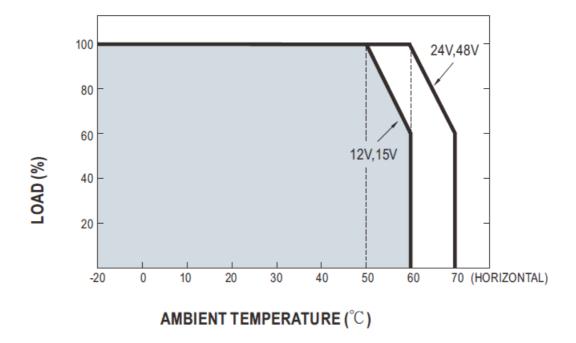


Output Derating VS Input Voltage

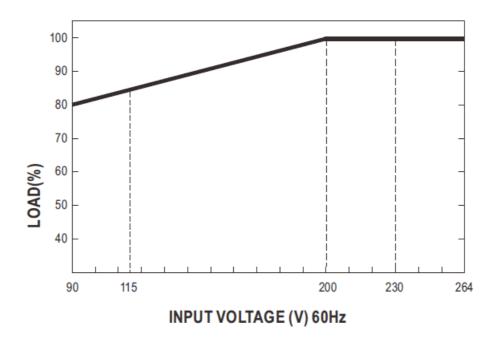

Function Manua


1. Remote Sense

- The Remote Sense compensates voltage drop on the load wiring up to 0.5V.
- The minimum load is 5% when Remote Sense functions.

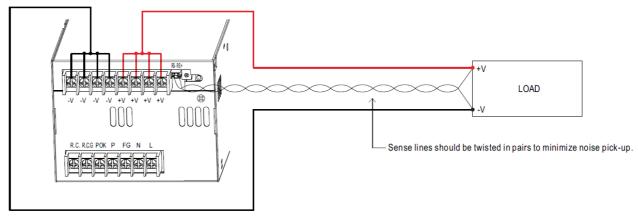

2. Remote ON-OFF Control


• The power supply can be turned ON-OFF individually or along with other units by using the "Remote ON-OFF" function

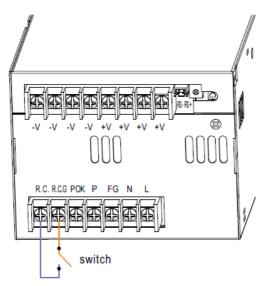

Between R.C. and R.C.G	Power Supply Status
Switch Short	ON
Switch Open	OFF

3. POK signal

- POK signal indicates the output status of the power supply. It can operate in two ways: One is sinking current from external TTL signal; the other is sending out a TTL voltage signal.
- Sinking current from external TTL signal: The maximum sink current is 10mA and the maximum external voltage is 5.6V.

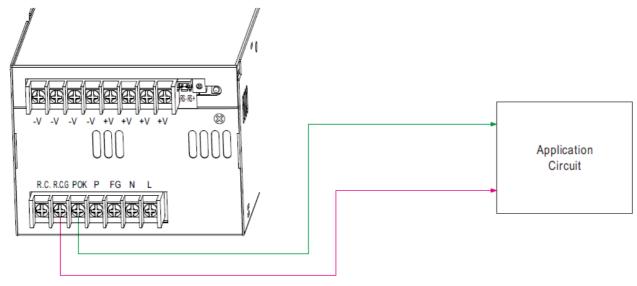


4. Current Sharing with Remote Sense

PSPA-1000 has the built-in active current sharing function and can be connected in parallel, up to 4 units, to

provide higher output power as exhibited below:


- 5. The power supplies should be paralleled using short and large diameter wiring and then connected to the load.
- 6. Difference of output voltages among parallel units should be less than 0.2V.
- 7. The total output current must not exceed the value determined by the following equation: Maximum output current at parallel operation=(Rated current per unit) X (Number of unit) X0.9 % When the total output current is less than 5% of the total rated current, or say (5% of Rated current per unit)


X (Number of unit) the current shared among units may not be fully balanced.

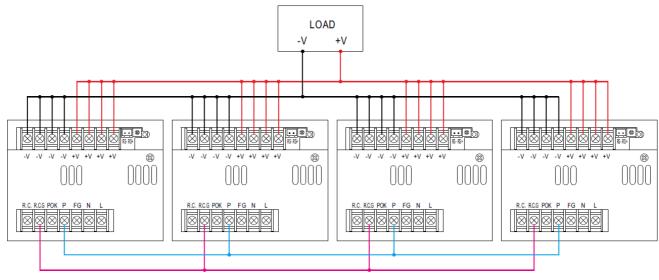


For Remote Sense, please refer to "Remote Sense" section.

Mechanical Specification

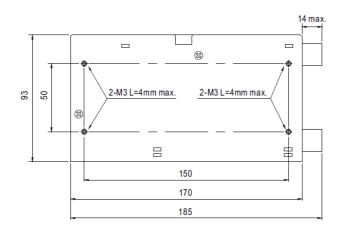

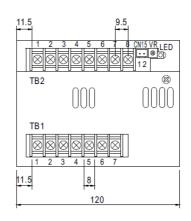

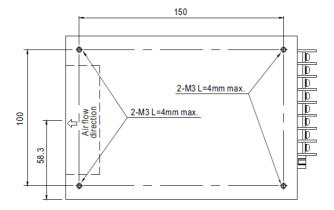

RS Connector(CN15): JST B-XH or equivalent

Pin No.	Assignment	Mating Housing	Terminal
1	RS-	JST XHP	JST SXH-001T
2	RS+	orequivalent	or equivalent

Terminal Pin No. Assignment(TB1)			
Pin No.	Assignment		
1	R.C.		
2	R.C.G		
3	POK		


Pin No.	Assignment	
1	R.C.	
2	R.C.G	
3	POK	
4	P(Current Share)	
5	FG ≟	
6	AC/N	
7	AC/L	

Terminal Pin No. Assignment(TB2)

Pin No.	Assignment
1~4	DC OUTPUT -V
5~8	DC OUTPUT +V

Mounting Instruction

Recommended Screw Size	MAX. Penetration Depth L	Recommended mounting torque
M3	4mm	6~8Kgf-cm

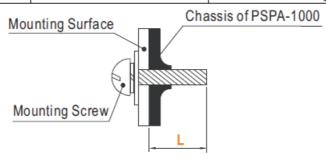

QR SCAN



INSTALLATION MANUAL

Please refer to: http://www.meanwell.com/manual.html

Documents / Resources



MEAN WELL PSPA-1000 Series 1000W with PFC and Parallel Function [pdf] Instruction Manual

PSPA-1000 Series 1000W with PFC and Parallel Function, PSPA-1000 Series, 1000W with PFC and Parallel Function, PFC and Parallel Function, Function

References

- △ TÜV Rheinland Home | US | TÜV Rheinland
- MEAN WELL Switching Power Supply Manufacturer
- Installation Manual-MEAN WELL Switching Power Supply Manufacturer

Manuals+,