


**Contents** [ [hide](#) ][1 MICROCHIP D3-HV Power Modules](#)[2 Introduction](#)[3 Power module mounting onto the heat sink](#)[4 Assembly with Bus bar for power connections and wires for signal connections](#)[5 Connection pull and push forces for D3 & D3-HV](#)[6 Microchip Information](#)[7 Legal Notice](#)[8 Documents / Resources](#)[8.1 References](#)

## MICROCHIP D3-HV Power Modules

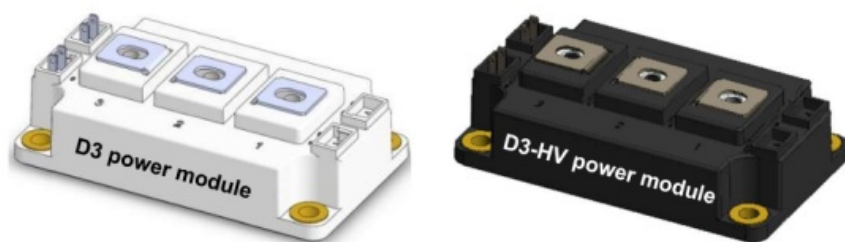

## Introduction

This application note gives the main recommendations to appropriately mount the D3, D3-HV and D4 power modules onto the heat sink, and connect the bus bars, wires or PCB.

It is very important to follow the mounting instructions to limit both the thermal and

mechanical stresses.


## **Power module mounting onto the heat sink**

Proper mounting of the module base plate onto the heat sink is essential to guarantee good heat transfer. The heat sink and the power module contact surface must be flat (recommended flatness  $<50\mu\text{m}$  for 100mm continuous, recommended roughness Rz 10) and clean (no dirt, no corrosion, no damage) in order to avoid mechanical stress when the power module is mounted, and to avoid an increase in thermal resistance.

### **Thermal grease application**

To achieve the lowest case-to-heat sink thermal resistance, a thin layer of thermal grease must be applied between the power module and the heat sink.

It is recommended to use screen printing technique to ensure a uniform deposition of a minimum thickness of  $100\mu\text{m}$  (3.9 mils) on the heat sink (see picture 1). The thermal interface between the module and the heat sink can also be made with other type of conductive thermal interface material such as phase change compound (screen-printed or adhesive layer).

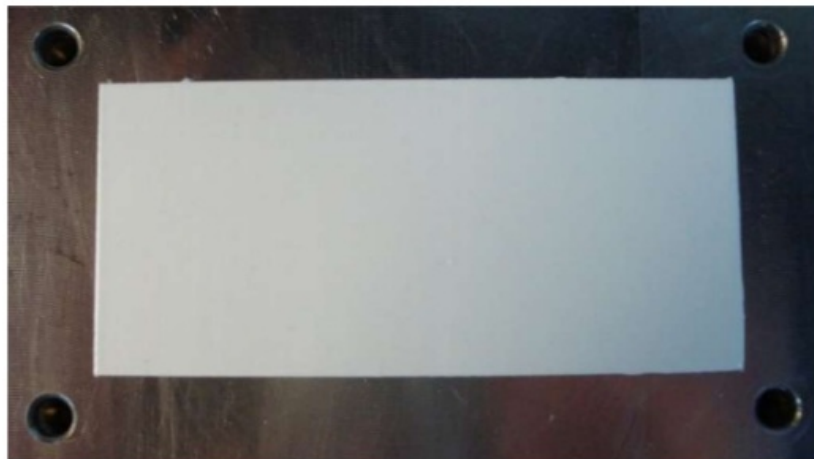


Picture 1: Grease on the heat sink before assembly.

### **Mounting the power module onto the heat sink.**

Place the power module above heat sink holes, apply a small pressure to it. Insert the M6 screw with lock and flat washers in each mounting hole (a #12 screw can be used instead of M6). The screw length must be at least 16 mm (0.6").

1. The four M6 screws must be torqued at 0.5Nm. Order: 1 – 2 – 3 – 4.

2. The four M6 screws must be torqued to 2Nm. Order: 1 – 2 – 3 – 4.
3. The four M6 screws must be torqued to the final torque. Order: 1 – 2 – 3 – 4.

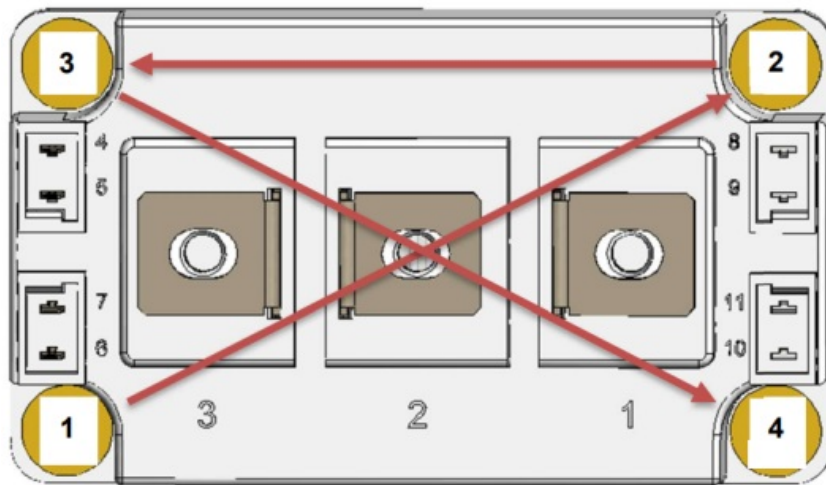

See the product datasheet for the maximum torque allowed.

It is recommended to use a screwdriver with controlled torque for this operation. If possible, screws can be tightened again in the same order (1 – 2 – 3 – 4) after three hours.

The quantity of thermal grease is correct when a small amount of grease appears around the power module once it is bolted down onto the heat sink with the appropriate mounting torque.

In any case, the module bottom surface must be completely wetted with thermal grease. (See pictures 2 & 3).



Picture 2: Grease on the heat sink after removing the module



Picture 3: Grease on the module after disassembling

**Assembly with Bus bar for power connections and wires for signal connections**

## **Power connections**

The bus bars must be mounted onto the power module and screwed onto the power terminals.

Put M6 screw with a M6 flat washer in each power terminal.

The screw length depends on the bus bar thickness and the washers. See the product datasheet for the maximum torque and max length into the power terminal allowed.

To reduce switching over voltages, decoupling capacitors must be placed as close as possible of the power terminals VBUS & 0/VBUS. (See figures 4 to 7).

Be careful with the heavy components like electrolytic or polypropylene capacitors. If these components are located in the same area, it is recommended to add spacers such that the weight of these components on the board is not handled by the power module but by the spacers.

Additional spacers must be also added to avoid vibration and shock issues. (See the product datasheet for the spacer dimension).

## **D3, D3-HV Signal connections**

First, remove the ESD protection on the signal connectors if applicable. The user must observe all precautions in order to avoid electrostatic discharge during handling.

Wires should be plugged onto the signal terminals via a lug. (See product datasheet for signal connection dimensions). In order to reduce the stray inductance, the gate and the emitter wires must be as short as possible and twisted.

Additional spacers must be necessary to avoid a deformation of the PCB and to avoid some mechanical stress on the components, tracks and signal terminals. (See pictures 4 & 5).

## **D4 Signal connections**

A PCB should be screwed on the M4 signal connectors. The screw length depends on the PCB thickness and the washers.

Additional spacers must be necessary to avoid a deformation of the PCB and to avoid some mechanical stress on the components, tracks and signal connectors. (See the product datasheet for the spacer dimension, maximum torque and max length into the signal terminal allowed). (See pictures 6 & 7).

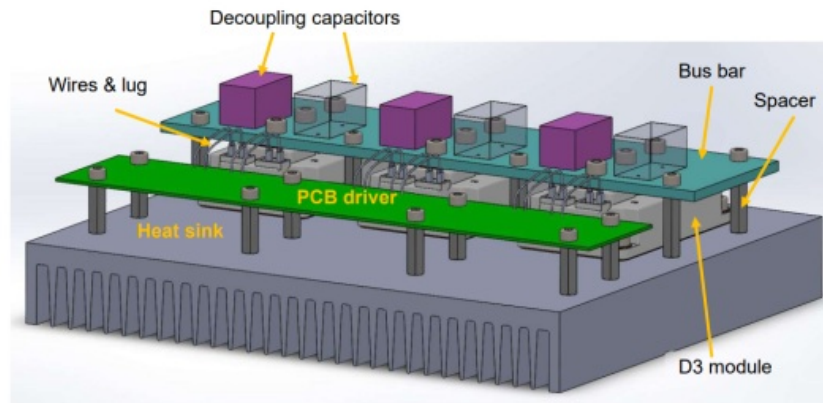


Figure 4: D3, D3-HV General assembly view in a 3 phase bridge configuration

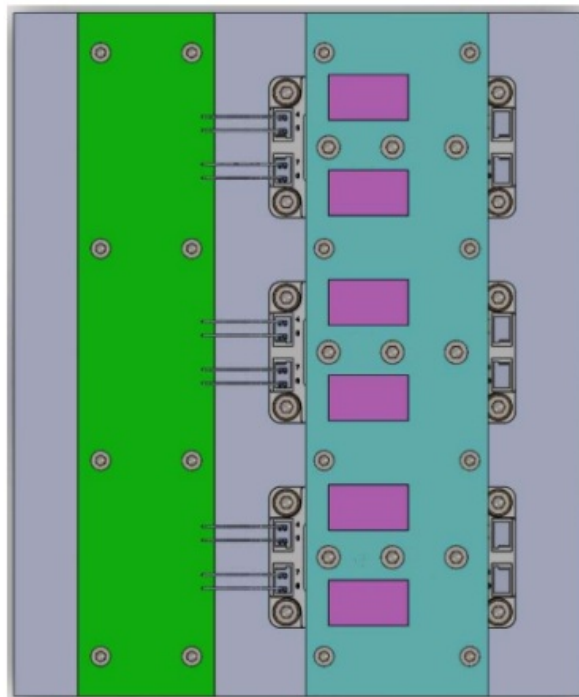


Figure 5: D3, D3-HV General assembly view in a 3 phase bridge configuration

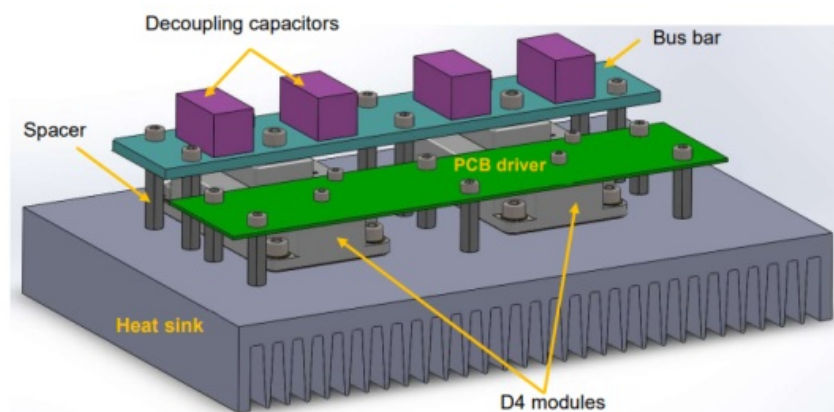


Figure 6: D4 General assembly view in a phase leg configuration

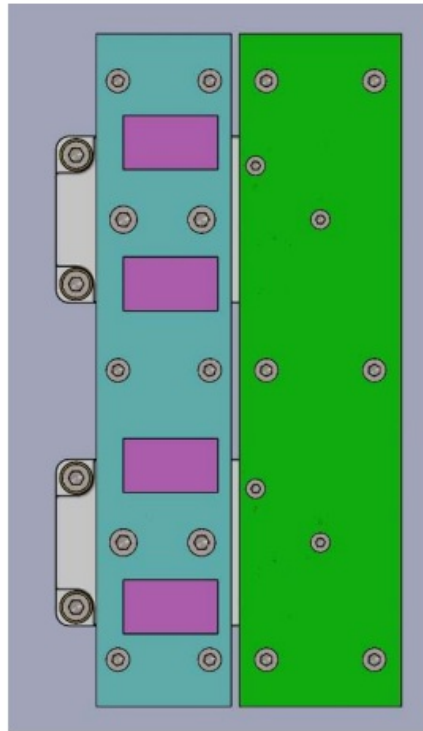


Figure 7: D4 General assembly view in a phase leg configuration

Each application, bus bar and PCB are different; the spacers placement must be evaluated on a case-by-case basis. In any case, the power module must not handle the component's weight.

### Connection pull and push forces for D3 & D3-HV

Power module must be mounted in such way that the resulting pull forces are limited for the power and the signal terminals. See Pictures 8 & 9 for D3 & D3-HV power modules.

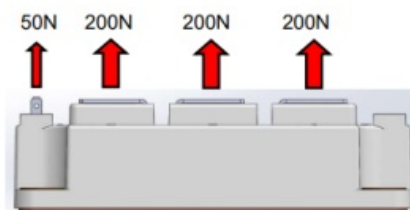


fig 8: D3, D3-HV pull force



fig 9: D3, D3-HV push force

### Conclusion:

This application note gives the main recommendations regarding the mounting the D3, D3-HV and the D4 power modules. Applying these instructions will help decrease the mechanical stress on both the bus bar, PCB and power module and therefore will ensure long-term operation of the system. Mounting instructions to the heat sink must also be followed to achieve the lowest thermal resistance from the power chips down to the

cooler. All these operations are essential to guarantee the best system reliability.

## **Microchip Information**

### **Trademarks**

The “Microchip” name and logo, the “M” logo, and other names, logos, and brands are registered and unregistered trademarks of Microchip Technology Incorporated or its affiliates and/or subsidiaries in the United States and/or other countries (“Microchip Trademarks”). Information regarding Microchip Trademarks can be found at <https://www.microchip.com/en-us/about/legal-information/microchip-trademarks>.

ISBN: 979-8-3371-0064-7

### **Legal Notice**

This publication and the information herein may be used only with Microchip products, including to design, test, and integrate Microchip products with your application. Use of this information in any other manner violates these terms. Information regarding device applications is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. Contact your local Microchip sales office for additional support or, obtain additional support at [www.microchip.com/en-us/support/design-help/client-support-services](http://www.microchip.com/en-us/support/design-help/client-support-services).

THIS INFORMATION IS PROVIDED BY MICROCHIP “AS IS”. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE, OR WARRANTIES RELATED TO ITS CONDITION, QUALITY, OR PERFORMANCE.

IN NO EVENT WILL MICROCHIP BE LIABLE FOR ANY INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL Loss, DAMAGE, COST, OR EXPENSE OF ANY KIND WHATSOEVER RELATED TO THE INFORMATION OR ITS USE, HOWEVER CAUSED, EVEN IF MICROCHIP HAS BEEN ADVISED OF THE POSSIBILITY DAMAGES OR THEY ARE FORESEEABLE. TO THE FULLEST EXTENT



ALLOWED BY LAW, MICROCHIP'S TOTAL LIABILITY ON ALL CLAIMS IN ANY WAY RELATED TO THE INFORMATION OR ITS USE WILL NOT EXCEED THE AMOUNT OF FEES, IF ANY, THAT YOU HAVE PAID DIRECTLY TO MICROCHIP FOR THE INFORMATION.

Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

### **Microchip Devices Code Protection Feature**

- Note the following details of the code protection feature on Microchip products:
- Microchip products meet the specifications contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is secure when used in the intended manner, within operating specifications, and under normal conditions.
- Microchip values and aggressively protects its intellectual property rights. Attempts to breach the code protection features of Microchip products are strictly prohibited and may violate the Digital Millennium Copyright Act.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of its code.


Code protection does not mean that we are guaranteeing the product is “unbreakable”.

Code protection is constantly evolving. Microchip is committed to continuously improving the code protection features of our products.

**Application Note 1908**

## **Documents / Resources**







## MICROCHIP D3-HV Power Modules [pdf] Instruction Manual

D3, D3-HV, D4, D3-HV Power Modules, D3-HV, Power Modules, Modules

## References

- [User Manual](#)

 D3, D3-HV, D3-HV Power Modules, D4, MICROCHIP, Modules, Power

 MICROCHIP Modules

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

## Search:

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.