



MIDLAND BT GO Instruction Manual

[Home](#) » [MIDLAND](#) » MIDLAND BT GO Instruction Manual

Contents [[hide](#)]

- [1 MIDLAND BT GO](#)
- [2 Main features:](#)
- [3 Installation](#)
 - [3.1 Charging](#)
 - [3.2 Voice prompt/Beep/Light](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



MIDLAND BT GO



Thank you for choosing the Midland BT GO Headset and Intercom for Scooters and Motorbikes. With your BT Go you can listen to stereo music and GPS navigation voice, place and answer to phone calls, talk with your friends in full duplex intercom.

Main features:

- Bluetooth 3.0 with support for the following protocols:
- Headset profile, Hands Free Profile (HFP), A2DP, AVRCP. Max power: 2.5 mW
- Intercom Driver – Passenger
- Intercom Bike to Bike 200 mt (depending on terrain conditions)
- Connect your phone to receive/place phone calls
- Listen to Stereo music (A2DP)
- Connect your GPS for voice street indication
- Lithium battery with 8 hours talk time
- Recharge time: app. 2 hours
- Waterproof
- DSP Noise cancelling technology



Description of BT GO Jet


What's in the box:

BT GO unit, USB recharging cable, spare microphone sponge, Velcro pad for speaker. BT GO unit, one wired microphone for full helmet, one microphone for open helmet, USB recharging cable, spare microphone sponge, Velcro pad for speakers and microphone.




Installation


Place the speaker –boom mike on the left side of your helmet. You can fix the speaker-boom mike in the deep ear pocket of your helmet using the velcro pad. In the box you will find the velcro pad for the right speaker.

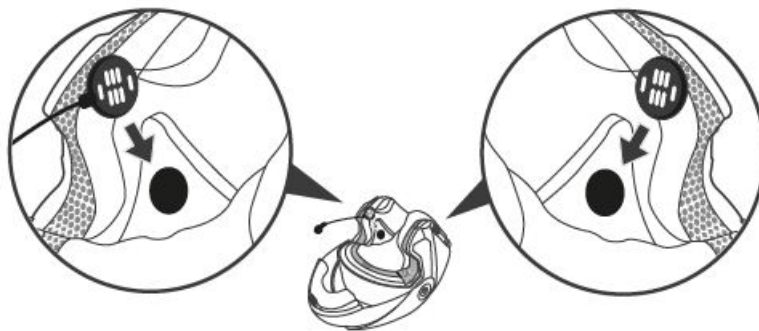

Keep the speaker as much as possible close and centered to your ear. Place the microphone sponge as closely as possible to your mouth when wearing the helmet. You can hide the speaker wire under the helmet padding. Place both speakers in the deep ear pocket of your helmet. You can fix the speakers using the velcro pad. In the box you will find the velcro pad for the right speaker.

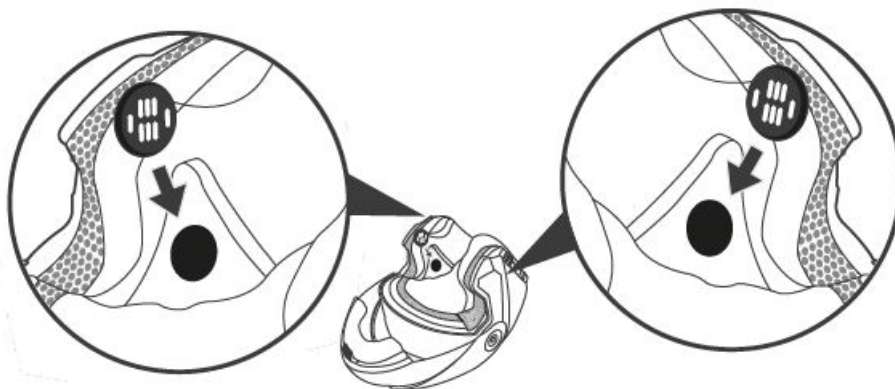

Place both speakers as much as possible close and centered to your ear. Place the wired microphone in front of your mouth using the adhesive Velcro pad.

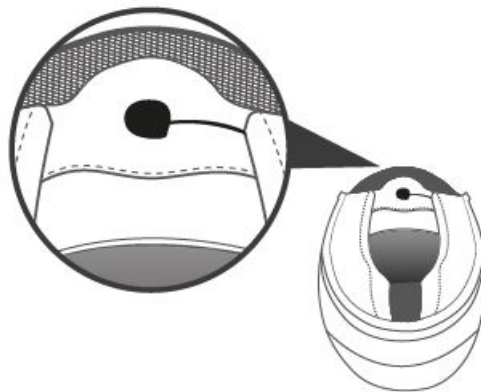


If you are using the half-boom microphone, fix the boom on the left side and keep the sponge as closely as possible to your mouth when wearing the helmet. Be sure the white arrow is facing your mouth. Place the external button on the left side of your helmet using the 3M adhesive.



You can hide the speaker wire under the helmet padding.

Charging

You can charge your BT GO using any standard USB wall adapter or PC port connecting to the micro USB port.

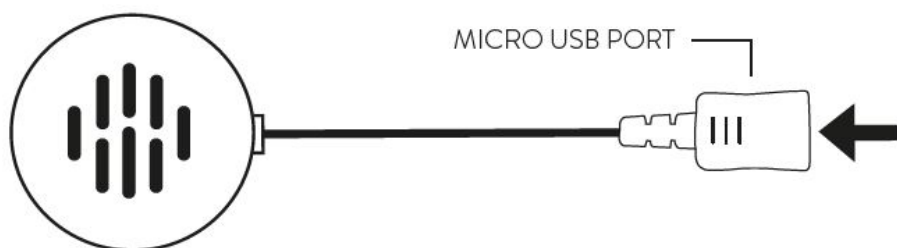

Only the USB cable is supplied inside the box. It takes about 2 hours to fully charge.

Midland BT GO is a full duplex intercom communication system for Driver to Passenger and Bike to Bike communication with a maximum distance of 200 mt (depending on terrain conditions). In addition you can listen to Stereo music, place and answer to phone calls or receive voice street indications from the GPS.

If, during intercom communication you receive a phone call, the intercom is closed and reopens as soon as the phone call is over. If, while you are listening to music, the intercom communication is open, the music will be paused. When the intercom is closed, the music is automatically resumed. If, while you are listening to music, a phone call arrives, the music is paused. When the phone call is closed, the music is automatically resumed.

ATTENTION: Midland BT GO automatically answers to an incoming phone call after 8 sec. You can disable this feature and manually answer to the incoming calls. Enable auto answer Vol+ for 7 sec (LED light: full blue 1 sec).

Disable auto answer Vol+ for 7 sec (LED light blink blue 3 time)

Basic Functionalities	
Turn ON	Vol+ and Vol- for 1 sec Voice prompt: "Power on" and "battery status"
Turn OFF	Vol+ and Vol- for 1 sec Voice prompt: "Power off"
Volume adjustment	Vol+ or Vol – for 1 sec

Pairing to a phone/GPS	
Start pairing on BT GO	Unit is off Vol+ for 5 sec Red and Blue LED blink alternate Voice: "PAIRING" when starts, "PAIRING successful" when finishes
Start pairing on Bluetooth devices (phone/GPS/MP3)	Searches for Bluetooth device and select "Midland BT GO" from the list
PIN (if requested)	"0000"

How to use a phone

Answer call	Vol+ for 1 sec when ringing
End call	Vol + for 1 sec
Reject call	Vol + for 3 sec when ringing
Voice dial	Vol – double click
Redial	Vol + double click (voice prompt:redial)
Cancel redial	Vol + double click
Auto answer feature	By default the “Auto answer” is active, that means the BT GO will automatically answer to an incoming call after 8 sec.

How to use a music player

Play/Pause music	Vol + short press
FWD song	Vol + double click
BWD song	Vol – double click

Pairing to another BTGO Unit	
Start pairing on	Unit is in stand by mode,
both BT GO Units	press Vol- for 5sec on both units, Red and Blue LED blink
	alternate.
	Voice prompt : “PAIRING
	successful”

How to use the intercom	
Open/Close intercom	Vol- short press

Pairing to another Intercom

It is possible to pair the BTGO to another model/brand intercom , if the other unit supports the Universal Intercom feature. The BT GO will use the phone pairing to connect to the Universal Intercom of the other unit.

Start pairing on BT GO Unit	Unit is power off Vol+ for 5 sec Red and Blue LED blink alternate
Start pairing on other Intercom	Follow the manual for UNIVERSAL INTERCOM PAIRING on the other unit

How to use the Univarsal Intercom

Open/Close Intercom	Vol + for 3 sec / Vol + for 1 sec
---------------------	-----------------------------------

Special Action

Reset all pairing	Unit is power off: Vol- and Vol+ for 7 sec (LED full blue for 3 sec)
Cancel Pairing	When pairing is in progress, double click on Vol+ or Vol-
Enable auto answer	Vol+ for 7 sec (LED light: full blue 1 sec)
Disable auto answer	Vol+ for 7 sec (LED light: blink blue 3 times)

Voice prompt/Beep/Light

ACTION	VOICE PROMPT	BEEP ALERT	LED LIGHT
When you turn on the unit	Power ON + battery status		Blinking Blue
When you turn off the unit	Power OFF		Blinking Red 3 times
During PAIRING	Pairing		Red /Blue alternate
After PAIRING	Pairing successful		

Answer phone call		1 Beep	
End phone call		1 Beep	
Reject phone call		2 Beep	
Voice command		1 Beep	
Redial	Redial		
Play/pause		1 Beep 1 Beep	
FWD		1 Beep	
BWD		1 Beep	
Intercom open		1 Beep	
Intercom close		2 Beep	
Adjust volume		1 Beep	
Charging			Blinking red

Full charge			Full blue
Enable auto answer	On		Full blue 1 sec
Disable auto answer	Disable		Blink blue 3 times

Warranty


The warranty lasts 24 months for the main device and 6 months for the accessories (batteries, chargers, antennas, headsets, microphones). For further information about the warranty, please visit www.midlandeurope.com

European CE Notice Certification and Safety Approval Information

This product is CE marked according to the RED directive 2014/53/UE and is free use in all the EU countries. Users are not permitted to make any changes or modifications to the device. Modifications which are not expressly approved by the producer invalidate the warranty card. For further information, please go to our website: www.midlandeurope.com



Documents / Resources

	MIDLAND BT GO [pdf] Instruction Manual BT GO
---	---

References

- [▲ Midland Europe | Radio and CB, Motorbike intercom systems and Action Cams](#)
- [▲ Midland Europe | Radio and CB, Motorbike intercom systems and Action Cams](#)