

Midland BT Mini Premium Essential Intercom



Midland BT Mini Premium Essential Intercom Installation Guide

[Home](#) » [MIDLAND](#) » Midland BT Mini Premium Essential Intercom Installation Guide 

Contents

- [1 Midland BT Mini Premium Essential Intercom](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 MAIN FEATURES](#)
- [5 WHAT'S IN THE BOX](#)
- [6 DESCRIPTION OF BT MINI](#)
- [7 BT MINI INSTALLATION](#)
- [8 CHARGING](#)
- [9 BT MINI MAIN FUNCTIONALITY](#)
- [10 Voice prompt/Beep/Light](#)
- [11 WARRANTY](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)



Midland BT Mini Premium Essential Intercom



Product Information

Specifications

- **Product Name:** BT Mini
- **Type:** Premium Essential Intercom
- **Communication Range:** Up to 500 meters
- **Speaker Size:** 36mm
- **Microphone Types:** Wired for full-face helmets, Boom for modular helmets
- **Charging Port:** USB-C

Product Usage Instructions

Installation

1. Place both speakers in the designated slots in your helmet.
2. If needed, use the adhesive Velcro included in the package to secure the speakers.
3. Attach the device to the left side of the helmet using the provided adhesive support.
4. If using the wired microphone for full-face helmets, fix it in front of your mouth on the helmet.
5. Tuck the speaker cables under the helmet padding for a clean look.

Charging

To charge the device, use the included USB-C charging cable. The USB-C port allows for both connecting the audio kit and charging the device (not simultaneously).

Pairing with Phone/GPS

1. To start pairing from the BT Mini device, press and hold the Control button for 5 seconds until you see alternating red and blue lights. Voice prompt will confirm pairing status.
2. On your Bluetooth-enabled phone or GPS device, search for available devices and select "Midland BT Mini" from the list.
3. If prompted, enter the PIN code "0000" to complete pairing.

Frequently Asked Questions (FAQ)

- **How do I answer a call?**

Quickly press the Control button during an incoming call.

- **How do I reject a call?**

Quickly press the Control button to reject an incoming call.

- **How do I play/pause music?**

Press and hold the Control button for 3 seconds to play or pause music.

MIDLAND BT MINI

- Thank you for choosing the Midland BT Mini, the most simple Intercom for Scooters and Motorbikes.
- With your BT Mini you can listen to stereo music and GPS navigation voice, place and answer to phone calls, talk with your friends in full duplex intercom up to a distance of 500 m.

MAIN FEATURES

- **Bluetooth with support for the following protocols:** Headset profile, Hands Free Profile (HFP), A2DP, AVRCP.
- **Frequency:** 2.402 – 2.480 GHz
- **Max power:** 2.5mW
- **Intercom Driver** – Passenger
- Intercom Bike to Bike 500 mt (depending on terrain conditions)
- Connect your phone to receive/place phone calls
- Listen to Stereo music (A2DP)
- Connect your GPS for voice street indications
- Lithium battery with 8 hours talk time
- **Recharge time:** app. 2 hours
- Waterproof
- DSP Noise cancelling technology


WHAT'S IN THE BOX

- **BT Mini is available in two different versions:**
 - Single cod. C1410
 - Twin cod. C1410.01
- **The single packing includes:**
 - BT Mini unit, audio kit with two 36 mm speakers, wired microphone for full helmets, boom microphone for open helmets, USB-C recharging cable, spare microphone sponge, velcro pad for speakers and microphones, bi-adhesive mount.
 - The twin package includes the same accessories in double version.

DESCRIPTION OF BT MINI

BT Mini is very easy to operate, because all the main features are managed by the Control button:


1. Open/Close the intercom
2. Answer to incoming phone calls
3. Play/pause the music

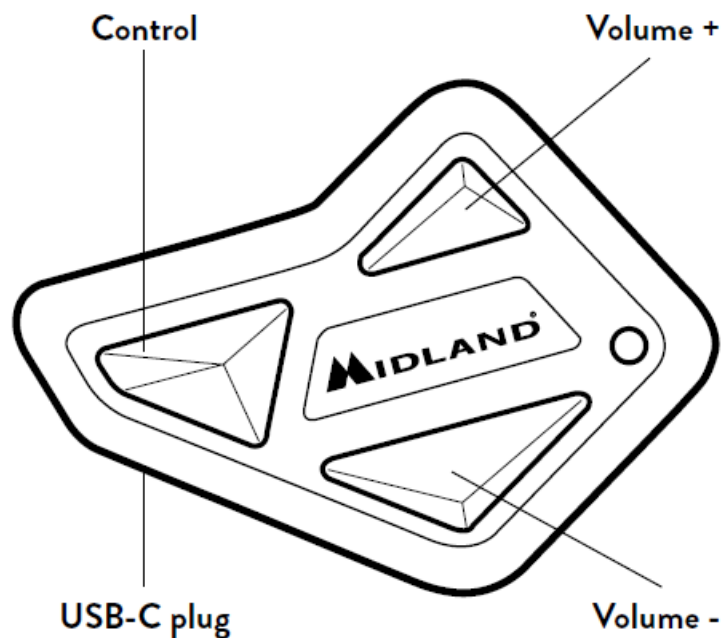


The USB type C plug allows both Audio kit and recharging of the unit (but not at the same time) .

BT MINI INSTALLATION

- Place both speakers in the deep ear pocket of your helmet. You can fix the speakers using the velcro pad provided in the box.

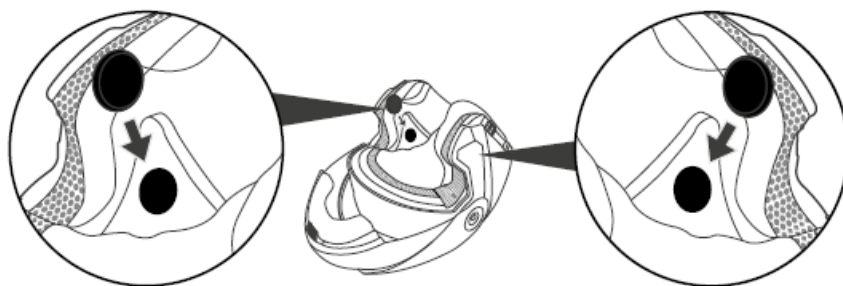


- Place both speakers as much as possible close and centered to your ears. Place the wired microphone in front of your mouth using the adhesive Velcro pad.

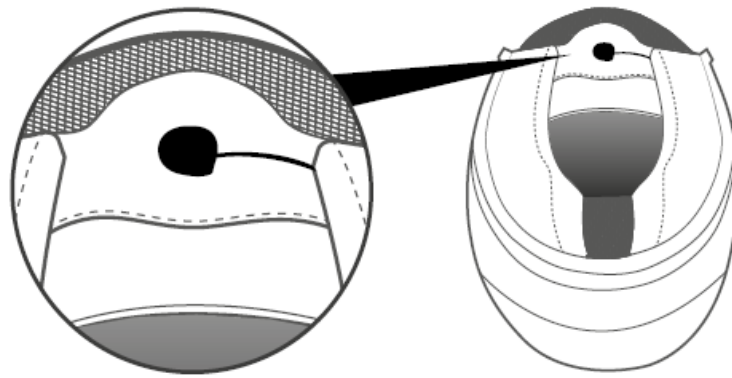

- If you are using the half-boom microphone, fix the boom on the left side and keep the sponge as closely as possible to your mouth when wearing the helmet. Be sure the white arrow is facing your mouth.
- Place the BT Mini unit on the left side of your helmet using the adhesive mount available inside the box.



- The BT Mini can be easily fitted onto the helmet by sliding it downwards so that it fits into the slot of the adhesive Mount.
- The BTMini is maintained in position thanks to the fixing clip located on the upper section (A).
- To detach BT Mini, simply press the fixing clip (A) and push the unit upwards.

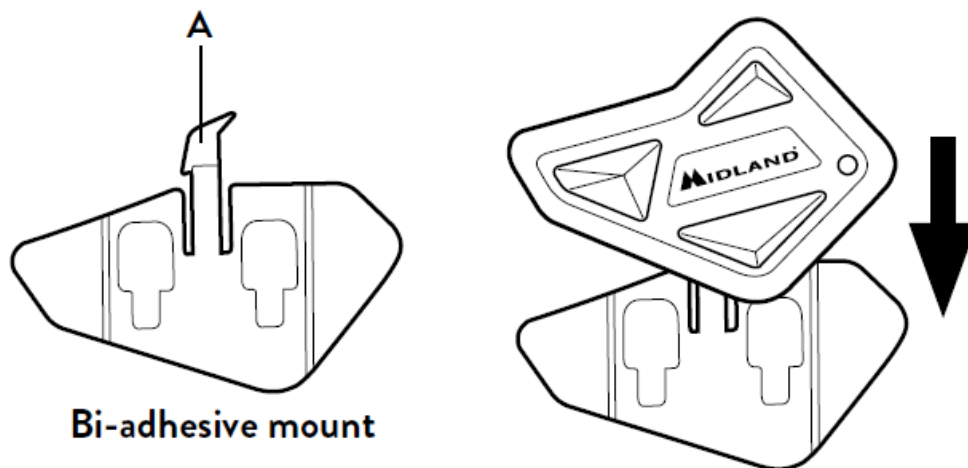

- You can hide the speaker wires under the helmet padding.

CHARGING

- Only the USB-C cable is supplied inside the box.
- You can charge your BT Mini using any standard USB wall adapter or PC port. In the box you can find only the USB type C recharging cable. It takes about 2 hours to fully charge.

BT MINI MAIN FUNCTIONALITY

- Midland BT Mini is a full duplex intercom communication system Driver to Passenger and Bike to Bike communication up to a maximum distance of 500 mt. (depending on terrain conditions).
- In addition you can listen to Stereo music, place and answer to phone calls or receive voice street indications from the GPS.
- If you receive a phone call during an intercom communication, the intercom is closed and reopens as soon as the phone call is over.
- If the intercom communication is open while you are listening to music, the music will be paused. When the intercom is closed, the music is automatically resumed.
- If you receive a phone call while you are listening to music, the music will be paused. When the phone call is closed, the music is automatically resumed.
- **ATTENTION:** Midland BT Mini automatically answers to an incoming phone call after 8 sec. You can disable this feature and manually answer to the incoming calls.
- **Enable auto answer**
Vol+ and Vol- for 5 sec. Voice: "Enable"
- **Disable auto answer**
Vol+ and Vol- for 5 sec. Voice: "Disable"

Basic Functionalities

- **Turn ON** Press 1 sec. on Control and Vol- buttons
Voice prompt: "Power on" and "Battery status"
- **Turn OFF** Press 1 sec. on Control and Vol- buttons
Voice prompt: "Power off"
- **Volume adjustment** Short press on Vol+ or Vol- or keep pressed

Pairing to a phone/GPS

- **Start pairing on BT Mini Unit is off:** Control for 5 sec
Red and blue LED blink alternately
Voice: "Pairing" when starts, "Pairing successful" when finished
- **Start pairing on Bluetooth devices (phone/GPS/MP3)**
Searches for Bluetooth device from the phone or GPS and select "Midland BT Mini" from the list
- **PIN** (if requested) "0000"

How to use a phone

- Answer call Short press on Control button during incoming call
- End call Short press on Control
- Reject call Control for 3 sec when ringing
- Voice dial Double click on Control button or Vol+
- Redial Double click on Vol- button (voice: "Redial")
- Cancel redial Short press on Control

- Auto answer feature By default the “Auto answer” is active, that means the BT Mini will automatically answer to an incoming call after 8 sec.

How to use a music player

- Play/Pause music Press 3 sec on Control button
- FWD song Control double click
- BWD song Vol- double click

Pairing to another BT Mini Unit

- **Start pairing on both BT Mini units**

Unit is in stand by mode, press Vol- for 5 sec on both units, red and blue LED blink alternately

- **Voice prompt:** “Pairing successful” when finished

How to use the intercom

Open/Close intercom Short press on Control button

Pairing to a different brand model (Universal Intercom)

It is possible to pair the BT Mini to another model/brand intercom, by using the Universal Intercom feature of BT Mini and the phone pairing/ connection of the other unit.

- Start Universal Intercom pairing on BT Mini Unit
Unit is in stand by mode, press Vol- for 5 secs, red and blue LED blink alternately
- Start phone pairing on the other brand/model unit
Follow the manual for “Phone pairing” on the other unit

How to use the Universal Intercom

- Open/Close Universal Intercom from BT MINI
Vol+ double click/Control short press
- Open/Close audio from other brand/model unit
Follow the manual for Voice Dial command.

Attention: for some units, you need to repeat twice the Open command: after you hear the voice “Device connected”, repeat the command again.

Special Action

- Reset all pairing Unit is power off: Vol- and Control for 7 sec (LED full blue for 3 sec)
- Cancel Pairing When pairing is in progress, double click on Vol+ , Vol- or Control
- Enable auto answer Vol+ and Vol- for 5 sec (voice “Enable”)
- Disable auto answer Vol+ and Vol- for 5 sec (voice “Disable”)

Voice prompt/Beep/Light

Voice prompt / Beep / Light			
ACTION	VOICE PROMPT	BEEP	LED LIGHT
When you turn on the unit	Power ON + battery status		Blinking Blue
When you turn off the unit	Power OFF		Blinking Red 3 times
Start pairing	Pairing		Red /Blue alternate
After pairing	Pairing successful		
Answer phone call		1 Beep	
End phone call		1 Beep	
Reject phone call		2 Beep	
Voice command		1 Beep	
Redial	Redial		
Play/Pause		1 Beep	
FWD		1 Beep	
BWD		1 Beep	
Intercom open		1 Beep	
Intercom close		2 Beep	
Adjust volume		1 Beep	
Charging			Blinking red
Full charge			Full blue
Enable auto answer	Enable		
Disable auto answer	Disable		

WARRANTY

The warranty lasts 24 months for the main device and 6 months for the accessories (batteries, chargers, antennas, headsets, microphones). For further information about the warranty, please visit: www.midlandeurope.com

EUROPEAN CE NOTICE CERTIFICATION AND SAFETY APPROVAL INFORMATION

- This product is CE marked according to the RED directive 2014/53/UE and is free use in all the EU countries.
- Users are not permitted to make any changes or modifications to the device.
- Modifications which are not expressly approved by the producer invalidate the warranty card.
- For further information, please go to our website: www.midlandeurope.com


Certifications

The manufacturer Midland Europe Srl, hereby declares that the product listed in Table 1 is in compliance with the essential requirements and other relevant provisions of Radio Equipment Regulations 2017. The declaration of conformity is available on the web site: <http://www.midlandeurope.com/it/pagina/10090-certifications>

All articles displaying this symbol on the body, packaging or instruction manual of same, must not be thrown away into normal disposal bins but brought to specialized waste disposal Centres. Here, the various materials will be divided by characteristics and recycles, thus making an important contribution to environmental protection.

midlandeurope.com

Documents / Resources

	<p>Midland BT Mini Premium Essential Intercom [pdf] Installation Guide BT Mini Premium Essential Intercom, BT Mini, Premium Essential Intercom, Essential Intercom, Intercom</p>
---	--

References

- [^ Midland Europe | Radio and CB, Motorbike intercom systems and Action Cams](#)
- [^ Certificazioni - Midland](#)
- [^ Comunicación en movimiento con alto rendimiento](#)
- [^ Midland Europe | Radio and CB, Motorbike intercom systems and Action Cams](#)
- [^ Certificazioni - Midland](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.