



Home » minifinder » minifinder Watch Smart with Alarm Button User Manual



Contents [hide]

- 1 minifinder Watch Smart with Alarm Button
- 2 Product Information
- 3 Product Usage Instructions
- 4 Package Contents
- 5 Getting Started
- 6 MiniFinder Live Introduction
- 7 App Overview
- 8 Alarm Notifications
- 9 Creating a Geofence
- 10 Tags
- 11 Add a Contact
- 12 Share Location with a Contact
- 13 Reminder
- 14 Specifications
- 15 Important Safety Instructions
- 16 FAQ
- 17 Documents / Resources
 - 17.1 References



minifinder Watch Smart with Alarm Button



Product Information

Specifications:

• Model: MiniFinder Watch

Package Contents:

- 1 MiniFinder Watch
- 1 Charging Base
- 1 USB Charging Cable
- 1 Wall Charger

Product Usage Instructions

Downloading the App:

To begin using your MiniFinder Watch, download the MiniFinder Live App from the Google Play Store or App Store. Alternatively, search for MiniFinder Live manually in the App Store or Google Play and install the app.

Creating an Account:

After installing the app, create an account by tapping Sign Up, then enter your email address and create a password.

App Overview:

Upon logging in, familiarize yourself with the app overview displayed on the right-hand side.

Menu Navigation:

Access the quick menu by tapping the white MiniFinder button for key features. Use the main menu in the top left corner for additional options like profile, devices, contacts, and reminders.

Adding a New Device:

To add a new device, navigate to Devices in the main menu, tap the plus sign, and either scan the barcode or manually input the IMEI number. Customize device settings and choose a subscription plan.

Device Settings:

Fine-tune device features and preferences in the Settings section within the Device Panel. Configure update intervals, alerts, and notifications to optimize performance.

Alarm Notifications:

Access alarm notifications by tapping the bell icon. Dismiss alarms, view details, or locate events on the map using the pin icon.

Creating a Geofence:

Create a geofence by opening the Geofence option from the quick menu. Choose to draw a polygon or a circle for your geofence.

Package Contents



1. MiniFinder Watch

- 2. Charging Base
- 3. USB Charging Cable
- 4. Wall Charger

Getting Started

Download the MiniFinder Live

To begin using your MiniFinder Watch, you first need to download the MiniFinder Live App. If you're viewing this guide on your mobile device, simply click the Google Play or App Store icons to go directly to the download page. Alternatively, open the App Store or Google Play, and search for "MiniFinder Live" to install the app manually.





MiniFinder Live Introduction

- Welcome to MiniFinder Live a system designed to provide real-time positioning, smart alerts, and valuable insights to enhance personal safety and independence.
 Paired with the MiniFinder Watch, this platform gives you access to intelligent alarm functions, notifications, and useful tools to support your safety and daily routine.
- This manual provides step-by-step guidance on how to use MiniFinder Live effectively.
- Follow the instructions to get started and make the most of your experience.


App Overview


- Once the app is installed, the first step is to create an account. Tap Sign Up, then enter your email address and create a password to get started.
- Once logged in, you'll be presented with an app overview, which is displayed on the right-hand side.



Menu

- To open the quick menu, tap the white MiniFinder button. This gives you fast access to key features like Tags, Geofence, and the Scanner tool.
- For additional options, use the main menu located in the top left corner of the screen.
- By tapping this menu, you can access your profile, devices, contacts, reminders, and more.

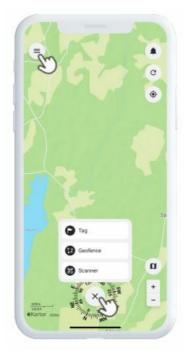

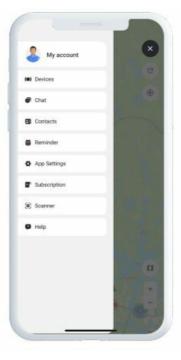


Add a New Device


• To add a new device to your account, navigate to the menu located in the top left

corner of the screen and select Devices. From there, tap the plus sign. You will now have the option to scan the barcode on the packaging for your MiniFinder to automatically populate the IMEI number.

- Alternatively, if the packaging isn't available, you can manually input the IMEI number.
- Next, you can choose a name for your device, update the profile picture, and select a color. Once you have completed these steps, simply tap Add device.



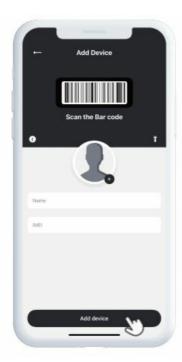

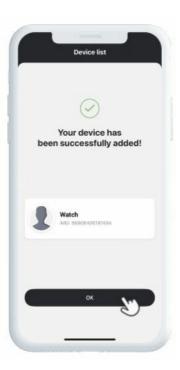

Choose a subscription

- You will now automatically be redirected to the subscription selection page.
- Choose the subscription plan that best suits your needs and follow the steps to complete the purchase.

Device List


You can now find your device in the Device List, located under Devices in the main menu.

Tap the arrow on the right of your device to expand the drop-down menu, where you can access various options, such as:

- A Show on Map View your device's current location
- B Device Settings Adjust positioning and alert preferences
- C Profile Edit device information
- D Log View event history

• E Comments – Add notes related to the device


These tools help you manage and monitor your device with ease.

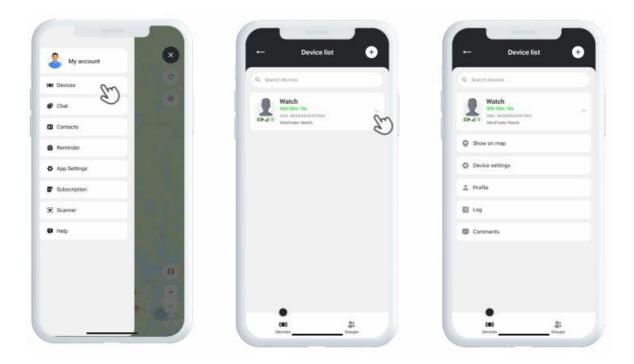

Device Panel

- The Device Panel provides valuable insights into your device's location history and movement patterns, giving you a clearer picture of your activity over time.
- To access the Device Panel, simply tap your device's icon directly on the map. This
 opens a detailed view with tracking data such as recent routes, timestamps, and other
 key metrics.
- From the panel, you can also:
 - A Share live location
 - B View historical data
 - C Add numbers to call
 - D Set up alerts, such as panic alarm, fall alarm, and low battery alarm.



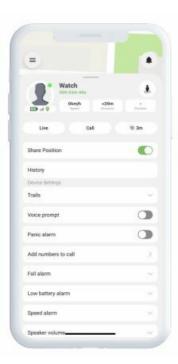


Device Settings

By tapping Settings within the Device Panel, you'll be taken to a dedicated page where you can fine-tune various features and preferences. From adjusting update intervals to configuring alerts and notifications, this section allows you to optimize your device's performance to suit your specific needs.

Alarm Notifications

To access your alarm notifications, tap the blinking bell icon located in the top right corner of the screen. This section is divided into three categories:

- 1. **Alarms** Displays critical alerts that require immediate attention
- 2. **Notifications** Shows general system messages and updates
- 3. **History** Allows you to view all past alarms and notifications for reference Within each section, you can choose to dismiss the alarm, view more details, or tap the pin icon to see the exact location of the event on the map.

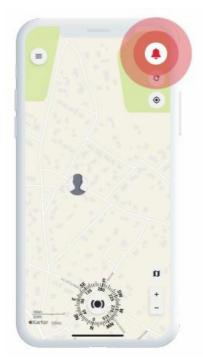




Creating a Geofence

- To create a geofence, open the Geofence option from the quick menu. Choose whether to draw your own geofence using a polygon or a circle.
- If you select polygon, mark the desired area by placing and connecting points on the map. Then, select the device you want to link to the geofence and define whether alerts should trigger when the device enters, exits, or both.
- Finally, give your geofence a name, choose a color, and tap Save.




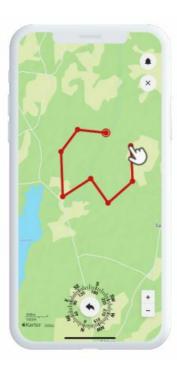



Tags

- Tags allow you to highlight specific locations on the map that are important for your tracking setup.
- To create a tag, select Tags in the quick menu and move the pointer to the desired location on the map. Choose the type of tag, add a label, and include any additional information if needed. Tap Save, and the tag will instantly appear on the map.

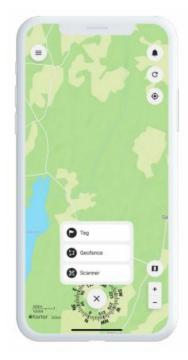






Add a Contact

To view a contact on the map or share location information, you first need to add the person as a contact. Follow the steps below to add a new contact:

- 1. Tap the menu in the upper left corner and select Contacts.
- 2. Click on the Add Contact icon to the right of the search bar. You'll then be asked whether you want to sync contacts from your mobile phone if you prefer not to, select No, thanks.
- 3. Enter the email address or phone number of the person you want to add into the search field and click the magnifying glass icon to search.
- 4. Once the correct contact appears, confirm that you want to add the person. Your contact request will then be sent immediately.
- 5. In order to start sharing location or device information, the person must first accept your request.






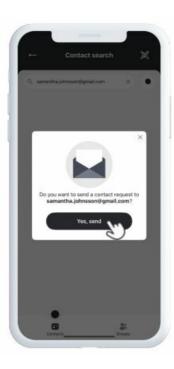

Share Location with a Contact


- Sharing your location with a family member, colleague, or friend can enhance safety and improve communication. To share your location with a contact in the app, start by tapping the menu in the upper left corner. Then go to Contacts and select the person you want to share your location with.
- When the contact is open, choose whether to share your own location or the location
 of a specific device. You can also choose to grant full access, which means the
 contact will have access to all available information linked to the device. Once you've
 confirmed the settings, the location will be shared and visible to the recipient.

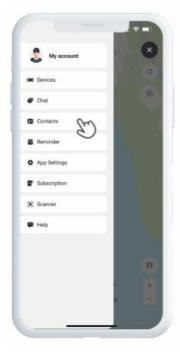



Reminder

- MiniFinder Live includes a built-in calendar feature to help you stay organized.
- To create a reminder, tap the menu and select Reminder. From here, you can schedule important events such as medication reminders, daily routines, or any other tasks.
- Choose the date, set how often the reminder should repeat, and tap Save.
- Your reminder will now appear in the calendar, helping you keep track of key activities with ease.

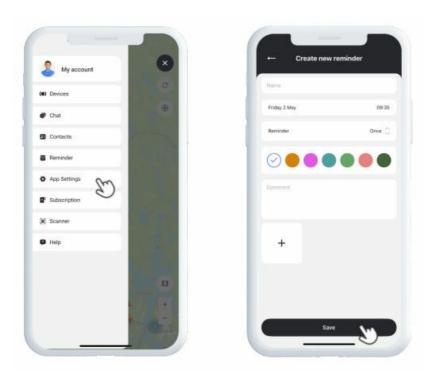

Need More Help?

For support and feature documentation, go to the Help section in the main menu. There you'll find step-by-step guides covering key MiniFinder Live functions, designed to help you maximize the platform's capabilities.





Specifications

- Dimensions 47 mm x 42 mm x 15 mm
- Weight 38g
- Battery Life 48h with 3 3-minute intervals
- Connectivity LTE/4G (CatM1), GSM
- Power Source 5V DC 1.0A
- SIM Preinstalled
- Voice call Yes
- Fall sensor Yes
- Screen 1.3" TFT (240 x 240)
- GPS, GLONASS, Galileo

Memory

The device is equipped with a built-in 64 MB flash memory. This memory stores GPS data when GSM network coverage is unavailable (e.g., in rural areas, indoors, underground locations, etc.). The stored location data is automatically transmitted as soon as GSM coverage is restored.

Safety Declaration

This equipment has been tested and found to comply with safety certification requirements according to the specifications of EN Standard: EN60950-1: 2006 + A12:

Important Safety Instructions

- Read these instructions carefully.
- Keep these instructions for future reference.
- Heed all warnings.
- Follow all instructions.
- Do not tamper with your MiniFinder®.
- Do not use abrasive cleaners to clean your MiniFinder®.
- Do not place your MiniFinder® in a dishwasher, washing machine, or dryer.
- Do not expose your MiniFinder® to extremely high or low temperatures.
- Do not use your MiniFinder® in a sauna or steam room.
- Do not leave your MiniFinder® in direct sunlight for extended periods.
- Do not place your MiniFinder® near an open flame.
- Do not attempt to disassemble your MiniFinder®; it contains no user-serviceable parts.

Recycling Information

The symbol on the product or its packaging indicates that this product must be disposed of separately from household waste at the end of its service life. Please be aware that it is your responsibility to dispose of electronic equipment properly at designated recycling centers, to help conserve natural resources.

FAQ

How do I charge the MiniFinder Watch?

Use the provided Charging Base, USB Charging Cable, and Wall Charger to charge the MiniFinder Watch.

Documents / Resources



minifinder Watch Smart with Alarm Button [pdf] User Manual
Watch Smart with Alarm Button, with Alarm Button, Alarm Button, Watch
Smart

References

- User Manual
 - Alarm Button, minifinder, Watch Smart, Watch Smart with Alarm Button, with Alarm
- minifinder Button

Leave a comment

Your email address will not be published. Required fields are marked*

Comment*

Name

Email

Website

 $\hfill \square$ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.