



Mitchell1 ssa Cobra Shift Lever Instruction Manual

[Home](#) » [Mitchell1](#) » Mitchell1 ssa Cobra Shift Lever Instruction Manual 

Mitchell1 ssa Cobra Shift Lever Instruction Manual



YMMS: 2012 International Pro Star Series

Engine: International Maxx Force 13 Diamond Logic Controller EPA 10 6 CYL

VIN: 3HSDJSJR0CN054537

License:

Odometer:

Contents

1 COBRA SHIFT LEVER

1.1 CONNECTOR PINS DESCRIPTION

2 PUSH BUTTON SHIFT CONTROL

2.1 CONNECTOR PINS DESCRIPTION

3 SHIFT SELECTOR

3.1 CONNECTOR PINS DESCRIPTION


4 Documents / Resources

4.1 References

5 Related Posts

COBRA SHIFT LEVER

Fig 1: 8-Terminal Cobra Lever Connector End View

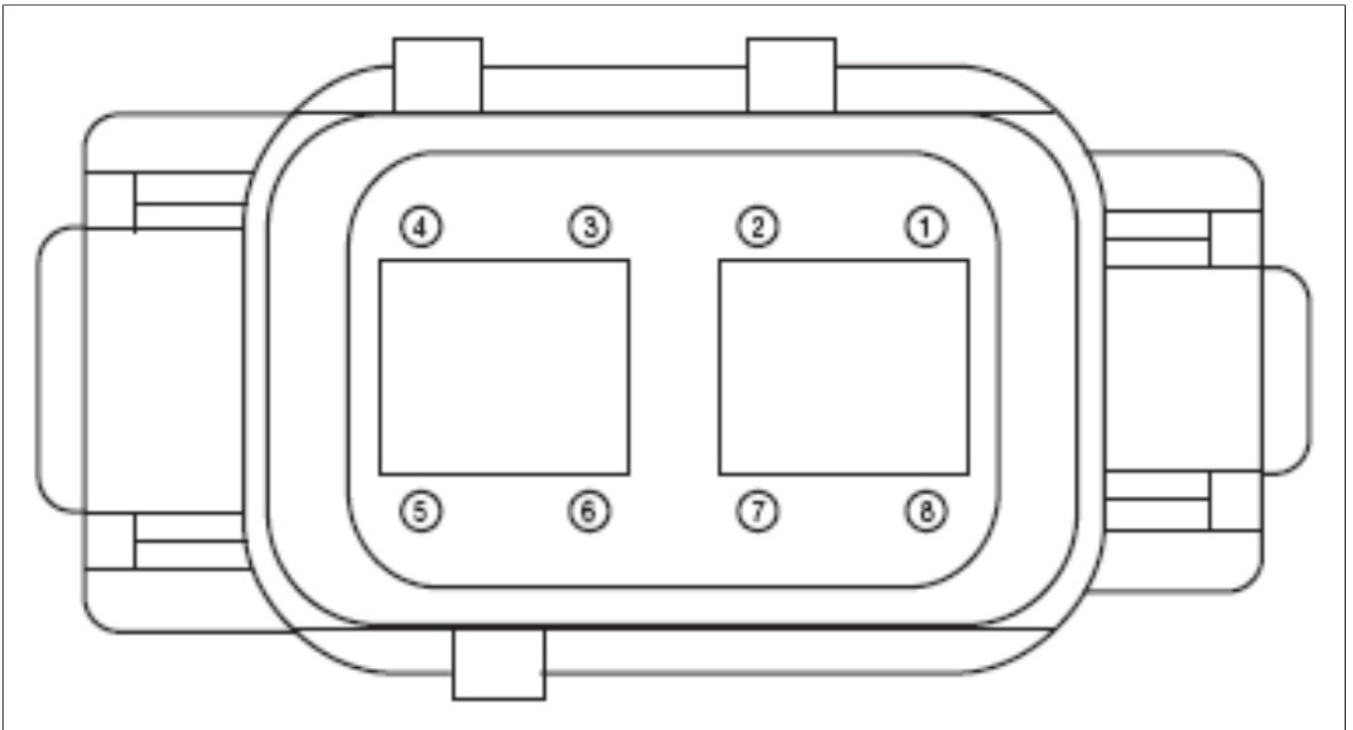


CONNECTOR PINS DESCRIPTION

8-Terminal Pin	Description	Wire	38-Terminal Vehicle Harness Connector Pin
1	Auto Mode Signal (+)	16 T XL	15
2	Shift Control Common 1 (-)	16 T XL	17
3	Shift Control Protected Battery Negative (-) 1	16 T XL	25
4	Shift Control Protected Battery Positive (+)	16 T XL	31
5	Dash Lights	16 T XL	N/A
6	Service Light Supply	16 T XL	23
7	Shift Control Protected Battery Negative (-) 2	16 T XL	14
8	Shift Control Manual Mode Signal (+)	16 T XL	16

PUSH BUTTON SHIFT CONTROL

Fig 2: 30-Terminal Push Button Shift Control Connector End View

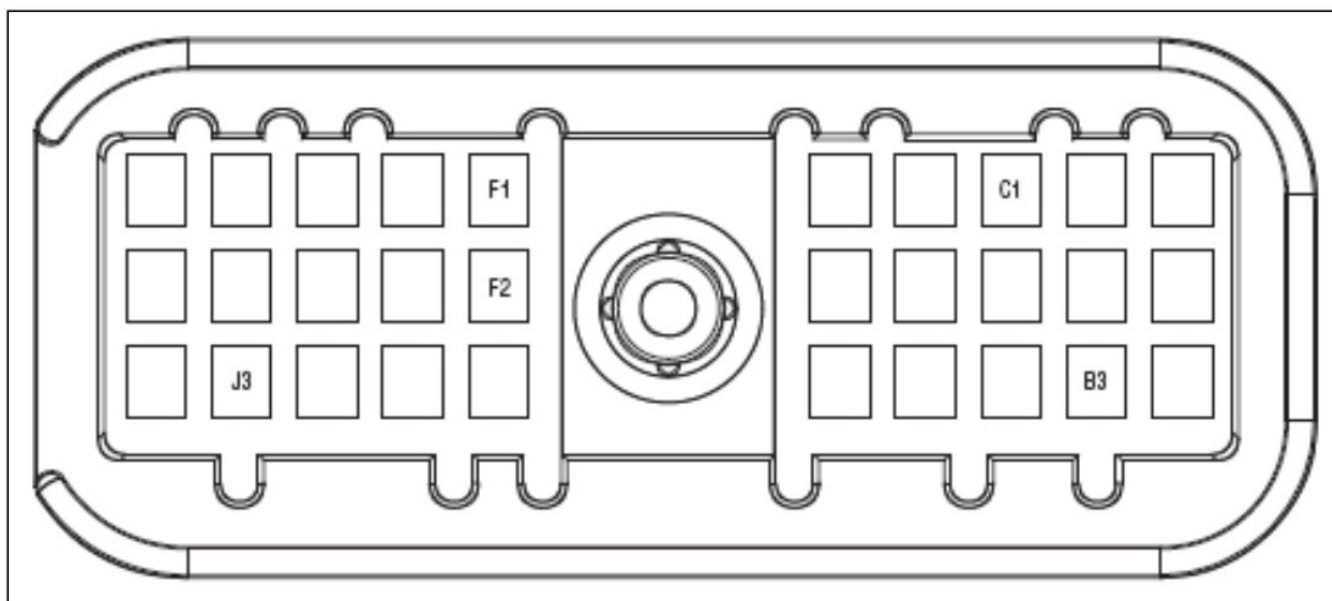

CONNECTOR PINS DESCRIPTION


30-Terminal Pin	Description	Wire	38-Terminal Vehicle Harness Connector Pin
C1	Shift Control Protected Battery Positive (+)	16 T XL	31
B3	Dimmer Control	16 T XL	N/A
F1	HIL High (+)	16 TXL	28
F2	HIL Low (-)	16 T XL	27
J3	Shift Control Protected Battery Negative (-)	16 T XL	25

SHIFT SELECTOR

CONNECTOR PINS DESCRIPTION

3-Terminal Pin	Description	Wire	38-Terminal Vehicle Harness Connector Pin
A	Shift Control Manual Mode Signal (+)	16 TX L	16
B	Auto Mode Signal (+)	16 TX L	15
C	Shift Control Common 1 (-)	16 TX L	17
	Service Lamp	16 TX L	23



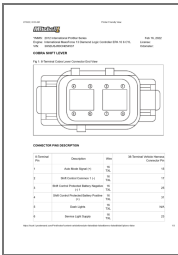

[Mitchell1 ssa Cobra Shift Lever](#) [pdf] Instruction Manual
ssa, Cobra Shift Lever, ssa Cobra Shift Lever, Shift Lever, Lever

References

- [Printer Friendly View](#)