

MUL
TECHNOLOGIES
MUL
TECHNOLOGIES
MARC 5 Series
Autonomous
Robotic Cart



MUL TECHNOLOGIES MARC 5 Series Autonomous Robotic Cart User Guide

[Home](#) » [MUL TECHNOLOGIES](#) » MUL TECHNOLOGIES MARC 5 Series Autonomous Robotic Cart User Guide 

Contents

- [1 MUL TECHNOLOGIES MARC 5 Series Autonomous Robotic Cart](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FAQ](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



MUL TECHNOLOGIES MARC 5 Series Autonomous Robotic Cart



Specifications


- MARC 5 Series
- Lithium-ion battery pack
- Battery keys included
- Battery charger
- USB-C to LAN cable kit
- User's Guide
- Quick Start Guide



Product Usage Instructions

1. Verify emergency stop button is not activated (pressed in). Rotate the button clockwise to reset.

Insert battery by sliding onto rails and pushing until fully seated. Insert key into battery and turn to "On" position. Press the Power button on the handle above the EZ-Go Navigation panel. LEDs will be yellow while booting – wait up to 1 minute for unit to complete booting – until "Cart ready" is heard and status LEDs on the cart legs begin pulsing green.

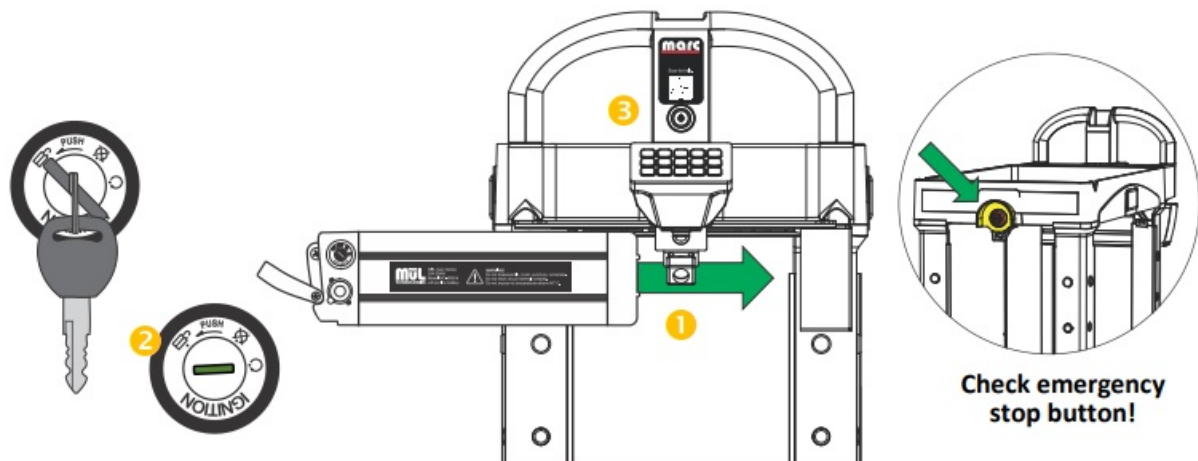


2. Program your first locations.


Press and hold any un-programmed station button (grey) for 3 seconds until you hear the double-beep sound. Station button (in this example, 1) will turn green, indicating programming completed.



TIP: For best results, program destinations more than 2 feet from any stationary objects.

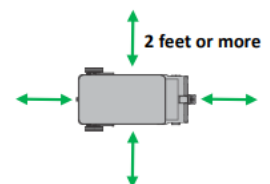

Manually move the cart to the next location you wish to program. Press and hold any un-programmed station button (in this example 3) for 3 seconds until you hear the double-beep confirmation sound.

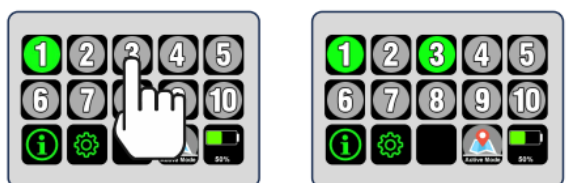


TIP: If you see the second screen, press the battery level button to return to the first screen with station buttons 1-10.



3. Saved your map to keep your programming.

All programming is done in Active Mapping Mode (no saved map). All programming is erased when cart is powered down. To keep all programming intact, move to Fixed Map mode by pressing the Map button for 3 seconds till you hear the double-beep confirmation sound. Now, programming will remain during battery changes and reboots, great for use day after day for the same tasks.

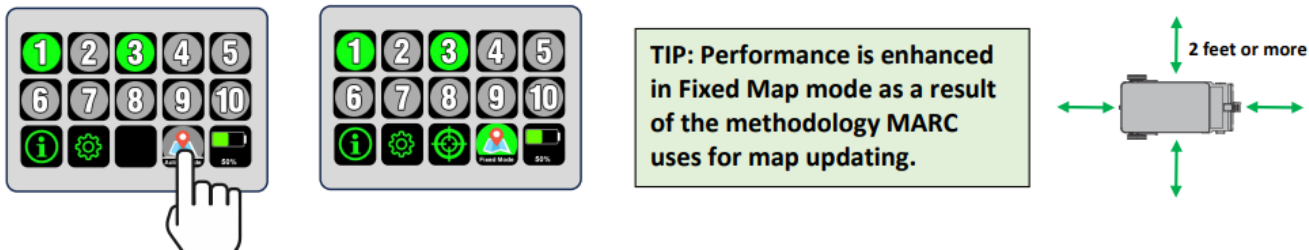

Please read the included User's Guide for important instructions and intended use information to use your product safely! Use QR code to access product documentation.




Revision 241115C

FAQ

Q: How do I access the User's Guide?

A: You can access the User's Guide by using the QR code provided in the package to access product documentation.

Documents / Resources

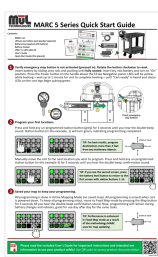	<p>MUL TECHNOLOGIES MARC 5 Series Autonomous Robotic Cart [pdf] User Guide 5470, 5475, MARC 5 Series Autonomous Robotic Cart, MARC 5 Series, Autonomous Robotic Cart, Robotic Cart</p>
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.