

Natscent Dynamo Updated Hotel Scent Diffuser Essential Oil **Diffusers User Manual**

Home » Natscent Dynamo Updated Hotel Scent Diffuser Essential Oil Diffusers User Manual







If you have any issues, email or call us at: care@natscent.com



Contents


- 1 Dynamo Updated Hotel Scent Diffuser Essential Oil Diffusers
- 2 What's in the box
- 3 Specifications
- **4 Quick Installation**
- **5 Quick Setup**
- 6 Intensity grades table & Oil consumption
- 7 Cleaning
- 8 Troubleshooting
- 9 Documents / Resources
 - 9.1 References
- **10 Related Posts**

Thank you for choosing Natscent!

We hope this user manual enhances your experience and enables you to make the most out of your Dynamo.



What's in the box

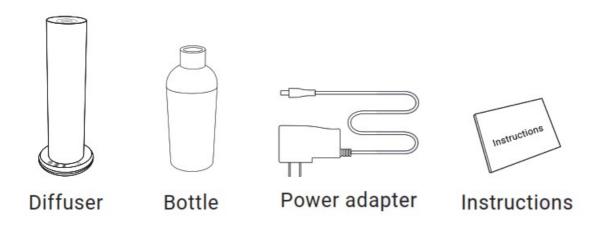

Specifications

Size - 4.5" x 12"

Bottle - 4oz

Input – DC12V 1A MAX

Power -5W

Coverage – up to 1000 sq. ft.*


Net weight – 3lbs

Material - Aluminum

*For optimal performance, the diffuser must be placed in a well-ventilated area where the airflow is optimal (like near a vent), preferably up on a countertop (not on the floor), and not near open windows or doors.

Quick Installation

Placement Note: For optimal coverage, the diffuser must be placed in a well-ventilated area where the airflow is optimal (like near a vent), preferably up on a countertop (not on the floor), and not near open windows or doors.

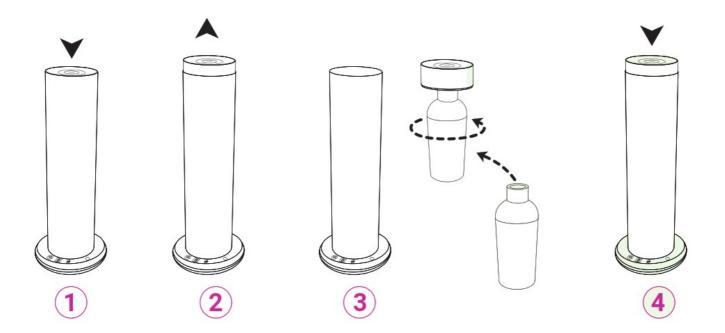

- 1. Press down on the top of the diffuser to open your Dynamo.
- 2. Pull up to remove the diffuser head & unscrew the empty bottle.
- 3. Swap the empty bottle with your Dynamo 4 oz. nebulizing fragrance oil.
- 4. Fit the diffuser head with the bottle back inside by aligning it with the air nozzle on the device's body. Once they fit together, press the top again to lock in place.
- 5. To power ON, connect your Dynamo to the power supply. You will hear a long beep, confirming operation.

Quick Setup

A. SMART OPERATION

To fully customize the intensity of the fragrance & the hours and days of operation of your Dynamo diffuser, download the Natscent App from your GooglePlay or AppStore by scanning the QR code below.




https://qrco.de/NatscentApp

Download App




A.1. Connect to your diffuser

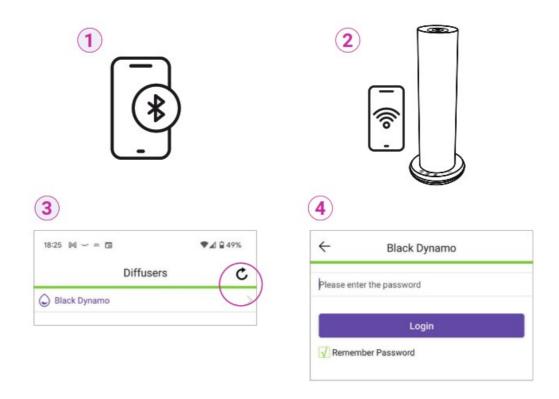


- 1. Turn your smart device's Bluetooth ON.
- 2. Make sure your Dynamo is plugged-in, turned ON, and in range of your phone.
- Go into the Natscent App and choose your device.If you don't see it right away, use the refresh button at the top right of your screen.
- 4. Input the default factory password 8888 and log in.

A.2. Set your schedule

I. Press the "+" button to add your desired schedule.

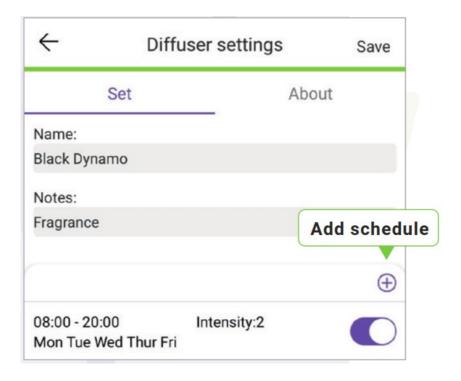


II. Slide up & down in the first panel to adjust the hours of operation. In the example below, the diffuser works From 06:00 Until 18:00.

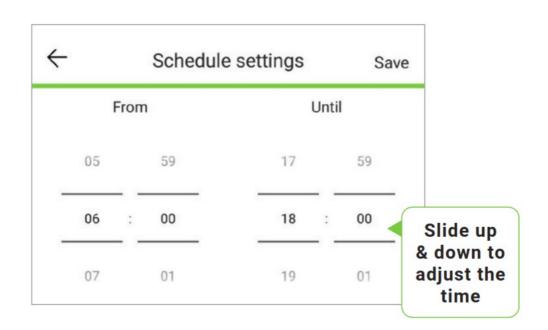

Note: on Android, the time is shown the military way, where 18:00 is 6:00pm.


III. Select/deselect day(s) of operation by tapping the boxes in the next panel. They will turn purple when selected and grey when deselected.

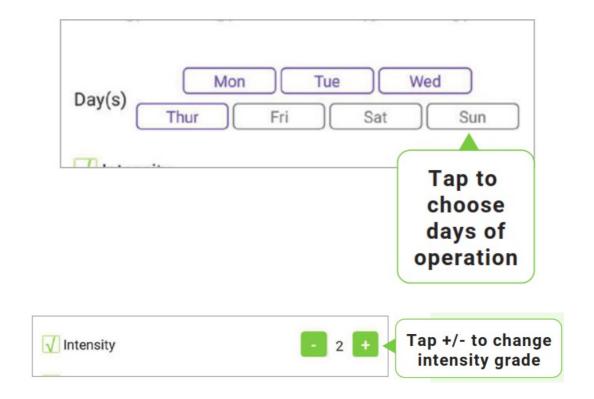


- IV. Choose your preferred fragrance intensity from the conveniently pre-set list of grades (a) or customize it to your liking (b).
- a) Tick the "Intensity" box to choose a Grade from 1 to 9.

Tap the + or - to change it to your liking.


Note: please check the Grades table on page 6 for more details.

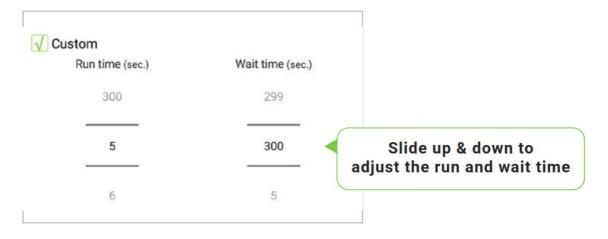

- b) Tick the "Custom" box to choose your own run time and wait time. Slide up & down to adjust. In this example, the diffuser will run for 5 seconds, and it will wait for 300 seconds (5 minutes). It will repeat this cycle according to your hours and days of operation.
- V. You can have up to 5 schedules running at the same time, but please make sure they do not overlap. To delete a schedule, simply slide left.

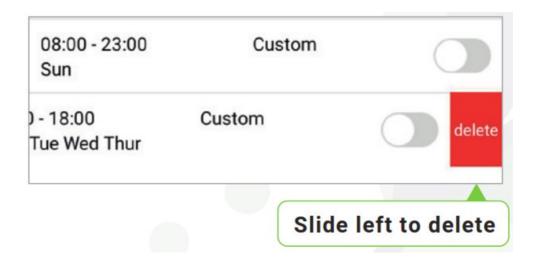

VI. Always make sure you save both your schedule settings and diffuser settings.

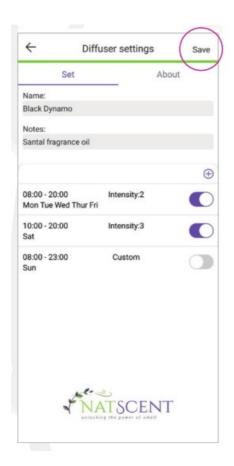



B. MANUAL OPERATION


You can set the fragrance intensity manually, using the + or - buttons on the display. When used without the App, your diffuser will work non-stop at that intensity grade until you turn it up, down, or off.

Don't want to have it on all the time?

You have the option to customize the hours and days of operation using the Natscent App.

Notes

- 1. The app overrides manual control! If all app schedules are OFF or the current running schedule doesn't match your current date and time, your diffuser will be OFF, and you will not be able to operate it manually.
- 2. Your diffuser still works even when there is nothing displayed on the screen. The display screen will turn off after setup for a lower consumption of power.

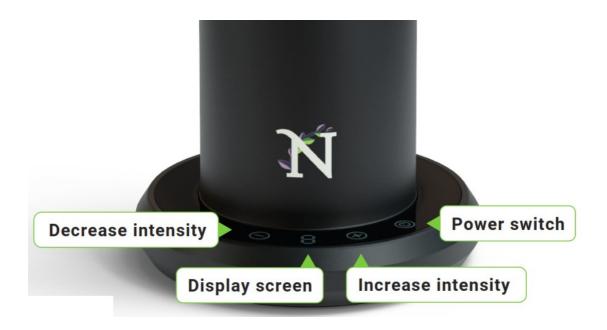

Intensity grades table & Oil consumption

GRADE	RUN TIME (S)	WAIT TIME (S)	CONSUMPTION G/H
G1	5 s	240s	0.03
G2	10s	220s	0.05
G3	15s	200s	0.07
G4	15s	180s	0.11
G5	20s	160s	0.15
G6	20s	120s	0.2
G7	25s	100s	0.25
G8	25s	80s	0.3
G9	25s	60s	0.38
Custom	5-25s	60-600s	-

Example: if you choose Grade 2, your Dynamo will run for 10 seconds, and it will pause for 220 seconds. It will repeat this cycle until you change it.

Note: The data shown above is for reference only. It is normal for the consumption to fluctuate by 15%.

Cleaning

WHEN?

To extend the life of your diffuser and ensure the best experience, we recommend cleaning your Dynamo diffuser often, but especially when:

- 1. You change the fragrance to a new one
- 2. The mist becomes weak

HOW?

In 3 easy steps:

- 1. Unplug your diffuser, pop the top, remove the fragrance bottle, and clean all the leftover atomized fragrance oil using a cotton pad soaked in rubbing alcohol. Dry with an absorbing paper towel.
- 2. Take the empty bottle included with your initial purchase and add at least 1-2 ounces of rubbing alcohol (70%+).
- 3. Run it through the machine for 15-20 minutes at the highest intensity possible to clean out the inside of the diffusion mechanism

Note: you can start using your Dynamo diffuser immediately after the cleaning process.

Troubleshooting

Before giving up on your Dynamo diffuser, please try troubleshooting. If none of these solutions help, please email or call us.

PROBLEM	SOLUTION	NOTES
No mist coming out & no clear indication that the pump is working (no humming)	1. Check that the diffuser is receiving power: - unplug it and plug it back in properly for the display screen to turn on - the power cord must have a green light on the brick. If it doesn't, the cord is damaged 2. A. If using the App, check the schedules: - at least 1 of them must be ON for your diffuser to work - the date and time must match your current date and time 2. B. If not using the App but you used it in the past, log in and turn at least 1 schedule ON.2.C. If not using the App and do not / cannot use it anymore, reset to factory settings by continuously pressing the power button for 5 seconds or until you hear 2 beeps. After the 2nd beep, your Dynamo is back to its factory settings. 2.D. If you're only using the diffuser manually, press the power button to make sure the diffuser is not turned off.	The App overrides manual control! If you used the App in the past and set all schedules to OFF, your Dynamo won't diffuse any fragrance and you won't be able to increase or decrease the intensity manually. Check Solution 2.C for instructions.
Little to no mist coming out & clear indication that the p ump is working (low hummi ng)	Check fragrance level. If there is n o oil left in the bottle, replenish it. Atomization head is getting clogge d. Clean the diffuser as instructed on page 7. Diffusion tube is missing from the diffusion head. Call or message o ur toll-free customer care line 800-656-6877 for help.	

No power/ no display on sc reen	Check the power cord. Try a different outlet. Board is damaged and needs repl acing. The display screen turns to powersaver mode a minute after setup, but your diffuser will still be workin g according to your set schedule. No action required.	If there is no light on the brick, the cord must be replaced.
Very loud humming noise	The pump is loose or damaged an d needs repairing or replacing.	Call or message our toll-free customer care line 800-656-6877 for help.
Forgot password/ Cannot I og in	Reset to the factory password, whi ch is 8888.	Press the power button for 2 seconds or until you hear 1 beep, then input 8888 into the password fiel d to access your diffuser.
App disappears from my sc reen	App is stuck because of unsaved changes or little device `memory. Clear your phone's tabs that are r unning in the background and try again.	To clear your tabs, swipe up on your device's home screen once to see your tabs and once more on each to clear them.
No display on screen	Press power button to make sure the diffuser is ON. Check that the diffuser is receiving power. Check power cord for damage. Check outlet.	
Oil is leaking	Bottle is loose. Make sure it is scr ewed onto the diffuser head tightly and straight. The diffuser is tilted or not placed on a straight surface. Make sure y ou always keep it upright.	Never transport the diffuser with the fragranc e bottle inside. A small amount of fragrance inside the diffus er head is normal. For higher intensities, clea n the oil film with a cotton pad soaked in rubb ing alcohol regularly.

Documents / Resources



Natscent Dynamo Updated Hotel Scent Diffuser Essential Oil Diffusers [pdf] User Manual Dynamo Updated Hotel Scent Diffuser Essential Oil Diffusers, Dynamo, Updated Hotel Scent Diffuser Essential Oil Diffusers, Essential Oil Diffusers, Oil Diffuser C

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.