


# OXBOX SVN-JAYSQRD-1B-EN Square to Round Adapter Kit **Instruction Manual**

Home » Oxbox » OXBOX SVN-JAYSQRD-1B-EN Square to Round Adapter Kit Instruction Manual





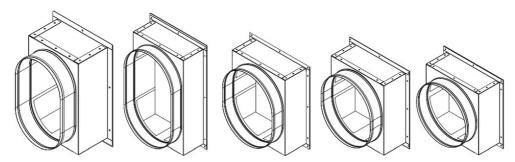

**BX-SVN-JAYSQRD-1B-EN** Installer's Guide

#### **Contents**

- 1 SVN-JAYSQRD-1B-EN Square to Round Adapter Kit
- 2 Safety Section
- 3 General Data
- **4 Installation Instructions**
- 5 Install Adapter Kits to Heat Pump Units
- 6 Horizontal Installation of Adapter Kits to Double Deck Gas
- 7 Downflow Installation of Adapter Kits to Double Deck Gas
- 8 Documents / Resources
  - 8.1 References



# RECOGNIZE THIS SYMBOL AS AN INDICATION OF IMPORTANT SAFETY INFORMATION



#### **WARNING**

These instructions are intended as an aid to qualified licensed service personnel for proper installation, adjustment and operation of this unit. Read these instructions thoroughly before attempting installation or operation. Failure to follow these instruction may result in improper installation, adjustment, service or maintenance possibly resulting in fire, electrical shock, property damage, personal injury or death.





#### DO NOT DESTROY THIS MANUAL

Please read carefully and keep in a safe place for future reference by a serviceman.

# **Safety Section**



## WARNING

## **HAZARDOUS VOLTAGE!**

Failure to follow this Warning could result in property damage, severe personal injury, or death. Disconnect all electric power, including remote disconnects before servicing. Follow proper lockout/ tagout procedures to ensure the power cannot be inadvertently energized.



# **SHARP EDGE HAZARD!**

Failure to follow this Caution could result in personal injury.

Be careful of sharp edges on equipment or any cuts made on sheet metal while installing or servicing. Personal injury may result.

# **General Data**

The purpose of the adapter kit is to provide easy conversion from square opening supply and return using the standard round ducts.

## **Kit Contents**

Items	Quantity
Supply Adapter	1
Return Adapter	1
Gasket	A/R

#### Inspection

Check carefully for any shipping damage. This must be reported to and claims made against the transportation company immediately. Any missing parts should be reported to your supplier at once and replaced with authorized parts only.

#### Kit Identification

Confirm that the supply and return duct adapter kits are correct for your unit. Refer to the Table 1 to verify proper adapter kits and product model number.

Table 1. Adapter Kits Matching Units

Unit Type	Models	Adapter Kits		
		Supply	Return	
Gas/Electric Unit	24 – 60	JAYSQRD001	JAYSQRD001	
Heat Pump Unit	24 – 36	JAYSQRD001	JAYSQRD004	
	42 – 60	JAYSQRD001	JAYSQRD005	
Double Deck Gas Units	24 – 42	JAYSQRD002	JAYSQRD002	
	48 – 60	JAYSQRD003	JAYSQRD003	

## **Installation Instructions**

# **Install Adapter Kits to Gas-Electric Units**

Inct	allatic	ın Incti	ructions	

Install Adapter Kits to Gas-Electric Units

3. Place one adapter over the supply opening on the cabinet. Align the adapt er so that the approximate


position of the adapter is 2.27" from the side of the cabinet and 1.27" from the bottom of the cabinet.

Secure with sheet metal screws. See Figures 1 and 2.

Figure 1. Install Supply Adapter

4. Place another adapter over the return opening on the cabinet. Align the ad apter so that the approximate position of the adapter is 5.71" from the right si de flange of the supply adapter and 1.27" from the bottom of the cabinet. Sec ure with sheet metal screws. See Figure 2.

Figure 2. Install and Align Retur n Adapter

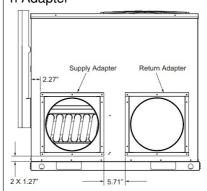

# **Install Adapter Kits to Heat Pump Units**

1. Do the Steps 1 and 2 as instructed in the procedure "Install Adapter Kits to Gas-Electric Units".

#### 2. For \*\*\*\*\*24 – 36 Heat Pump Units –

a) Place one adapter over the supply opening on the cabinet. Align the adapter so that the left side


flange of the adapter is flush with the side of the cabinet and the bottom flan ge of the adapter is approximately 0.66" from the bottom of the cabinet. Sec ure with sheet metal screws. See Figures 3 and 4.

b) Place another adapter over the return opening on the cabinet. Align the a dapter so that the

approximate position of the adapter is 1.92" from right side flange of the sup ply adapter and 0.66"

from the bottom of the cabinet. Secure with sheet metal screws. See Figure 4.

**NOTE:** Notice orientation of the return adapter. The shorter side of the return adapter is either at the top or bottom.

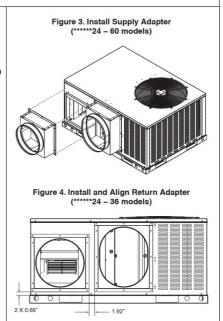

# 3. For \*\*\*\*\*\*42 – 60 Heat Pump Units

a) Place one adapter over the supply opening on the


cabinet. Align the adapter so that the approximate position of the adapter is 0.72" from the side

of the cabinet and 0.66" from the bottom of the cabinet. Secure with sheet m etal screws. See

Figures 3 and 5.

- b) Place another adapter over the return opening on the cabinet. Align the a dapter so that the approximate position of the adapter is 3.85" from the right side flange of the supply adapter and
- 0.66" from the bottom of the cabinet. Secure with sheet metal screws. See Figure 5.

**NOTE:** Notice orientation of the return adapter. The shorter side of the return adapter is either at the top or bottom.

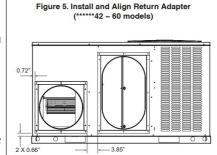

## Horizontal Installation of Adapter Kits to Double Deck Gas Units

1. Do the Steps 1 and 2 as instructed in the procedure "Install Adapter Kits to Gas-Electric Units".

# 2. For \*\*\*\*\*24 - 42 Double Deck Gas Units -


- a) Place one adapter over the supply opening on the cabinet. Align the adapte r so that the approximate
- position of the adapter is 3.09" from the side of the cabinet and 4.14" from the bottom of the cabinet. Secure with sheet metal screws. See Figures 6 and 7.
- b) Place another adapter over the return opening on the cabinet. Align the adapter so that the approximate position of the adapter is 19.00" from the right side flange of the supply adapter and 4.14" from the bottom of the cabinet. Secure with sheet metal screws. See Figure 7.

**NOTE:** Notice orientation of both the supply and return adapters. The shorter side of both the adapters are either at the top or bottom.

(\*\*\*\*\*24 – 42 models)

Figure 6. Install Supply Adapter

Figure 7. Install and Align Return Adapter (\*\*\*\*\*\*24 – 42 models)

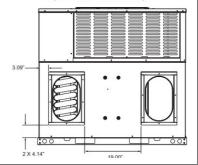

## 3. For \*\*\*\*\*\*48 – 60 Double Deck Gas Units a)

Place one adapter over the supply opening on the cabinet. Align the adapter s o that the approximate

position of the adapter is 3.37" from the side of the cabinet and 3.05" from the bottom of the cabinet. Secure with sheet metal screws.

See Figures 8 and 9. b) Place another adapter over the return opening on the cabinet. Align the adapter so that the approximate position of the adapter is 10 .79" from the right side flange of the supply adapter and 3.05" from the bottom of the cabinet. Secure with sheet metal screws. See Figure 9.

**NOTE:** Notice orientation of both the supply and return adapters. The shorter side of both the adapters are either at the top or bottom.


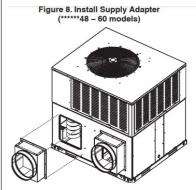


Figure 9. Install and Align Return Adapter

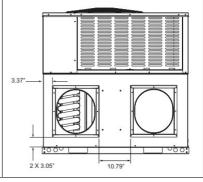



# **Downflow Installation of Adapter Kits to Double Deck Gas Units**

1. Do the Steps 1 and 2 as instructed in the procedure "Install Adapter Kits to Gas-Electric Units".

- 2. For \*\*\*\*\*24 42 Double Deck Gas Units -
- a) Place the return adapter at the top of roof curb. Align the adapter inside th e roof curb opening. Secure return adapter with sheet metal screws on roof c urb. See Figures 10 and Figure 11.
- b) Place supply adapter over the top of other roof curb opening and repeat th e step a). See Figure 11 for alignment dimensions.
- c) Remove Block plate from the bottom of the unit (if attached). See Figure 1 0, View A.
- d) Place the unit above the roof curb and align properly.

**NOTE:** Notice orientation of both the supply and return adapters. The shorte r side of both the adapters are either at the top or bottom.

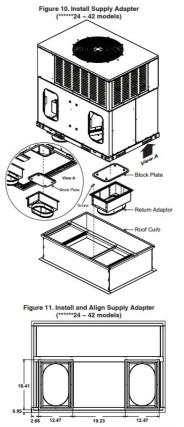

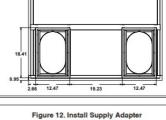


## 3. For \*\*\*\*\*48 – 60 Double Deck Gas Units a)

Place the return adapter at the top of roof curb. Align the adapter inside the r oof curb opening. Secure return adapter with sheet metal screws on roof cur b. See Figures 12 and Figure 13.

- b) Place supply adapter over the top of other roof curb opening and repeat th e step a). See Figure 13 for alignment dimensions.
- c) Remove Block plate from the bottom of the unit (if attached). See Figure 1 2, View A.
- d) Place the unit above the roof curb and align properly.


**NOTE:** Notice orientation of both the supply and return adapters. The shorte r side of both the adapters are either at the top or bottom.

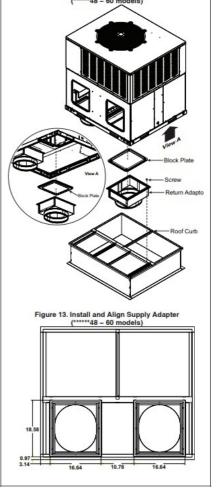

Connect field supplied flex duct to the adapters and secure with field supplied clamps. See Figure 10 for dimensional drawings for flex duct sizing.

Figure 14. Dimensional Drawings

JAYSQRD001 (For use on Gas-Electric and Heat Pump Units)

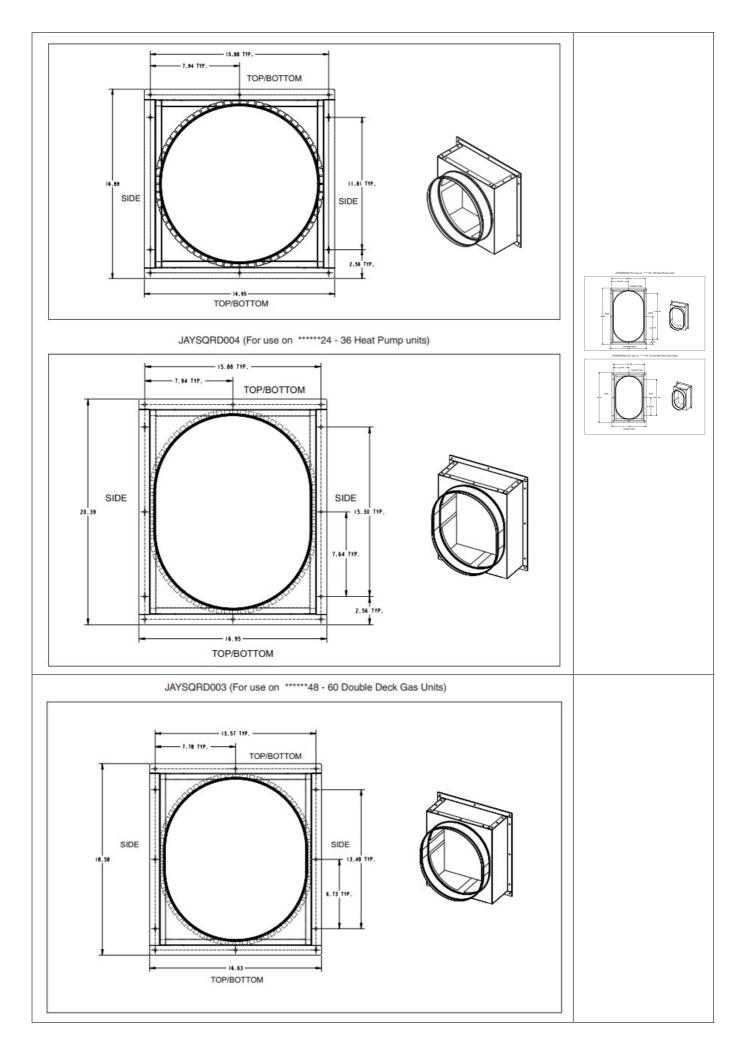

tackle the toughest conditions. For more information visit www.oxboxhvac.com.



The manufacturer has a policy of continuous data improvement and it reserves the right to change design and specifications without notice. We are committed to using environmentally conscious print practices. Representative-only illustrations included in this document.

BX-SVN-JAYSQRD-1B-EN 31 May 2023 Supersedes BX-SVN-JAYSQRD-1A-EN (July 2021) © 2023



## **Documents / Resources**



OXBOX SVN-JAYSQRD-1B-EN Square to Round Adapter Kit [pdf] Instruction Manual SVN-JAYSQRD-1B-EN Square to Round Adapter Kit, SVN-JAYSQRD-1B-EN, Square to Round Adapter Kit, Round Adapter Kit, Adapter Kit

## References

- Oxbox | Affordable quality heating and cooling systems
- User Manual

#### Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.