



# PULSAR PSP-V Ring Adapter Weaver Rail Adapter Instruction Manual

[Home](#) » [Pulsar](#) » PULSAR PSP-V Ring Adapter Weaver Rail Adapter Instruction Manual 

## Contents

- [1 PULSAR PSP-V Ring Adapter Weaver Rail Adapter](#)
- [2 Description](#)
- [3 Package Contents](#)
- [4 Installation Procedure](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)



**PULSAR PSP-V Ring Adapter Weaver Rail Adapter**



## Description

PSP-V adapters are designed to mount Krypton and Proton attachments in front of optical rifle scope lenses on the Weaver/Picatinny rail.

The adapter is suitable for riflescopes with a lens diameter of 35–60 mm.


## Package Contents

- PSP-V adapter
- Hex wrenches (S0.9, S2.5)
- Torx T25 wrench
- 2 screws M4x10
- User manual
- Warranty card


## Installation Procedure

### Step 1. Loosen the screws

Image not found or type unknown

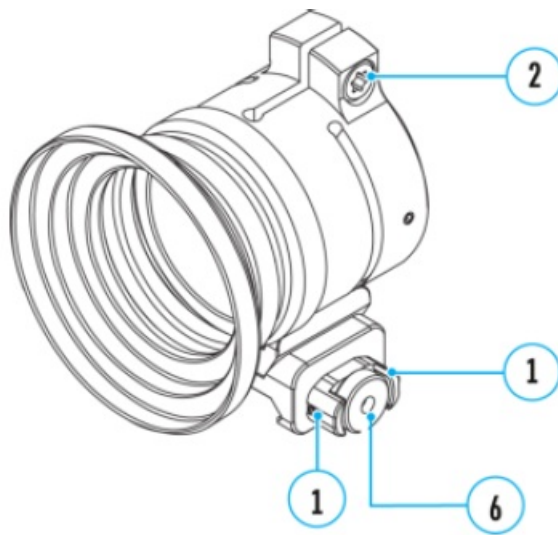


1. Loosen the fixing screws (1) with a hex wrench S0.9.
2. Loosen the screw (2) with a Torx T25 wrench.
3. Move the lever (3) to the OPEN position.

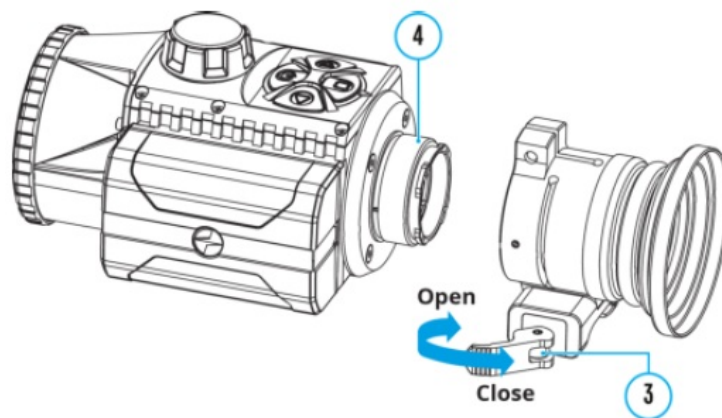

## Step 2. Mount the adapter on the attachment


1. Screw the adapter along the thread on the mount of the attachment (4) until it stops. Then undo a little (no more than one turn) so that the lever(3) is on the left (see Figure).
2. Tighten the screw (2) until the ball joint in the adapter is tight.

## Step 3. Mount the attachment with the adapter on the weapon

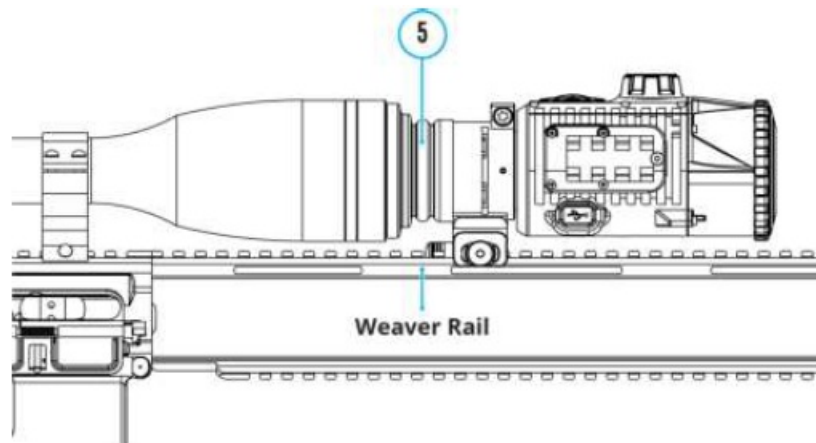


1. Mount the adapter on the weapon rail (Weaver/Picatinny) in front of the riflescope lens. The adapter cover (5) should prevent external light sources from reaching the lens.
2. Tighten the adjusting wheel (6) to ensure hard operation of the lever (3). If necessary, tighten or loosen the adjusting wheel (6) to operate the lever (3) in the best way possible.
3. Move the lever (3) from its initial OPEN position to the CLOSED position.
4. Tighten the screws (1) until they stop.

#### Step 4. Adjust the attachment position

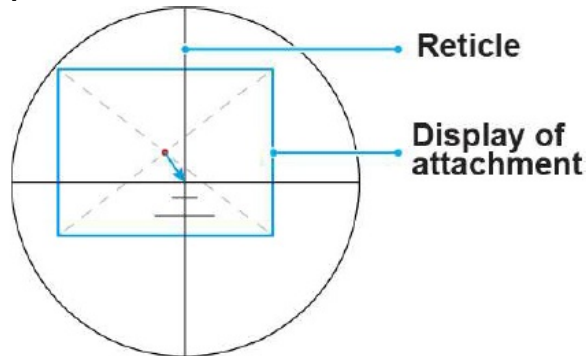

1. Turn on the attachment.
2. Align the display centre with the crosshairs of the riflescope reticle by tilting the attachment and observing through the eyepiece lens.
3. Align top and bottom display boundaries parallel to the horizontal axis of the riflescope by turning the attachment clockwise or counterclockwise.
4. Having achieved the optimal attachment position, finally fix the attachment by tightening the screw (2) until it stops. The clamping force should be 8 Nm (use the torque screwdriver to check).

#### Adjust the adapter height

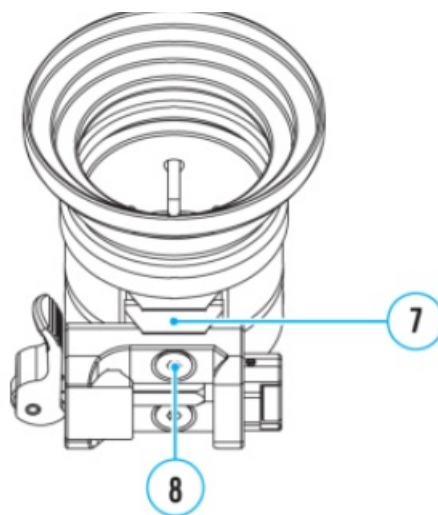


To mount the adapter on riflescopes with a low fit, it is necessary to remove the rail (7):

1. Unscrew the screws (8) using a hex wrench S2.5.
2. Release the rail (7).
3. Fasten the adapter mount using the supplied screws M4x10.

Before using the adapter, unscrew the screws (8) one by one, apply a drop of Loctite and screw back until it

stops. Allow the Loctite to dry for some time.

Documents / Resources

 PSP-V Ring Adapter Manual	<a href="#">PULSAR PSP-V Ring Adapter Weaver Rail Adapter</a> [pdf] Instruction Manual PSP-V Ring Adapter, Weaver Rail Adapter, Rail Adapter, Weaver Adapter, Adapter
---	--