




Puretec Z1 Tripla Series Quick Twist Filter System with Tripla LED Mixer Tap User Guide

[Home](#) » [Puretec](#) » Puretec Z1 Tripla Series Quick Twist Filter System with Tripla LED Mixer Tap User Guide 

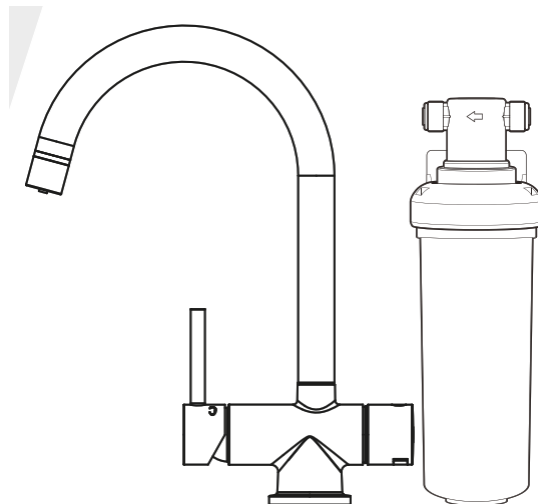

JUL2021

User Guide
Z1 Tripla Series
Quick Twist Filter System with Tripla LED Mixer Tap
For correct operation & installation, it is essential to observe these instructions.

Contents

- 1 What's Inside
- 2 Introduction
- 3 Operation
- 4 Servicing
- 5 Technical Information
- 6 Mixer Tap Assembly
- 7 Mixer Tap Assembly
- 8 Mixer Tap Connections
- 9 Mixer Tap Connections
- 10 Battery Installation
- 11 Replacement of Ceramic Disc
- 12 Installation Procedure
- 13 Cartridge
Installation/Changeout
- 14 Assembly
- 15 WELS Rating
- 16 Parts Description
- 17 Parts Description
- 18 Cartridge Performance Data
- 19 Documents / Resources
- 20 Related Posts

What's Inside

Installation & Operation Manual
Copyright © Puretec Pty Ltd 2021

Introduction

Puretec Customer Service

Thank you for purchasing the Puretec Z1 Tripla water filter system. Your system is a proven performer manufactured from only quality materials and components and will give years of 'spring fresh' water free of impurities if maintained properly.

The Puretec Z1 system cartridges need replacing regularly to maintain optimum performance. This is a simple procedure when following instructions. For cartridge, replacements contact your nearest Puretec stockist. The system is designed for metropolitan supply water but can be used in other situations. For other types of water supply please contact your local Puretec stockist or call our Puretec Customer Service Helpline prior to installing the tap.

Customer Service Helpline **1300 140 140** (Australia) **0800 130 140** (New Zealand).

Caution: Do not use water that is microbiologically unsafe or with water of unknown quality without adequate disinfection before or after the system. This product must be installed in accordance with local plumbing regulations by a licensed plumber.

Operation

The Puretec Z1 Tripla system is designed to run economically for many years, dependent on the initial installation and periodical maintenance.

Flush systems for 10 minutes after any period of non-use for more than 2 days. For a period of non-use of 2 weeks or more, it may be necessary to replace the cartridge.

Tap Surface – should only be cleaned with liquid detergent or soap and water. Under no circumstance should any abrasive or acid-base cleaning agents be used.

Installation Note: A water filter system/tap, like any product, has a limited life and may eventually fail. Also

sometimes failure happens early due to unforeseen circumstances. To avoid possible property damage, this product should be regularly examined for leakage and/ or deterioration and replaced when necessary. A drain pan, plumbed to an appropriate drain or outfitted with a leak detector, should be used in those applications where any leakage could cause property damage, and/or the water supply should be turned off if no one is home/ present.

Cartridge Replacement

To maintain the high quality of the purified water the cartridges need changing every 6-12 months (dependent on water quality and usage).

When replacing the cartridge, ensure you reset the LED reminder light by removing/replacing the battery from the rubber seat. Please refer to page 8 for a detailed diagram.

Order Z1-R for a replacement cartridge to suit your Z1 Tripla system. Quick Twist Water Filter System with Tripla LED Mixer Tap

Servicing

Periodically clean the aerator for any lodged sediment that may restrict flow. A Puretec water filter is highly recommended on all incoming lines for product longevity.

Should it be necessary to have your mixer serviced while under warranty, please carry out the following procedure:

1. Firstly call the plumber, preferably the one that has installed it, (most problems are caused by the supply lines not being cleaned out properly, prior to connecting the mixers).
2. Make sure that the plumber has installed your mixer according to the Instruction Guide.
3. If the plumber is satisfied that he cannot rectify the problem then contact your plumbing supply store or your local Puretec stockist.

Important: We do not recommend the dismantling of any internal part of the mixer as this will breach your warranty.

Technical Information

Puretec mixers can be used in conjunction with:

- Pressure storage hot water system
- Any mains water pressure not exceeding 500 kPa
- Maximum hot water temperature of 60°C
- Instantaneous hot water system
- Any filtered water supply

Recommended Working Pressures

- Minimum working pressure 172 kPa (7.5 psi)
- Maximum working pressure 500 kPa (72.5 psi)


It should be noted that water mains pressure builds up during off-peak periods, mainly at night, sometimes doubling or trebling normal daytime pressures.

Note: Not suitable for unequal pressure. On high-pressure areas where the pressure exceeds the recommended working pressure as indicated above, approved pressure limiting valves must be installed or a warranty is voided.

Mixer Tap Assembly

PART 1

Fig. 1 – Mixer Tap Installation Guide

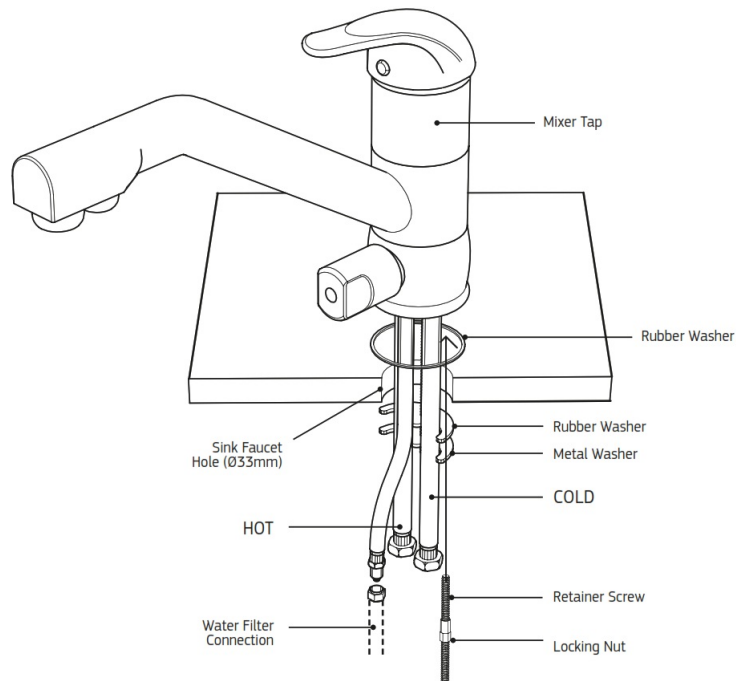

Note: It is important to flush out the supply pipes to the mixer before connecting the flexible hoses, with the initial installation, so no foreign matter can enter into the cartridges.


A Puretec Water Filter is highly recommended for product longevity.

Mixer Tap Assembly


Fig. 2 – Tap Assembly

Step 1. Connect the hoses to the faucet and tighten them. Refer to page 7 for connection patterns. Only use hand to screw the flexible hose. Do not overtighten. Don't use any tools.


Step 2. Put brass base with o-ring to the bottom of the faucet.

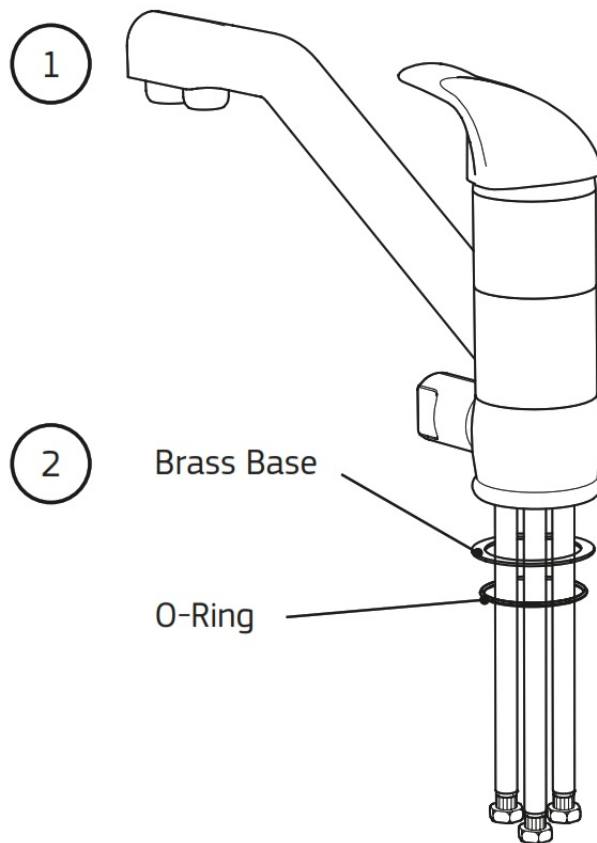

Step 3. Put the hoses through the basin or sink. The required through-hole size is Ø33mm.

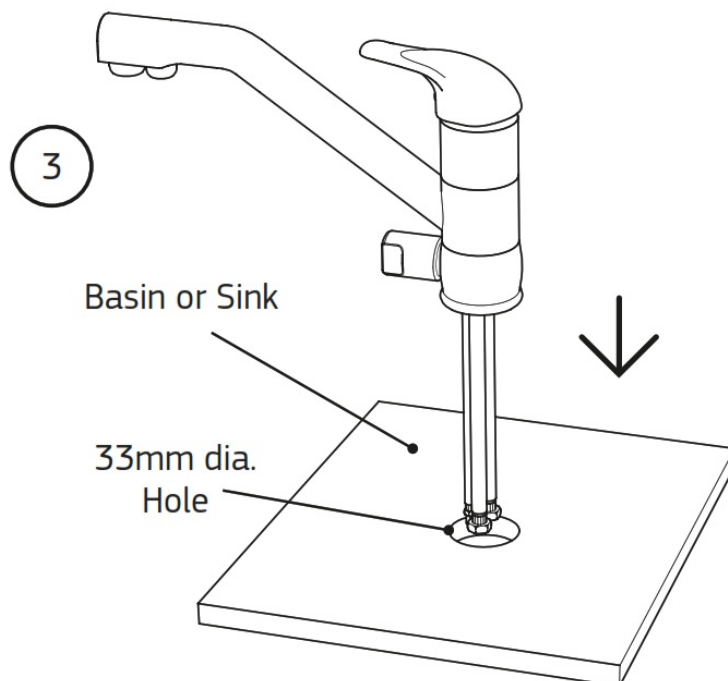


Step 4. Place the retainer screw through the hole in each spacer and screw to the hole on the bottom of the faucet. Then, use a wrench to lock the locking nut.

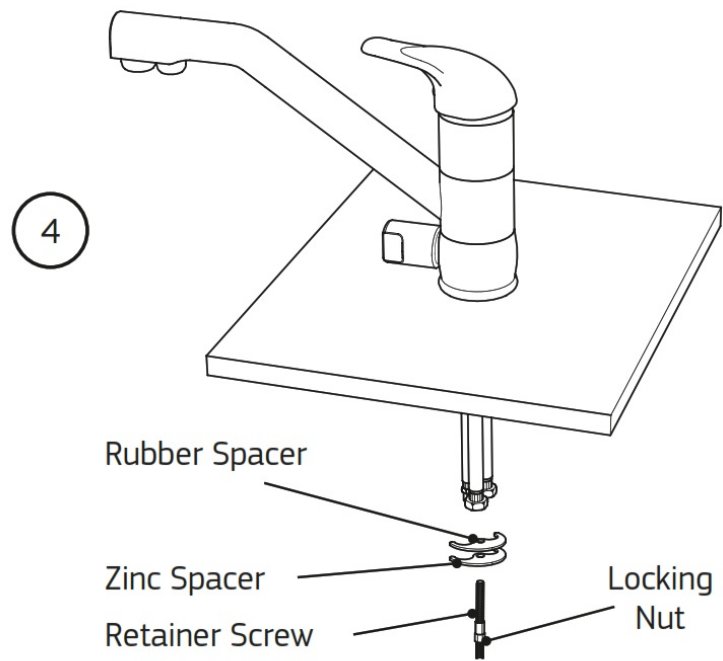

Mixer Tap Connections


Fig. 3 – Water Connection Patterns

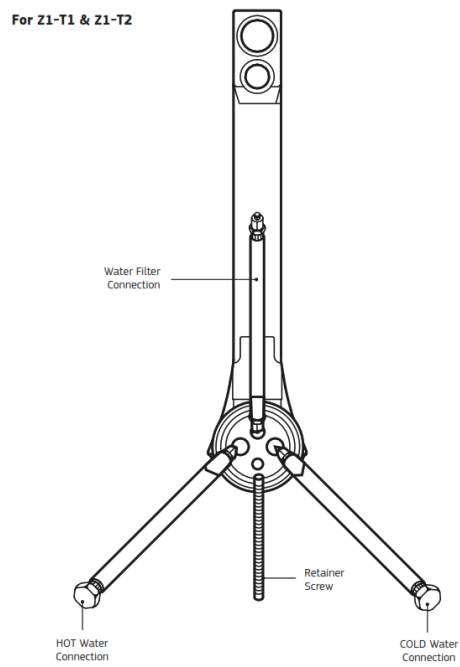

Mixer Tap Connections

Fig. 4 – Water Connection Patterns

For Z1-T3 to Z1-T6

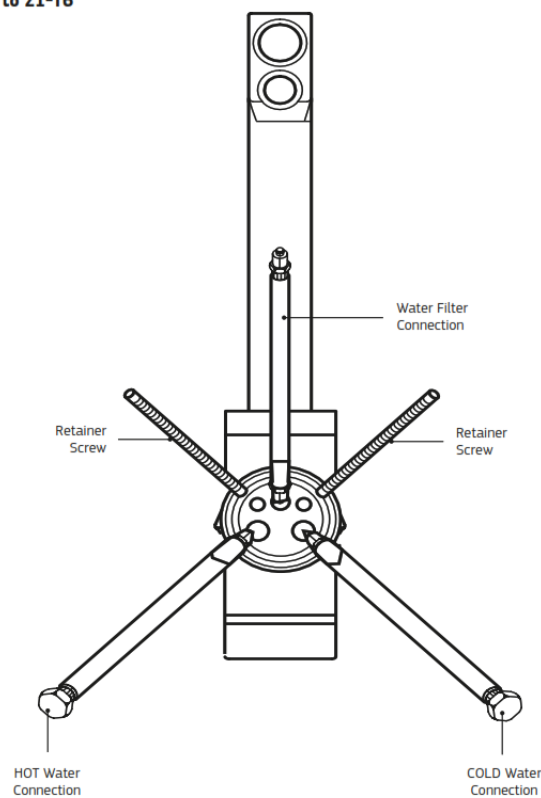


Battery Installation

Battery Installation – LED reminder light

Important note: Battery must be replaced when changing cartridges.


1. Remove the black battery seat from the faucet canopy.

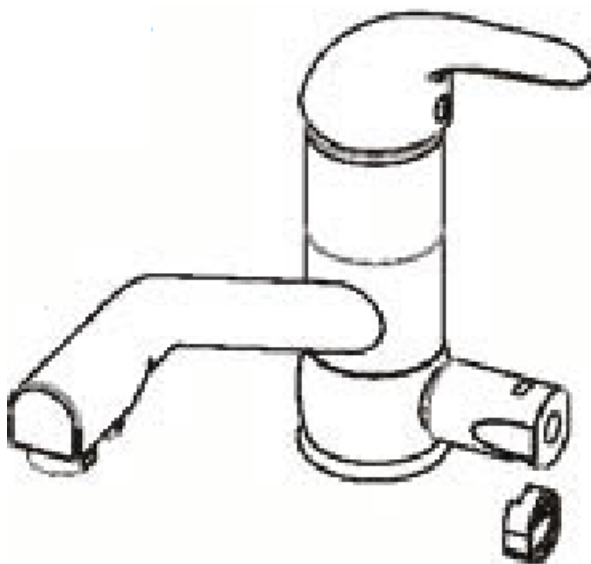

2. Install battery into the battery seat, positive side up.




Positive
side up

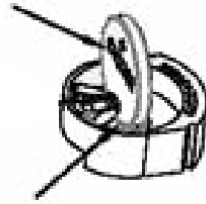


Negative on
the PCB

Note: Red light flashes twice and is then followed by the blue light.

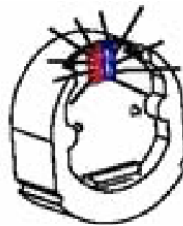

3. Reinstall battery seat assembly into the faucet canopy.
4. Blue light flashes during normal operation.

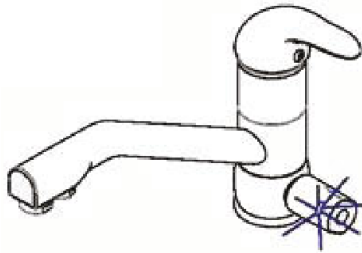

5. Red light flashes indicate your cartridges are due to be changed (usage has exceeded 3,000 minutes or 12 months). Please change the battery when changing the filter cartridge(s).



warning

this product contains a button battery. Accidental ingestion may occur and can be fatal. Please keep out of reach from infants. If you suspect accidental ingestion please contact emergency services.

Replacement of Ceramic Disc

Replacement of Ceramic Disc Cartridge(s)

1. Hot/Cold Outlet

- Remove hot and cold water indicator then release screw-in lever and lift lever off, now you can unscrew dome cap and loosen the cartridge lock nut.
- Lift out old cartridges and clean inside making sure no old O-rings are still stuck inside cartridge housing.
- Insert new cartridge making sure O-rings on the bottom of the new cartridge have not fallen off and lugs in the bottom of cartridge line up with holes in cartridge housing.
- Now you can tighten the lock nut with a torque wrench to 14-newton meters, then reinstall the dome cap,

lever screw, and hot and cold water indicator.

2. Filtered/Rain Ancillary Outlet

- Remove front button cover using fine-edged 1.2mm screwdriver.
- Unscrew the handle then remove the cartridge by unscrewing it anti-clockwise, using 5/8" socket. Install cartridge by completing removal instructions as above, in reverse order.
- Ensure cartridge is firmly tightened not over tightened.

PART 2

Filter Installation

This system comes complete with an installation kit enabling it to be connected to a 15mm (1/2") male thread.

Installation requirements

1. 15mm (1/2") Coldwater line – mains only
2. Min/Max pressure: 172 – 875 a. Pressure over 500 kPa requires a pressure limiting valve to be installed.

Installation Procedure

3. Supply temperature 0° – 38°C (protect from freezing).
4. Suitable location for faucets.

Alternative fittings may be required if being connected to anything other than the existing 15mm (1/2") copper pipe (copy piper NOT included). No electrical or drainage requirements are needed.

Installation Procedure

Installation Note: A water filter system/tap, like any product, has a limited life and may eventually fail. Also sometimes failure happens early due to unforeseen circumstances. To avoid possible property damage, this product should be regularly examined for leakage and/or deterioration and replaced when necessary. A drain pan, plumbed to an appropriate drain or outfitted with a leak detector, should be used in those applications where any leakage could cause property damage, and/or the water supply should be turned off if no one is home/present.

INSTALLATION MUST BE COMPLETED BY A LICENCED PLUMBER. FAULTY OPERATION DUE TO UNQUALIFIED PERSONS WILL RESULT IN VOIDED WARRANTY COVERAGE.

1. Select a suitable location that is close to the point of filtered water delivery (eg. sink). Remember to allow access room for changing filters and a suitable place where water spillage will not cause damage. The location should not be in direct sunlight.
2. Isolate water supply and fit SmartTee to the mains cold supply ready for Mixer and Filtered water line connections.
3. Connect the SmartTee™ to the multivalve with a piece of white tubing (see Fig. 7).
4. Install filter cartridge by positioning it in the desired location, marking the position of fixing hole, and fixing with bracket screw. Z1 Tripla Series can be mounted horizontally or vertically. Allow room for the connecting tubes. Ensure the flow arrow on the cartridge is in direction of water flow.
5. Fit the stem to tube reducers into either side of the filter by pushing the fittings into the 3/8" quick-connect fittings already installed on the filter head (for quick-connect fittings see Fig. 6).
6. Fit tubing into 1/4" connectors (stem to tube reducers). Allow slack in the tubing. Connect the tubing into the filtered water flexible hose securing with the nut found on the flexible hose (plain). An alternative plain hose with a larger fitting connection is supplied but required with

the Z1 installation.

7. Connect cold water flexible hose (blue streak) to SmartTee 15mm Brass Connection and the hot water flexible hose (red streak) to the hot water supply.
8. Restore water supply & check for leaks, rectifying them, if any, before leaving the unit.
9. Run the system for at least 5 minutes to remove carbon fines. Water may appear milky, but this is normal and is only tiny air bubbles that will clear after a short period.

Cartridge Installation/Changeout

1. Rotate the old cartridge counterclockwise 1/4 turn, pull it out and dispose of it.
2. Remove all packaging from the new cartridge, including any wraps or caps (if applicable).

Replacement cartridge: **Z1-R**

3. Insert the new cartridge into the filter head and rotate clockwise 1/4 turn.
4. Reset the LED indicator by following the instructions on page 6.
5. Turn on the water and check for leaks. If leaks occur, repeat step 3. If leaks persist, isolate the water supply to the system, discontinue use and call your supporting dealer.
6. Flush filter for 5 minutes before use or until water runs clear.

Assembly

Fig. 5 – Installation Diagram



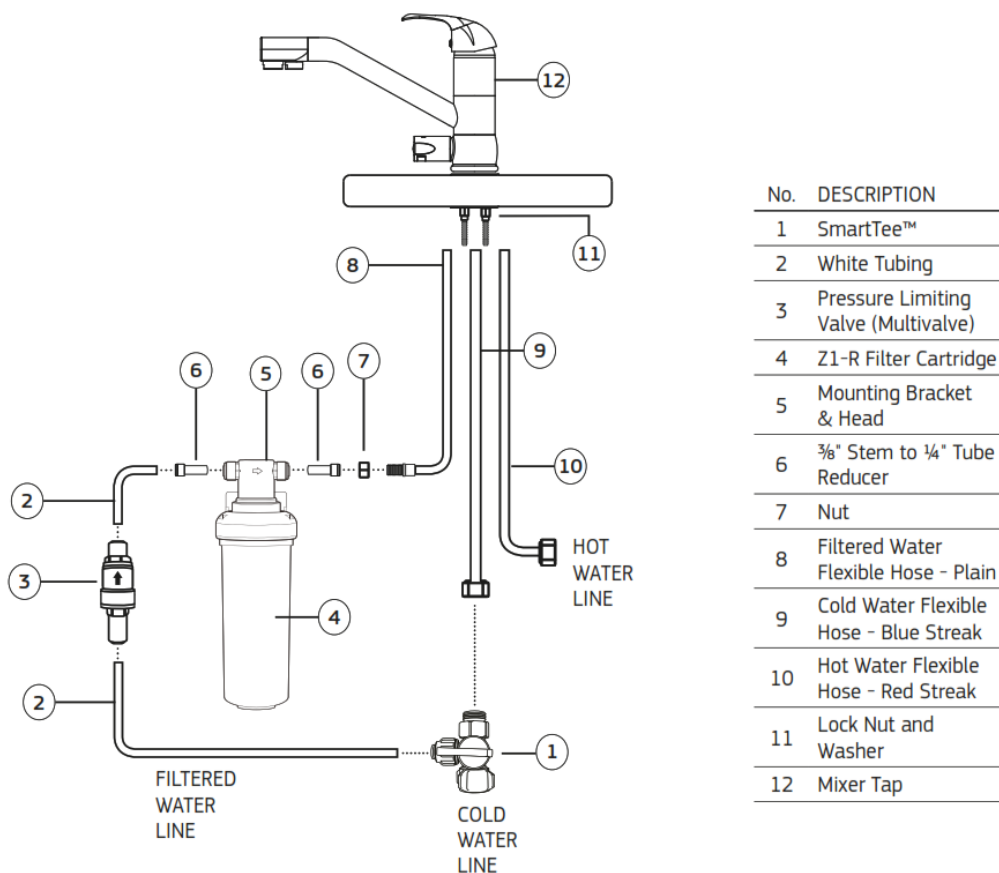



Fig. 6 – How To Use Quick Connect Fittings

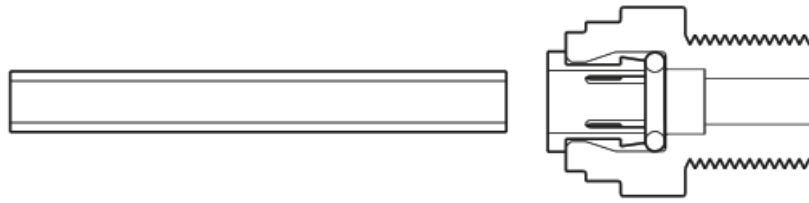

1. Cut the tube square and push it into the tube stop. For metal, tube remove burrs and chamfer tube end to prevent O-Ring seal being damaged.

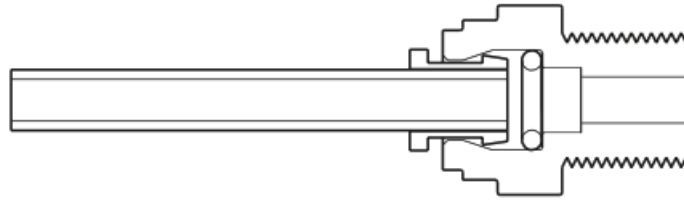

2. Fitting grips before it seals. Ensure tube is pushed into tube stop.
3. Tube is secured in position.

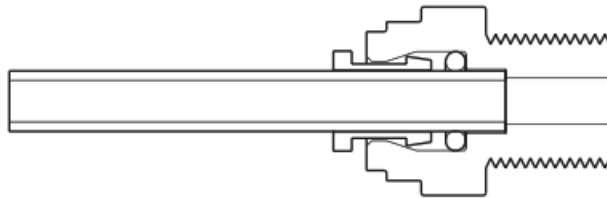

DISCONNECTION PROCEDURE

4. Push collet against body and slide tube out of the fitting.



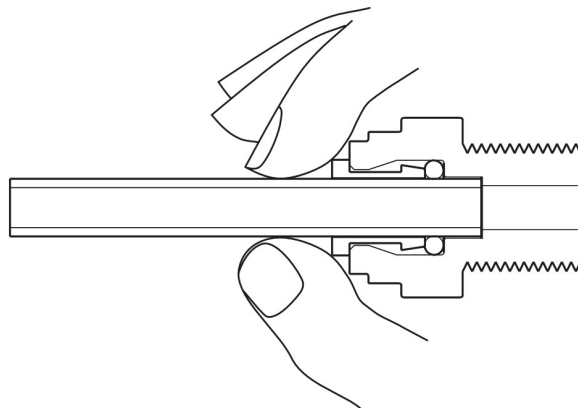



Figure 7 – SmartTee™ Quick Connect Fitting

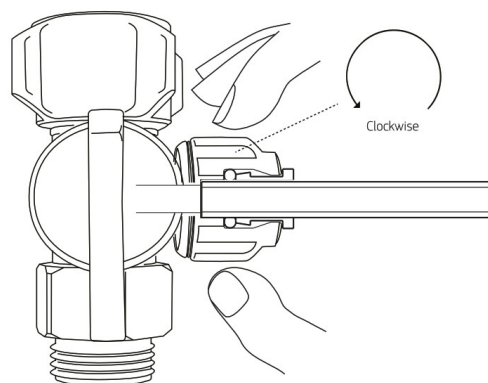


1. Turn the quick connect nut on the SmartTee™ anticlockwise to release the collet.

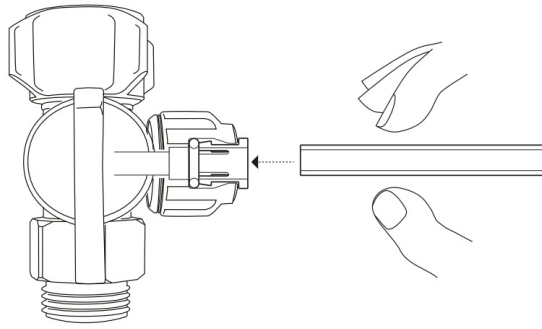


2. Cut the tube square and push it into the tube stop (inside the collet). For metal tubes; remove burrs and chamfer tube end to prevent the O-ring seal from being damaged.

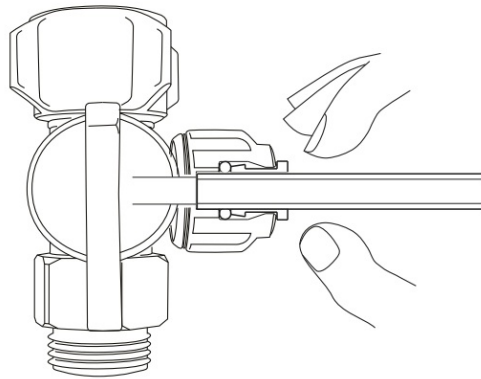

3. The fitting grips before it seals. Ensure the tube is pushed all the way into the tube stop.

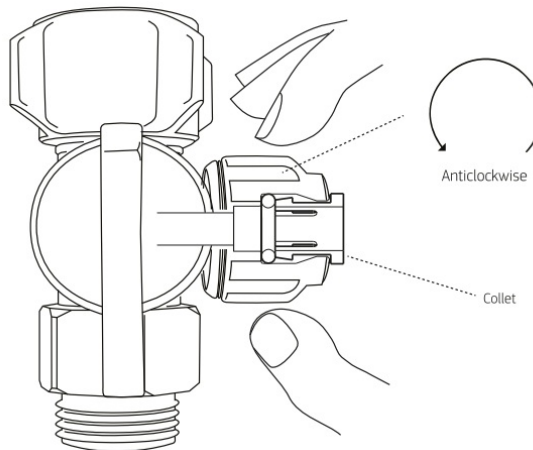


4. Once the tube is secured in position, turn the quick connect nut clockwise to secure.

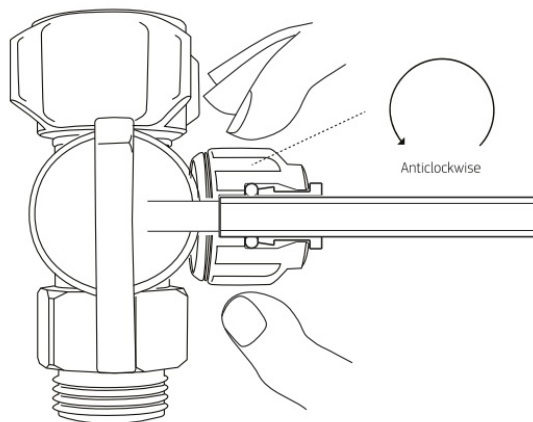

5. Turn the quick connect nut on the SmartTee™ anticlockwise to release the collet.

Note: Hand tightens only. Do not overtighten.


DISCONNECTION PROCEDURE

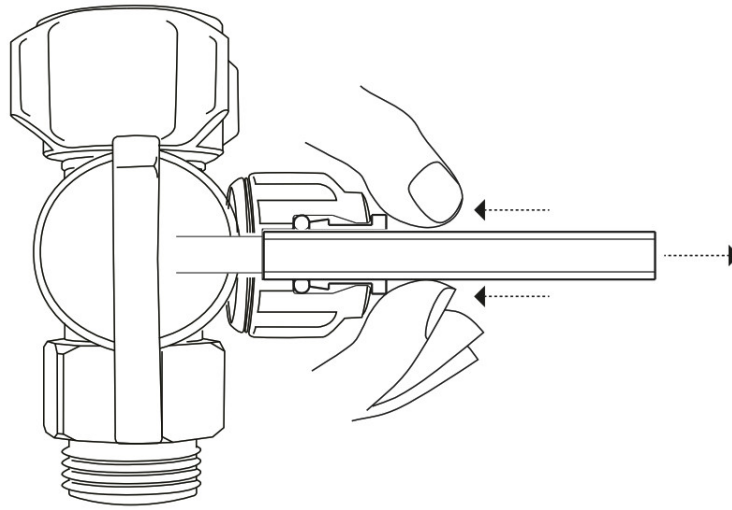


6. Push the collet against the quick connect nut and slide the tube out of the fitting.

WELS Rating


WELS Rating for Triple Taps

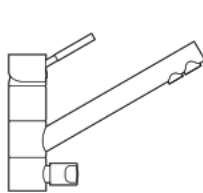


TRIPLA-T1

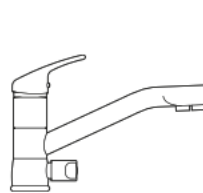


TRIPLA-T2

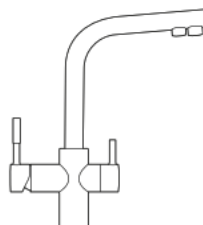


TRIPLA-T3

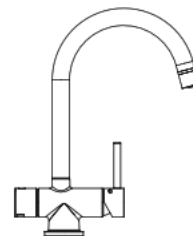

TRIPLA-T4

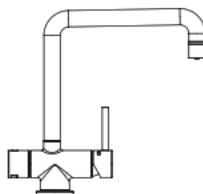


TRIPLA-T5

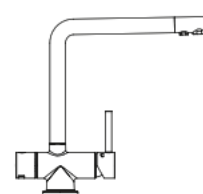

TRIPLA-T6



Parts Description

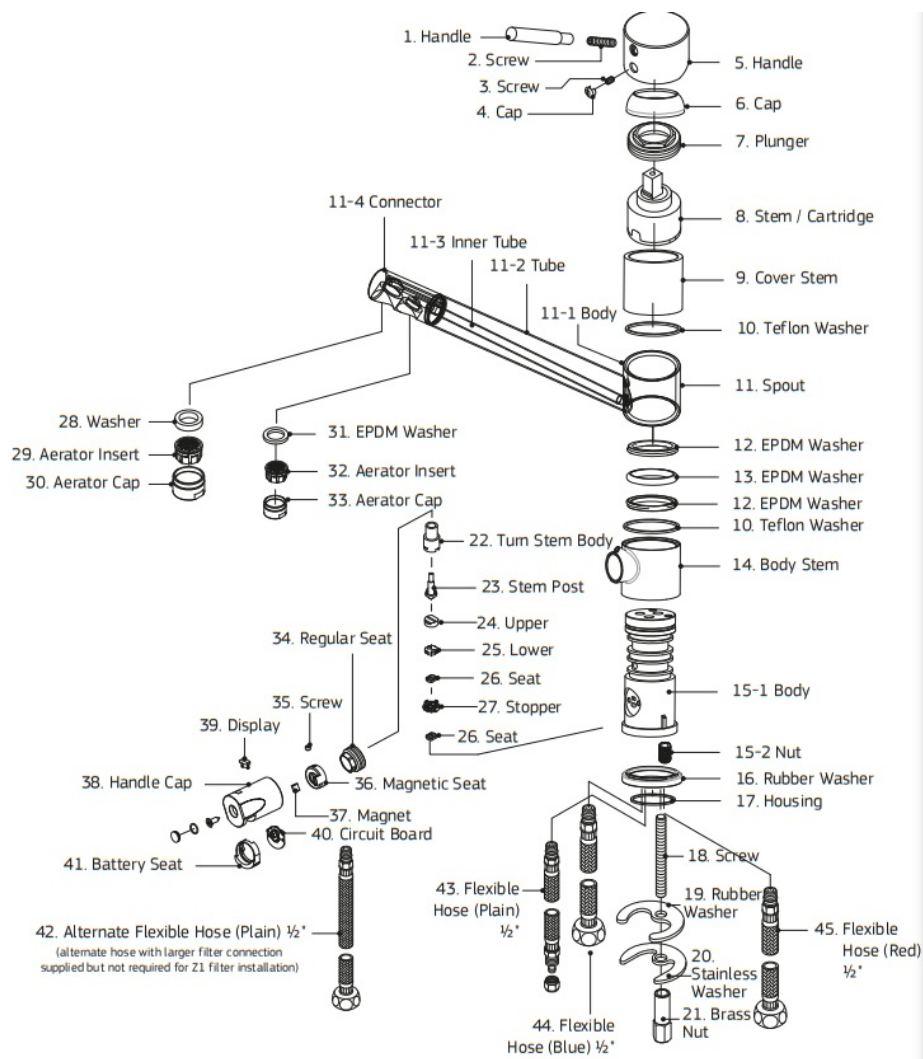

Parts Description

Fig. 9 – Tripla T2 Parts Description

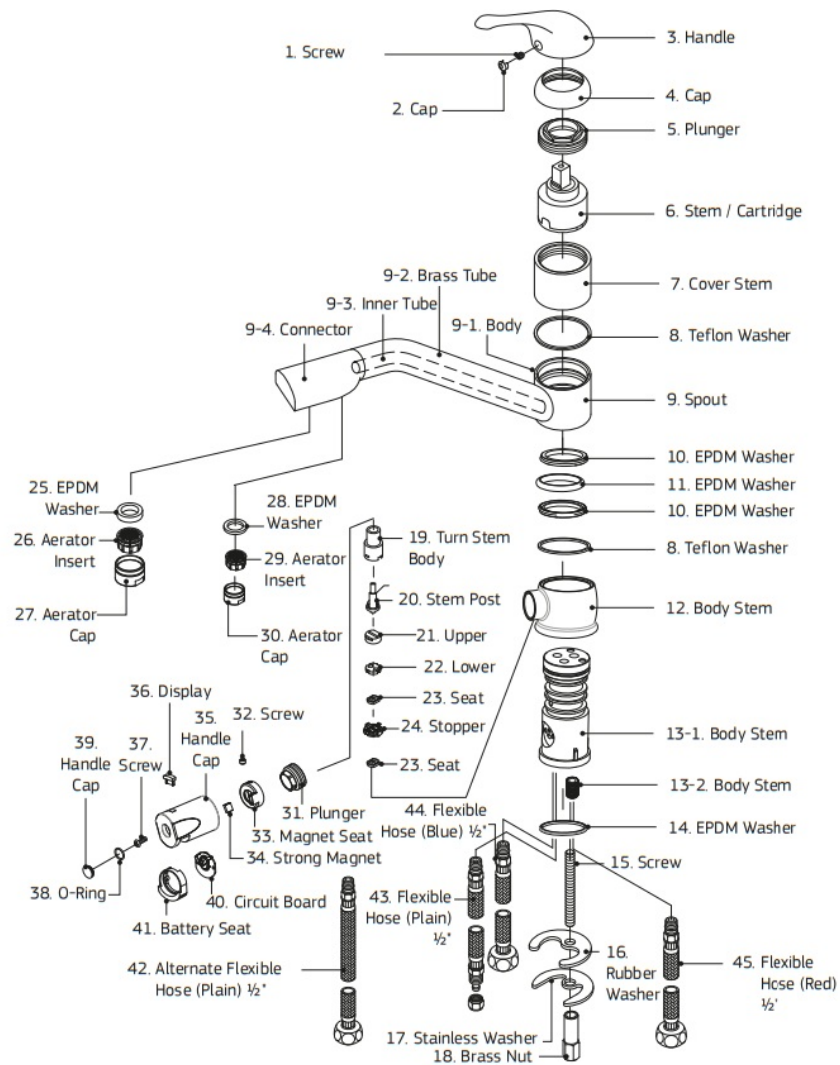


Fig. 10 – Tripla T3 Parts Description

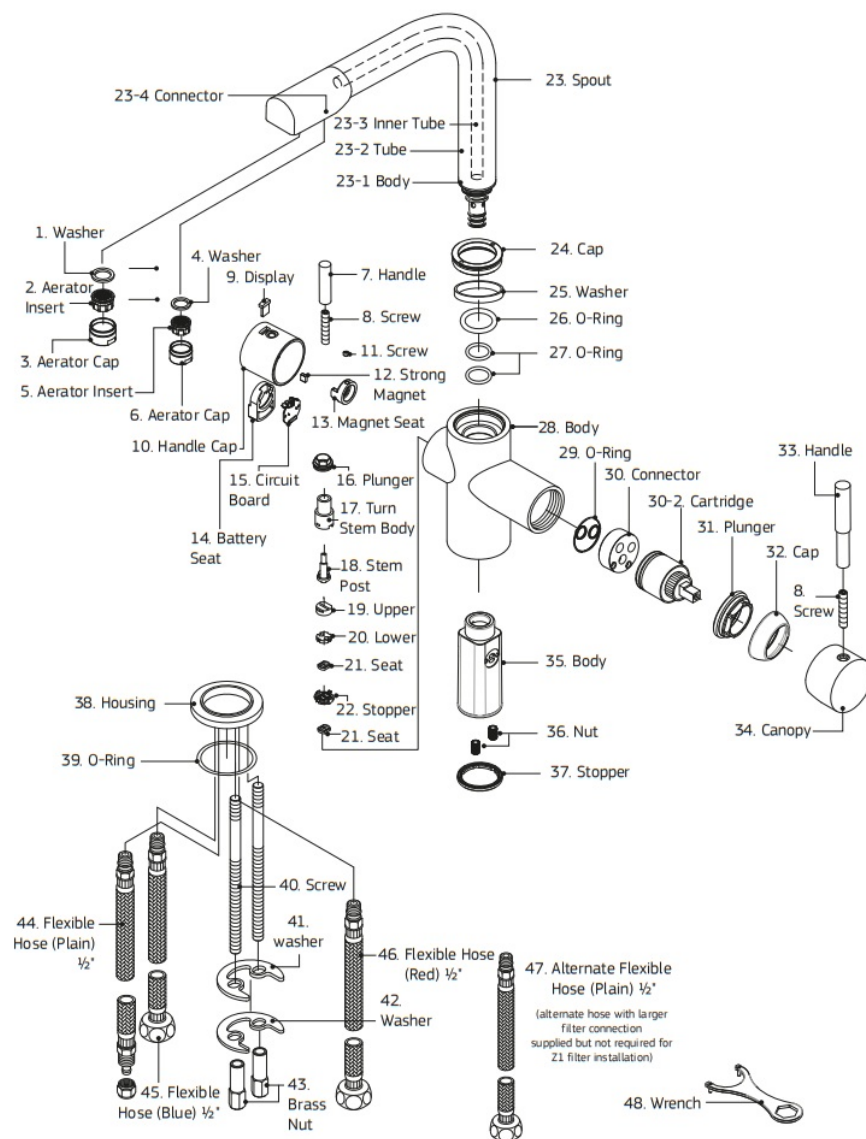


Fig. 11 – Tripla T4 Parts Description

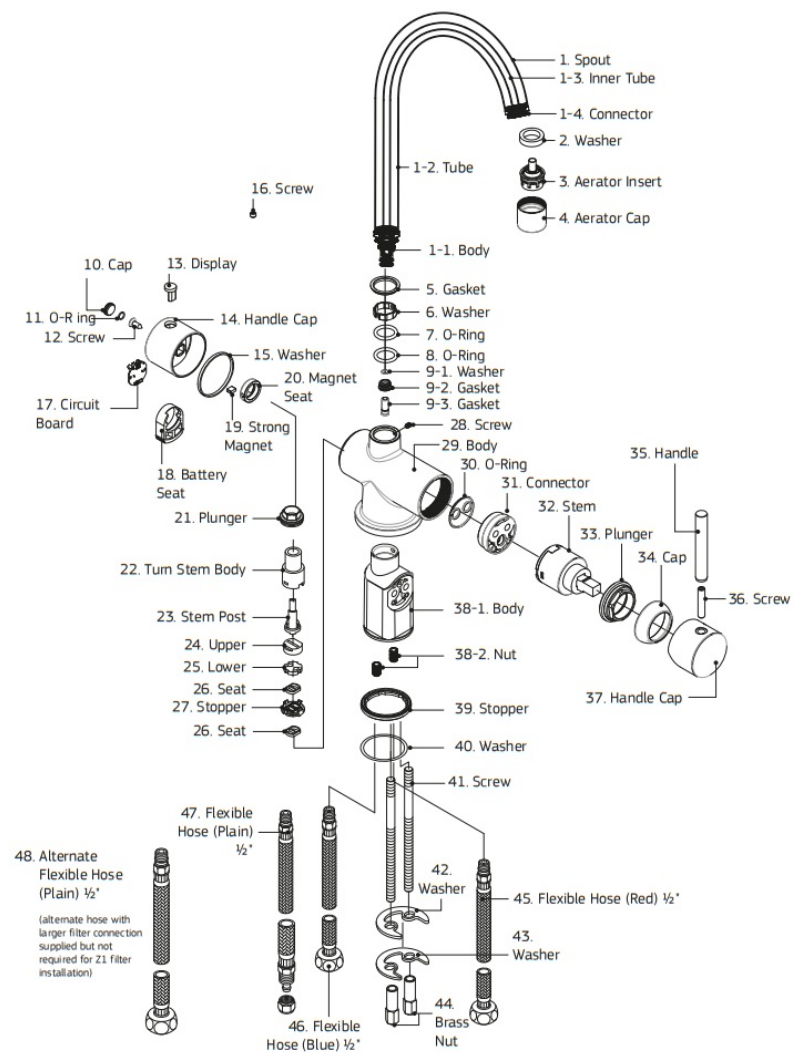


Fig. 12 – Tripla T5 Parts Description


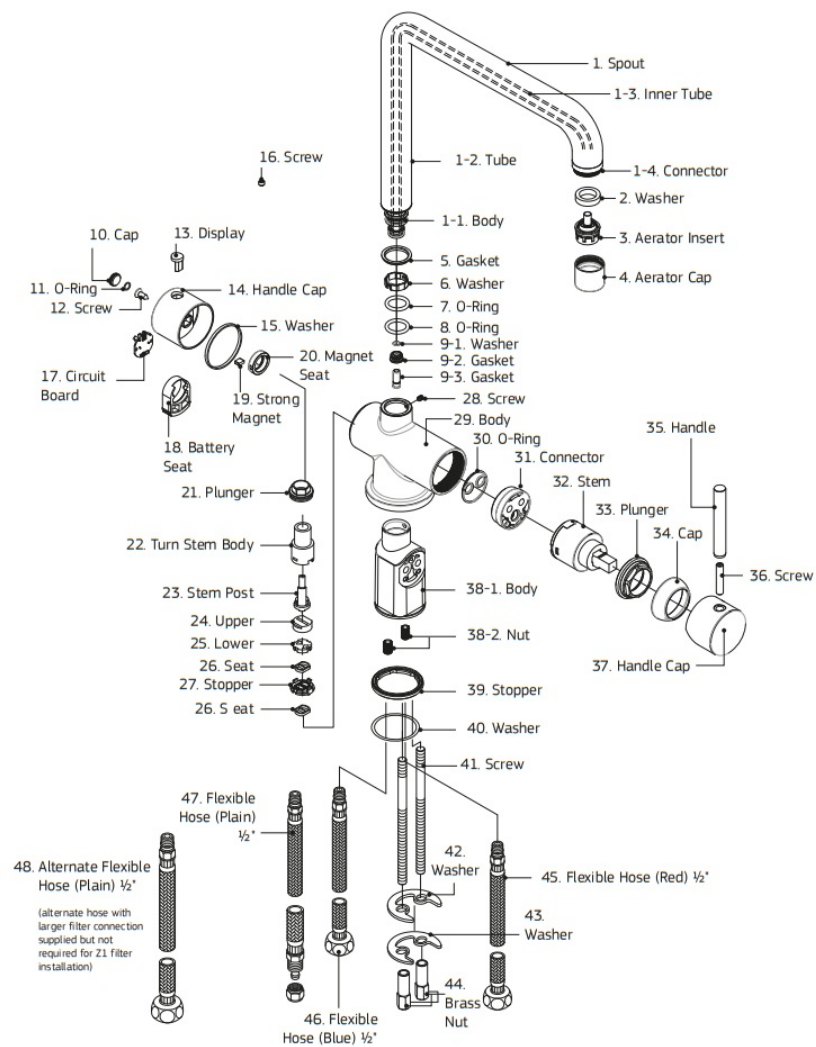


Fig. 13 – Tripla T6 Parts Description

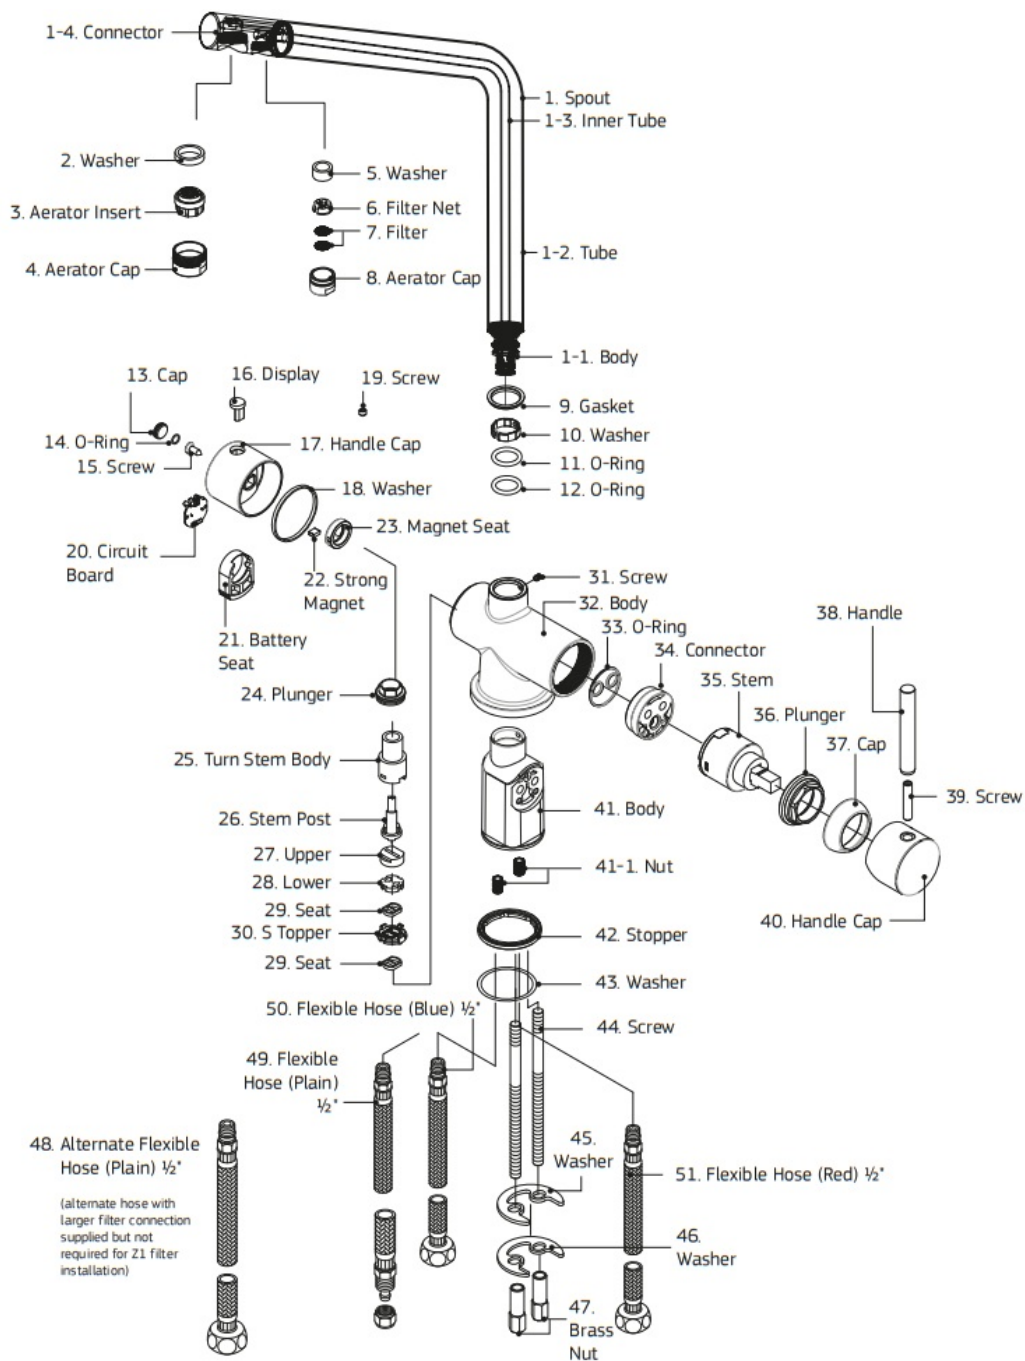

Cartridge Performance Data

Performance Data

Substance	Guidelines*	Average Influent Concentration	Max Effluent Concentration	Min Percent Removal	Average Effluent Concentration	Average Percent Removal
NSF Standard 42 Drinking Water Treatment Units						
Chlorine (23,000 L)	S – Health 0.6 – Aesthetic	2.1	0.3	50%	0.25	>94%
Standard 53 Cyst Live Cryptosporidium POU/POE						
Cyst	<1	100,000	ND (1)	99.98% +	ND (1)	99.99%

Test Parameters	
Hardness, Total mg/L	120
TDS mg/L	290
Temp deg C	21°C
Turbidity NTU	0.1
pH	7.57

*Australian Drinking Water Guidelines – 1996 ND = Not Detected

This appliance meets the domestic water treatment appliance Standards AS/NZS3497 for the following water treatment processes:

Class	Treatment type	Function	Pass
I	Microbiological Status		
	Bacteriostatic	Will stop bacteria increasing, but will not remove them unless II(a) is passed	N/A
II	Microbiological Treatment		
II (a)	Bacteria Removal	Will remove or inactivate bacteria	YES
11 (b)	Virus Removal	Will remove or inactivate the virus	YES
II (c)	Protozoa Removal	Will remove or inactivate Cryptosporidium and Giardia, but will not remove or inactivate bacteria and viruses unless II(a) and 11(b) is passed	YES
III	Turbidity & Particulate Reduction	Reduces cloudiness	YES
IV	Taste & Odour Reduction	Reduces taste & odors	YES
V	Chemical Treatment	Decreases chlorine	YES

Notes

Puretec water care products are designed, manufactured, and supported by Puretec Pty Ltd the name you can trust for viable and proven water solutions. The complete range of Puretec products are developed, refined, made to meet and exceed stringent specifications for the worldwide market. Important: Sales of products are subject to our Terms and Conditions which are available upon request. All specifications, information, and photos are a guide only and are subject to change without notice. Please ring to confirm the details. Warning: For the correct operation of this appliance it is essential to observe the manufacturer's instructions.

Warranty

Any claim under this warranty must be made within 6 Years of the date of purchase of the product. This product is warranted to be free of defects of material and workmanship for 6 Years from the date of purchase. Warranty is 6 years parts, 1-year parts, and labor excludes cartridge. To make a claim under the warranty, take the product and proof of purchase to a place where you purchased the product, and they will lodge a Warranty Request with Puretec. Puretec will pay your reasonable, direct expenses of claiming under this warranty. You may submit details and proof of your expense claim to place of purchase for consideration.

The warranty only applies if the product was used and/or installed in accordance with the user guide and/ or installation instructions. This warranty is given in lieu of all other express or implied warranties and the manufacturer shall in no circumstance be held liable for damages consequential or otherwise or delays caused or faulty manufacturing except as excluded by law. Applicable to all above, is that the warranties need to be approved by Puretec to ensure the product was not incorrectly used, installed, or claimed. False and incorrect claims will be pursued at Puretec's discretion, including chargeable inspection and labor costs incurred. All installation and service work should be completed by qualified tradespeople. Faulty operation due to unqualified persons will result in voided warranty coverage.

Warranty/Australia

This warranty is given by Puretec Pty Ltd, ABN 44 164 806 688, 37-43 Brodie Road, Lonsdale SA 5160, telephone no. 1300 140 140 and email at sales@puretec.com.au.

This warranty is provided in addition to other rights and remedies you have under law: Our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Warranty/New Zealand

This warranty is given by Puretec Ltd, Reg. No 4464398, PO Box 875 Cambridge 3450 NZ, telephone no. 0800 130 140 and email at sales@puretec.co.nz.


This warranty is provided in addition to other rights and remedies you have under law: Our goods come with guarantees which cannot be excluded under the Consumer Guarantees Act. You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



AUSTRALIA P 1300 140 140 E sales@puretec.com.au W puretec.com.au

NEW ZEALAND P 0800 130 140 E sales@puretec.co.nz W puretec.co.nz

Documents / Resources

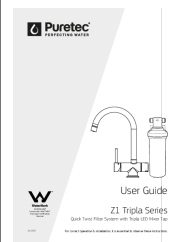 The image shows the front cover of a user guide. It features the Puretec logo at the top left, a technical drawing of the Z1 Tripla Series filter system and mixer tap in the center, and the text "User Guide" and "Z1 Tripla Series" at the bottom.	<p>Puretec Z1 Tripla Series Quick Twist Filter System with Tripla LED Mixer Tap [pdf] User Guide</p> <p>Z1 Tripla Series, Quick Twist Filter System with Tripla LED Mixer Tap</p>
---	---