



# Razor W13110002015 Power A2 Controller Replacement Procedures Instructions

[Home](#) » [Razor](#) » Razor W13110002015 Power A2 Controller Replacement Procedures Instructions 



## W13110002015 Power A2 Controller Replacement Procedures Instructions


### Contents

- [1 Required Tools: \(Not included\)](#)
- [2 WARNING](#)
- [3 Documents / Resources](#)
  - [3.1 References](#)
- [4 Related Posts](#)

### Required Tools: (Not included)


- A. Phillips screwdriver
- B. 4 mm Allen wrench

### **WARNING**

 **CAUTION:** To avoid potential shock or other injury, turn power switch OFF and disconnect charger before conducting any assembly or maintenance procedures. Failure to follow these steps in the correct order may cause irreparable damage.

### Step 1

Using a Phillips screwdriver, remove nine (9) screws from the bottom of the deck.

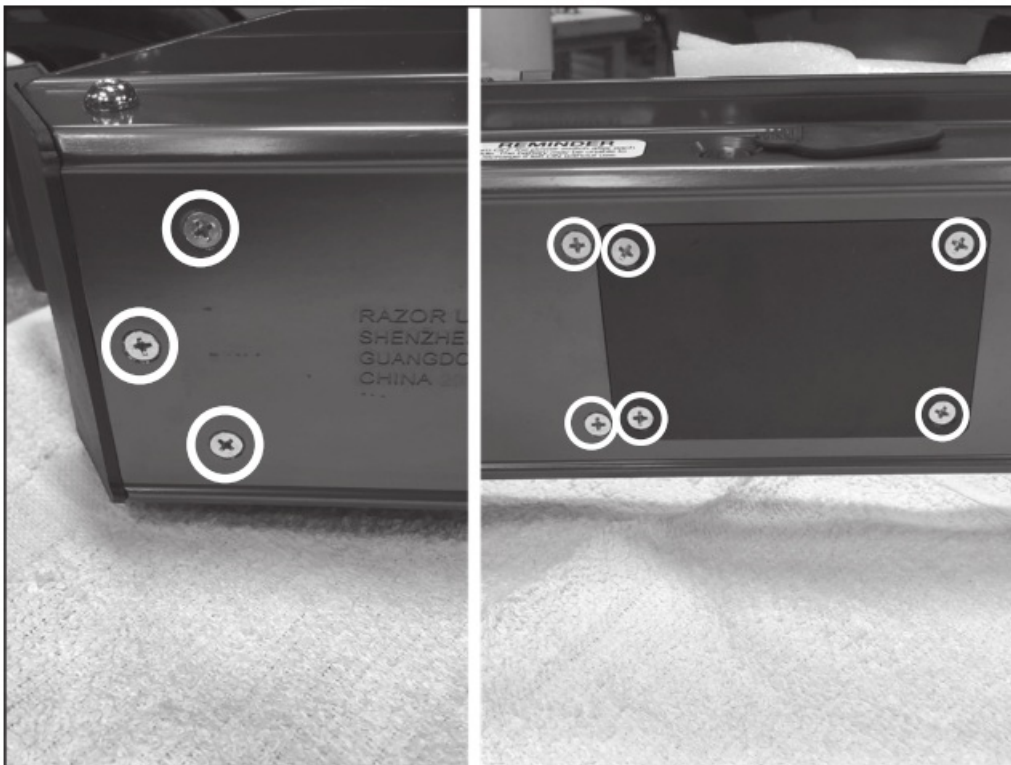


### Step 2

Using a 4 mm Allen wrench, remove two (2) hex screws.  
One on each side of the deck.




### Step 3

Remove the plastic cover from the unit. Locate and disconnect the throttle wire from the controller.

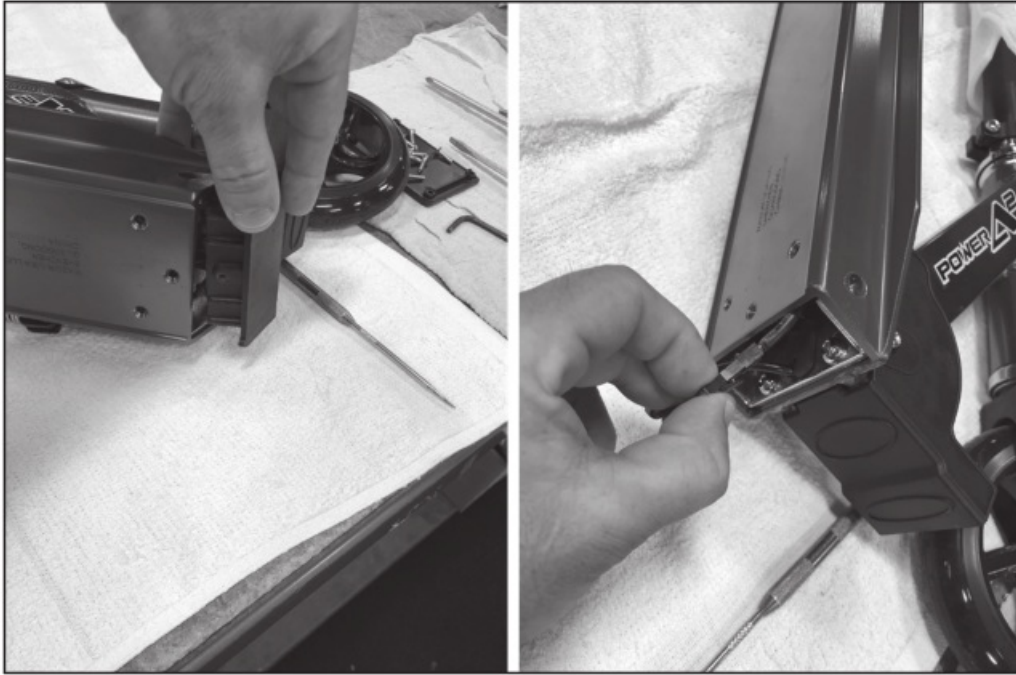


#### **Step 4**

Remove the grommet from the metal bracket. Push the throttle wire inside the opening.

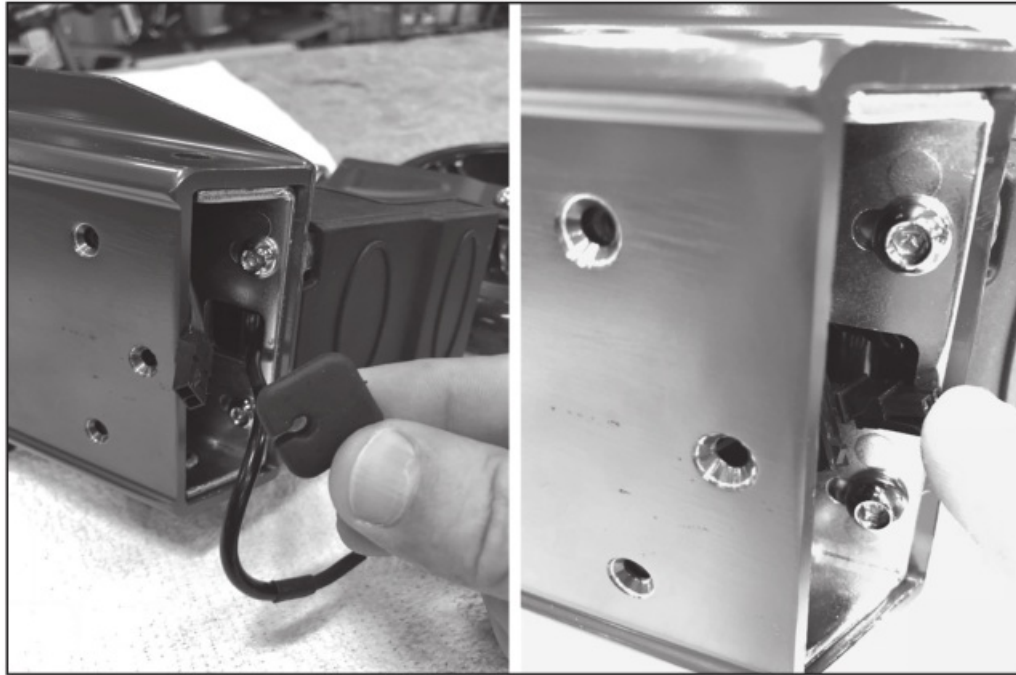


#### **Step 5**

Using a 4 mm Allen wrench, remove two (2) hex screws and pull the bracket out of the frame.

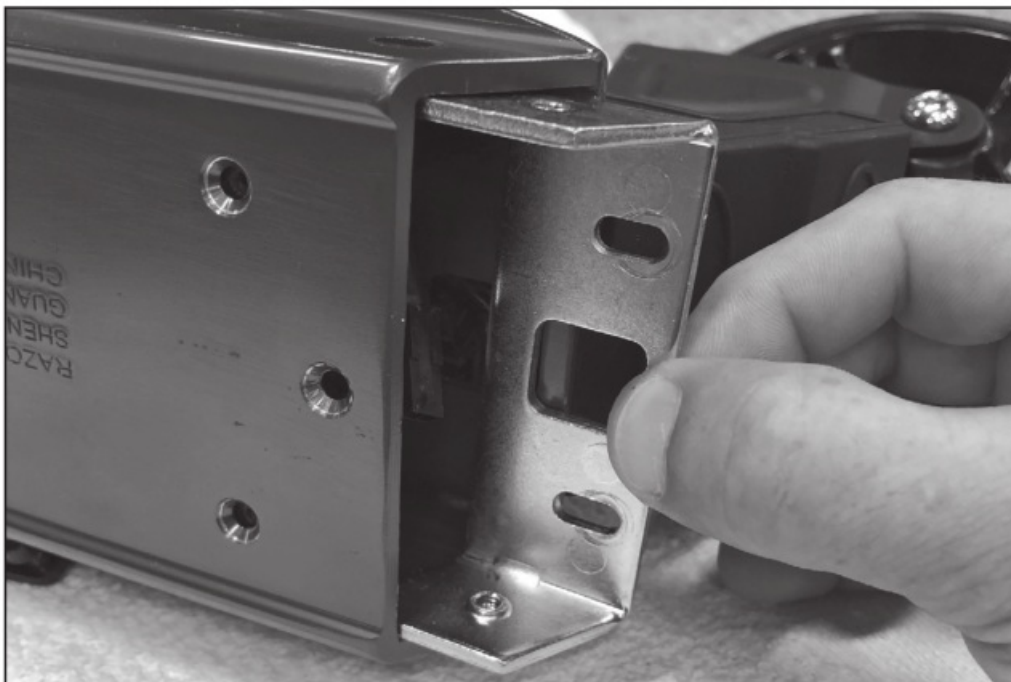

### Step 6


Remove the controller cover to access the wires.  
Remove the grommet at the back of the tray.

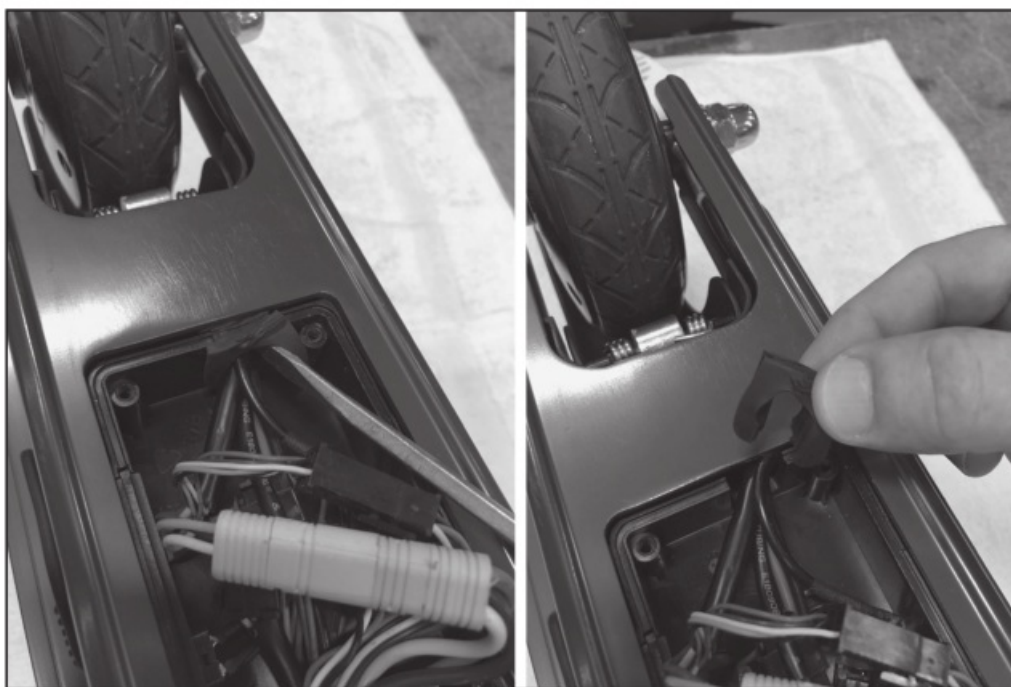

### Step 7

Disconnect the three (3) wires from the back of the unit.



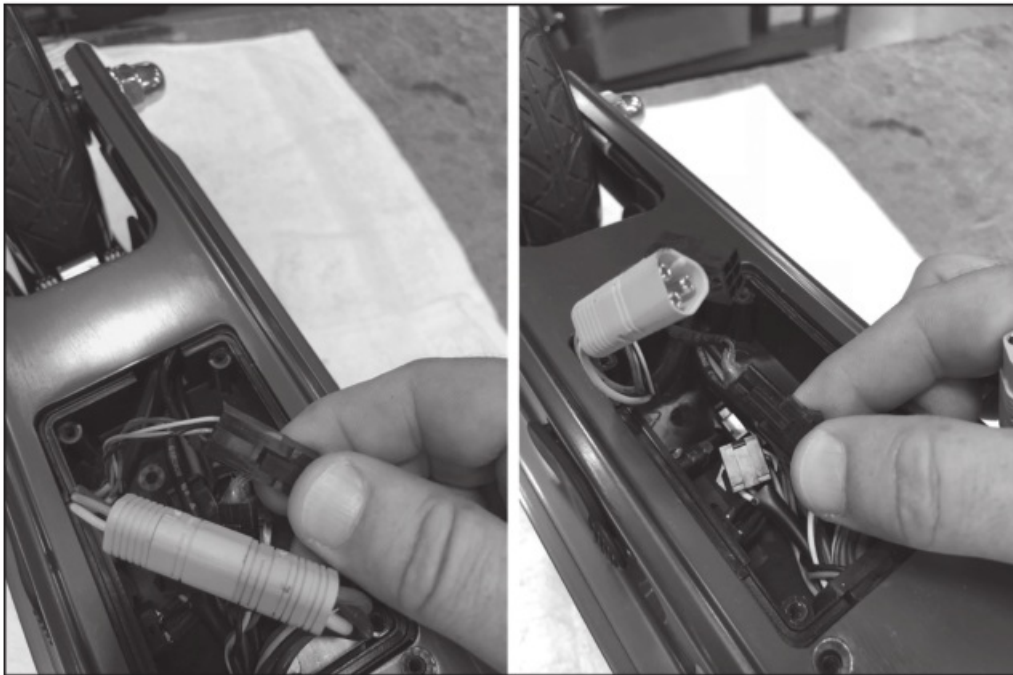


### Step 8

Push down on the power switch and slide the battery tray out of the deck.




### Step 9

Disconnect the rest of the wires from controller. Remove and replace with new unit.

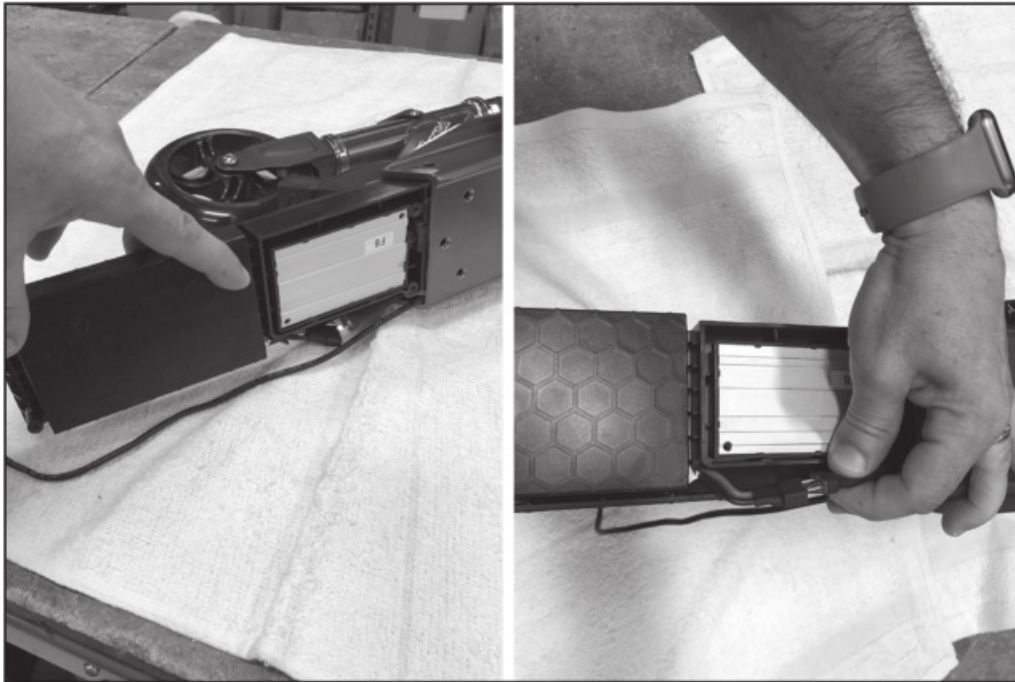

### Step 10


Line up the wires and slide battery tray back inside the frame. Reposition the grommet at the back of the tray.

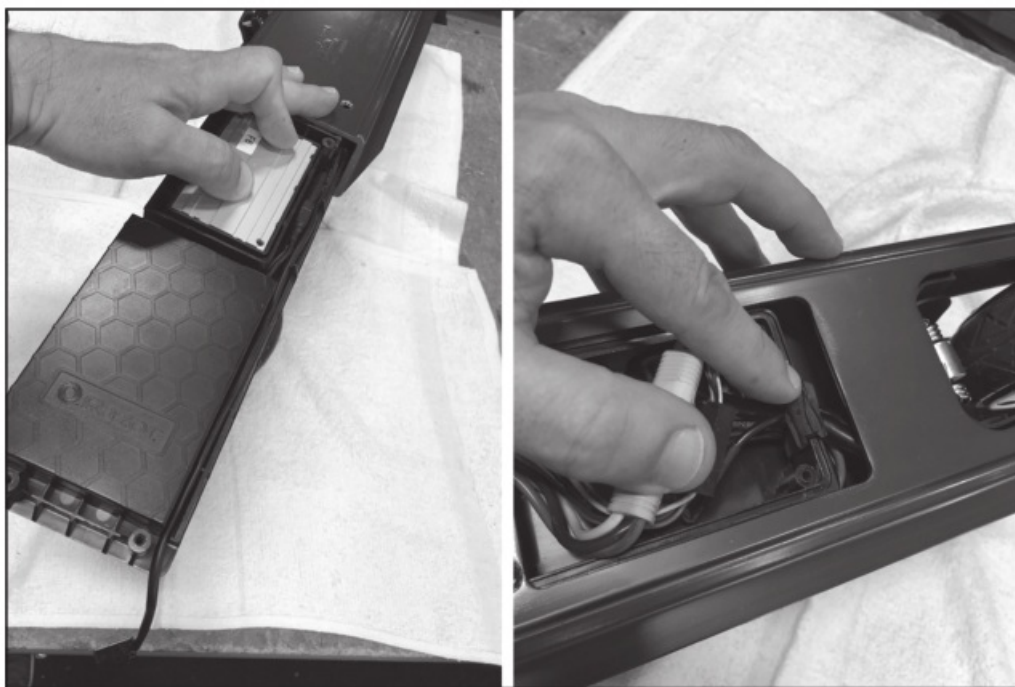

### Step 11


Reconnect all connectors.

NOTE: There is one connector that is empty.

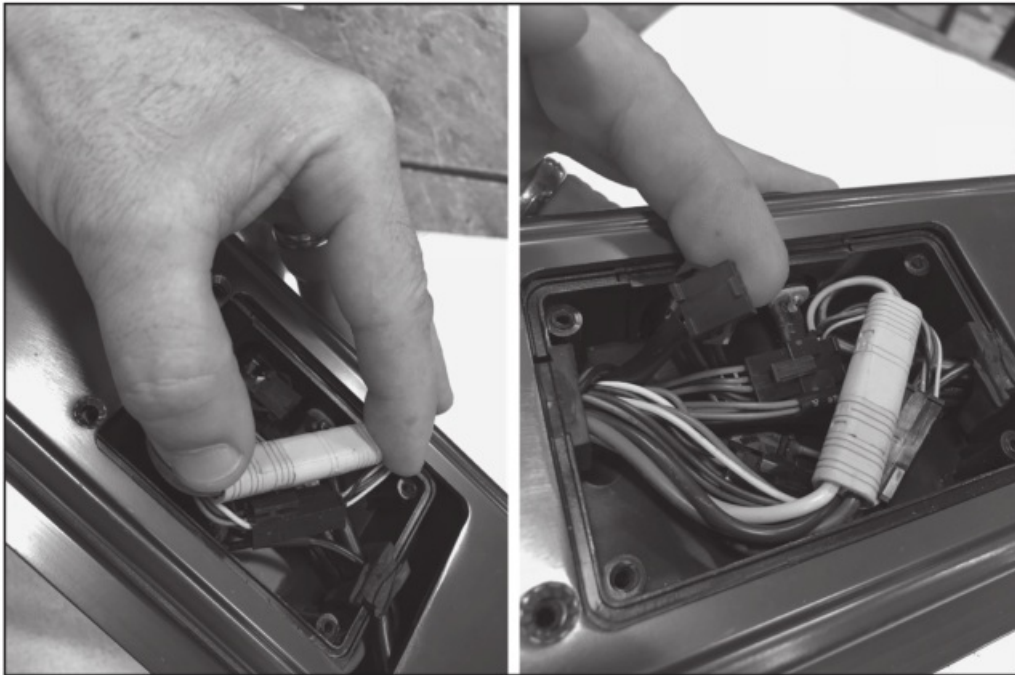


### Step 12

Place bracket back on the unit and pull the throttle wire through the opening on the bracket.

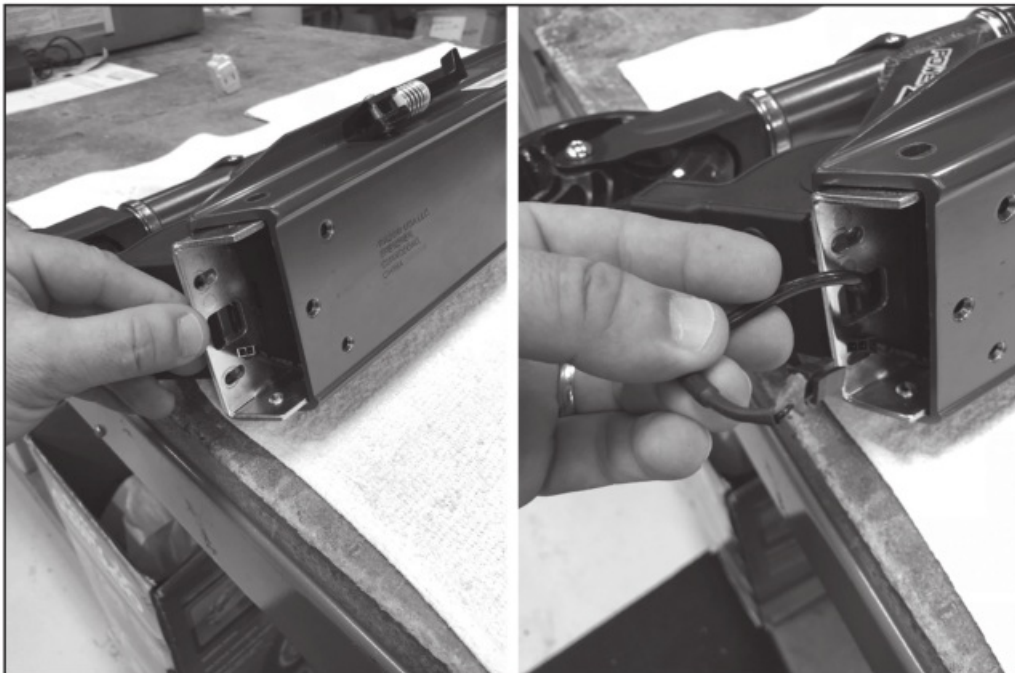


### Step 13

Reconnect throttle to controller and place the grommet back into the bracket.

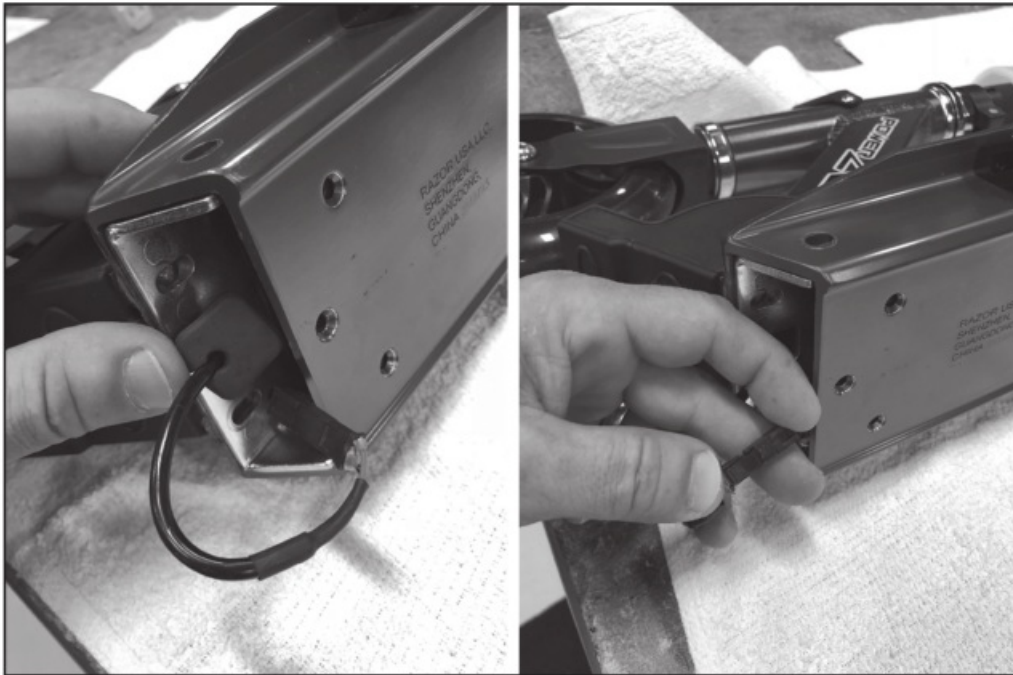

#### Step 14


Secure the bracket to frame. Place the plastic cover back onto the unit.

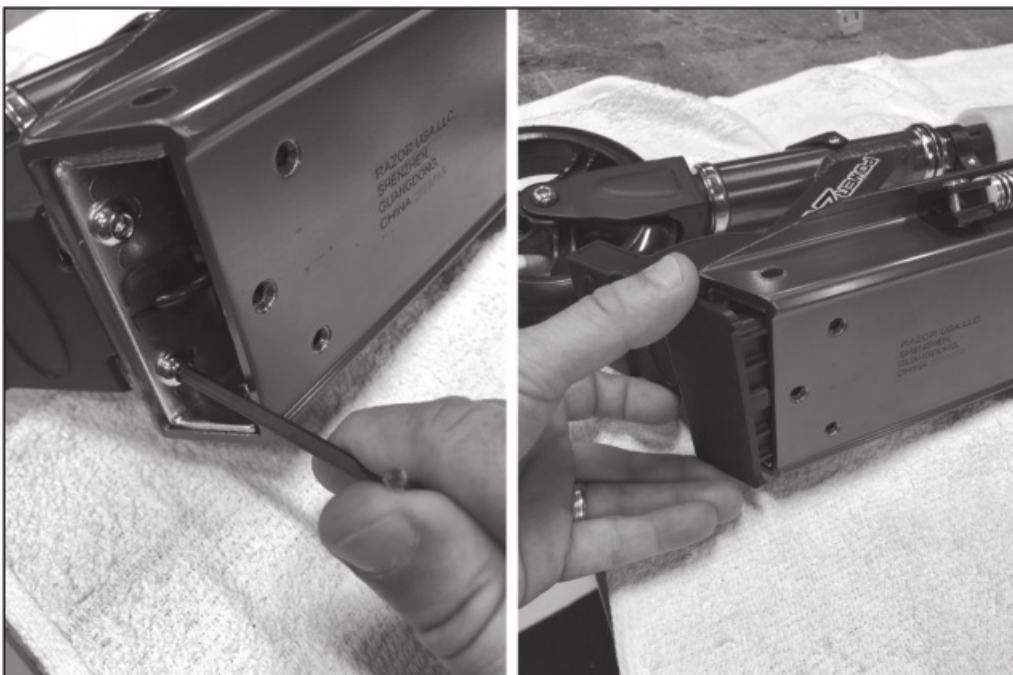

#### Step 15

Reposition controller cover and secure with screws.



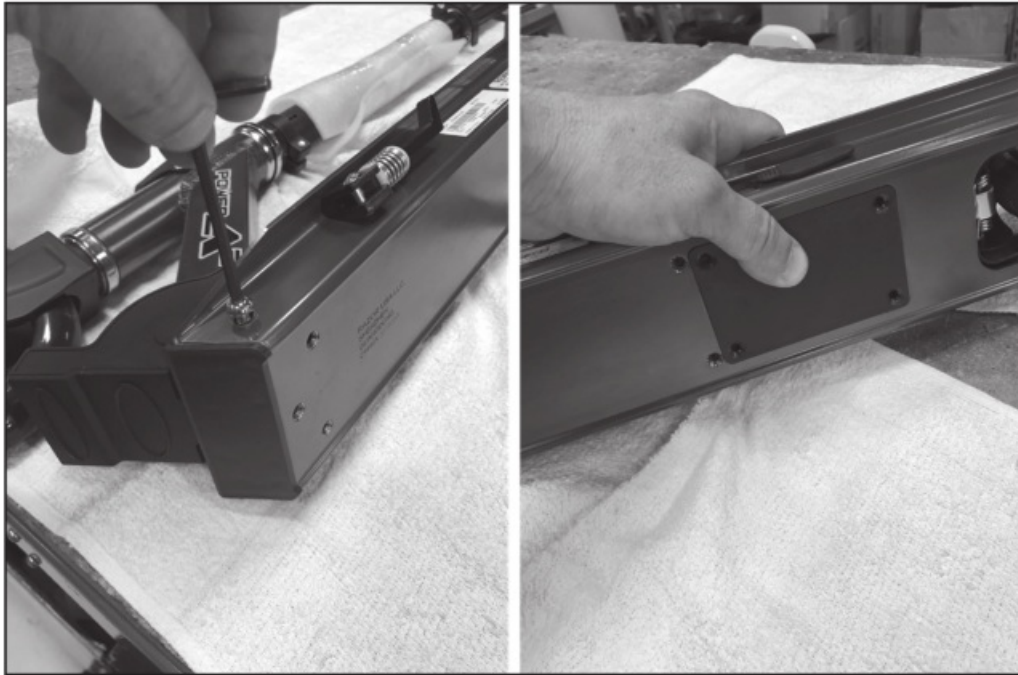

### Step 16

Reverse the steps.

**ATTENTION:** Charge battery 8 hours before using.

**Need Help? Visit our website at [www.razor.com](http://www.razor.com) or  
call toll-free at 866-467-2967  
Monday – Friday 8:00am  
5:00pm Pacific Time.**

### Documents / Resources



[Razor W13110002015 Power A2 Controller Replacement Procedures](#) [pdf] Instructions  
W13110002015 Power A2 Controller Replacement Procedures, W13110002015, W131100020  
15 Power A2 Controller, Power A2 Controller Replacement Procedures, Power A2 Controller, A  
2 Controller, Power Controller

### References

- [Change Country / Region on Razor.com](#)