

ROBOWORKS Pickerbot Pro Pick and Drop Mobile Robot on Mecanum Wheels User Manual


Home » ROBOWORKS » ROBOWORKS Pickerbot Pro Pick and Drop Mobile Robot on Mecanum Wheels User Manual

Contents

- 1 ROBOWORKS Pickerbot Pro Pick and Drop Mobile Robot on Mecanum Wheels
- **2 Product Usage Instructions**
- 3 FAQs
- **4 SUMMARY**
- **5 PRODUCT INFORMATION**
- 6 ROS2 Quick Start
- 7 Documents / Resources
 - 7.1 References



ROBOWORKS Pickerbot Pro Pick and Drop Mobile Robot on Mecanum Wheels

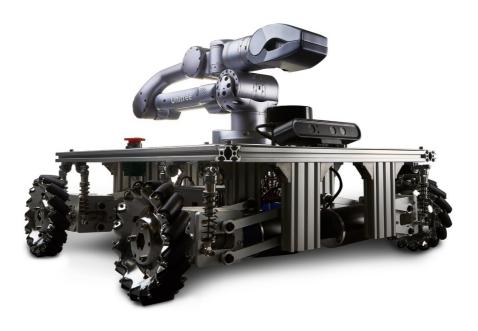

Product Usage Instructions

Key Components and Hardware

ROS2 Controller: NVIDIA Jetson Orin

The NVIDIA Jetson Orin controller comes with 2x CSI camera ports, 9-19V input, and GPIO Pin #1. Do
not flash the software to maintain compatibility with other components.

Sensing System: LiDAR & Depth Camera

 The Pickerbot Pro includes a Leishen M10 LSLiDAR for mapping and navigational capabilities, along with an Orbbec Astra Depth Camera for depth sensing and gesture recognition.

• Unitree Z1 Pro Robotic Arm

 The Unitree Z1 Pro robotic arm offers 6 degrees of freedom and a reach of 740mm. Customizing kinematics is possible based on specific requirements.

Software and Getting Started

ROS2 Quick Start

Follow the provided instructions for a quick start with ROS2 on the NVIDIA Jetson Orin controller.

• Pre-installed ROS2 Packages

• Utilize the pre-installed ROS2 Packages for enhanced functionality and performance of the Pickerbot Pro.

Troubleshooting

 If you encounter any issues, refer to the troubleshooting section in the user manual or contact Roboworks support for assistance.

FAQs

• Q: Can I use a different software on the NVIDIA Jetson Orin controller?

 A: It is not recommended to flash different software to maintain compatibility with other components. For advanced use cases, please contact Roboworks support.

Q: What is the reach of the Unitree Z1 Pro robotic arm?

A: The Unitree Z1 Pro robotic arm has a reach of 740mm with 6 degrees of freedom.

SUMMARY

Pickerbot Pro is a versatile R&D robotics platform that can be used for a variety of applications, both outdoors such as agriculture, mining, and construction, and indoors, including robot-assisted logistics, search and rescue demonstrations, and mapping. Featuring the Unitree Z1 Pro Robotic arm with a 740mm reach and 3kg payload capacity, the Pickerbot Pro offers impressive articulation with 6 degrees of freedom, along with force feedback and collision detection capabilities. Powered by an NVIDIA Jetson Orin series single-board-computer (Nano or NX variant), it provides more advanced computer vision and machine-learning tasks with powerful graphics or parallel computing functionality using CUDA, whilst retaining a compact and lightweight design. The Pickerbot Pro is equipped with an Orbbec 3D Astra camera, providing depth sensing, object tracking, and gesture recognition capabilities.


Built on a sturdy yet lightweight chassis, the Pickerbot Pro features a 4WD system with independent suspension for enhanced navigation across uneven terrain. Large mecanum wheels provide precise omnidirectional movement yet a high grip.

PRODUCT INFORMATION

ROS2 Controller: NVIDIA Jetson Orin (NX 8GB or Nano 4GB)

The onboard Jetson Orin single-board computer provides powerful embedded computing to the Pickerbot Pro. It comes with a 128 GB SSD, Intel Wireless card and onboard antennas, HDMI, four USB ports (3 of which are USB 3.0), Ethernet, and USB-C. A DC barrel jack to power the board, using between 9-19V. The onboard GPIO pins use the same basic layout as the popular Raspberry Pi single-board computers, starting with Pin #1 on the outside row, adjacent to the Ethernet port. Likewise, two CSI camera connectors enable functionality with the Raspberry Pi brand and similar small-form-factor cameras. Pre-installed software includes ROS2 Humble, Ubuntu 22.04, and NVIDIA Jetpack, enabling the full capability of the Orin platform.

Note: To maintain compatibility with the chassis controller and other robot components, we do not recommend flashing the Jetson Orin with different software. For more advanced use cases please contact Roboworks support.

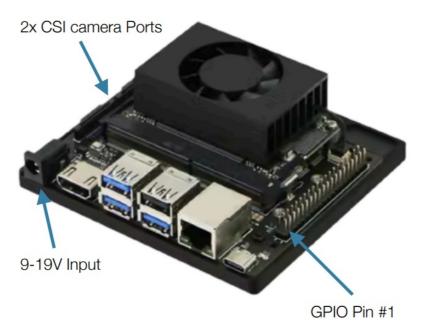

Sensing System: LiDAR & Depth Camera


The Pickerbot Pro is equipped with a Leishen M10 LSLiDAR. With a 30m maximum detection range 12Hz rotational scanning frequency, and a high signal-to-noise ratio, eliminating the need for additional filtering. It integrates seamlessly, providing excellent mapping and navigational capabilities.

Depth Resolu tion	RGB Resolution	RGB Sense Angle e	Depth FPS	RGB a	Depth Framer ate n	GDepth Rang e
640×480	640×480	63.1×49.4°	e 58×45.5°	30fps	30fps	0.6~4m

Below are the technical specifications of the Orbbec Astra Depth Camera:

STM32 Control Board (Motor Control & IMU)


For chassis and motor control, Pickerbot Pro features an STM32 control board. This board ensures low power consumption, precise motor control, OLED readout displays for monitoring motors, and an inertial measurement unit (IMU). It can be configured for more specialized operation, or to enable encoder feedback to the Jetson Orin controller. Using the software packages Keil and FlyMCU for compilation and subsequent flashing of the STM32F103.

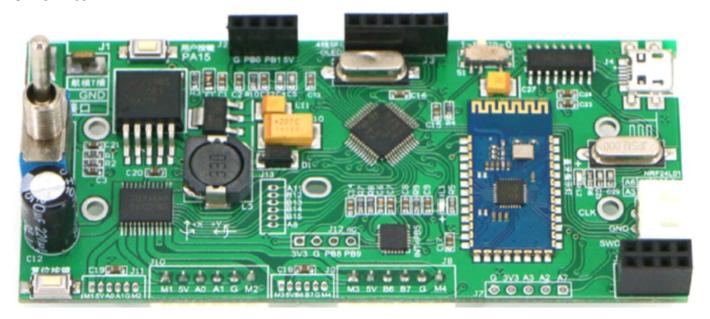

STM32F103RC	Features		
Core	ARM32-bit Cortex -M3 CPU Max speed of 72 MHz		
Memories	512 KB of Flash memory 64kB of SRAM		
Clock, Reset and Supply Management	2.0 to 3.6 V application supply and I/Os		
Power	Sleep, Stop and Standby modes V supply for RTC and backup registers		
DMA	12-channel DMA controller		
Debug Mode	SWD and JTAG interfaces Cortex-M3 Embedded Trace Macrocell		
I/O ports	51 I/O ports (mappable on 16 external interrupt vectors and 5V tolerant)		
Timers	4x16-bit timers 2 x 16-bit motor control PWM timers (with emergency stop) 2 x watchdog timers (independent and Window) SysTick timer (24-bit downcounter) 2 x 16-bit basic timers to drive the DAC		
Communication Interface	USB 2.0 full speed interface SDIO interface CAN interface (2.0B Active)		

Chassis Overview and Battery Options


The Pickerbot Pro is equipped with omnidirectional Mecanum wheels, each featuring 45-degree offset rollers that facilitate motion in all directions. It's crucial to note that these wheels are supplied in pairs, with each pair having rollers oriented differently. During installation on the robot, ensure that diagonally opposing wheels have rollers pointing in the same direction. If the robot moves unexpectedly, simply reverse the pairs of wheels. Considerations must be made when increasing battery capacity. The Pickerbot Pro comes standard with a 5000 mAh battery and can be upgraded to 10,000 or 20,000 mAh options for an additional cost. The 20,000 mAh battery is too large to fit within the chassis of the Pickerbot Pro and can only be installed on top of the robot chassis. Please refer to the table below for weight and size parameters.

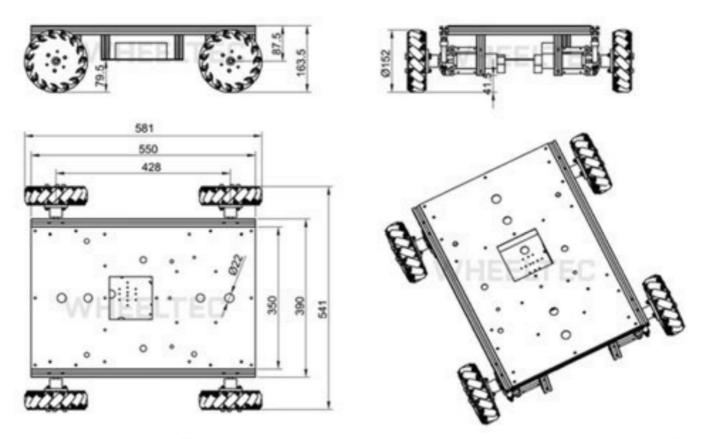

Battery parameter	Features				
	5000mAh	10000mAh	20000mAh		
Battery Voltage	22.2V	22.2V	22.2V		
Size	124*71*42mm	124*71*71mm	156*122*71mm		
Power Charger	DC 5.5 Charging plug T-shaped discharge plug	DC 5.5 Charging plug T-shaped discharge plug	DC 5.5 Charging plug T-shaped discharge plug		
Performance	15A continuous discharge	30A continuous discharge	60A continuous discharge		
Weight	0.66kg	1.25kg	2.4kg		

Unitree Z1 Pro Robotic Arm

The Pickerbot Pro incorporates the Unitree Z1 Pro robotic arm, which provides impressive articulation with 6 degrees of freedom and a reach of 740mm. Please refer to the joint parameter table below for customizing kinematics to meet your specific requirements.

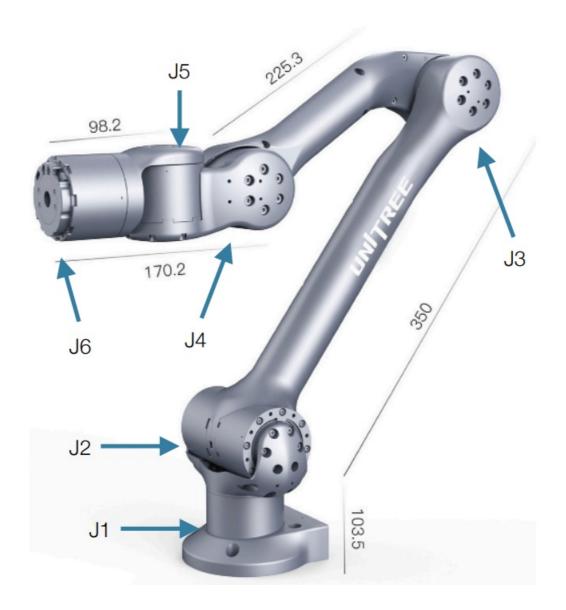

Parameter	Z1 Pro
Weight	4.5kg
Payload	3kg
Reach	740mm
Repeatability	~0.1mm
Power Supply	24V
Interface	Ethernet
Compatible operating system	Ubuntu
Maximum Power	500W
Force Feedback	Yes

Joint	Range of Motion	Max Speed	Max Torque
J1	±150°	180°/s	33N·m
J2	0—180°	180°/s	33N·m
J3	-165°—0	180°/s	33N·m
J4	±80°	180°/s	33N·m
J5	±85°	180°/s	33N·m
J6	±160	180°/s	33N·m

ROS2 Quick Start

When the robot is first powered on, it is controlled by ROS by default. Meaning, the STM32 chassis controller board accepts commands from the ROS2 Controller – The Jetson Orin. Initial setup is quick and easy, from your host PC (Ubuntu Linux recommended) connect to the robot's Wi-Fi hotspot. The password by default is "dongguan". Next, connect to the robot using SSH via the Linux terminal, IP address is 192.168.0.100, the default password is Dongguan.

```
passoni@passoni:~$ ssh wheeltec@192.168.0.100
```

With terminal access to the robot, you can navigate to the ROS2 workspace folder, under "wheeltec_ros2" Before running test programs, navigate to wheeltec_ros2/turn_on_wheeltec_robot/ and locate wheeltec_udev.sh – This script must be run, typically only once to ensure proper configuration of peripherals. You are now able to test the robot's functionality, to launch the ROS2 controller functionality, run: "relaunch turn_on_wheeltec_robot turn on wheeltec robot.launch"

```
wheeltec@wheeltec:~$ roslaunch turn_on_wheeltec_robot turn_on_wheeltec_robot.launch
```

In a second terminal, you can use the keyboard_teleop node to validate chassis control, this is a modified version of the popular ROS2 Turtlebot example. Type:

"relaunch wheeltec_robot_rc keyboard_teleop.launch"

```
wheeltec@wheeltec:~$ roslaunch wheeltec_robot_rc keyboard_teleop.launch
```

```
Control Your Turtlebot!

Moving around:

u i o
j k l
m , .

q/z : increase/decrease max speeds by 10%

w/x : increase/decrease only linear speed by 10%

e/c : increase/decrease only angular speed by 10%

space key, k : force stop
anything else : stop smoothly

CTRL-C to quit

currently: speed 0.2 turn 1
```

Pre-installed ROS2 Packages

Below are the following user-oriented packages, whilst other packages may be present, these are dependencies only.

turn on wheeltec robot

This package is crucial for enabling robot functionality, and communication with the chassis controller. The primary script "turn on wheeltec robot.launch", must be used upon each boot to configure ROS2 and controller.

· wheeltec rviz2

• Contains launch files to launch viz with custom configuration for Pickerbot Pro.

· wheeltec robot slam

• SLAM Mapping and localization package with custom configuration for Pickerbot Pro.

· wheeltec robot rrt2

Rapidly exploring random tree algorithm – This package enables Pickerbot Pro to plan a path to its
desired location, by launching exploration nodes.

· wheeltec_robot_keyboard

 Convenient package for validating robot functionality and controlling using the keyboard, including from remote host PC.

· wheeltec robot nav2

ROS2 Navigation 2 node package.

wheeltec_lidar_ros2

• ROS2 Lidar package for configuring Leishen M10/N10.

wheeltec_joy

The joystick control package contains launch files for Joystick nodes.

simple_follower_ros2

· Basic object and line following algorithms using either laser scan or depth camera.

ros2_astra_camera

Astra depth camera package with drivers and launch files.

MORE INFO

• www.roboworks.net

Please note that the images shown are for illustrative purposes only*.

Authors: Wayne Liu, Reilly Smithers 3 July 2024

Documents / Resources



ROBOWORKS Pickerbot Pro Pick and Drop Mobile Robot on Mecanum Wheels [pdf] User

Manua

Pickerbot Pro Pick and Drop Mobile Robot on Mecanum Wheels, Pickerbot Pro Pick, and Drop Mobile Robot on Mecanum Wheels, Mobile Robot on Mecanum Wheels, Mecanum Wheels, Wheels

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.