

SCAG SW-32-14FS SW Walk Behind



SCAG SW-32-14FS SW Walk Behind Instruction Manual

[Home](#) » [SCAG](#) » SCAG SW-32-14FS SW Walk Behind Instruction Manual 

Contents

- [1 SCAG SW-32-14FS SW Walk Behind](#)
- [2 ILLUSTRATED PARTS LIST](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)


SCAG

SCAG SW-32-14FS SW Walk Behind



ILLUSTRATED PARTS LIST

32" & 36A CUTTER DECKS

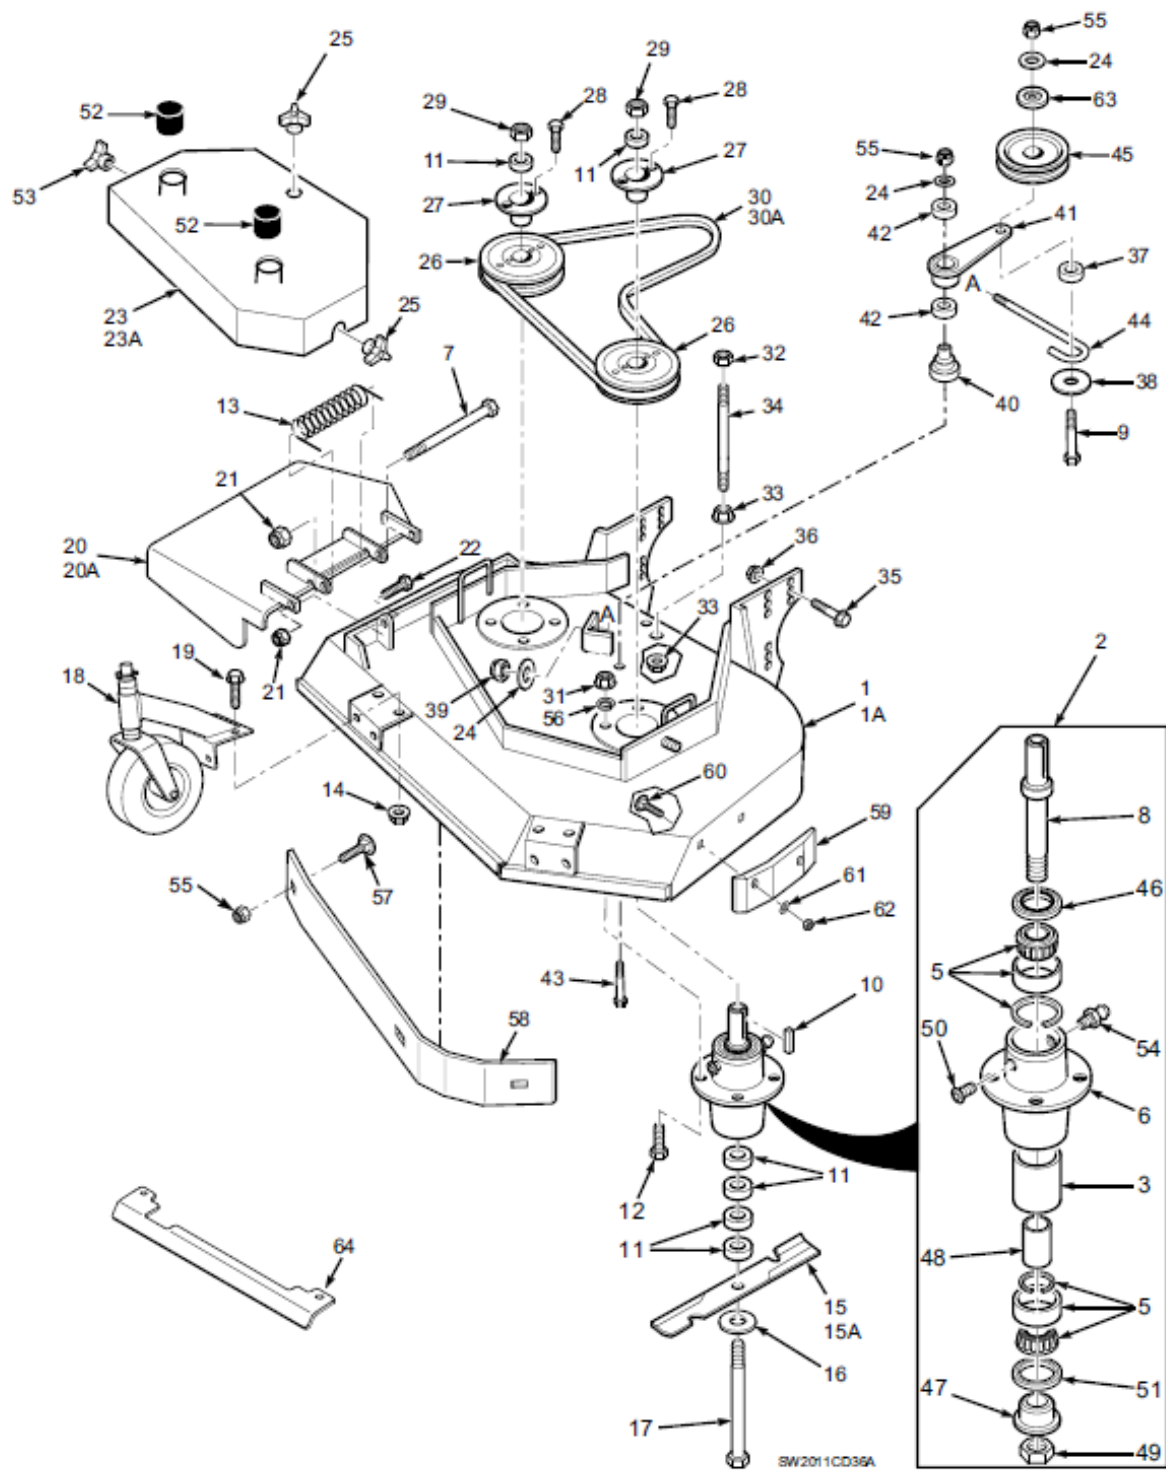

Ref. No.	Part No.	Description	32	36
1	461847	Cutter Deck w/Decals	x	
1A	461848	Cutter Deck w/Decals		x
2	461663	Cutter Spindle Assembly	x	x

3	43312	Spacer, Outside	x	x
5	481022	Bearing, Tapered	x	x
6	43644	Spindle Housing	x	x
7	04001-154	Bolt, 5/16-18 x 4-3/4"	x	x
8	43589	Spindle Shaft	x	x
9	04001-51	Bolt, 3/8-16 x 3-3/4" Hex	x	x
		Head		
10	04063-08	Key, 1/4 x 1/4 x 2"	x	x
11	43592	Spacer, Cutter Blade – Small	x	x
12	04001-175	Bolt, 5/16-18 x 1-1/2" Hex	x	x
		Head Grade 8		
13	482245	Spring, Chute Return	x	x
14	04019-03	Nut 5/16-18 Serrated Flange	x	x
15	481706	Cutter Blade, 16-1/2"	x	
	481707	Cutter Blade, 18"		x
15A	481710	Cutter Blade 16-1/2 Hi-Lift	x	
	481711	Cutter Blade, 18 Hi-Lift		x
16	04043-06	Flatwasher, 5/8 W	x	x
17	04001-41	Hex Hd. Bolt, 5/8-11 x 9-1/2"	x	x
18	461023	Caster Assembly	x	x
19	04017-16	Cpscrw,5/16-18 x 3/4" Ser.	x	x
		Flg. Hex Head		
20	461355	Discharge Chute	x	


20A	461356	Discharge Chute		x
	*462469	CA Discharge Chute		x
	*425872	Turbo Baffle		x
21	04021-10	Hex Nut, 5/16-18 Elastic	x	x
		Stop		
22	04001-09	Hex Hd Bolt, 5/16-18 x 1"	x	x
23	462392	Belt Cover Assy (Incl. Decal)	x	
23A	462393	Belt Cover Assy (Incl. Decal)		x
24	04043-04	Flat Washer, 3/8" Special	x	x
25	04029-03	Wing Nut, 3/8-16	x	x
26	482744	Pulley	x	x
27	48926	Tapered Hub	x	x
28	04001-172	Hex Hd. Bolt, 1/4-20 x 1"	x	x
29	04020-09	Hex Nut, 5/8-11	x	x
30	48278	Belt, Blade Drive	x	
30A	48204	Belt, Blade Drive		x
31	04021-22	Elastic Stop Nut, 5/16-18	x	x
		Grade 8		
32	04021-05	Hex Nut, 3/8-16 Center	x	x
		Locknut		
33	04019-04	Nut, 3/8-16 Serrated Flange	x	x
34	04004-02	Support, Belt Cover	x	x
35	04017-37	Cpsscrw, 1/2-13 x 1-1/4" Ser.	x	x

		Fig. HH		
36	04117-04	Nut, 1/2-13 Flange El. Stop	x	x
37	43277	Spacer, J-Hook	x	x
38	04041-12	Flatwasher, 3/8 x 1-1/2 x	x	x
		16 GA		
39	04021-09	Elastic Stop Nut, 3/8-16	x	x
40	43681	Idler Pivot	x	x
41	461841	Idler Arm Assy. (Inc. 42)	x	x
42	48224	Bearing	x	x
43	04001-62	Cpscrew, 3/8-16 x 3-1/4" Hex	x	x
		Head		
44	44078	J-Hook	x	x

Ref. No.	Part No.	Description	32	36
45	483215	Idler Pulley, Belt Clutch	x	x
46	481024	Seal, Cutter Spindle	x	x
47	43297	Spindle Bushing	x	x
48	43296	Spacer, Inside	x	x
49	481035	Nut, 1.06-18	x	x
50	48677	Relief Fitting, Cutter Spindle	x	x
51	481025	Seal, Cutter Spindle	x	x
52	484368	Spindle Shield	x	x

53	04029-04	Wing Nut, 3/8-16 (Small)	x	x
		RH side		
54	48114-04	Grease Fitting	x	x
55	04021-09	Nut, Hex Elastic Stop 3/8-16	x	x
56	04030-03	Lock Washer, 5/16"	x	x
57	04003-23	Bolt, Carriage 3/8-16 x 1"	x	x
58	423783	Baffle Weldment		x
59	483174	Pad, Deck Wear	x	x
60	04003-12	Bolt, Carriage 5/16-18 x 3/4"	x	x
61	04040-04	Flatwasher, 5/16"	x	x
62	04021-04	Hex Nut, 5/16-18 Center	x	x
		Locknut		
63	424367	Dust Shield	x	x
64	424661	Heatshield	x	x

48V & 52V CUTTER DECKS

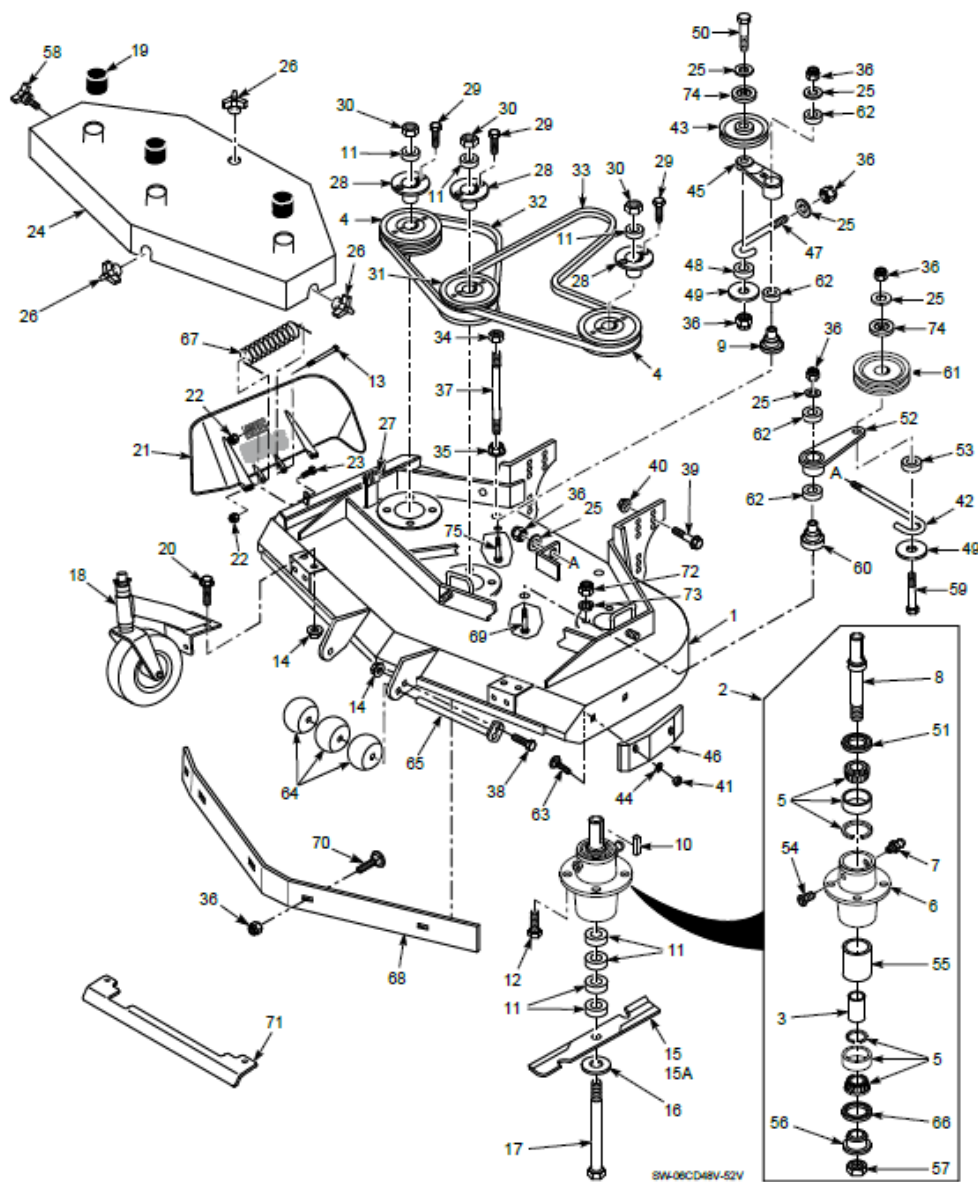

Ref. No.	Part No.	Description	48	52
1	461852	Cutter Deck w/Decals	x	
	461855	Cutter Deck w/Decals		x
2	461663	Spindle Assembly	x	x
3	43296	Spacer, Inside	x	x
4	482744	Pulley	x	x
5	481022	Tapered Bearing	x	x
6	43644	Spindle Housing	x	x
7	48114-04	Grease Fitting Str. 5/16"	x	x

8	43589	Spindle Shaft	x	x
9	43682	Idler Pivot	x	x
10	04063-08	Key, 1/4 x 1/4 x 2"	x	x
11	43592	Spacer, Cutter Blade – Small	x	x
12	04001-175	Bolt, 5/16-18 x 1-1/2" Hex	x	x
		Head Gr. 8		
13	04001-154	Bolt, 5/16-18 x 4-3/4" Hex	x	x
		Head		
14	04019-03	Serr. Flange Nut, 5/16-18	x	x
15	481706	Cutter Blade 16-1/2"	x	
	481707	Cutter Blade 18"		x
15A	481710	Cutter Blade 16-1/2 Hi-Lift	x	
	481711	Cutter Blade 18 Hi-Lift		x
16	04043-06	Flatwasher, 5/8" (.688 x 1.75	x	x
		x .134)		
17	04001-41	Hex Head Bolt, 5/8-11 x	x	x
		9-1/2"		
18	461023	Caster Assembly	x	x
19	484368	Cap, Spindle	x	x
20	04017-16	Capscrew, 5/16-18 x 3/4"	x	x
21	461844	Discharge Chute 48V	x	
	*462473	CA Discharge Chute, 48V	x	

	*425619	Turbo Baffle, 48V	x	
	461845	Discharge Chute 52V		x
	*462475	CA Discharge Chute, 52V		x
	*424211	Turbo Baffle, 52V		x
22	04021-10	Nut, 5/16-18 Elastic Elastic	x	x
		Stop		
23	04001-11	Bolt, 5/16-18 x 1-1/2" Hex	x	x
		Head		
24	462394	Belt Cover (Incl. decals)	x	
	462395	Belt Cover (Incl. decals)	x	x
25	04043-04	Flat Washer, 3/8" Special	x	x
26	04029-03	Wing Nut, 3/8-16 (Large)	x	x
27	04110-03	U-Nut, 3/8-16	x	x
28	48926	Tapered Hub		x
29	04001-172	Bolt, 1/4-20 x 1" Hex Head	x	x
		Grade 8		
30	04020-09	Nut, 5/8-11 Hex	x	x
31	482748	Pulley, Double		x
32	48087	Belt, RH Blade Drive	x	
	48285	Belt, RH Blade Drive		x
33	48089	Belt, Blade Drive	x	
	483518	Belt, Blade Drive		x

34	04021-05	Nut, 3/8-16, Nut Centerlock	x	x
35	04019-04	Nut, 3/8-16, Serrated Flange	x	x
36	04021-09	Nut, 3/8-16 Elastic Stop	x	x
37	04004-02	Bolt, 5/16-18 x 1" Hex Head	x	x
38	04001-09	Bolt, 5/16-18 x 1" Hex Head		x
39	04017-37	Cpscrw, 1/2-13 x 1-1/4" Ser.	x	x
		Flg. HH		
40	04117-04	Nut, 1/2-13 Flange El. Stop	x	x
41	04021-04	Hex Nut, 5/16-18 Center	x	x
		Locknut		


Ref. No.	Part No.	Description	48	52
42	44078		x	
	43028			x
43	48181		x	x
44	04040-04		x	x
45	461091		x	x
46	483176		x	x
47	43028		x	x
48	43077		x	x
49	04041-12		x	x
50	04001-31		x	x

51	481024		x	x
52	461841	J-Hook, 48V J-Hook, 52V	x	x
53	43277	Idler Pulley, "V" Groove Flatwasher, 5/16" Idler Arm Assy. (Incl. 62) Pad, Deck Wear	x	x
54	48677	J-Rod, Idler Pulley Spacer, J-Rod	x	x
55	43312	Washer, 3/8 x 1-1/2 x 16 ga. Bolt, 3/8-16 x 2-1/2" Hex Head	x	x
56	43297	Seal, Cutter Spindle Idler Arm Assy (Includes 62) Spacer, J-Rod	x	x
57	481035	Relief Fitting, Cutter Spindle Spacer, Outside, C utter Spindle	x	x
58	481625-01	Spindle Bushing Nut, Cutter Spindle Knob, w/stu d	x	x
59	04001-51	Bolt, 3/8-16 x 3-3/4" Hex Head Idler Pivot	x	x
60	43681	Idler Pulley, Belt Clutch Bearing	x	x
61	483215	Bolt, Carriage 5/16-18 x 3/4" Guide Roller Roller Shaft	x	x
62	48224	Seal, Cutter Spindle Spring, Chute Return Baffle Weldment 48V Baffle Weldment 52V Bolt, 3/8-1 6 x 3-1/4" Hex Head	x	x
63	04003-12	Bolt, Carriage 3/8-16 x 1" Heatshield	x	x
64	482295	Nut, Hex Lock 5/16-18 Lock Washer 5/16" Dust Shield	x	x
65	45944	Bolt, 3/8-16 x 2-3/4" Hex Head	x	x
66	481025		x	x
67	483378		x	x
68	424839		x	
	424840			x
69	04001-62		x	x
70	04003-23		x	x

71	424661
72	04021-22
73	04030-03
74	424367
75	04001-22

X	X
X	X
X	X
X	X
X	X


CASTER ASSEMBLY

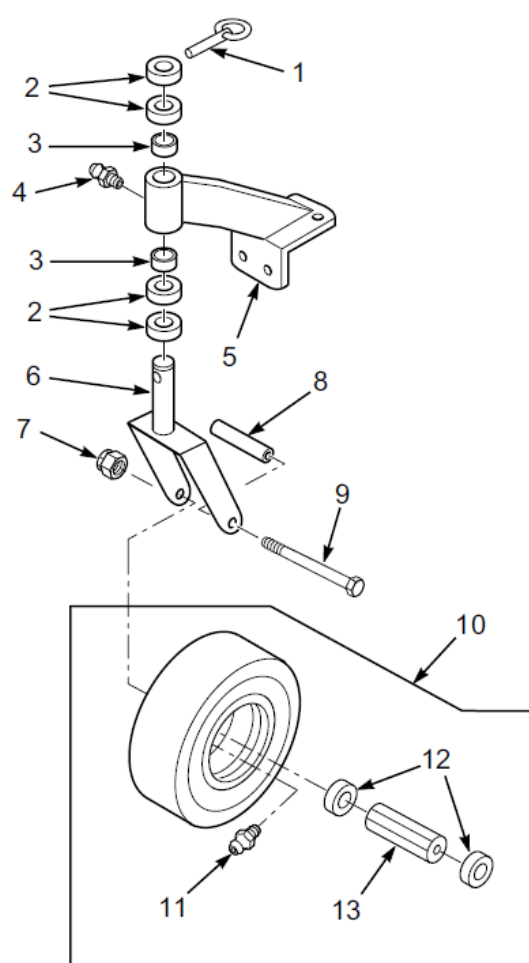

SW-SWZ2006CSTR

Ref. No.	Part No.	Description
1	04066-01	Quick Pin
2	43037-01	Spacer, Spacer Yoke, 1/2" Long
3	48100-01	Bronze Bearing
4	48114-04	Greasing Fitting
5	45101	Support Assembly
6	45006	Caster Yoke
7	04021-07	Nut, Elastic Stop 1/2-13
8	43022	Sleeve, Caster Wheel Bearing
9	04001-37	Bolt, Hex Head 1/2-13 x 5-1/2"
10	483047	Caster Wheel Assy. (Incl. #11, #12, #13)
11	48114-03	Grease Fitting, 45 Degree 1/4-28
12	481770	Retainer, Caster Wheel Bearing
13	481769	Roller Bearing, Caster Wheel

ENGINE DECK

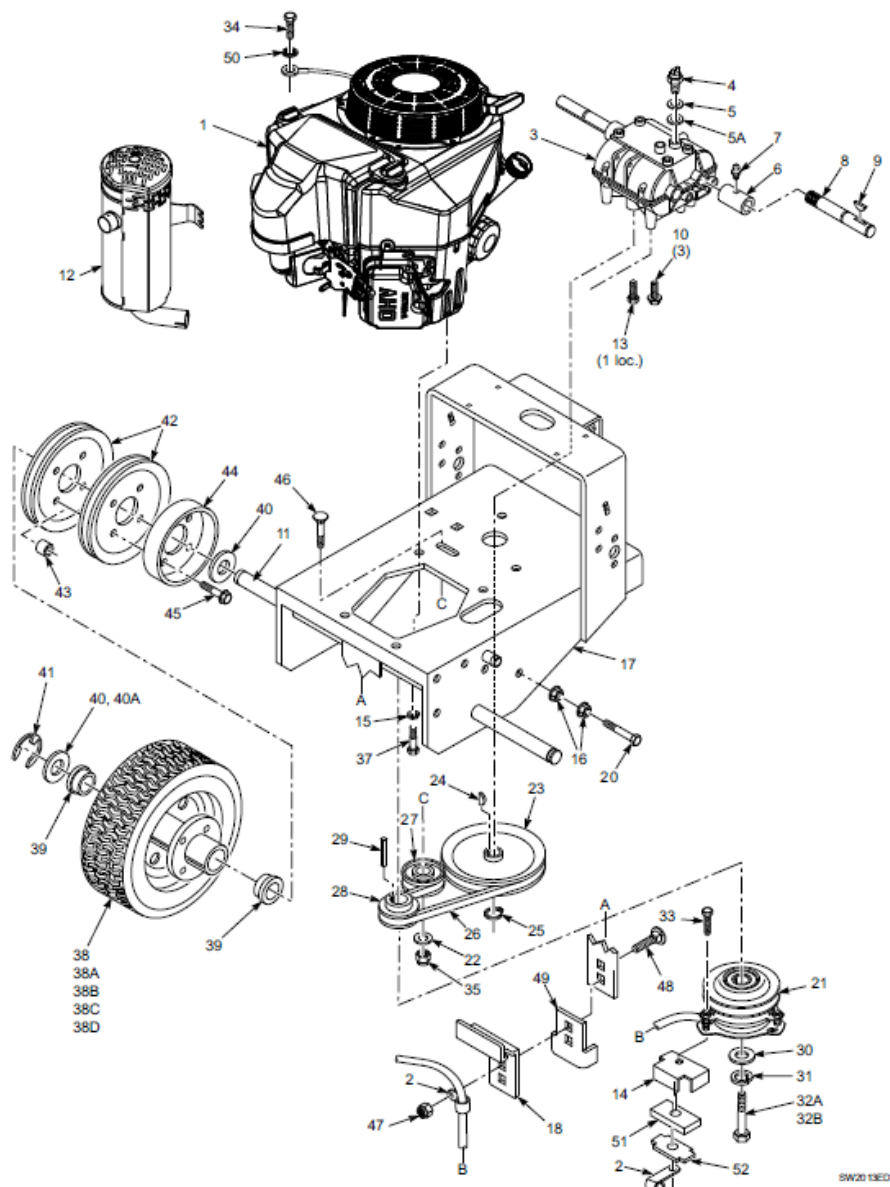


Ref. No.	Part No.	Description
1	485014	Engine, Kawasaki 14FS (FS481V)
	485015	Engine, Kawasaki 15FS (FS541V)
2	48030-09	Cable Clamp
3	481580	Transmission, 5-speed
		(Peerless 700-070, 9 tooth spline)
4	48231	Neutral Safety Switch
5	48122-01	Fibre Washer, thin
5A	48122-02	Fibre Washer, thick

6	481581	Coupler, Jackshaft
7	48114-05	Grease Fitting, straight 1/4-28
8	481582	Jackshaft (fits SW32,36,48& 52)
9	04063-09	Key, Hi-Pro #9
10	04017-16	Bolt, 5/16-18 X 3/4" Hex Head
11	43085**	Wheel Axle (SW36,48 & 52)
	43104**	Wheel Axle (SW 32)
12	484620	Muffler – Kawasaki
13	04001-08	Bolt, 5/16-18 X 3/4" Hex Head
14	422533	Backing Plate
15	04030-04	Lock Wshr. 3/8"
16	04019-04	Nut, 3/8-16 Serrated Flange
17	462285	Engine Deck (fits SW32)
	462286	Engine Deck (fits SW36,48 & 52)
18	424620	Plate, Clutch Bracket
19	04019-03	Nut, 5/16-18 Serrated Flange
20	04001-51	Bolt, 3/8-16 x 3-3/4" Hex Head
21	461397	Electric Clutch (Ogura)
22	04041-07	Washer, 3/8" (.391 x .938 x .105)
23	48197	Pulley, Transmission Input
24	04063-07	Key, Woodruff #9
25	04050-09	Retaining Ring, 5/8" Ext, Basic
26	48203	Belt, Transmission Drive
27	483208	Idler Pulley, Transmission
28	481666	Pulley, Traction Drive

Ref. No.	Part No.	Description
29	04063-19	Key, 1/4 x 1/4 x 3/4"
30	04041-28	Flat Washer, 7/16" Special
31	04030-05	Lock Washer, 7/16"
32A	04102-04	Bolt, 7/16-20 x 2-1/2" Hex Head
32B	04103-03	Cpsrw, M10-1.5 x55 Metric Hex Hd
33	04001-12	Bolt, 5/16-18 x 1-3/4" Hex Head
34	04002-06	Bolt, M8-1.25 x 16
35	04021-09	Nut, 3/8-16 Elastic Stop
36	04040-15	Flat Washer, 5/16"
37	040001-32	Bolt, Hex Head 3/8-16 x 1-1/4"
38	48192	Wheel Assembly (incl. 38A-38B)
		(fits SW36,48,52)
	48253	Wheel Assembly (Incl. 38C – 38D) (SW32)
38A	481860	Tire, 13 x 6.50-6, 2-ply (fits SW36,48,52)
38B	481859	Rim & Bearing Assembly (incl. 39)
38C	481861	Tire, 13 x 5.00-6 2-ply (SW32 only)
38D	481862	Rim Assembly (incl. 39) (SW32 only)
39	481858	Wheel Bearing
40	04042-05	Washer, 1-1/16 x 1-3/4 x 12 ga

40A	04041-14	Washer, 1-1/16 x 1-1/2 x 18 ga
41	04050-08	Retaining Ring, 1" Ext.- "E"
42	48200	Pulley, Wheel Drive
43	43088	Spacer, Wheel Pulley
44	48209	Brake Drum
45	04017-19	Bolt, 5/16-18 x 1-1/2" Serrated Flange
46	04003-03	Bolt, 3/8-16 x 2" Carriage
47	04021-10	Nut, 5/16-18 Elastic Stop
48	04003-04	Bolt, 5/16-18 x 1" Carriage
49	421370	Anti Rotation Bracket
50	04031-03	Lock Washer External Tooth
51	481716	Rubber Pad, Clutch Stop
52	422534	Plate, Backing

HANDLE ASSEMBLY

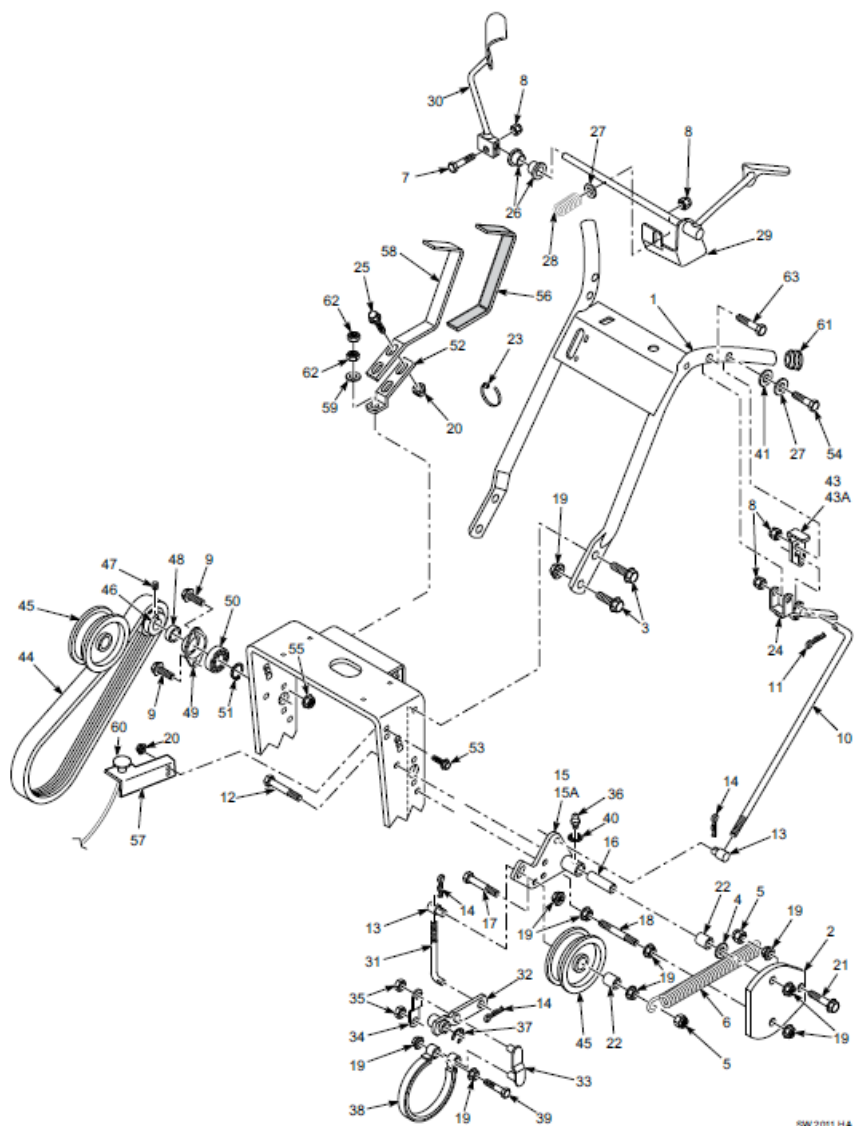

Ref. No.	Part No.	Description
1	463097	Handle Assembly
2	421360	Belt Guard
3	04017-27	Capscrew, 3/8-16 x 1" Serr. Flg.
4	04041-07	Washer, 3/8" (.391 x .938 x .105)
5	04021-09	Nut, 3/8-16 Elastic Stop
6	48755	Spring, Idler
7	04001-10	Bolt, 5/16-18 x 1-1/4" Hex Head
8	04021-10	Nut, 5/16-18 Elastic Stop


9	04017-05	Capscrew, 1/4-20 x 3/4" Hex Head
10	44140	Control Rod, Steering
11	04062-02	Hair Pin, Small
12	04001-23	Bolt, 3/8-16 x 4-1/2" Hex Head
13	43032	Swivel Joint
14	04062-01	Hair Pin, Large .094 Dia.
15	45847	Idler Bracket, RH
15A	45846	Idler Bracket, LH
16	43092	Idler Sleeve
17	04001-62	Bolt, 3/8-16 x 3/4" Hex Head
18	04004-17	Stud, 3/8-16 x 5"
19	04019-04	Nut, 3/8-16 Serrated Flange
20	04019-03	Nut, 5/16-18 Serrated Flange
21	04017-28	Cpscrw, 3/16-18 x 1-1/4" Serr. Flg
22	43286	Spacer
23	48028-05	Cable Tie
24	483160	Steering Lever
25	04017-17	Capscrew, 5/16-18 x 1" Serr. Flg.
26	483142	Bushing
27	04040-15	Washer, 5/16 (.375 x .875 x .083)
28	483040	Spring, Operator Presence
29	451915	Operator Presence Lever, LH
30	451917	Operator Presence Lever, RH
31	44005	Brake Rod

32	45092	Brake Lever
33	45093	Brake Link
34	42254	Brake Link Plate
35	04024-01	Nut, 3/8 Push-on
36	48114-05	Grease Fitting, Straight 1/4-28
37	04050-01	Retaining Ring, 5/8 Ext. "E"
38	48210	Brake Band
39	04001-45	Bolt, 3/8-16 x 2" Hex Head
40	04031-08	1/4" Internal Tooth Lockwasher
41	04032-01	Socket Head Capscrew #8-32 x 1/2"
42	04015-13	Socket Head Capscrew #8-32 x 1/2"
43	461242	Neutral Latch, RH
43A	461241	Neutral Latch, LH
44	48202A	Belt, Wheel Drive
45	483211	Idler Pulley, Wheel Drive

Ref. No.	Part No.	Description
46	482645	Pulley, Jackshaft (Inc. 47)
47	04012-04	Setscrew, Hex Socket Knurl
		Cup Pt. 5/16-18
48	43098	Spacer, Jackshaft Pulley
49	48223	Flange, Jackshaft Bearing


50	48224	Bearing, Jackshaft
51	04050-09	Retaining Ring, 5/8 Ext. Basic
52	422279	Shift Lever
53	04017-16	Capscrew, 5/16-18 x 3/4" Serr. Flg.
54	04001-17	Bolt, 5/16-18 x 2" Hex Head
55	04019-02	Nut, 1/4-20 Serrated Flange
56	481839	Grip, Shift Handle
57	424113	Bracket, Choke Mounting
58	461163	Shift Lever Extention (incl. 56)
59	04041-07	Washer, 3/8 (.391x .938 x .105)
60	482314	Choke Control
61	483161	Plug, Handlebar
62	04020-14	Nut, 3/8-24 UNF
63	04001-53	Bolt, 5/16-18 x 2-1/2"
64	482547	Fuel Tank Cap

SW FUEL SYSTEM

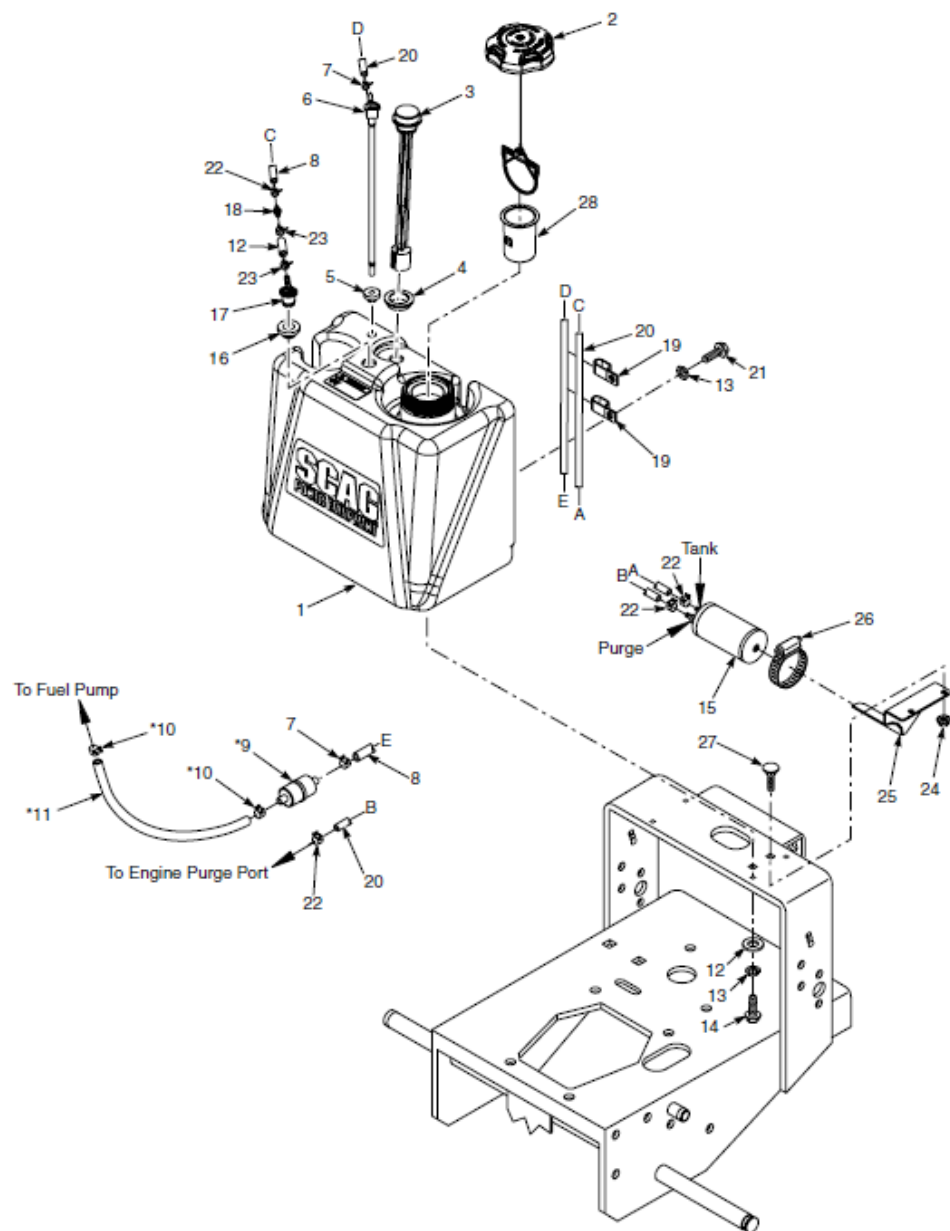

Ref. No.	Part No.	Description
1	463283	Fuel Tank Assembly (incl. #3, 4, 5, 6, 16, 17)
2	484286	Fuel Cap w/ Tether
	484297	Fuel Cap w/Tethered – California Models Only (not shown)
3	484243	Fuel Gauge Assembly (incl. #4)
4	484242	Seal, Fuel Gauge
5	482571	Bushing, .56 Dia. Viton
6	486181	Valve, Fuel Shutoff w/Screen
7	48059-01	Clamp, Fuel Hose
8	483617	Fuel Hose, 1/4" ID (order by inch)
9	*	Fuel Filter
10	*	Clamp, Fuel Hose
11	*	Fuel Hose
12	484347	Hose, Vapor Recovery 1/4" (order by inch)
13	04030-03	Lockwasher, 5/16" Spring
14	04001-09	Bolt, Hex Head 5/16-18 x 1"
15	484287	Carbon Canister
16	484285	Grommet, Viton,
17	484333	Fitting, Remote Vent
18	484343-01	Mender, 1/4 x 3/16 w/.02 Hole
19	48030-11	Clamp, 5/8" Double
20	484345	Hose, Vapor Recovery 3/16" (order by inch)
21	04001-08	Bolt, Hex Head 5/16-18 x 3/4"
22	48059-05	Clamp, Vapor Recovery Hose 3/16"
23	48059-02	Clamp, Fuel Hose 7/32" ID
24	04019-03	Nut, Serrated Flange 5/16-18
25	452176	Bracket, Canister Mounting
26	48136-17	Clamp
27	04003-04	Bolt, Carriage 5/16-18 X 1"
28	484279-01	Tube, Fuel Tank Insert – 4"


INSTRUMENT PANEL

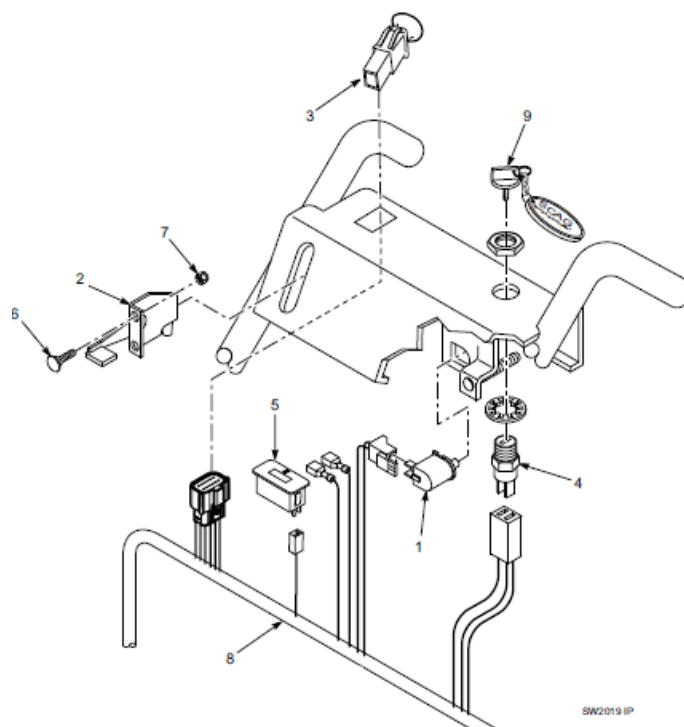

Ref. No.	Part No.	Description
1	48717	Switch, Neutral Lock
2	48946	Throttle Control – Kawasaki
3	485833	Engagement Switch, Electric Clutch
4	48609	Key Switch
5	484565	Hour Meter
6	04003-43	Bolt, Carriage #10-32 x 1/2"
7	04021-26	Nut, #10-32 Elastic Stop
8	486118	Handle Wire Harness, Manual Start
9	462069	Key Chain w/Keys
	483609	Key w/Shroud
NS	48030-09	Clamp, Wire Harness


PEERLESS TRANSMISSION 700-070

FOR REFERENCE ONLY – ORDER PARTS FROM PEERLES

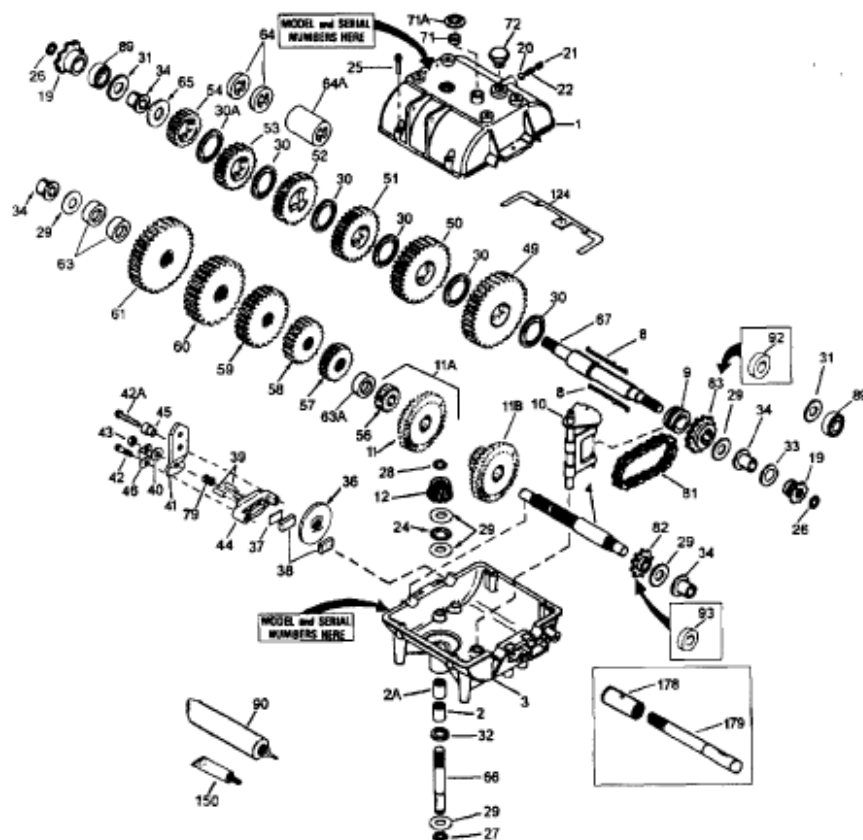


Re f. No .	Part N o.	Description	RE F. NO .	NO.	PART DESCRIPTION
1	772083 A	Case, Transmisson	50	778125	Spur Rear (35 teeth)
2	780086 A	Needle Bearing Grease Spec	51	778239 A	Spur Gear (32 teeth-steel)
2A	780142	Needle Bearing	52	778124 A	Spur Gear (30 teeth)
3	770061 A	Case, Transmission	53	778123 A	Spur Gear (25 teeth)
8	792089 A	Shift Key	56	778145	Spur Gear (12 teeth-steel)
9	784266	Shift Collar	57	778151	Spur Gear (15 teeth)
10	784376	Shift Rod & Fork	58	778240	Spur Gear (18 teeth-steel)
11	778154	Bevel Gear (42 teeth)	59	778126 A	Spur Gear (20 teeth)
12	778176	Bevel Pinion (14 teeth-steel)	60	778127 A	Spur Gear (25 teeth)
20	792077	Steel Ball, 5/16" dia.	65	780139	Washer
21	792078	Set Screw, 3/8-16 x 3/8"	66	776135	Input Shaft (3-11/16" long)
22	792079	Spring	67	776402	Shifter & Brake Shaft
24	780071	Thrust Bearing	71	788069	Square Cut Ring
25	792073	Screw, 1/4-20 x 1-1/4" (6)	72	792074	Threaded Plug (Shipping only, not used)
27	792035	Retaining Ring	81	786081	Roller Chain (No. 41 chain, 24 links)
28	788040	Retaining Ring	82	786082	Sprocket (9 teeth)
29	780072	Washer (6)	83	786083	Sprocket (18 teeth)
30	780108	Washer (5)	90	788067 B	Grease (32 oz. bottle Bentonite grease)
32	792001	"O" Ring	150	510334	Gasket Eliminator (Loctite #515)
34	780105 A	Flanged Bushing	178	*	Coupling (See page 26-27 for part numb er)
49	778146 A	Spur Gear (37 teeth)	179	*	Connector Shaft (See page 26-27 for par t number)

WIRE HARNESSES

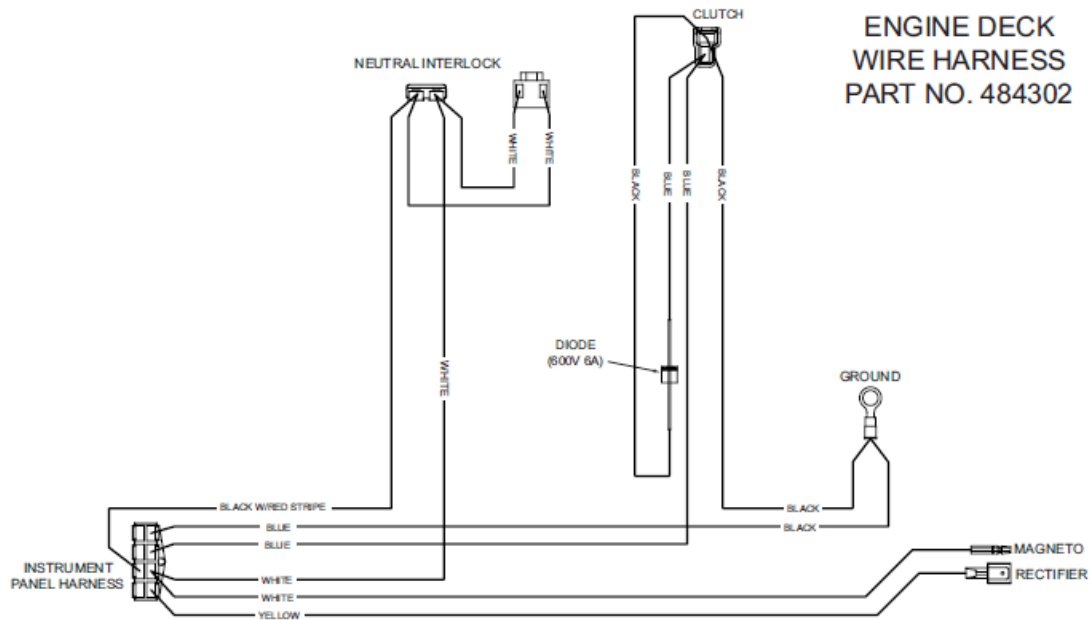

HANDLE WIRE HARNESS


Part No. 486118

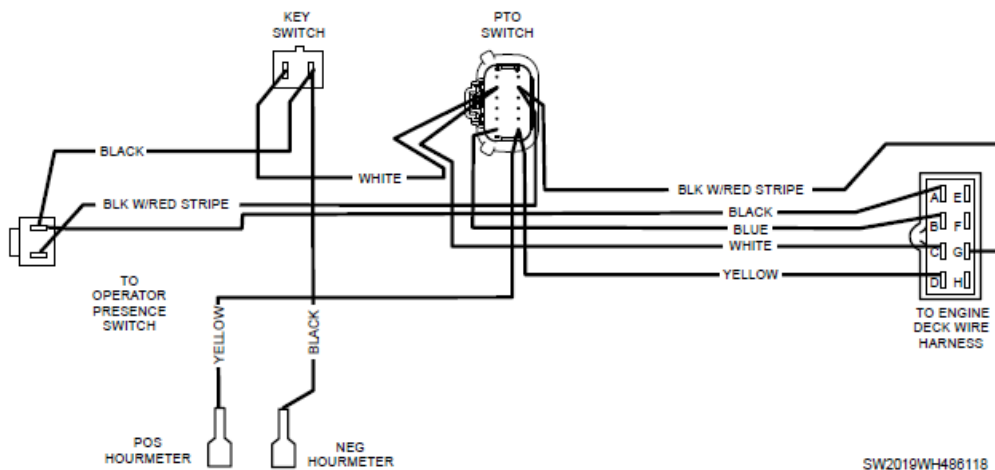

SW2019WH486118

SW ELECTRICAL SCHEMATIC – RECOIL START

(shown with Key off, PTO Off, Shift Lever in Neutral, OPC Disengaged)

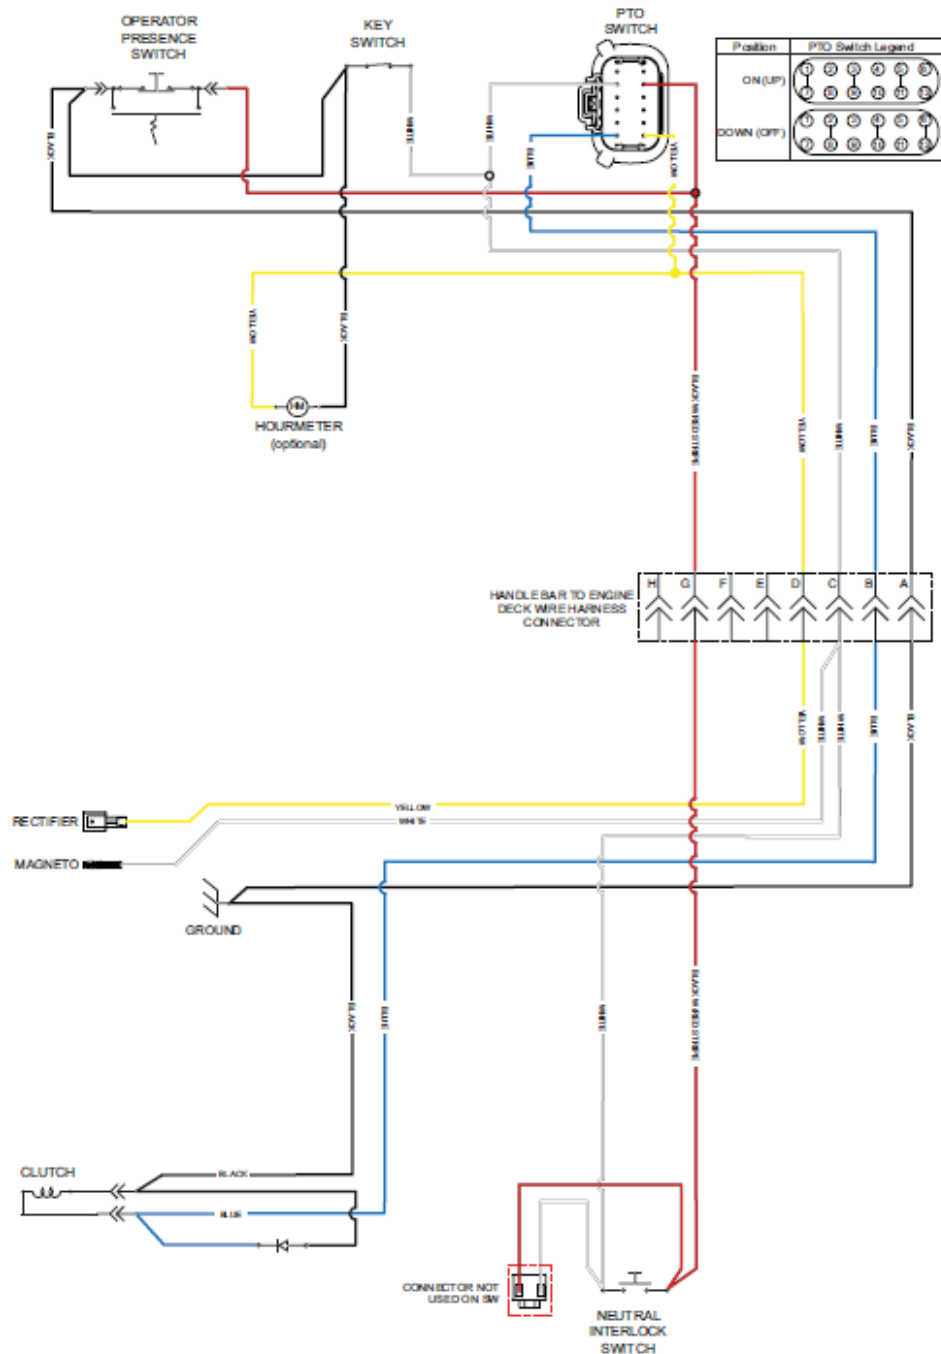


REPLACEMENT DECALS AND INFORMATION PLATES




1



3



5



6




8




10

SCAG

2

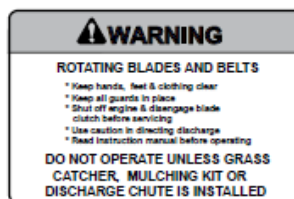

4

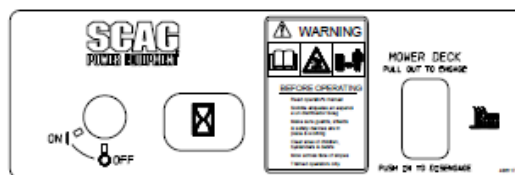

7




9




11

Ref. No.	Part No.	Description
1	483405	Decal, Discharge Chute
2	48314	Decal, Scag Logo
3	483407	Decal, Danger-Spinning Blades
4	483406	Decal, Warning-Rotating Blades
5	481971	Decal, Heavy Duty Commercial
6	48332	Decal, Shift Index
7	486117	Decal, Instrument Panel – Rear
8	485403	Decal, Metalcraft – USA
9	483404	Decal, Sulky Attachment
10	483402	Decal, Belt Cover
11	481483	Decal, Instrument Panel – Front
12	482816	Decal, Height of Cut
13	48315	Decal, 32
	482297	Decal, 36 Advantage
14	483199	Decal, 48 Velocity Plus
	483200	Decal, 52 Velocity Plus
15	485368	Decal, SW Replacement Parts
16	485526	Decal, Belt Routing – 32 & 36A
	485527	Decal, Belt Routing – 48V & 52V
17	486136	Decal, Scag Power Equipment (Fuel Tank)
**	461986	Spanish Decal Kit, Walk-Behinds (Not Shown)
**	483900	Decal, Warning Spark Arrest (Not Shown) – California Models Only

CUTTING HEIGHT ADJUSTMENT		CHECK MOUNTING HOLE POSITION NUMBER OF CASTER SPACERS (BELOW SUPPORT)					
		NUMBER OF SPACERS ABOVE CUTTER BLADES					
		0	1	2	3	4	5
TOP	0	-	-	3-5/8	2-1/8	1-7/8	1-5/8
MIDDLE	1	-	-	2-5/8	2-1/8	2-1/8	1-7/8
MIDDLE	2	-	3-3/4	3-1/4	3-1/2	-	-
BOTTOM	3	-	-	-	-	2-7/8	2-5/8
BOTTOM	3	-	4	3-3/4	3-1/2	3-1/4	3
BOTTOM	4	4-5/8	4-1/8	4-1/4	4-6/8	3-3/8	3-1/8

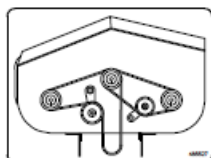[illegible]

Documents / Resources

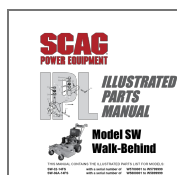

SCAG SW-32-14FS SW Walk Behind [pdf] Instruction Manual

SW-32-14FS SW Walk Behind, SW-32-14FS, SW Walk Behind, Walk Behind, Behind

References

- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.