
$\underline{\textbf{Manuals+}} \ - \ \textbf{User Manuals Simplified}.$



SEEDSEEL 100ml Essential Oil Diffuser User Guide

Home » SEEDSEEL » SEEDSEEL 100ml Essential Oil Diffuser User Guide 🖔

SEEDSEEL 100ml Essential Oil Diffuser

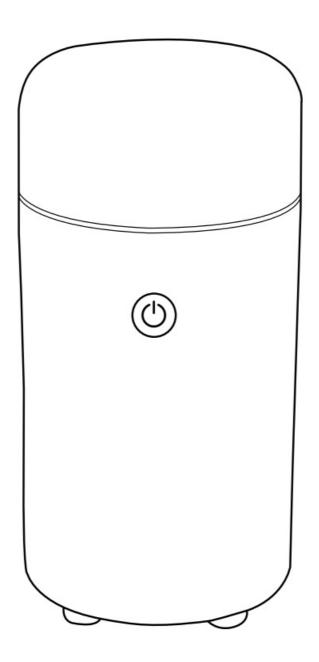

Contents

- 1 Maintenance & Notice
- 2 Using Steps
- **3 Button Control Guide**
- **4 Accessories**
- **5 Troubleshooting**
- **6 Specifications**
- 7 Documents /

Resources

- 7.1 References
- **8 Related Posts**

Maintenance & Notice

Clean & Maintenance

Please clean the diffuser per week as follows:

Unplug the power cable of the diffuser and pour out the remaining water from the water tank (as shown in Figure 1).

- Add 2-3 drops of vinegar to 100ML warm water(up to 70° C).
- Leave diffuser for 5 minutes and gently shake and pour out water.
- Wipe the diffuser and Ultrasonic Nebulizer with awry soft cloth.
- If the diffuser walnut be used for a long time, please keep it clean and dry



- When filling water, do not exceed the max line marked on water tank(As Figure 2).
- Please power off diffuser first before adding water.
- Please use pure natural essential oils.
- If the diffuser is leaking for any reason, please Unplug the USB Cable of the unit and pour out remaining water. Shake diffuser gently to drain water inside, then dry for more than 24 hours.



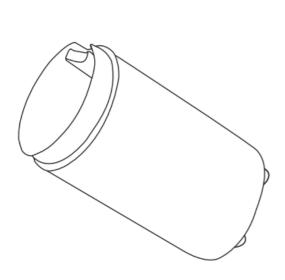


Figure 1

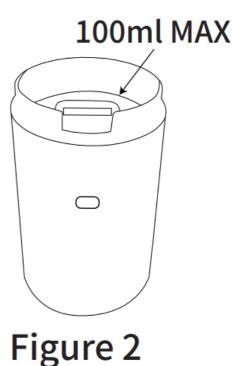


Using Steps

Connect the USB port

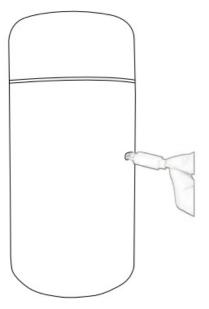


Add Water to the tank

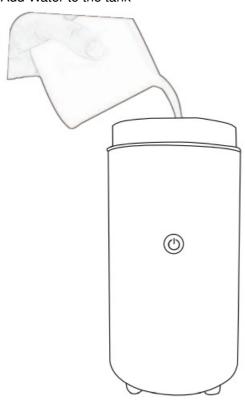

Press the power button to turn on the device.

Press the power button once to switch the device to intermittent mode.

Press the power button again to turn off the device

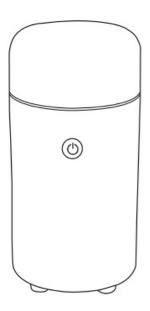


Button Control Guide




- Please press the power button to turn on the device, and it will work normally (continuous mode, atomization and light work at the same time).
- The light mode is breathing light. Press the power button once, the device switches to intermittent mode (30-second interval time).
- Press the power button again to turn off the device (atomization and light are turned off at the same time)

Accessories


Diffuser*1

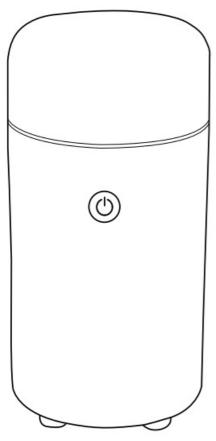

User Guide*1

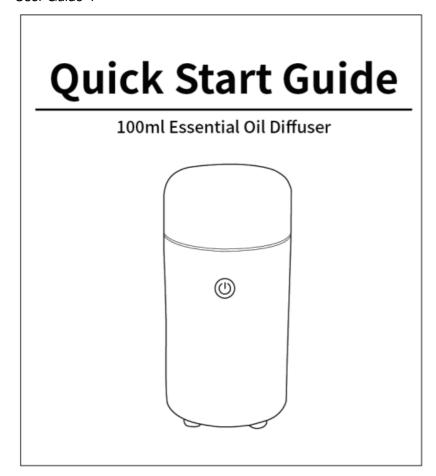

USB cable*1

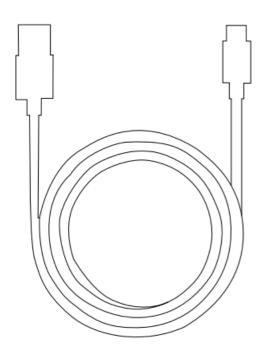

Notice:

Power adapter is not included in the accessories.

Troubleshooting

Please refer to the tattle below in the evert of the product operating abnormally	
Will not switch on/off	*Is there enough water in the tank? Please add water to the tank. *Is the power cable connected properly? Please disconnect, check the cables, and reconnect c arefully. Wipe the diffuser and Ultrasonic Nebulizer with a dry, s oft cloth.
No mist or abnormal mist	*Is there too little or too much water in the tank? Please add an appropriate amount of water to the tank, ensuring that it does not exceed the maximum water level line. *Is there any dirt on the ultrasonic plate Please wipe the diffuser and ultrasonic nebulizer with a dry, soft cloth. *Is there any dirt or dust in the air intake located on the underside of the base? There is a fan located on the underside of the base that is required to blow the mist out. If it becomes clogged with dust or dirt, it will prevent the mist from being emitted properly.
Water leakage from product	Is the cover not set properly on the base Please remove the cover and place it back on the base, making sure it is positioned directly above the bu ttons. Are the temperature and humidity levels low or high? If so, the mist may condense into water droplets more quickly under these conditions

- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
- Do not let the area around the humidifier become wet. If moisture occurs, lower the output of the oil diffuser. If the output of the oil diffuser can not be reduced, use the oil diffuser intermittently.
- Do not let absorbent materials, such as carpets, curtains, curtains, or tablecloths, become wet.
- Unplug the USB Cable the appliance during filling and cleaning.
- Never leave water in the reservoir when the appliance is not in use.
- Empty and clean the oil diffuser before storage. Clean the oil diffuser before next use.

Warning: When the water in the diffuser tank is not replaced in a timely manner, or the tank is not properly cleaned, microorganisms may grow in the tank and be blown into the air during diffuser operation, resulting in health risks

It is recommended that the diffuser be cleaned every 3 days.

Specifications

Dimensions	Diameter:66.8mm, height:137mm
Weight(Excluding Adapter)	Approximately 146.6g
Power: Input	AC100-240V 50/60Hz DC5V 1.5A
Length Of Cord	Approx150cm
Power	Approximately 5W
Working Mode	ON/30-second interval
Tank Capacity	100ml
LED Colors	Seven colors
Materials	PP+ABS
Accessories	USB cable
Working Frequency	2.4M Hz



<u>SEEDSEEL 100ml Essential Oil Diffuser</u> [pdf] User Guide 100ml Essential Oil Diffuser, Essential Oil Diffuser, Oil Diffuser, Diffuser

References

• User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.