



---

# SIEMENS Direct DC bias in Transformer User Guide

July 2,  
2025

## Contents [ [hide](#) ]

[1 Direct DC bias in Transformer](#)

[2 Specifications:](#)

[3 Product Information:](#)

[4 Usage Instructions:](#)

[4.1 1. Install the DCD app:](#)

[4.2 2. Read and confirm the license agreement:](#)

[4.3 3. Read the safety manual before DCD measurement:](#)

[4.4 4. Follow up if necessary:](#)

[5 FAQ:](#)

[5.1 Q: What is the purpose of the Direct Current Detector \(DCD\) app?](#)

[5.2 Q: How can I access the DCD app?](#)

[5.3 Q: What should I do if DC bias is detected during a measurement?](#)

[5.4 Documents / Resources](#)

[5.4.1 References](#)

## Direct DC bias in Transformer

“

---

## Specifications:

- Product: Direct Current Detector
  - Purpose: Detecting DC bias in transformers
  - Manufacturer Website: [siemens-energy.com/gt-service](https://www.siemens-energy.com/gt-service)
- 

## Product Information:

The Direct Current Detector (DCD) is a tool designed to detect DC bias in transformers. DC bias can lead to increased noise and loss levels in transformers, impacting their efficiency and reliability. The DCD app allows users to perform quick and easy measurements using a smartphone, enabling early detection of DC bias for timely intervention and maintenance.

---

## Usage Instructions:

### 1. Install the DCD app:

To begin the DCD measurement, access the Direct Current Detector (DCD) app by opening the link or QR code provided in your smartphone browser. Save the app to your home screen for easy access.

### 2. Read and confirm the license agreement:

Review the End User License Agreement and Additional Conditions for Free of Charge Apps associated with the DCD app. Confirm that you have read and understood the agreement before proceeding.

### 3. Read the safety manual before DCD measurement:

If DC bias is detected, contact Siemens Energy Transmission Service experts for a thorough diagnosis and service

recommendations.

## **4. Follow up if necessary:**

If the DCD measurement indicates the presence of DC bias, consider contacting Siemens Energy Transmission Service experts for further assistance.

---

### **FAQ:**

#### **Q: What is the purpose of the Direct Current Detector (DCD) app?**

A: The DCD app is designed to help users detect DC bias in transformers for early identification of potential issues.

#### **Q: How can I access the DCD app?**

A: You can access the DCD app by opening the provided link or QR code in your smartphone browser and saving it to your home screen for easy access.

#### **Q: What should I do if DC bias is detected during a measurement?**

A: If DC bias is detected, it is recommended to contact Siemens Energy Transmission Service experts for a comprehensive diagnosis and tailored service recommendations.

“

[View Fullscreen](#)

## Direct Current Detector

### Detecting DC bias in transformer

[siemens-energy.com/gt-service](https://www.siemens-energy.com/gt-service)

## Introduction

### Understanding the impact of DC bias on transformers

DC bias significantly increases noise and loss levels in transformers. This DC can originate from power electronics in the grid, HVDC interconnections, renewable power generation, or small direct currents caused by geomagnetic effects. Due to the magnetic properties of transformer cores, even a small DC bias can lead to substantial consequences, including increased reactive power current requirements and greater

losses.

For example, a mere few hundred milliamperes of DC can result in a notable increase in noise and no-load losses. A DC level of 500 mA may cause an increase of 13 dB(A) compared to reference noise levels in a test field without DC. The human ear perceives a 10 dB increase as a doubling of the noise level. Additionally, DC loading can lead to an increase of up to 50 percent in no-load losses.

early detection of DC bias. By providing a quick and easy initial assessment, the DCC enables users to identify potential issues before they escalate, ensuring the reliability and efficiency of transformer operations.

- Easy to use for any person at site
- Giving a first actual indication of DC in the asset
- Freely available for Android and IOS smartphones

How to perform a DCD measurement

The easy-to-use app transforms any smartphone into a DC detection device and can be used by any person at the site, either with or without internet connection. Below are the steps for performing a DCD measurement, presented with accompanying screenshots for clarity.

Therefore, it is essential for transformer owners, operators, and service personnel to detect DC bias in their transformers. The Direct Current Detector (DCD) app provides an initial indication of whether a transformer is affected by DC bias.

In case a transformer consistently shows DC bias, we strongly recommend contacting our Siemens Energy Transmission Service experts for a comprehensive diagnosis and tailored service recommendations. (Link to contact form.)

Features

## 1. Install the DCD app

To begin the DCD measurement, access the Direct Current Detector (DCD) app by opening the link.(see also QR-code) in your smartphone browser. Once the app is open in your

browser, tap

or

button and the “Add to Home

Screen” button

(the exact word-

ing may vary depending on your browser). This will save the

DCD app to your home screen for easy access,

allowing you to launch it directly from

your mobile device.

The Direct Current Detector (DCC) is designed to empower transformer owners and operators with essential tools for

© 2025 Siemens Energy

2. Read and confirm the license agreement

6. Follow up if necessary

Before proceeding, please review the “End User License Agreement for Free of Charge Mobile Applications” and the “Additional Conditions for Free of Charge Apps.” These documents outline the terms and conditions associated with the use of the DCD app. Kindly confirm that you have read and understood the agreement before continuing.

3. Read the safety manual before DCD measurement

If the app indicates the presence of DC bias, we recommend contacting Siemens Energy Transmission Service experts for a thorough diagnosis and actionable service recommendations. (Link to contact form.)

To ensure safe operation during the DCD measurement, please click on the Hamburger menu (☰) and select “Safety.”

Please read the Safety Disclaimer carefully before approaching a transformer for DC measurement. Understanding these safety guidelines is crucial for conducting the measurement safely and effectively.

#### 4. Start DCD measurement

To begin your DCD measurement, click on “Start Your First Measurement.” You will be prompted to select or enter the following details: substation name, serial number, and transformer name/label.

Next, select the microphone option, and initiate the sound measurement by tapping on the microphone icon.

4

4

Hint: For a high-quality initial assessment of DC effects, we recommend conducting three measurements of 60 seconds each. During the 60-second recording phase, walk around the transformer while keeping your smartphone at a distance of 30 to 100 cm from the transformer.

To ensure accurate results, avoid ambient noise during the recording, as it can negatively impact the DC assessment. The app will indicate recording quality using a traffic light system, and if necessary, it will provide further recommendations for improving sound quality.

## 5. Review measurement results

While the recording is in progress, the app will display the following information:

- Hz: This indicates the sound frequency detected during the recording, representing the Hertz of the transmission grid.

4

5

- Audio Signal: This provides an indication of sound quality, categorized as “Poor,” “Fair,” or “Good.”
- DC Detected/Not Detected: This shows the result of the DC assessment, indicating whether Direct Current has been detected.

Once the recording is complete, the app will process the audio file. A clear color signal will indicate the status of DC bias detection:

- Green: Everything is okay; no DC bias detected.
- Yellow: An uncertain signal; further investigation may be needed.
- Red: DC bias is detected; immediate attention is required.

© 2025 Siemens Energy

Published by © 2025 Siemens Energy Grid Technologies Service Humboldtstr. 64 90459

Nuremberg, Germany  
Customer Support Center Phone: +49 911 6505 6505 E-Mail: support@siemens-energy.com

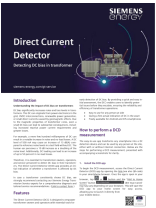
For more information, please visit our website:  
siemens-energy.com/gt-service

“Subject to changes and errors. The information given in this document only contains general descriptions and/or performance features which may not always specifically reflect those described, or which may undergo modification in the course of further development of the products. The requested performance features are binding only when they are expressly agreed upon in the concluded contract.”  
Siemens Energy is a trademark licensed by Siemens AG.

© 2024 Siemens Energy

Page 3

## Documents / Resources

	<a href="#">SIEMENS Direct DC bias in Transformer [pdf]</a> User Guide Direct DC bias in Transformer, Direct, DC bias in Transformer, Transformat r
---	---

## References

- [User Manual](#)

📁 SIEMENS Transformer

🔍 DC bias in Transformer, Direct, Direct DC bias in Transformer, SIEMENS,

## Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.