

SIGOR 9057001 DALI Controller DC/DC 4x8A Instructions

Home » SIGOR » SIGOR 9057001 DALI Controller DC/DC 4x8A Instructions



Contents

- 1 SIGOR 9057001 DALI Controller DC/DC
- **2 Function introduction**
- **3 Product Data**
 - 3.1 Safety & Warnings
- 4 Operation
- 5 Wiring diagram
 - 5.1 Conformity & Standards
- **6 Product Dimension**
- 7 Documents / Resources
 - 7.1 References
- **8 Related Posts**




SIGOR 9057001 DALI Controller DC/DC 4x8A



Important: Read All Instructions Prior to Installation

Function introduction

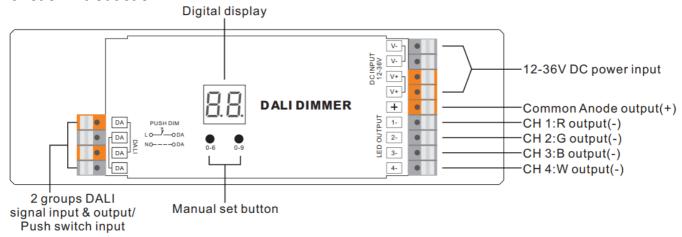

Product Data

No.	Input Volt age	Output Current	Output Po wer	Remarks	Size(LxWxH)	DALI Consumpti on	Dimming Range	Ambient T emperatur e
1	12-36VD C	4x5A	4x(60- 180)W	Constant volt age	170×53.4x28 mm	2mA	0.1%-100 %	-20°C ~ +5 0°C
2	12-36VD C	4x350m A	4x(4.2-12. 6)W	Constant curr ent	170×53.4x28 mm	2mA	0.1%-100 %	-20°C ~ +5 0°C
3	12-36VD C	4x700m A	4x(8.4-25. 2)W	Constant curr ent	170×53.4x28 mm	2mA	0.1%-100 %	-20°C ~ +5 0°C

- In compliance with IEC 62386-101:2014, IEC 62386-102:2014, IEC 62386-207 Ed2.
- Built-in DALI-2 interface, DALI DT6 device
- · Match all DALI systems in the market
- Manual /automatic DALI address setting
- · DALI address digitally indicates
- Push dimmer/DALI dimmer optional
- · Four channels can set addresses from one to four.
- To work with a power repeater to expand output power unlimitedly.
- Waterproof grade: IP20

Safety & Warnings

- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

Operation

• This product can be operated under DALI Dimmer mode and Push Dimmer mode while connected with DALI

master controllers and push switches respectively.

Switching of Two Modes

DALI and Push DIM functions cannot be used simultaneously, which can be controlled respectively by DALI
master controllers and push switches.



- Set DALI Address Manually Via Buttons ...
- Press and hold down any of the two buttons until the numeric digital display flashes, then release the button.
 1.2. Click any of the two buttons once to select a digit, click again to change the digit until the desired DALI address appears. Click first button to set "tens" position and second button to set "units" position. The address can be set from 00~63.
- Then press and hold down any of the 2 buttons until the numeric digital display stops flashing to confirm the setting.
- **Note:** DALI address can be manually assigned from 00-63-FF, by factory defaults, no DALI address is assigned for the dimmer, and the display shows. Setting the DALI address will reset the dimmer to factory defaults.

Set DALI Address Quantity



- Press and hold down both of the two buttons until numeric digital display flashes, then release the button.
- Click first button to select "1A", "2A", "3A" or "4A" which means 1 address, 2 addresses, 3 addresses or 4 addresses.
- Then press and hold down any of the 2 buttons until the numeric digital display stops flashing to confirm the setting.

For example, when we set address to 22:

- When select 1A, all four channels will be the same address 22.
- When select 2A, channel 1 & 3 will be the same address 22, channel 2 & 4 will be the same address 23.
- When select 3A, channel 1, 2, 3 will be address 22, 23, 24 respectively, and channel 4 address is also 24.
- When select 4A, channel 1, 2, 3, 4 will be address 22, 23, 24, 25 respectively.

DALI Address Assigned by DALI Masters

DALI address can also be assigned by DALI Master controller automatically, please refer to user manuals of

compatible DALI Masters for specific operations.

• Note: The digital display will show When the DALI master is assigning addresses.

Push Dimmer Mode


• While connected with a AC push switch, the digital display will show "PD" which means Push Dimmer Mode, operations under Push Dimmer Mode are as follows:

Click the button to switch ON/OFF

- Press and hold down the button to increase or decrease light intensity to desired level and release it, then
 repeat the operation to adjust light intensity to opposite direction. The dimming range is from 1% to 100%.
- Memory function after power off or power failure enables the device to memorize the status before power off while power on again.

Wiring diagram


· With DALI master

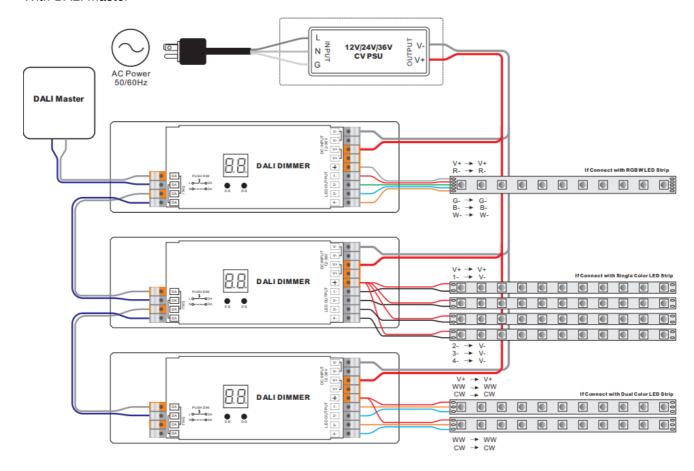


Conformity & Standards

- Radio Frequency Interference according to EN 55015:2013/A1:2015
- Immunity standard according to EN 61547:2009
- Mains current harmonics according to EN 61000-3-2:2014
- Limits for Voltage Fluctuations and Flicker according to EN 61000-3-3:2013

With AC Push Switch

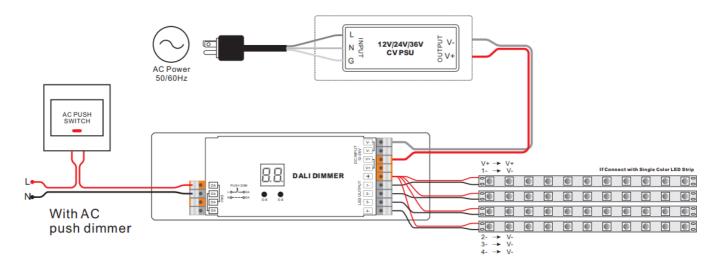

Product Dimension

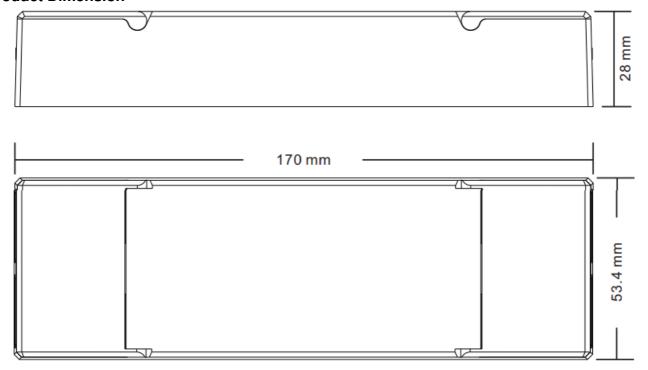

- Sigor Licht GmbH
- Eichenhofer Weg 81 · 42279 Wuppertal
- Telefon 0 23 39 12 61 0 · Telefax 0 23 39 12 61 61
- info@sigor.de
- www.sigor.de

Documents / Resources



References

• ⁰ Sigor

Manuals+,