 **SILVERSTONE**
FLP01 Retrofitted
HTPC Chassis



SILVERSTONE FLP01 Retrofitted HTPC Chassis Installation Guide

[Home](#) » [SilverStone](#) » SILVERSTONE FLP01 Retrofitted HTPC Chassis Installation Guide 

Contents

- [1 SILVERSTONE FLP01 Retrofitted HTPC Chassis](#)
- [2 Specifications](#)
- [3 FAQ](#)
- [4 ACCESSORIES CONTENT](#)
- [5 INSTALLATION GUIDE](#)
- [6 COMPONENT RESTRICTIONS](#)
- [7 Warranty terms & conditions](#)
- [8 contact](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)
- [10 Related Posts](#)



SILVERSTONE FLP01 Retrofitted HTPC Chassis



Specifications

- Model: FLP01
- Type: Retrofitted HTPC chassis
- Manufacturer: SilverStone
- Website: www.silverstonetek.com

FAQ

- **Q:** What is the maximum CPU cooler height supported?
- **A:** The maximum CPU cooler height supported is 138mm, or 127mm with the center crossbar attached.
- **Q:** What are the component restrictions for installing storage devices?
- **A:** The distance between the edge of the ODD bracket and the rear edge of the motherboard is 170mm. The height limitation below the optical drive is 88mm.
- The distance between the front end of the optical drive and the rear edge of the motherboard is 348mm.

ACCESSORIES CONTENT

Rubber Grommet

- 3.5" HDD Mounting Rubber



- Motherboard standoff



- Mounting for 3.5" HDD, motherboard PSH



- Mounting for 5.25" ODD



- Mounting for 2.5" SSD



- Mounting for 3.5" HDD




- Cable ties



INSTALLATION GUIDE


1. Remove top panel

1

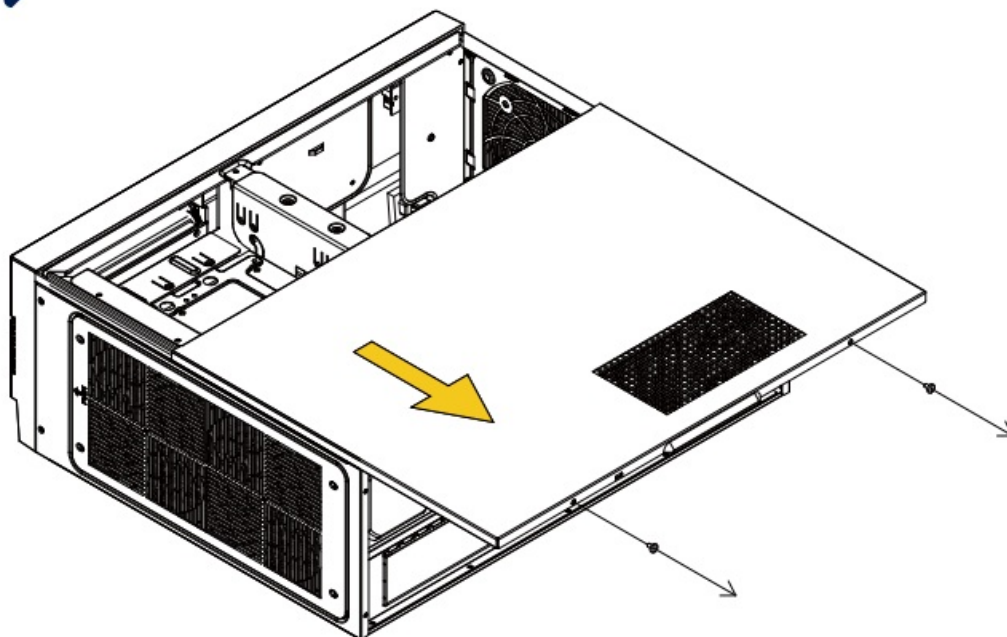


2. Remove the ODD bracket by loosening the four screws that secures it in place.

2

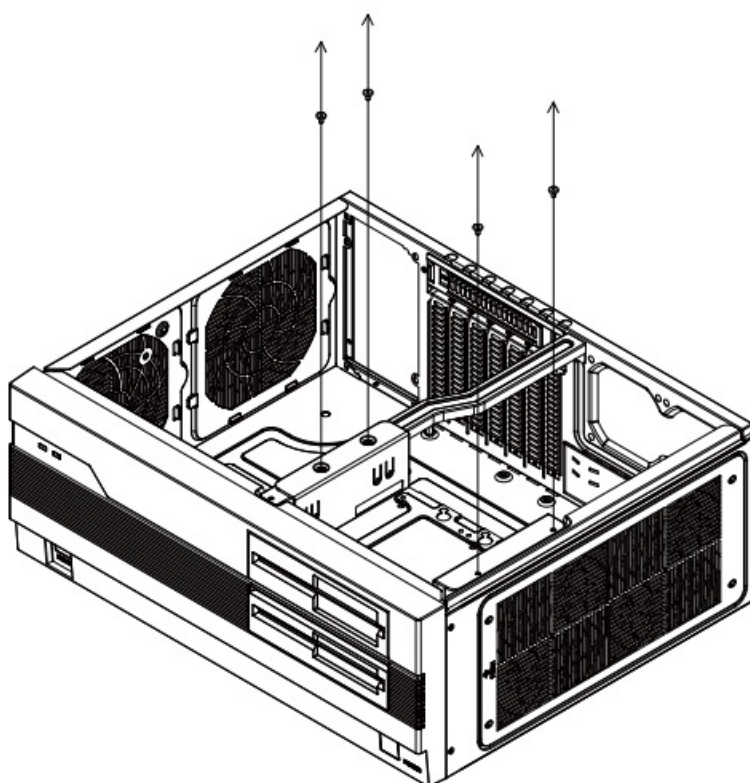


3. Remove the center crossbar

3

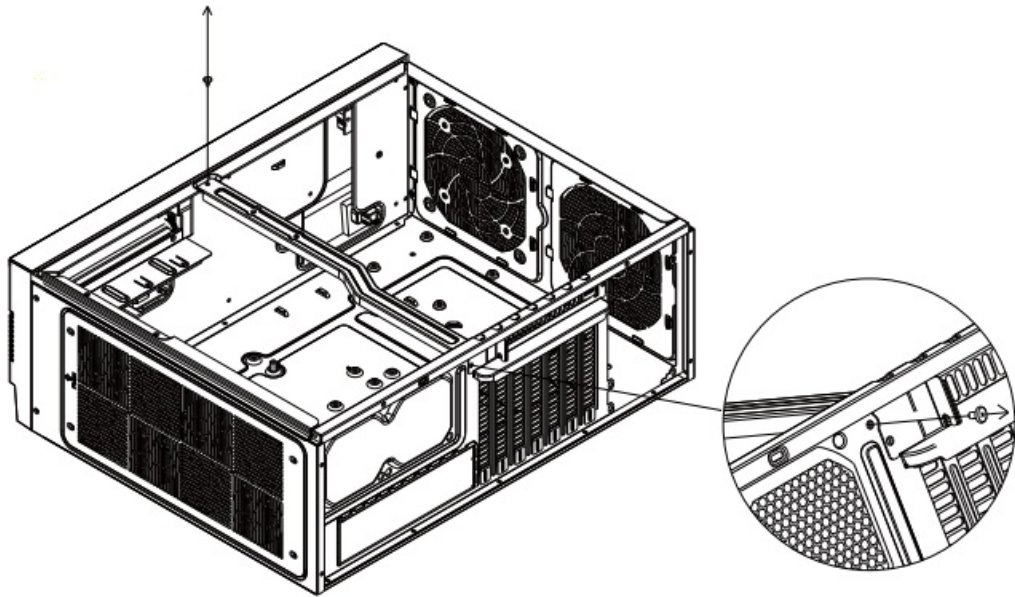


4. If using a 5.25" device other than an optical disc drive, first remove the front panel, then detach the optical disc drive panel.

4

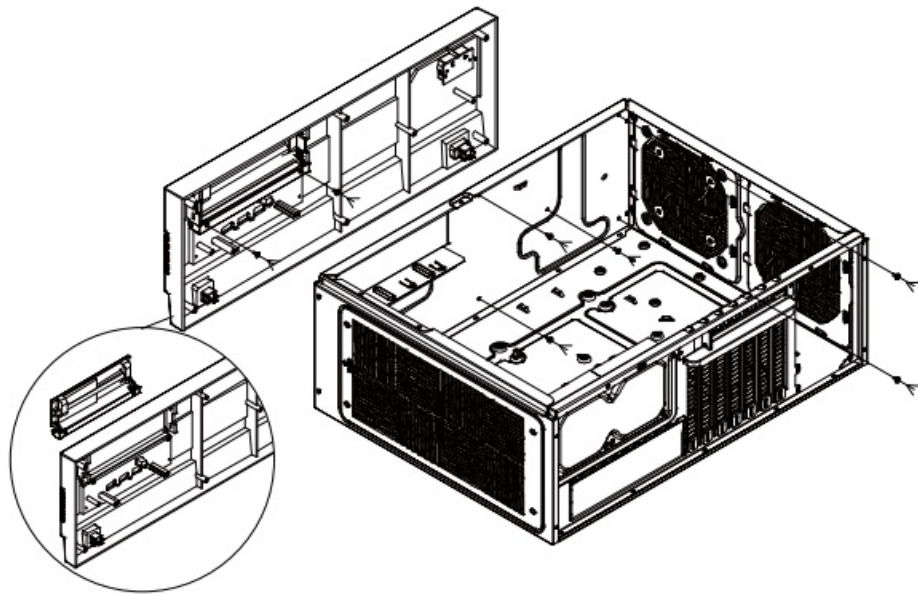


5. Install PSU

5

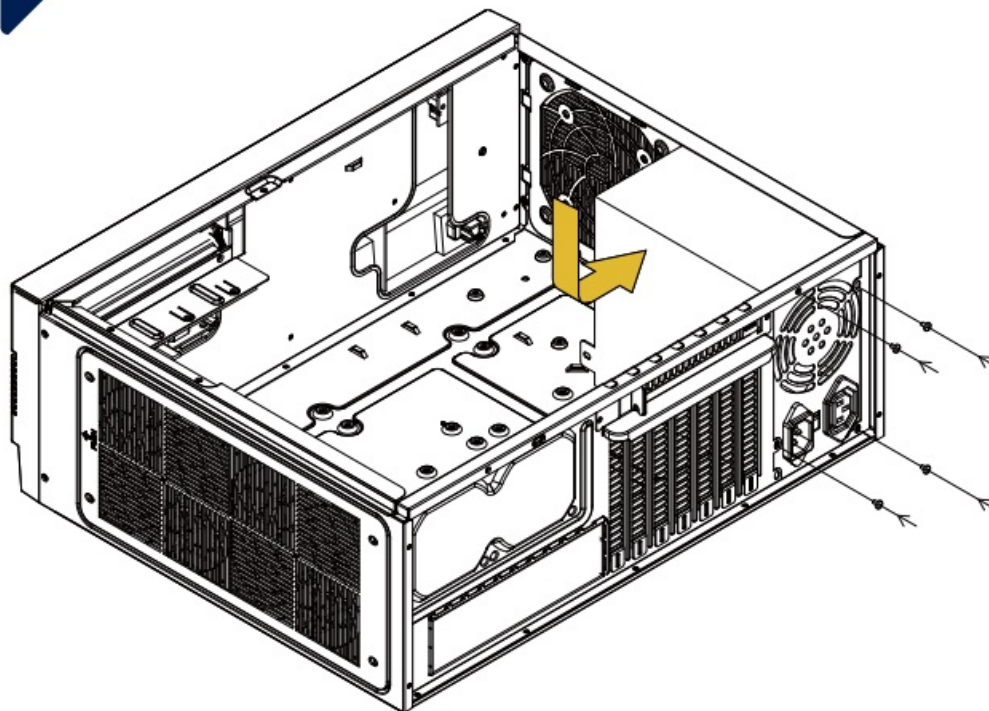


6. Install IO shield

6

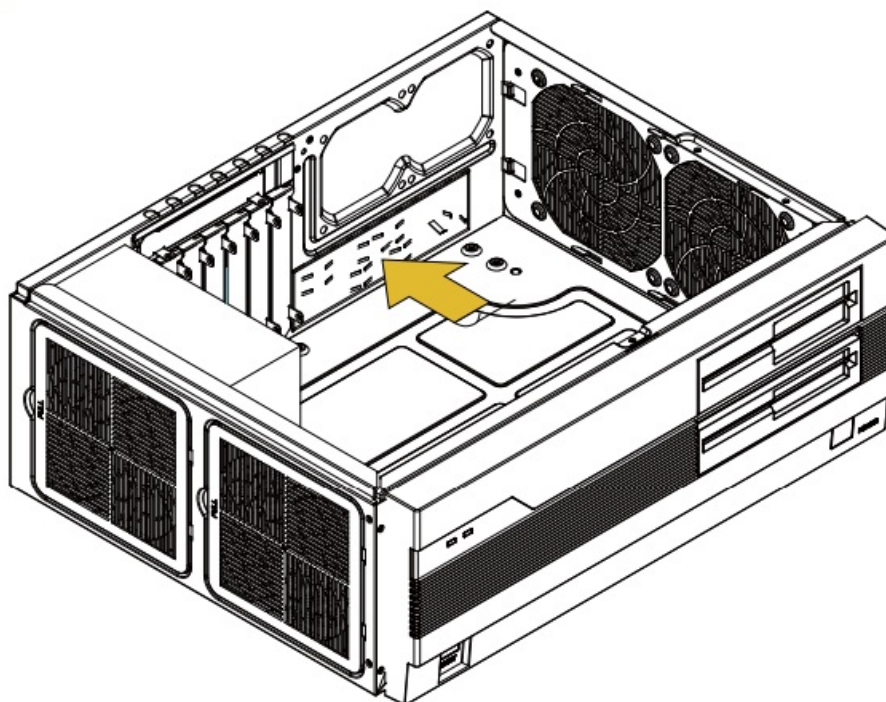


7. Install motherboard

7

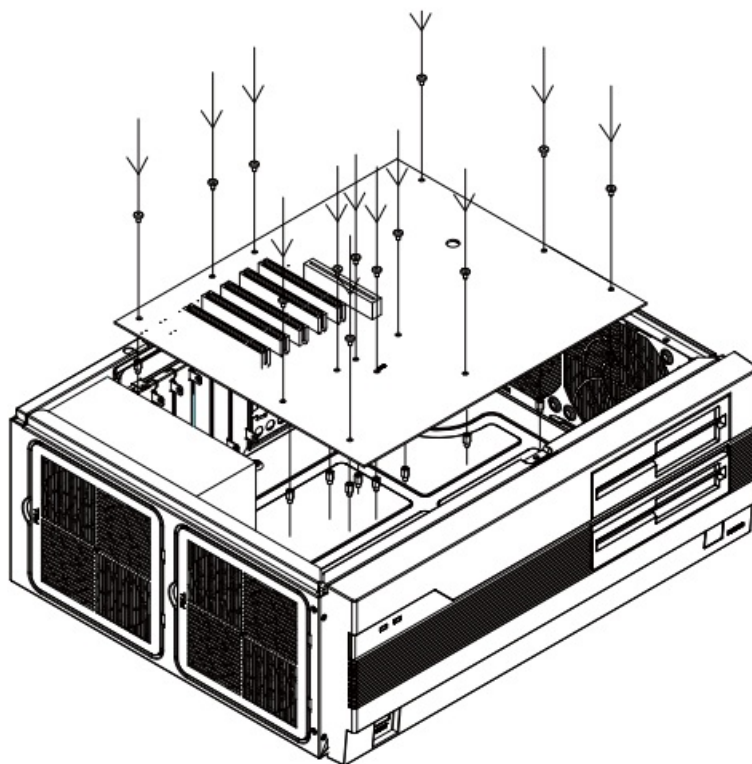


8. Install 2.5" devices

8

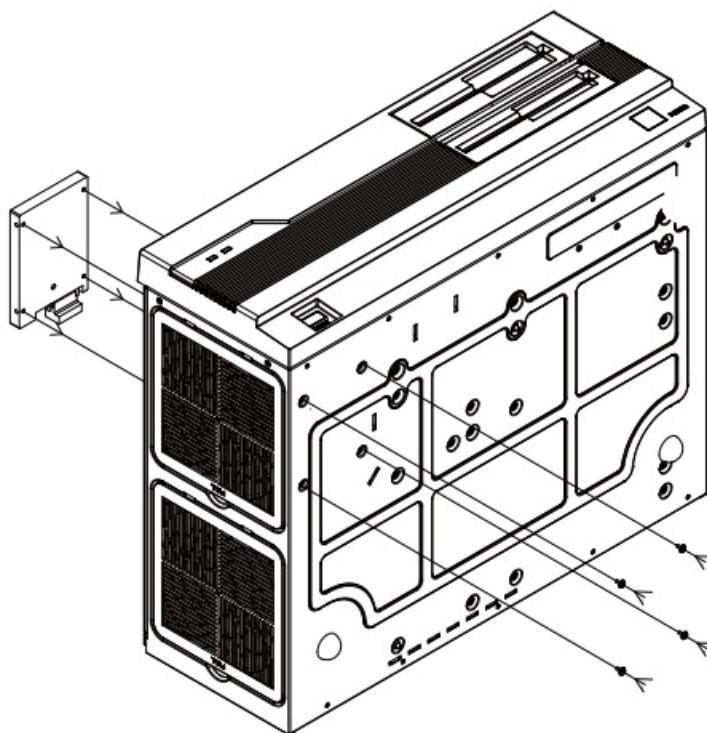


9. Install graphics card

9

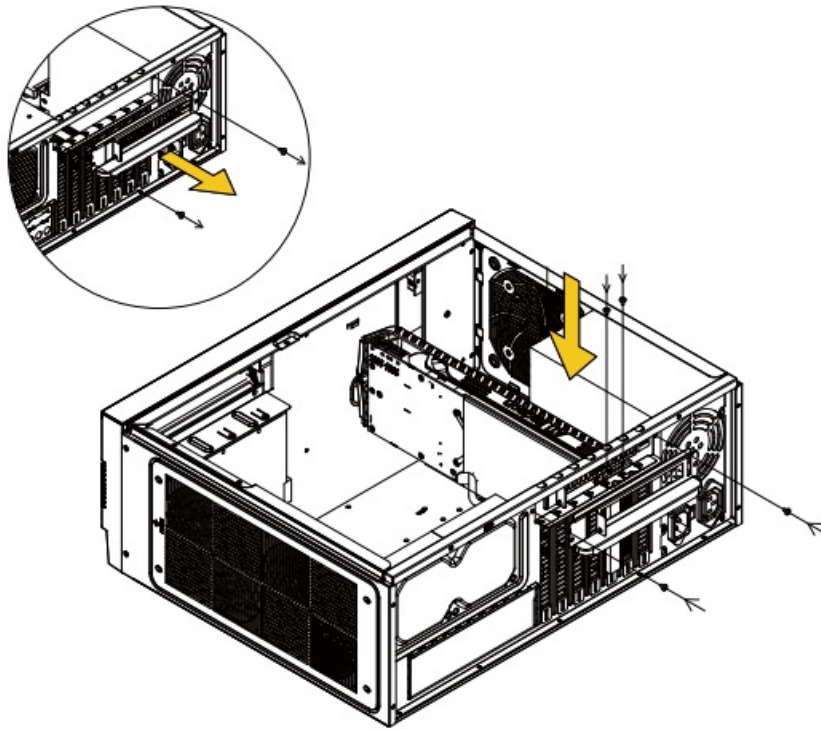


10. Install the storage devices onto the ODD bracket

10

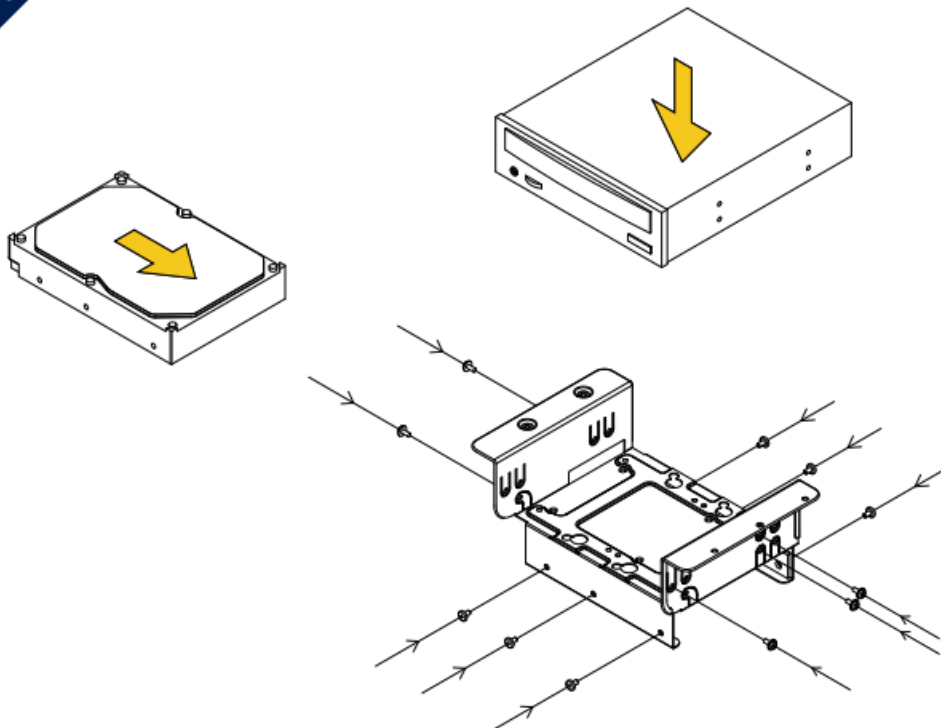


11. Reinstall the cross bar into the chassis

11

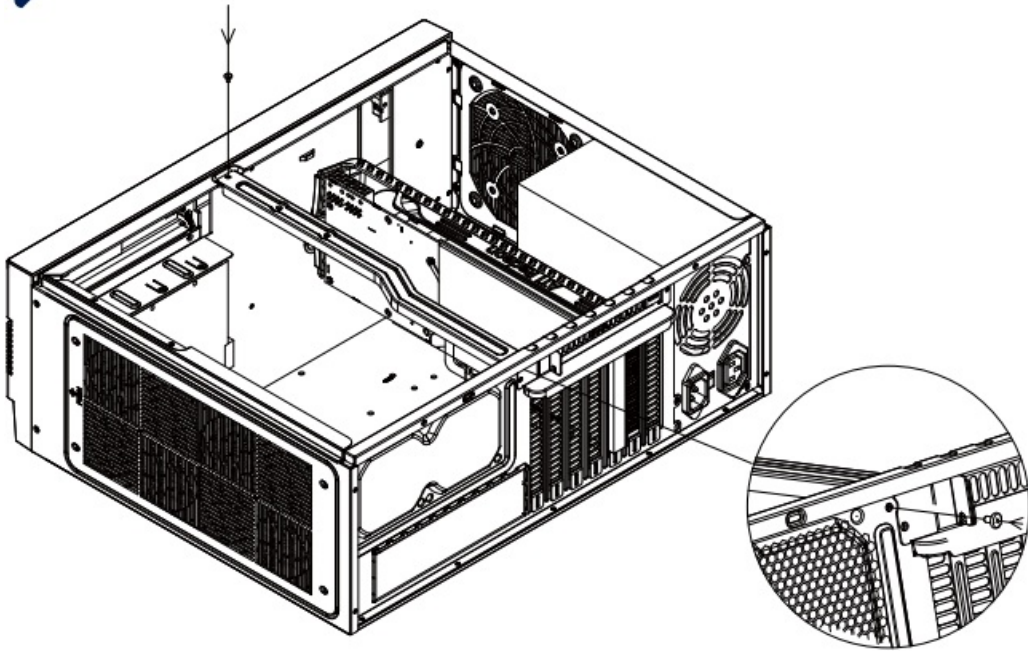


12. Reinstall the ODD bracket into the chassis

12

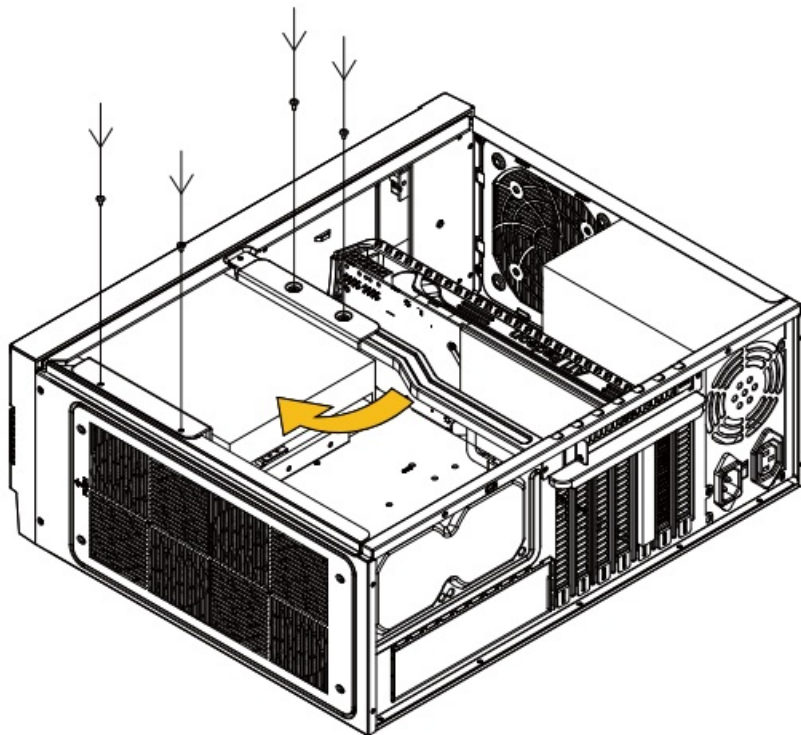


13. Reinstall the top panel to complete the installation

13

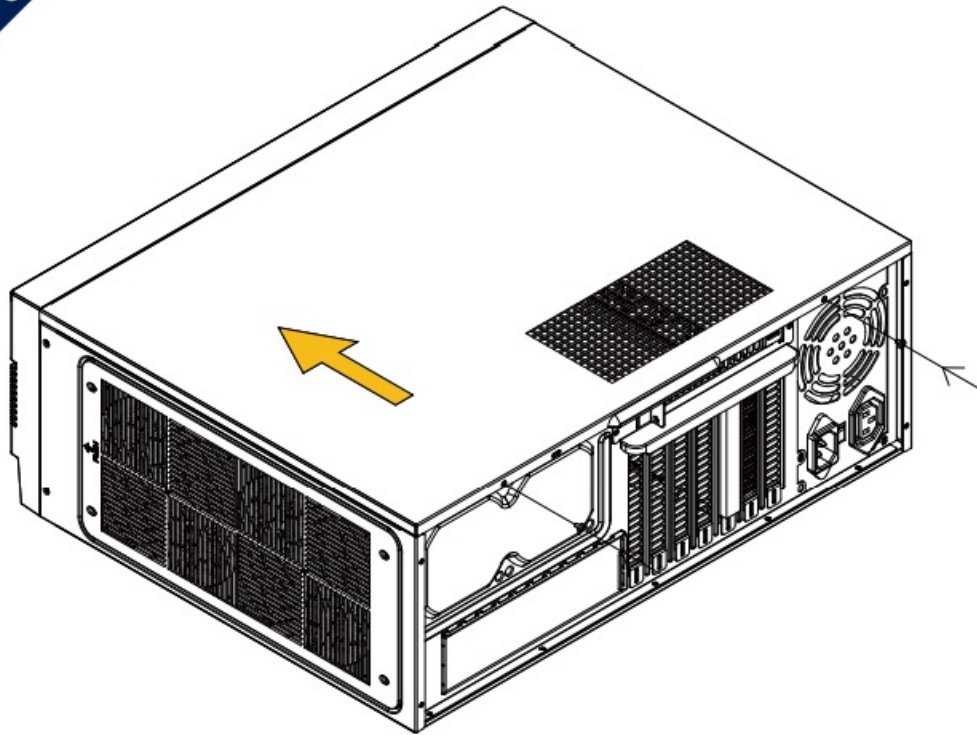


14. The CPU cooler height is limited to 138mm, or 127mm with the center crossbar attached. The cooler may protrude 8mm beyond the edge of the motherboard.

14

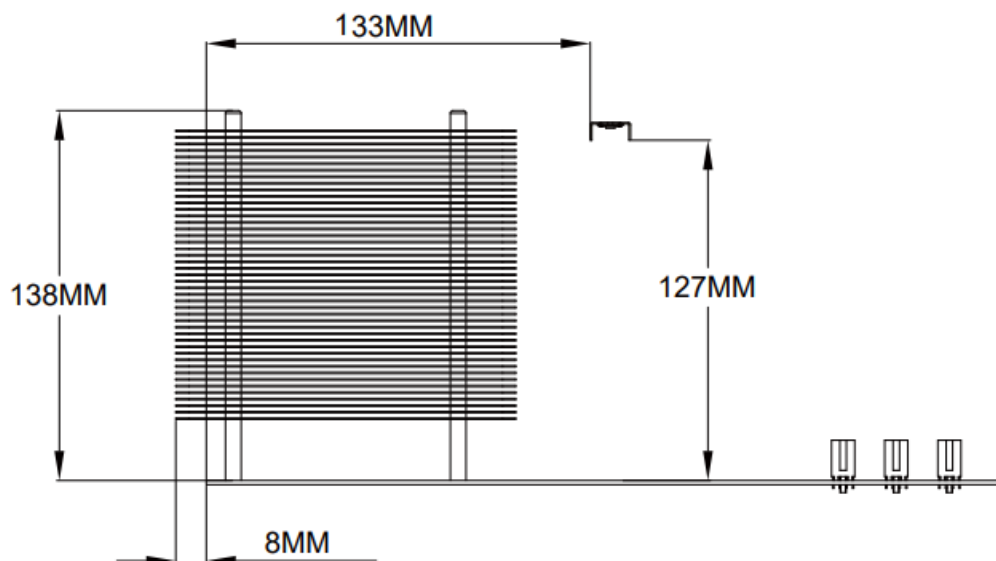


15. The distance between the edge of the ODD bracket and the rear edge of the motherboard is 170mm. The height limitation below the optical drive is 88mm. The distance between the front end of the optical drive and the rear edge of the motherboard is 348mm (it is recommended to measure the length of the optical drive first to determine how much of the motherboard area it covers).

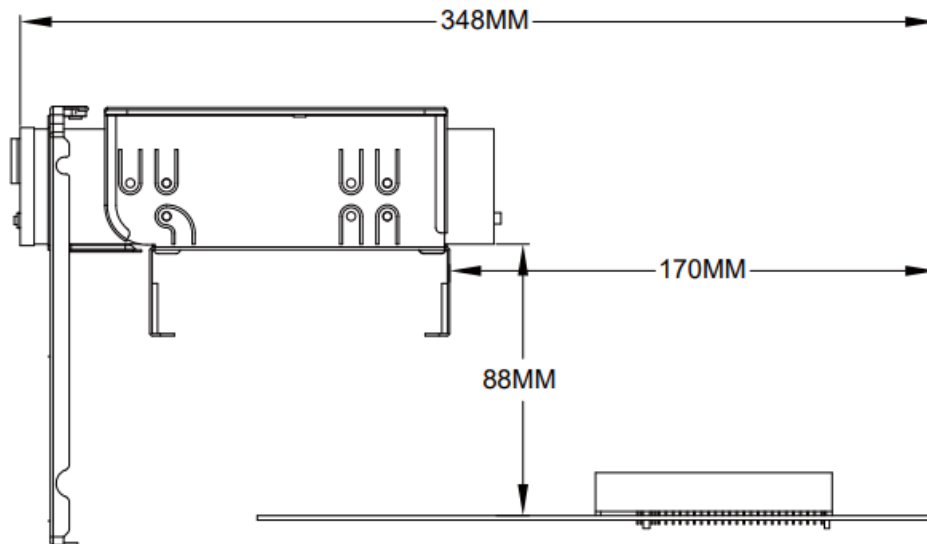


COMPONENT RESTRICTIONS


- If the 120mm fan on the left and the 2.5" SSD mount directly below it are used, the maximum available PSU depth is limited to 160mm. Without the fan or the 2.5" SSD installed, the space can accommodate a power supply with a depth of up to 170mm.

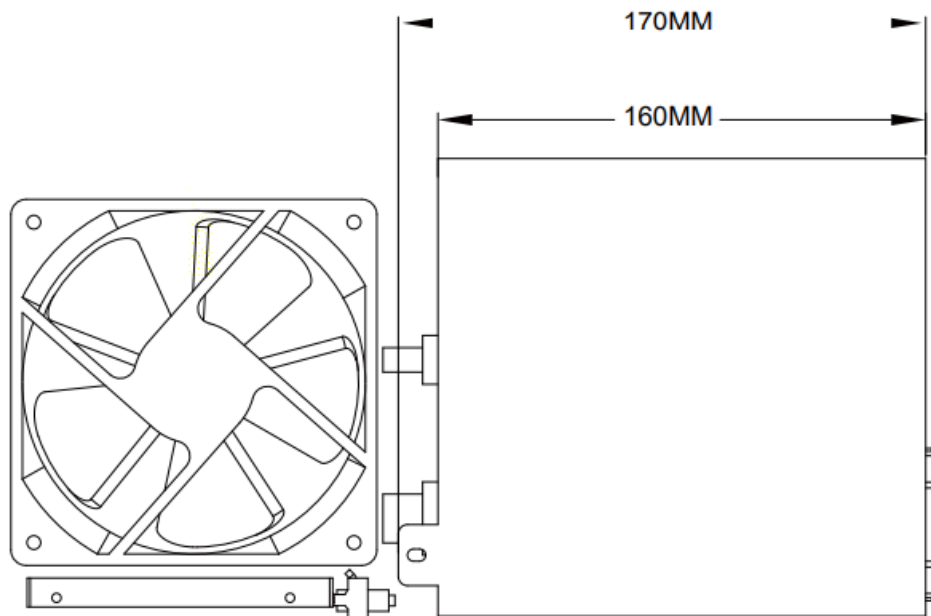


- The graphics card length is limited to 309mm, while the width is limited to 133mm.

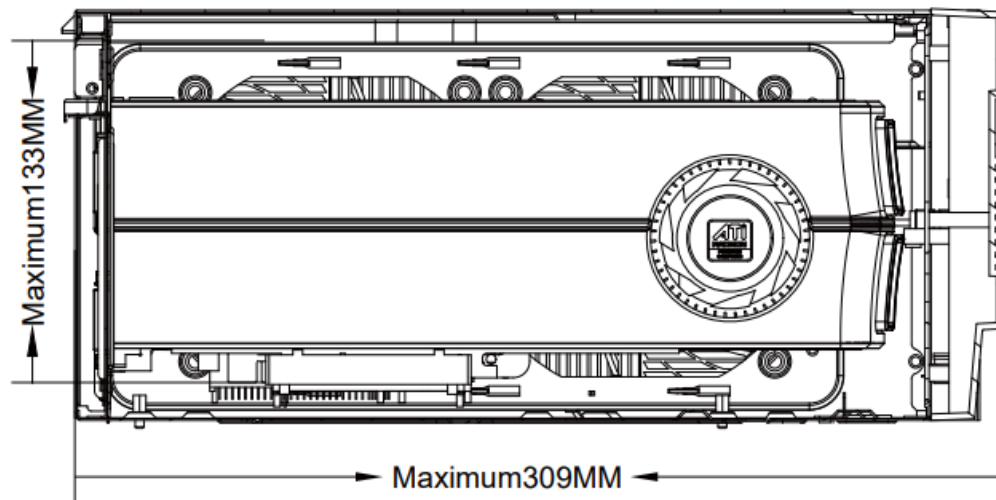

- The dust filters on both the left and right sides of the chassis can be easily removed.

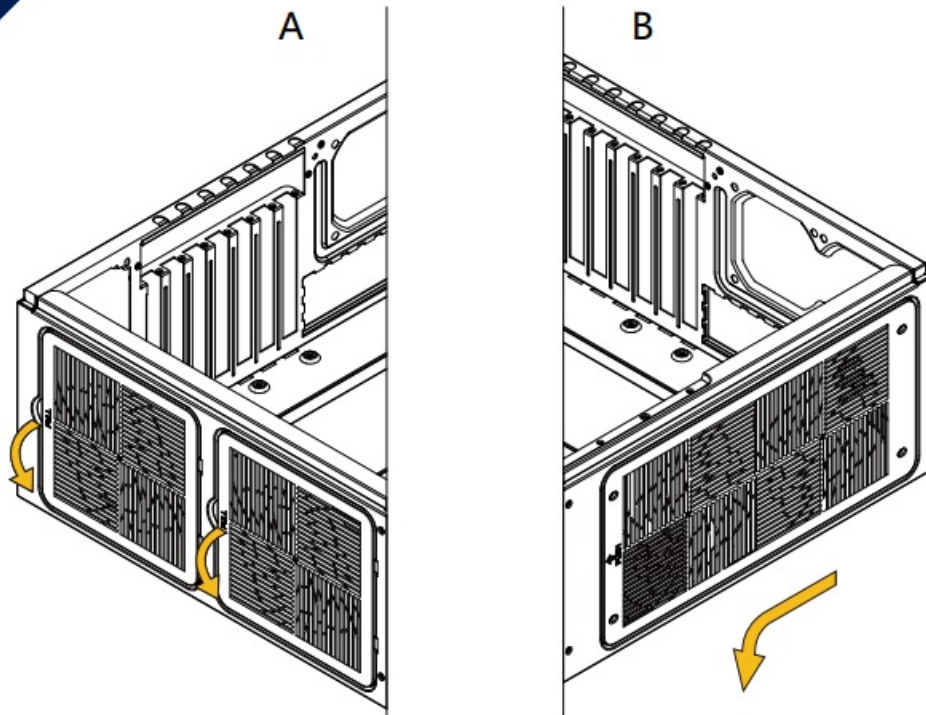


- The FLP01 provides an additional expansion slot, supporting single-slot interface cards like the ECD01.

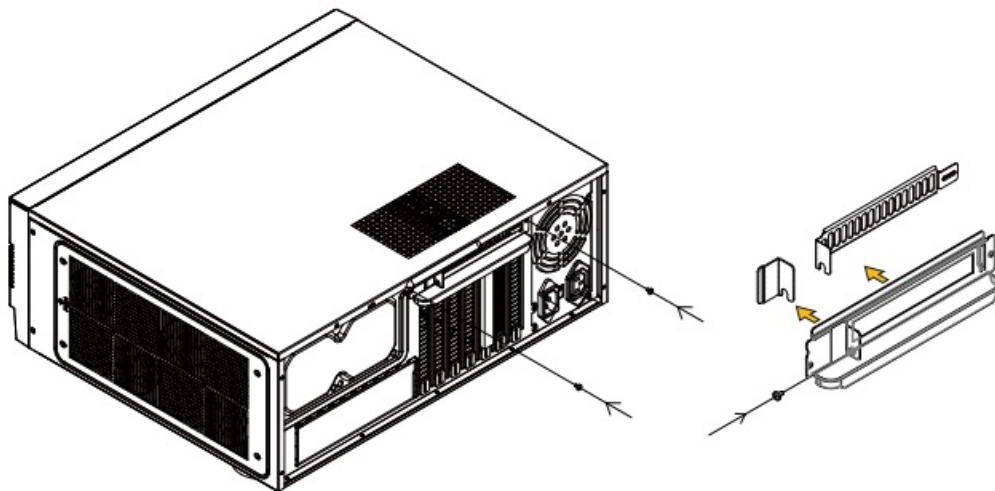

- There is no installation order if a 5.25" device is installed on top of the optical drive cage with 3.5" drive installed underneath. However, there are recommended orders when installing drive sizes smaller than original, please refer to the following table for more information

20

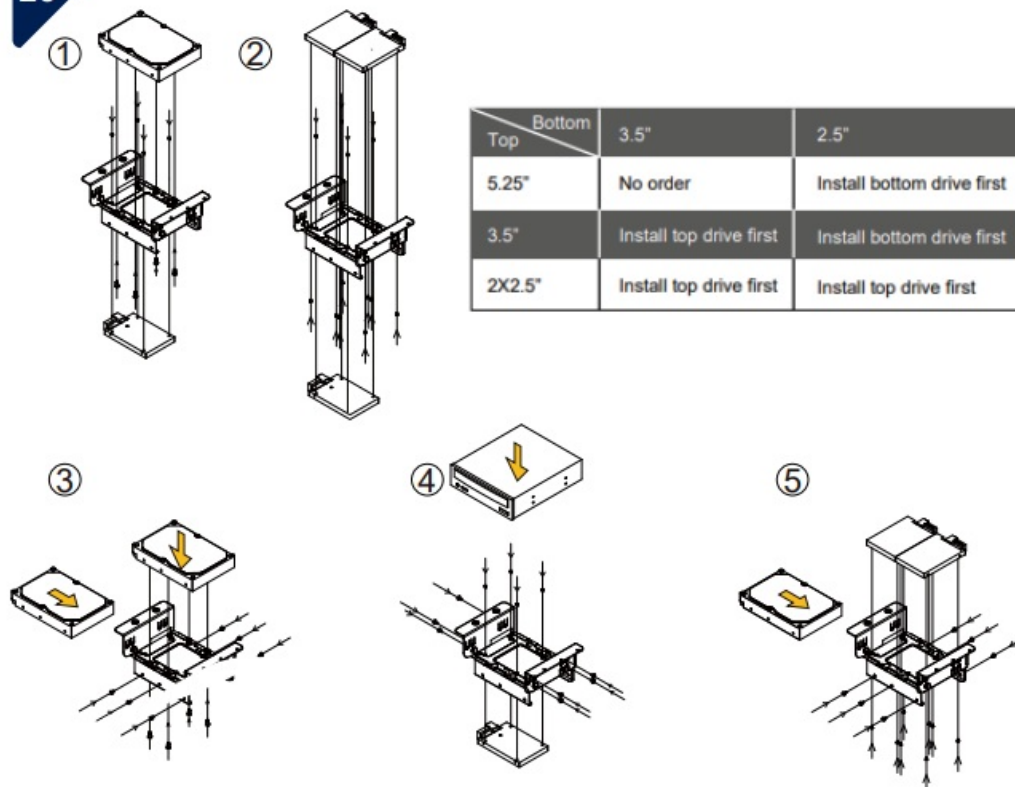

Warranty terms & conditions

Warranty terms & conditions

- Product component defects or damages resulting from defective production is covered under warranty. Defects or damages with the following conditions will be fixed or replaced under SilverStone Technology's jurisdiction.
 - Usage in accordance with instructions provided in the manual, with no misuse, overuse, or other inappropriate actions*.

2. Damage not caused by natural disasters (thunder, fire, earthquake, flood, salt, wind, insect, animals, etc...)
 3. The product is not modified or components replaced resulting in out-of-spec. operation.
 4. Loss or damages resulting from conditions other than the ones listed above are not covered under warranty.
2. Under warranty, SilverStone Technology's maximum liability is limited to the current market value for the product (depreciated value, excluding shipping, handling, and other fees). SilverStone Technology is not responsible for other damages or losses associated with the use of the product.
 3. Under warranty, SilverStone Technology is obligated to repair or replace its defective products. Under no circumstances will SilverStone Technology be liable for damages in connection with the sale, purchase, or use including but not limited to loss of data, loss of business, loss of profits, loss of use of the product, or incidental or consequential damage whether or not foreseeable and whether or not based on breach of warranty, contract or negligence, even if SilverStone Technology has been advised of the possibility of such damages.
 4. The warranty covers only the original purchaser through authorized SilverStone distributors and resellers and is not transferable to a second-hand purchaser
 5. You must provide a sales receipt or invoice with a clear indication of purchase date to determine warranty eligibility.
 6. If a problem develops during the warranty period, please contact your retailer/reseller/SilverStone authorized distributors or SilverStone <http://www.silverstonetek.com>.
 7. Please note that: (i) You must provide proof of original purchase of the product by a dated itemized receipt; (ii) You shall bear the cost of shipping (or otherwise transporting) the product to SilverStone authorized distributors. SilverStone authorized distributors will bear the cost of shipping (or otherwise transporting) the product back to you after completing the warranty service; (iii) Before you send the product, you must be issued a Return Merchandise Authorization ("RMA") number from SilverStone. Updated warranty information will be posted on SilverStone's official website. Please visit <http://www.silverstonetek.com> for the latest updates.

contact

Additional info & contacts

For North American support(at)silverstonetek.com


- SilverStone Technology in North America may repair or replace defective products with refurbished products that is not new but have been functionally tested.
- Replacement products will be warranted for the remainder of the warranty period or thirty days, whichever is longer.
- All power supplies should be sent back to the place of purchase if it is within 30 days of purchase, after 30 days, customers need to initiate the RMA procedure with SilverStone Technology in the USA by first downloading the "USA RMA form for end-users" form from the below link and follow its instructions.

For Australia only support(at)[silverstonetek.com](http://www.silverstonetek.com)

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Please refer to above "Warranty terms & conditions" for further warranty details. SilverStone Technology Co., Ltd. 12F No. 168 Jiankang Rd., Zhonghe Dist., New Taipei City 235 Taiwan R.O.C. +886-2-8228-1238 (standard international call charges apply)

- For Europe support.eu(at) silverstonetek.de
- For China support(at) silverstonetek.com.cn
- For Japan support_jp(at) silverstonetek.co.jp
- For all other regions support(at) silverstonetek.com
- www.silverstonetek.com
- support@silverstonetek.com

Documents / Resources

	<p>SILVERSTONE FLP01 Retrofitted HTPC Chassis [pdf] Installation Guide FLP01 Retrofitted HTPC Chassis, FLP01, Retrofitted HTPC Chassis, HTPC Chassis, Chassis</p>
---	---

References

- [_____](#)
- [SilverStone](#)
- [Support.eu](#)
- [SilverStone](#)
- [SilverStone](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.