



SKYDANCE DS DMX512-SPI Decoder and RF Controller Owner's Manual

[Home](#) » [SKYDANCE](#) » SKYDANCE DS DMX512-SPI Decoder and RF Controller Owner's Manual 

Contents

- [1 SKYDANCE DS DMX512-SPI Decoder and RF Controller](#)
- [2 DMX512-SPI Decoder and RF Controller](#)
- [3 Features](#)
- [4 Technical Parameters](#)
- [5 Mechanical Structures and Installations](#)
- [6 Operation](#)
- [7 Stand-alone mode](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

SKYDANCE

SKYDANCE DS DMX512-SPI Decoder and RF Controller



DMX512-SPI Decoder and RF Controller

Model No.: DS

Compatible with 34 kinds IC/Numeric display/Stand-alone function/Wireless remote control/Din rail

Features



- DMX512 to SPI decoder and RF controller with digital display.
- Compatible with 34 kinds of digital IC RGB or RGBW LED strips, IC type and R/G/B order can be set.
 - Compatible ICs:
 - TM1803, TM1804, TM1809, TM1812, UCS1903, UCS1909,
 - UCS1912, UCS2903, UCS2909, UCS2912, WS2811, WS2812,
 - TM1829, TLS3001, TLS3002, GW6205, MBI6120, TM1814B,
 - SK6812, UCS8904B, LPD6803, LPD1101, D705, UCS6909,
 - UCS6912, LPD8803, LPD8806, WS2801, WS2803, P9813, SK9822, TM1914A, GS8206, GS8208.
- DMX decode mode, stand-alone mode and RF mode are selectable.
- Standard DMX512 compliant interface set DMX to decode start address by buttons.

- Under stand-alone mode, change mode, speed or brightness by buttons.
- Under RF mode, match with RF 2.4G RGB/RGBW remote control.
- 32 kinds of dynamic modes, including horse race, chase, flow, trail or gradual change style.

Technical Parameters

Input and Output	
Input voltage	5-24VDC
Power consumption	1W
Input signal	DMX512 + RF 2.4GHz
Output signal	SPI(TTL)
Dynamic mode	32
Control dots	170 pixels (RGB 510 CH) Max 900 pixels




Safety and EMC	
EMC standard (EMC)	EN55032:2015, EN61000-3-2:2014, EN61000-3-2:2013, EN55024 :2010/A1:2015
Safety standard(LVD)	EN 61347-1:2015 EN 61347-2-11:2015
Certification	CE,EMC,LVD

Environment	
Operation temperature	Ta: -30℃ ~ +55℃
Case temperature (Max.)	Tc: +65℃
IP rating	IP20

Warranty and Protection	
Warranty	5 years
Protection	Reverse Polarity


Weight	
Net weight	0.098kg
Gross weight	0.129kg

Mechanical Structures and Installations

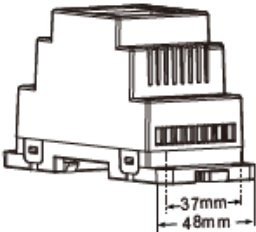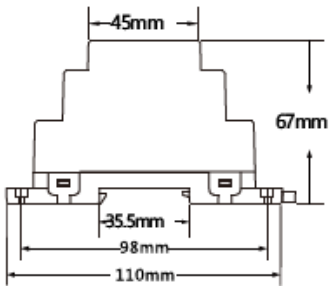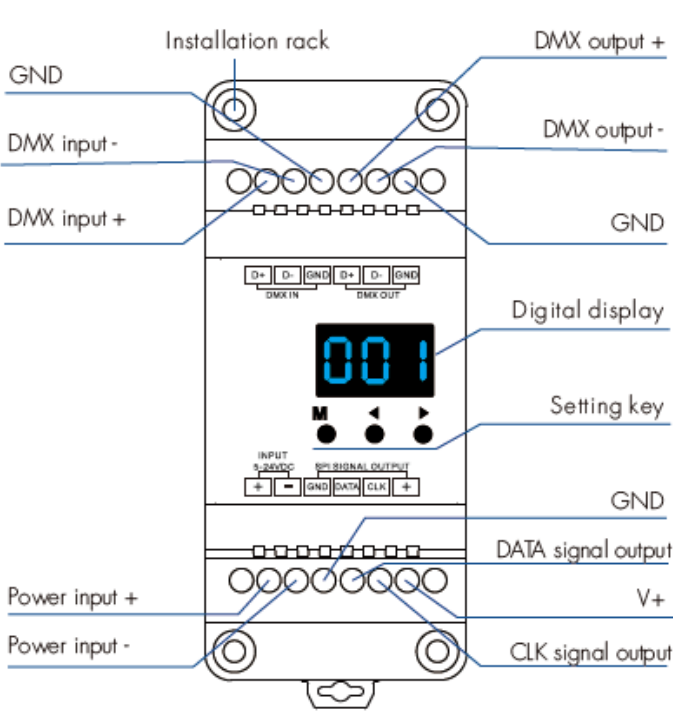

DIN Rail Mounting Size:
TS-35/7.5 or TS-35/15

Wiring Diagram

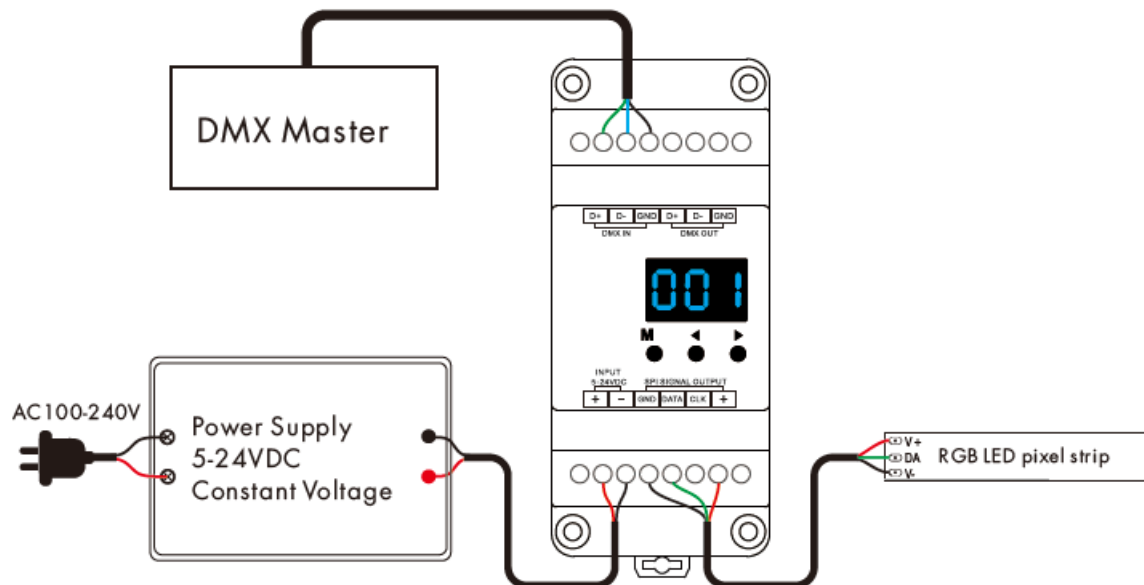

Note:

- If the SPI LED pixel strip is single-wire control, the DATA and CLK output is the same, we can connect up to 2 LED strips.

Operation

IC type, RGB order, and pixel length setting

- You must first assure the IC type, RGB order and pixel length of the LED strip is correct.
- Long press M and ◀ keys, to prepare for setup IC type, RGB order, pixel length, and automatic blank screen, Short press the M key to switch four items.
- Press the ◀ or ▶ key to set up the value of each item.
- Long press the M key for 2s, or timeout 10s, and quit setting.



IC type



RGB order



pixel length



disable automatic blank screen


IC type table:

No.	IC type	Output signal
C11	TM1803	DATA
C12	TM1809, TM1804, TM1812, UCS1903, UCS1909, UCS1912, UCS2903, UCS2909, UCS2912, WS2811, WS2812	DATA
C13	TM1829	DATA
C14	TLS3001, TLS3002	DATA
C15	GW6205	DATA
C16	MBI6120	DATA
C17	TM1814B(RGBW)	DATA
C18	SK6812(RGBW)	DATA
C19	UCS8904B(RGBW)	DATA
C21	LPD6803, LPD1101, D705, UCS6909, UCS6912	DATA, CLK
C22	LPD8803, LPD8806	DATA, CLK
C23	WS2801, WS2803	DATA, CLK
C24	P9813	DATA, CLK
C25	SK9822	DATA, CLK
C31	TM1914A	DATA
C32	GS8206, GS8208	DATA

- RGB order: O-1 – O-6 indicates six orders (RGB, RBG, GRB, GBR, BRG, BGR).
- Pixel length: Range is 008-900.
- Automatic blank screen: enable (“bon”) or disable (“boF”) automatic blank screen.

DMX decode mode

- Short press the M key, when displaying 001-999, and enter DMX decode mode.
- Press ◀ or ▶ key to change DMX decode start address(001-999), and long press for fast adjustment.

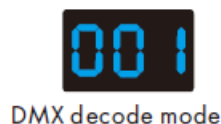

- Long press the M key for 2s, prepare for setup decode number and multiple of pixels. Short press the M key to switch two items.
- Press the ◀ or ▶ key to set up the value of each item.
- Decode number(display “dno”) : DMX decode channel number, range is 003-600(for RGB).
- Multiple of pixels(display “Pno”) : Each 3 DMX channel control length(for RGB), range is 001- pixel length. Long press M key for 2s, or timeout 10s, quit setting.
- If there is a DMX signal input, will enter DMX decode mode automatically. For example, the DMX-SPI decoder connects with the RGB strip:
- DMX data from DMX512 console:

DMX CH	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
DMX Data	255	0	0	0	255	0	0	0	255	255	255	0	0	255	255	255	0	255


DMX-SPI decoder output (start address: 001, decode channel number: 18, each 3 channel control length: 1):



DMX-SPI decoder output (start address: 001, decode channel number: 18, each 3 channel control length: 3):



Stand-alone mode

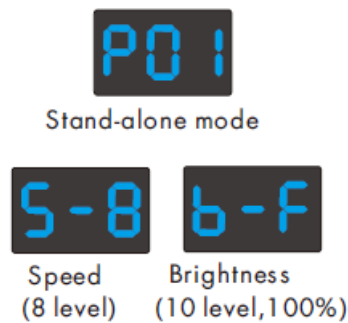

- Short press the M key, when displaying P01-P32, and enter stand-alone mode.
- Press the ◀ or ▶ key to change the dynamic mode number(P01-P32).
- Each mode can adjust speed and brightness.
- Long press the M key for 2s, and prepare for setup mode speed and brightness. Short press the M key to switch two items.
- Press the ◀ or ▶ key to set up the value of each item.
- Mode speed: 1-10 level speed(S-1, S-9, S-F).
- Mode brightness: 1-10 level brightness(b-1, b-9, b-F).
- Long press the M key for 2s, or timeout 10s, and quit setting.
- Enter stand-alone mode only when the DMX signal is disconnected or lost.

Dynamic mode list

No.	Name	No.	Name	No.	Name
P01	Red horse race white ground	P12	Blue White chase	P23	Purple float
P02	Green horse race white ground	P13	Green Cyan chase	P24	RGBW float
P03	Blue horse race white ground	P14	RGB chase	P25	Red Yellow float
P04	Yellow horse race blue ground	P15	7 color chase	P26	Green Cyan float
P05	Cyan horse race blue ground	P16	Blue meteor	P27	Blue Purple float
P06	Purple horse race blue ground	P17	Purple meteor	P28	Blue White float
P07	7 color multi horse race	P18	White meteor	P29	6 color float
P08	7 color horse race close + open	P19	7 color meteor	P30	6 color smooth sectionally
P09	7 color multi horse race close + open	P20	Red float	P31	7 color jump sectionally
P10	7 color scan close + open	P21	Green float	P32	7 color strobe sectionally
P11	7 color multi-scan close + open	P22	Blue float		


RF mode

- Match: Long press the M and ▶ keys for 2s, display “RLS”,
- within 5s, press the on/off key of the RGB remote, display “RLO”, the match is successful,
- then use the RF remote to change mode number, adjust speed or brightness.
- Delete Long press M and ▶ keys for 5s, until display “RLE”, delete all matched RF remotes.

Restore the factory default parameter

- Long press and key, restore the factory default parameter, and display"RES".
- Factory default parameter: DMX decode mode, DMX decodes start address is 1, decode number is 510, multiple of pixels 1, dynamic mode number is 1, chip type is TM1809, RGB order, pixel length is 170, disable automatic blank screen, without matched RF remote.

Documents / Resources

	<p>SKYDANCE DS DMX512-SPI Decoder and RF Controller [pdf] Owner's Manual DS DMX512-SPI, Decoder and RF Controller, DS DMX512-SPI Decoder and RF Controller, RF Controller, Controller</p>
---	---