

spanet

spanet SV3 Spa Pool Controller



spanet SV3 Spa Pool Controller Owner's Manual

[Home](#) » [spanet](#) » spanet SV3 Spa Pool Controller Owner's Manual 

Contents

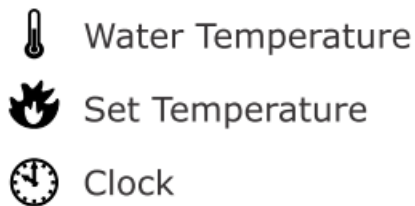
- 1 spanet SV3 Spa Pool Controller
- 2 QUICK REFERENCE GUIDE
- 3 CHANGING LIGHT MODES
- 4 SETUP MENU
- 5 Documents / Resources
 - 5.1 References
- 6 Related Posts



spanet SV3 Spa Pool Controller



QUICK REFERENCE GUIDE

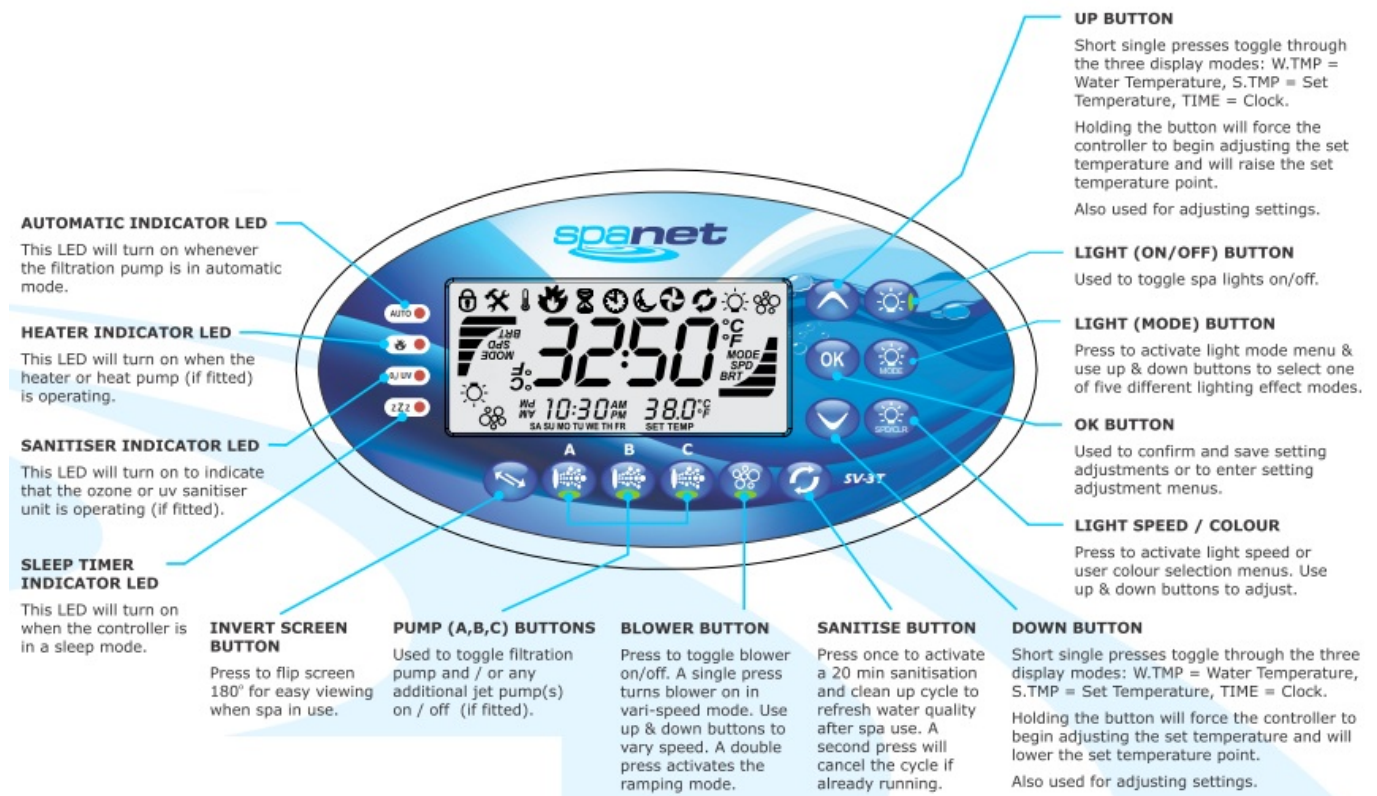


STATUS ICONS




- Keypad locked
- Sanitise cycle operating
- Filtration cycle operating
- Fault condition has occurred

MENU ICONS


- Sleep timer menu icon
- Light menu icon
- Blower menu icon



CHANGING LIGHT MODES


- Press Light (mode) button  to display current light mode in use.
- Press  or  button to step through choice of light modes
 - WHITE White Light
 - UCLR User Colour
 - FADE Fade Effect
 - STEP Step Effect
 - PRTY Party Effect

CHANGING LIGHT SPEED OR LIGHT COLOUR

Dependant on light mode selected the Light (spd/clr) button  will activate one of three light mode option screens

- CL:xx User Colour Number
- L.SPD Light Transition Speed
- L.BRT Light Brightnes

Press  or  button to adjust each setting.

Press  button to save each setting and move to the next setting.

Note: All light settings are saved for future ON / OFF use.

FULL KEYLOCK

Press and hold this button combination until LOCK appears on the display:



- Repeat button combination to unlock.
- **Note:** Once locked if any button is pressed the key stroke will be ignored and the display will show LOCK

PARTIAL KEYLOCK

Press and hold this button combination until LOCK appears on the display:





Repeat button combination to unlock.

Note: Once locked only pumps, blower, light and sanitise buttons can be used. Access to all other buttons is disabled.

SETUP MENU

- The setup menu allows customisation of the adjustable controller settings.
- Menu access and item adjustments are carried out as follows:

Press and hold  and  buttons together until [MODE] is displayed.

Press  or  to navigate through setup menu items.

Press  to enter item adjustment.

Press  or  to adjust setting.

Press  to confirm setting and exit.

MODE OPERATING MODES

Operating modes effect heating and filtration behaviour. The choices are:

- NORM Normal heating & filtration
- AWAY Heating disabled. Filtration reduced to 1hr p/day.
- WEEK Mon-Thu (works like AWAY mode) Fri-Sun (works like NORM mode)

[FILT] DAILY FILTRATION TIME

Adjust the hours of filtration per day.

Filtration limits differ for type of pump

- Circ Pump (2A or less) 1-24 hrs:
- Jet Pump (2spd or lspd) 1-8 hrs

[F.CYC] FILTRATION CYCLES

- This setting defines how often filtration cycles occur. Filtration can be set to run every 1/2/3/4/6/8/12 or 24 hrs

• SNZE SLEEP TIMERS

Used to disable automatic heating and filtration during certain times of day or night. Upon entering SNZE menu there are four choices:

1. .SNZ Sleep Timer #1
2. SNZ Sleep Timer #2
 - R.SET Reset timers to default
 - EXIT Exit sleep timer menu

Only one sleep timer needs to be set however two timers are provided to facilitate different sleep settings on different days. Each sleep timer setting consists of a week day setting, start time and stop time (refer below).

- x.DAY Day(s) of operation
- x.BGN Sleep timer begin time
- x.END Sleep timer end time

Use the Up, Down & OK buttons to adjust and confirm each setting.

[P.SAV] POWER SAVE (off peak)

Reduce operating costs by limiting filtration and heating to occur during cheaper off peak power periods. There are three P.SAV modes:

- OFF P.SAV disabled
- LOW Off-peak filtration only
- HIGH Off-peak filtration & heating

Once P.SAV mode is selected the begin and end times of the PEAK power tariffs must be set so the control knows NOT to operate during those peak hours

- BGN Peak power begin time
- END Peak power end time

[W.CLN] AUTOMATIC SANITISE

Adjust the start time of the 10 minute automatic daily sanitise cycle. Setting can be adjusted from 0:00 to 23:59

[D.DIS] DEFAULT DISPLAY MODE

Used to adjust the default display mode shown on the keypad. Setting choices:

- W.TMP Water Temperature
- S.TMP Set Temperature
- TIME Clock

[T.OUT] LOAD TIME OUTS

All accessory loads (pumps & blowers) automatically turn off after a time out period has elapsed. Adjust the time out period from 10-60 minutes

[H.PMP] HEAT PUMP MODE

Defines heat pump operating mode

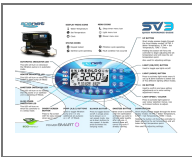
- AUTO Heat & Cool
- HEAT Heat Only
- COOL Cool Only
- OFF Heat Pump Disabled

[H.ELE] ELEMENT BOOST

Enables/disables SV electric element to boost heat pump heating if the water temperature is 2°C or more below set temperature point OR the heat pump has been operating for more than 1hr.

- OFF Element disabled (heat pump only)
- ON SV element + heat pump

Documents / Resources

	<p>spanet SV3 Spa Pool Controller [pdf] Owner's Manual SV-3T, SV3 Spa Pool Controller, SV3, Spa Pool Controller, Pool Controller, Controller</p>
---	--

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.