



Swagelok QTM Series Quick-Connects with Release Button Instruction Manual

[Home](#) » [Swagelok](#) » Swagelok QTM Series Quick-Connects with Release Button Instruction Manual 



QTM Series Quick-Connects with Release Button Operation Instructions


Contents

- [1 QTM Series Quick-Connects with Release Button](#)
- [2 Good practices for Operations of Swagelok Quick-Connects](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)


QTM Series Quick-Connects with Release Button

To Couple:

Align stem with body.

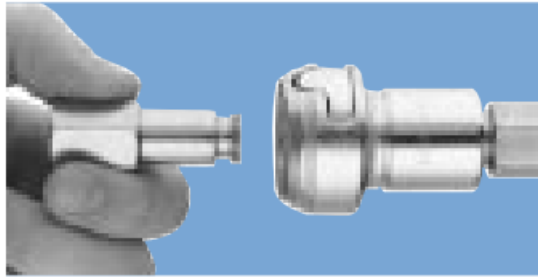


Push stem into body until it clicks.

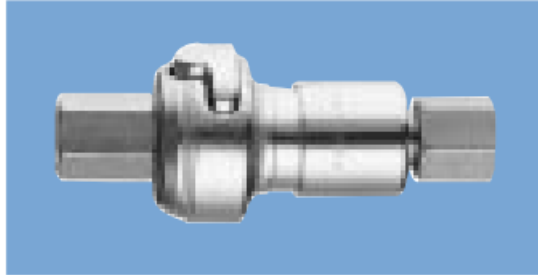

To Uncouple:

Simultaneously press the button, and push the front sleeve toward the rear sleeve.

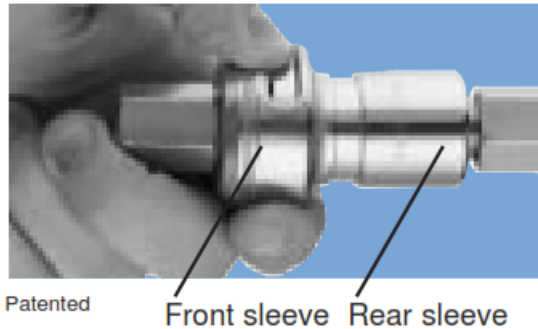

www.swagelok.com

These instructions are also available in French, Italian, German and Spanish.

Good practices for Operations of Swagelok Quick-Connects

- Use filters ahead of quick-connects.
- Use body and stem protectors or dust caps on uncoupled bodies and stems.
- Align bodies and stems when coupling or uncoupling.
- Couple and uncouple quick-connects at room temperature.
- Couple and uncouple quick-connects during system cleaning operations.
- Support hanging hoses or other equipment to prevent side load.
- Relubricate stem seal O-rings periodically.

Caution:

- Do not rotate under pressure.
- Do not insert foreign objects into uncoupled bodies stems.


Ratings

Series	Pressure	Temperature
QTM2B	4500 psi (310 bar)	0 to 120°F (–17 to 48°C)
QTM4B and QTM8B	3200 psi (220 bar)	

Swagelok—TM Swagelok Company
 © Swagelok Company
 Printed in U.S.A., CP
 09-01 R1
 MS-CRD-QTMB



Documents / Resources

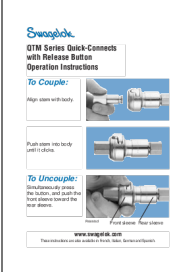

[Swagelok QTM Series Quick-Connects with Release Button \[pdf\]](#) Instruction Manual
 QTM Series Quick-Connects with Release Button, QTM Series, Quick-Connects with Release Button, Release Button, Button